


Removal

1. Remove the engine room under cover.
(Refer to Engine and Transaxle Assembly - "Engine Room Under Cover")
2. Remove the drive belt.
 - (1) Using the wrench, turning the mechanical tensioner (A) counterclockwise and then insert a stopper pin into the hole.
 - (2) Install the SST (09244-G2100) to hydraulic tensioner (B) and then compress the hydraulic tensioner by tightening the adjusting bolt (C).
 - (3) Remove the drive belt (D).

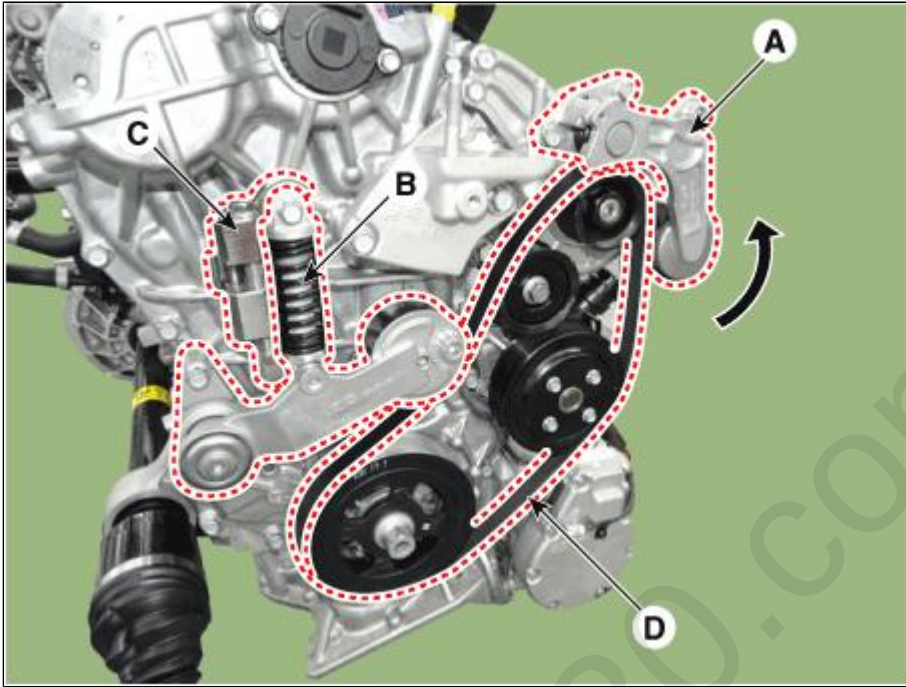


NOTICE

To prevent damage the hydraulic tensioner, slowly must work by using the hand tool.

NOTICE

Before proceeding, check whether the safety pin (A) of the SST (09244-G2100) is located inside the SST as shown in the figure.

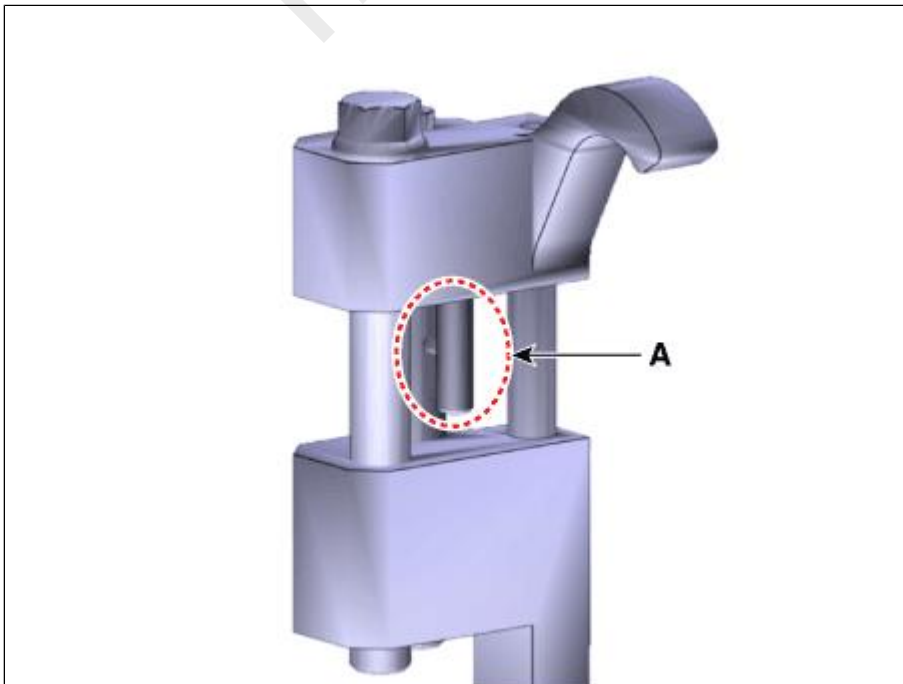


Inspection

Visually check the belt for excessive wear, frayed cords etc.
If any defect has been found, replace the drive belt.

NOTICE


Cracks on the rib side of a belt are considered acceptable. If the belt has chunks missing from the ribs, it should be replaced.

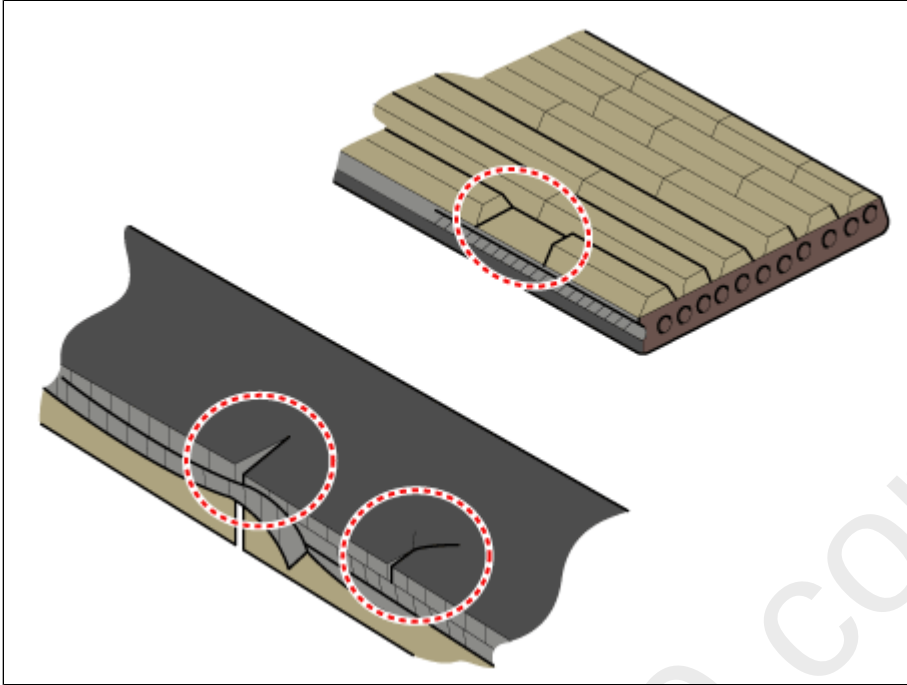

Installation

1. Install the drive belt.

- (1) Install the drive belt (D).
- (2) Using the wrench, slightly lift the mechanical tensioner (A) and then remove the stopper pin. Slowly place the mechanical tensioner (A).
- (3) Remove the SST (09244-G2100) from the hydraulic tensioner (B) by loosening the adjusting bolt (C).

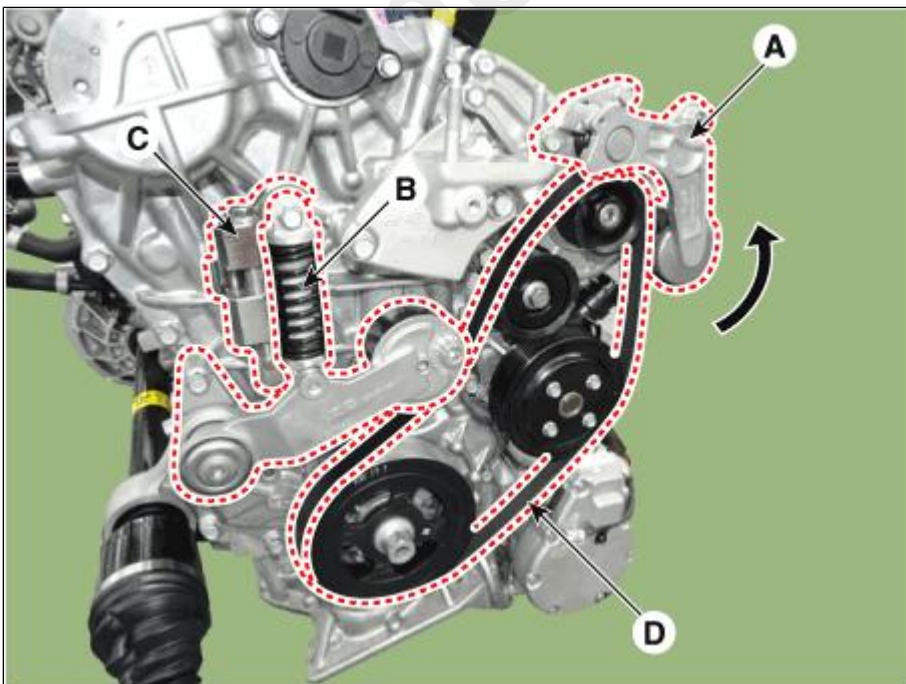

NOTICE

To prevent damage the hydraulic tensioner, slowly must work by using the hand tool.

2. Install the engine room under cover.

(Refer to Engine and Transaxle Assembly - "Engine Room Under Cover")

Rate this Document

☐ Document Type : SHOP

☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value	1	2	3	4	5	Excellent Value			

mcx30.com