

Removal and Installation

Air Cleaner Assembly

1. Disconnect the battery positive terminal.
2. Remove the air duct and air cleaner assembly.
 - (1) Remove the air duct (A).

Tightening torque :

3.9 - 5.9 N.m (0.4 - 0.6 kgf.m, 2.9 - 4.3 lb-ft)


- (2) Disconnect the air intake hose (B).
- (3) Disconnect the breather hose (C).
- (4) Disconnect the air flow sensor (MAFS) and intake air temperature sensor (IATS) connector (D).
- (5) Remove the air cleaner assembly (E).


Tightening torque :**Hose clamp :**

2.9 - 4.9 N.m (0.3 - 0.5 kgf.m, 2.2 - 3.6 lb-ft)

Air cleaner assembly bolts :

3.9 - 5.9 N.m (0.4 - 0.6 kgf.m, 2.9 - 4.3 lb-ft)

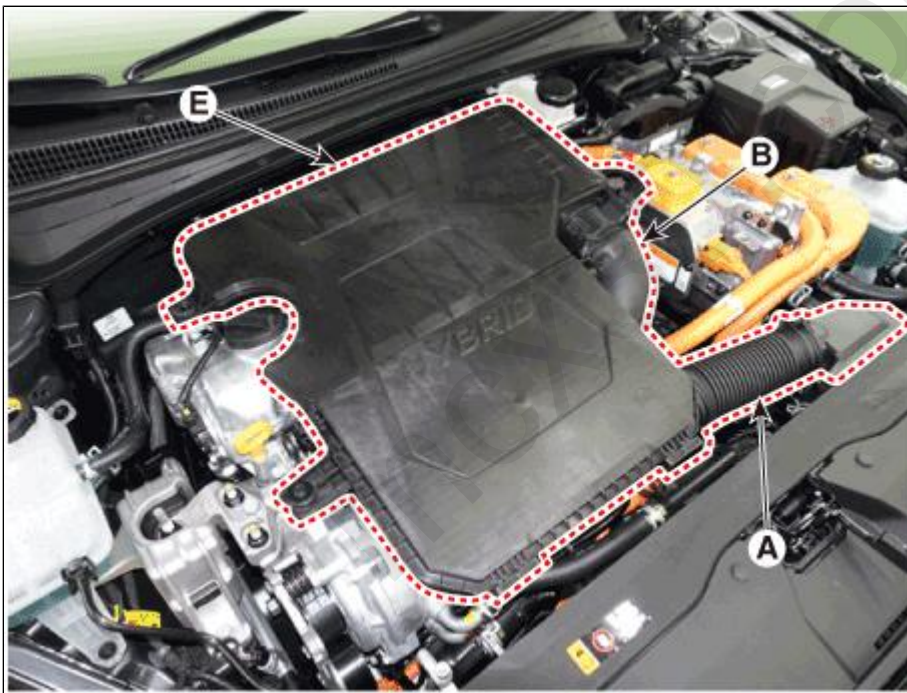


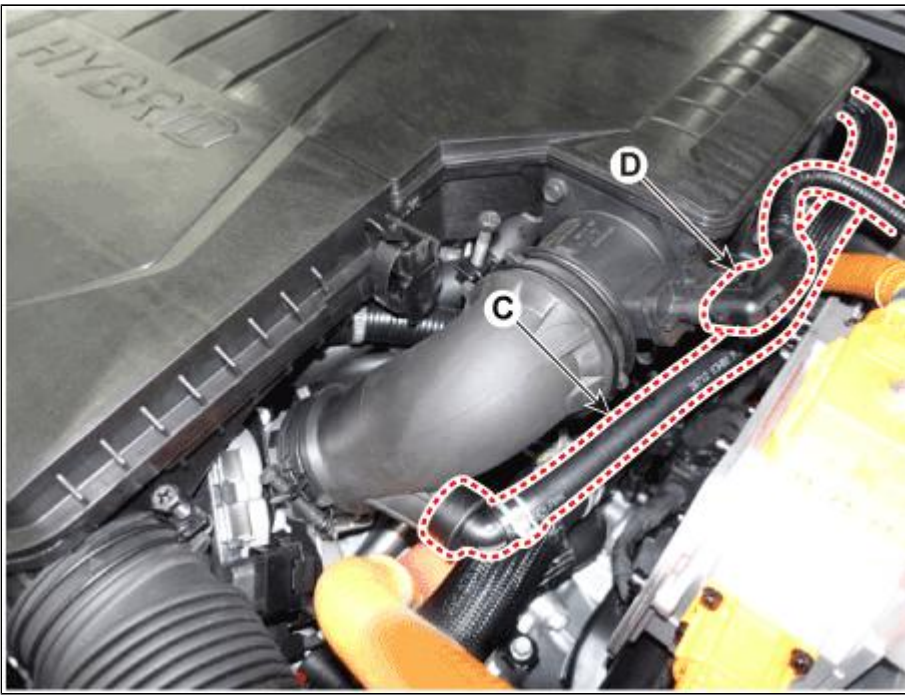

3. Install in the reverse order of removal.

Air Cleaner Element Replacement

1. Remove the clamp and open the air cleaner cover (A).

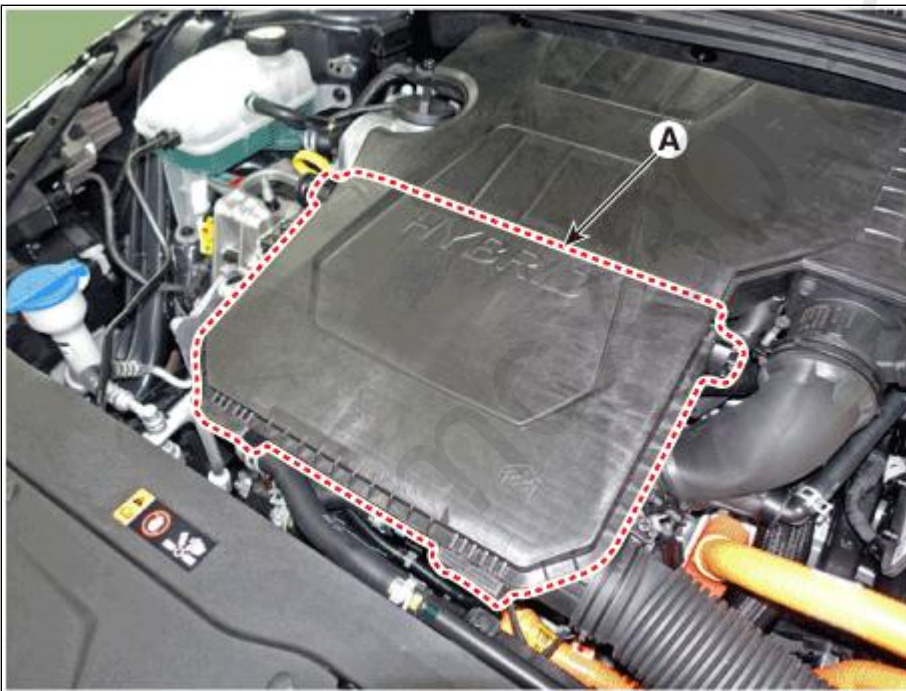

2. Replace the air cleaner element (A) with a new one.




NOTICE

â If there is any foreign substance inside the air cleaner assembly, clean the inside and replace the air ÷ cleaner element.

3. Close the air cleaner cover and engage the clamp.

NOTICE

â When mounting an air cleaner cover, inspect the rubber seal (A) on the air cleaner cover and replace it if ÷ there is crack, tear, or wear on it.

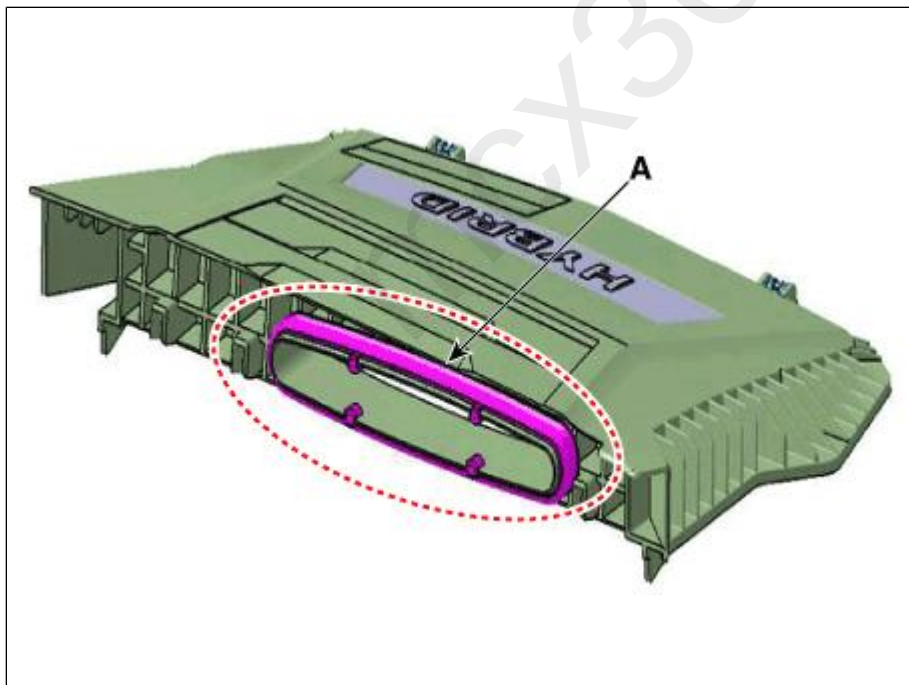

Rate this Document

☐ Document Type : SHOP

☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.



Little Value 1 2 3 4 5 Excellent Value



mcx30.com