

Removal and Installation

Front Muffler


1. Disconnect the battery positive terminal.
2. Disconnect the oxygen sensor connector (A).



3. Remove the heat protector (A).

Tightening torque :

9.8 - 11.8 N.m (1.0 - 1.2 kgf.m, 7.2 - 8.7 lb-ft)

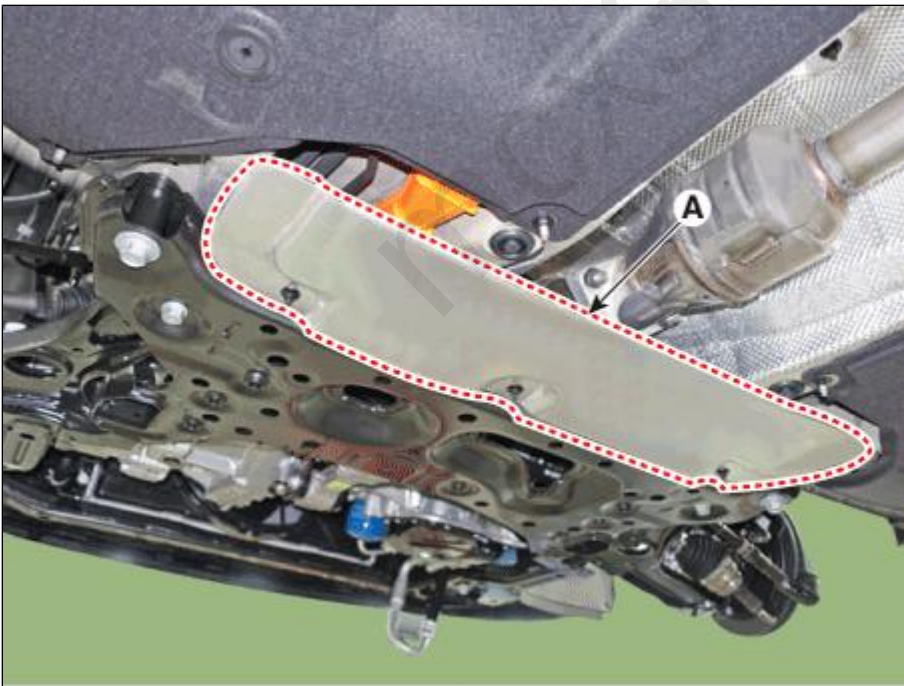

4. Remove the front muffler (A).

Tightening torque :

39.2 - 58.8 N.m (4.0 - 6.0 kgf.m, 28.9 - 43.4 lb-ft)



5. Install in the reverse order of removal.

NOTICE


â When installing, replace with new gaskets.
¢

Center Muffler & Catalytic Converter

1. Remove the heat protector (A).

Tightening torque :

9.8 - 11.8 N.m (1.0 - 1.2 kgf.m, 7.2 - 8.7 lb-ft)

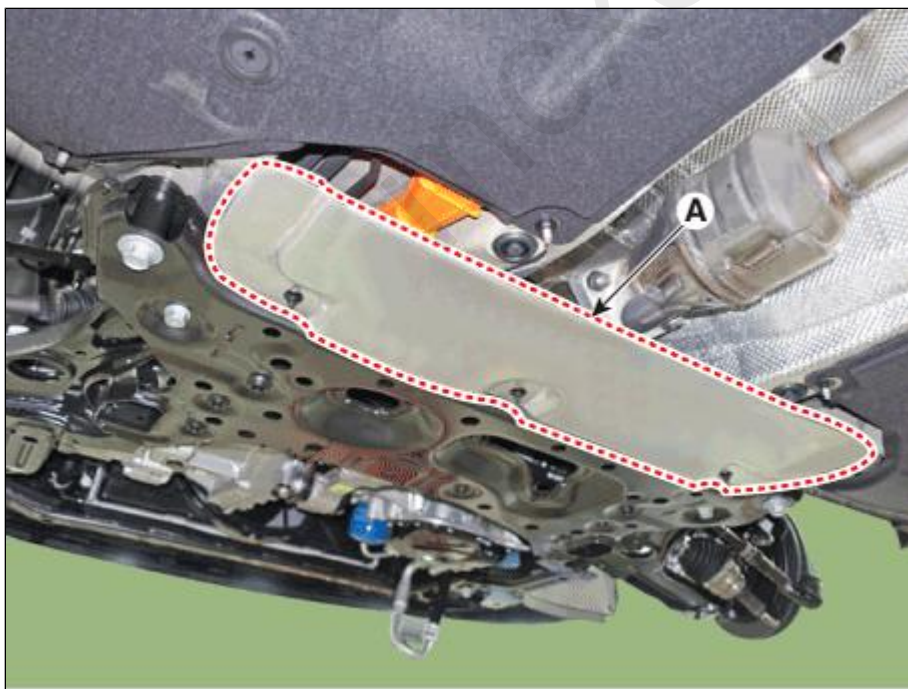


2. Remove the center muffler & catalytic converter.

(1) Detach the hager (A) from the center muffler & catalytic converter.

(2) Remove the center muffler & catalytic converter (B).

Tightening torque :

39.2 - 58.8 N.m (4.0 - 6.0 kgf.m, 28.9 - 43.4 lb-ft)

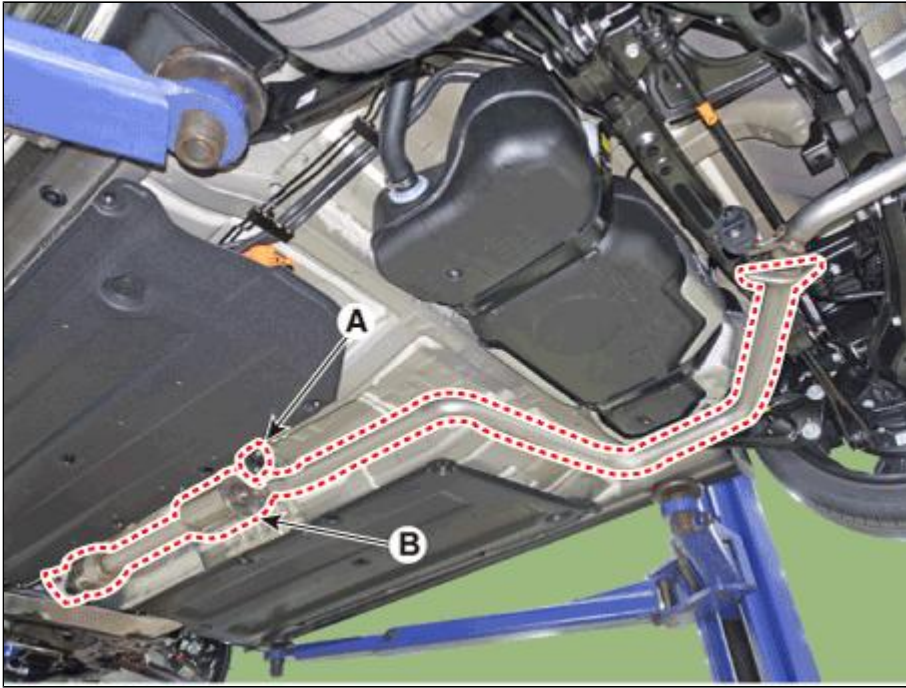

3. Install in the reverse order of removal.

NOTICE


â When installing, replace with new gaskets.
ç

Rear Muffler

1. Remove the rear muffler (A).

Tightening torque :

39.2 - 58.8 N.m (4.0 - 6.0 kgf.m, 28.9 - 43.4 lb-ft)

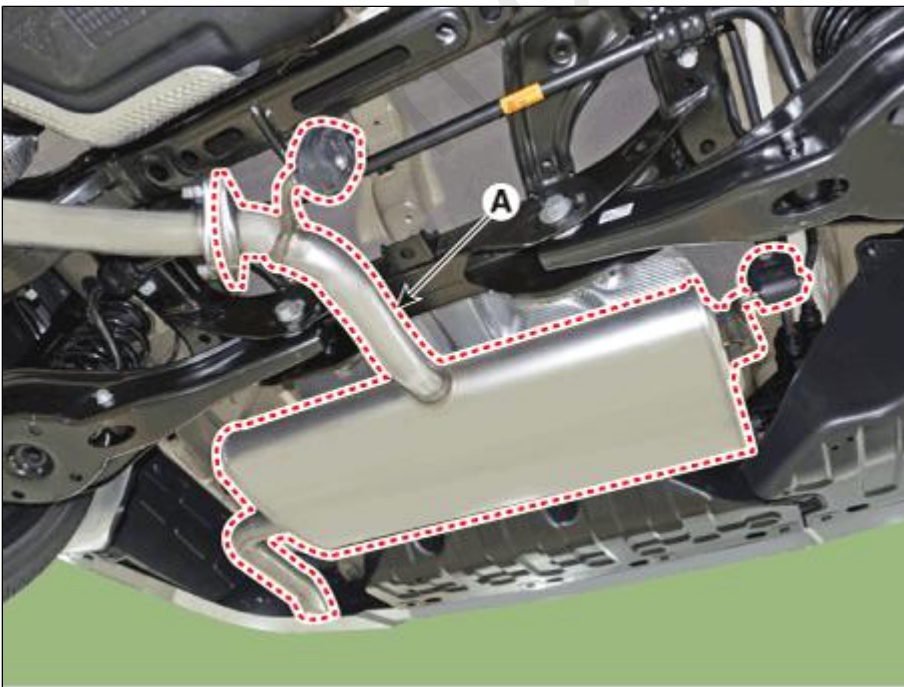

2. Install in the reverse order of removal.

NOTICE

â When installing, replace with new gaskets.
¢

Rate this Document

☐ Document Type : SHOP

☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value

mcx30.com