

Replacement

[TPMS Receiver (Integrated Body Unit (IBU))]

1. Turn the ignition switch OFF and disconnect the battery negative (+) cable.
2. Remove the glove box.
(Refer to Body - "Glove Box")
3. Remove the IBU (A) after loosening the mounting nuts and bolt.



4. Remove the IBU after disconnecting the connector.



5. To install, reverse the removal procedures.
6. learn by connecting diagnostic tool.
7. Perform TPMS test to check for any abnormality.

Diagnosis procedure by using diagnostic device

The main contents of diagnostic method using diagnostic device are as follows:

1. Connect self-diagnosis connector (16 pins) located in the lower driver side crash pad to self-diagnosis device, and then turn on the self-diagnosis device after key is ON.

2. Select the "vehicle model" and "TPMS" on GDS vehicle selection screen, then select OK.

[Vehicle Name Writing Method]





• Vehicle Name Writing

Purpose	To write vehicle name into Tire Pressure Monitoring System(TPMS) ECU.
Enable Condition	1.Engine Off 2.Ignition Switch On
Concerned Component	Tire Pressure Monitoring system(TPMS) ECU
Concerned DTC	-
Fail Safe	-
Etc	1.Vehicle name will be written automatically once VIN is read. Must input correct Vehicle name otherwise TPMS system will not operate properly. 2.In case of ECU replacement : 1) Write Vehicle Name 2) Change ECU mode to Normal 3) Write VIN 4) Write Sensor ID 5) Turn ignition "OFF" for about 10 sec. and "ON"

OK



Do not touch any system buttons while performing this function.

S/W Management

■ Vehicle Name Writing

This function is to input vehicle name to TPMS ECU (Module, Receiver).

Vehicle name will be written automatically.

Otherwise TPMS system may not operate normally.

Press **[OK]** button.

OK

Cancel



Do not touch any system buttons while performing this function.

S/W Management

■ Vehicle Name Writing

This function is to input vehicle name to TPMS ECU (Module, Receiver).

You must input vehicle name correctly if there are a couple of edit windows.

Otherwise TPMS system may not operate normally.

●[Condition] : IG. On (Engine Off)

Press **[OK]** button after typing vehicle name.

Read : SC_NA2

Write : SC_NA2


HIGH Line ▼

OK

Cancel



Do not touch any system buttons while performing this function.

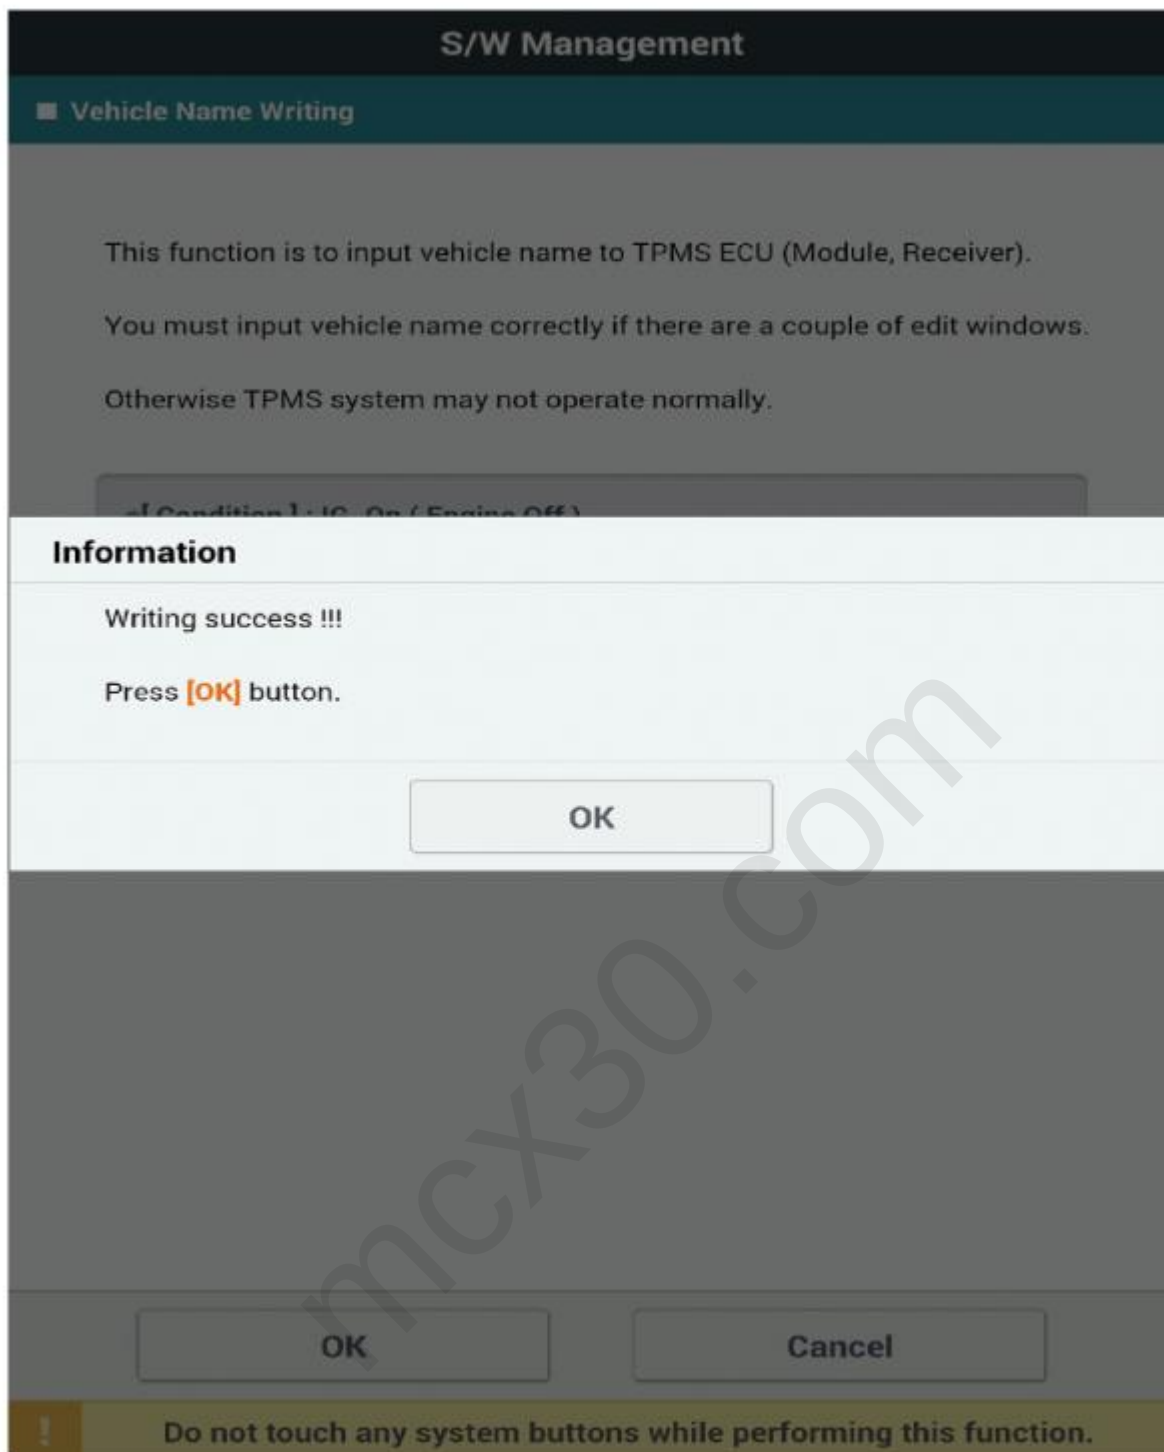

[Wheel Sensor ID Writing Method]



■ Motor Driven Power Steering



■ Tire Pressure Monitoring System(High Type)



■ System Identification



■ Sensor Status



■ Register Sensor



■ Write VIN



■ Vehicle Name Writing



■ TPMS TEST



■ Wheel Sensor ID Writing



■ Tire Pressure Monitoring System(Low Type)



■ Parking Guide System



■ Immobilizer



■ Smart Key Unit



■ Body Control Module



■ Cluster Module



■ Seat Belt Reminder/Lighting Module



■ Transmitter Code Saving



Do not touch any system buttons while performing this function.



• Wheel Sensor ID Writing

Purpose	To manually write Sensor ID into Tire Pressure Monitoring System(TPMS) ECU.
Enable Condition	1. Engine Off 2. Ignition Switch On 3. New 8 digits of sensor ID
Concerned Component	Tire Pressure Monitoring System(TPMS) ECU, Initiator, Tire Pressure Monitoring System(TPMS) Sensor
Concerned DTC	-
Fail Safe	-
Etc	This function is to read sensor ID from TPMS ECU and manually write changed sensor ID.

OK



Do not touch any system buttons while performing this function.

S/W Management

■ Wheel Sensor ID Writing

1. This function is to input sensor ID to TPMS ECU (Module Receiver), which is used to operate the TPMS system properly.
2. Sensor ID is composed of 8 alphanumeric characters.
3. [Read ID] is current setting sensor ID, [Write ID] is new sensor ID.

[Condition] : IG. On (Engine Off)

Press the **[OK]** button.

OK

Cancel



Do not touch any system buttons while performing this function.

S/W Management

■ Wheel Sensor ID Writing

Modify sensor ID and press the **[OK]** button.

	Current ID	Change ID
Front Left	82D2C731	82D2C731
Front Right	83DB56AC	83DB56AC
Rear Right	82D2DBC0	82D2DBC0
Rear Left	83DB56A7	83DB56A7

OK

Cancel



Do not touch any system buttons while performing this function.

S/W Management

■ Wheel Sensor ID Writing

Modify sensor ID and press the **[OK]** button.

	Current ID	Change ID
Front Left	82D2C731	82D2C731
Front Right	83DB56AC	83DB56AC

Information

Writing success !!!

Press **[OK]** button.

OK

OK

Cancel

! Do not touch any system buttons while performing this function.

Inspection

1. Check the vehicle code, VIN, sensor ID storage and normal storage in the receiver.
2. Check if the TPMS receiver [Integrated Body Unit (IBU)] status is normal.
3. Check whether the TPMS warning light is off and DTC.

Rate this Document

- ☐ Document Type : SHOP
- ☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value
1
2
3
4
5
Excellent Value

