


Removal

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.

⚠ WARNING

Disconnect the battery negative cable from the battery and then wait for at least 3 minutes.


2. Remove the floor console assembly.
(Refer to Body - "Floor Console Assembly")
3. Remove the center console duct (A).

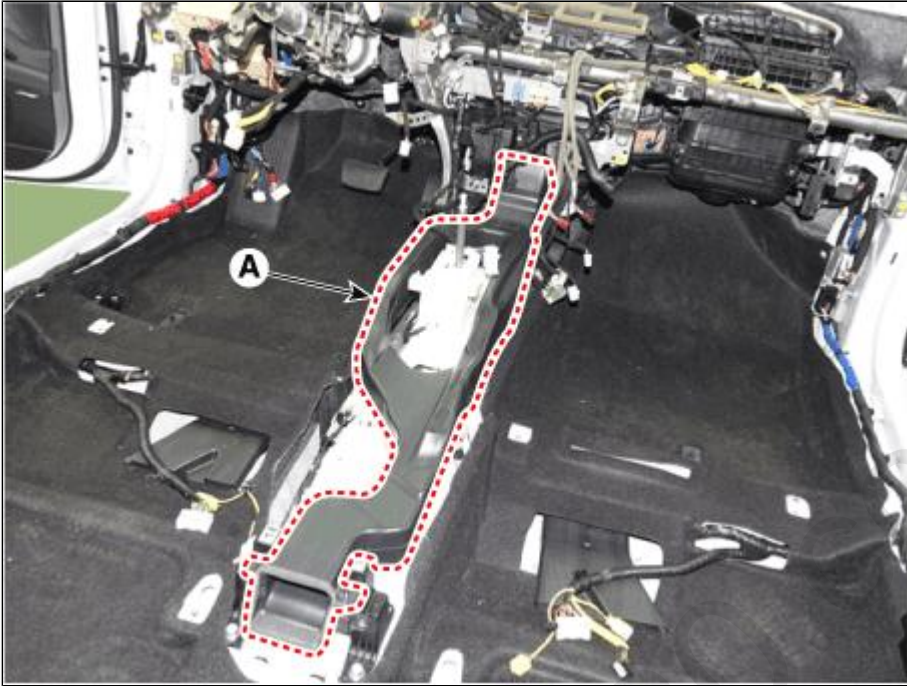

4. Pull up the lock of the SRSCM connector to disconnect the connector (A).

⚠ CAUTION

Be careful SRSCM connector damage.

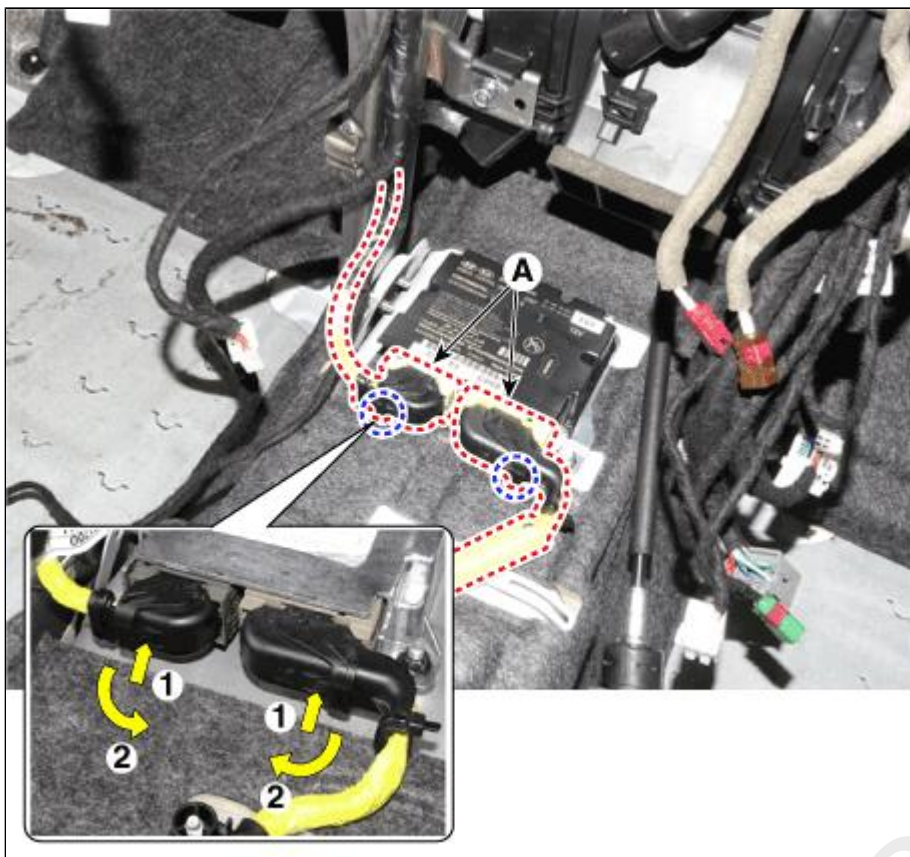

5. Remove the SRSCM (A) after loosening the mounting nuts.



Installation

1. Check if the battery (-) cable is disconnected.

WARNING

Disconnect the battery negative cable from the battery and then wait for at least 3 minutes.

2. Install the SRSCM (A) with the SRSCM mounting nuts.

Tightening torque :

7.8 - 9.8 N.m (0.8 - 1.0 kgf.m, 5.8 - 7.2 lb-ft)




3. Connect the SRSCM harness connector.
4. Install the heater ducts and floor console.
(Refer to Body - "Floor Console Assembly")
5. Reconnect the battery negative cable.
6. After installing the SRSCM, confirm proper system operation :
Turn the ignition switch ON; the SRS indicator light should be turned on for about six seconds and then turns off.

Adjustment

[Variant Coding]

1. Connect the cable of diagnostic tool to the data link connector in driver side crash pad lower panel, and turn on the diagnostic tool.
2. Select the 'S/W Management' and 'Car model'.

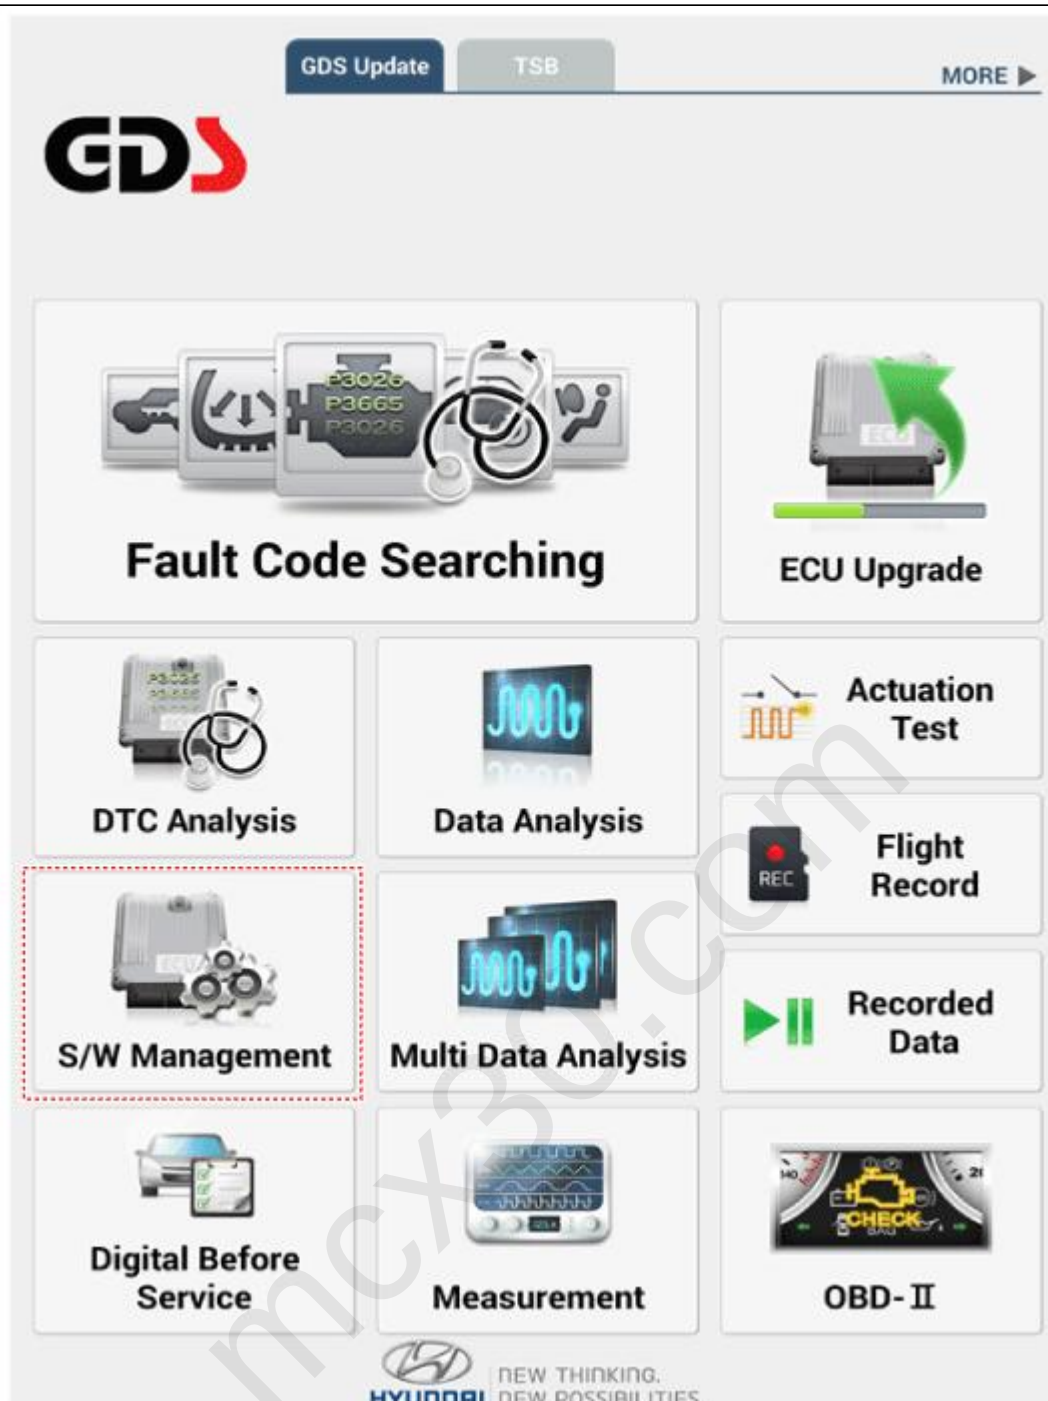

3. Select "Airbag" and "ACU/SRSCM Variant Coding".



4. Perform the "ACU/SRSCM Variant Coding" procedure according to the GDS screen message.

S/W Management

■ ACU/SRSCM Variant Coding

● [ACU/SRSCM Variant Coding]

This function is to alter the setting of ECU according to it's specification when an ACU/SRSCM is replaced.

● [Condition]

1. IG.ON

Press **[OK]** button to continue.

Code information is not searched or there is no response from the server.

If you want to retry, click [OK],

or if you want to enter the code by manual, click [Manual].

If you want to finish, click [Cancel].

OK

Manual


Cancel




Do not touch any system buttons while performing this function.

[Longitudinal G Sensor Calibration]

1. Connect the cable of diagnostic tool to the data link connector in driver side crash pad lower panel, and turn on the diagnostic tool.
2. Select the 'S/W Management' and 'Car model'.

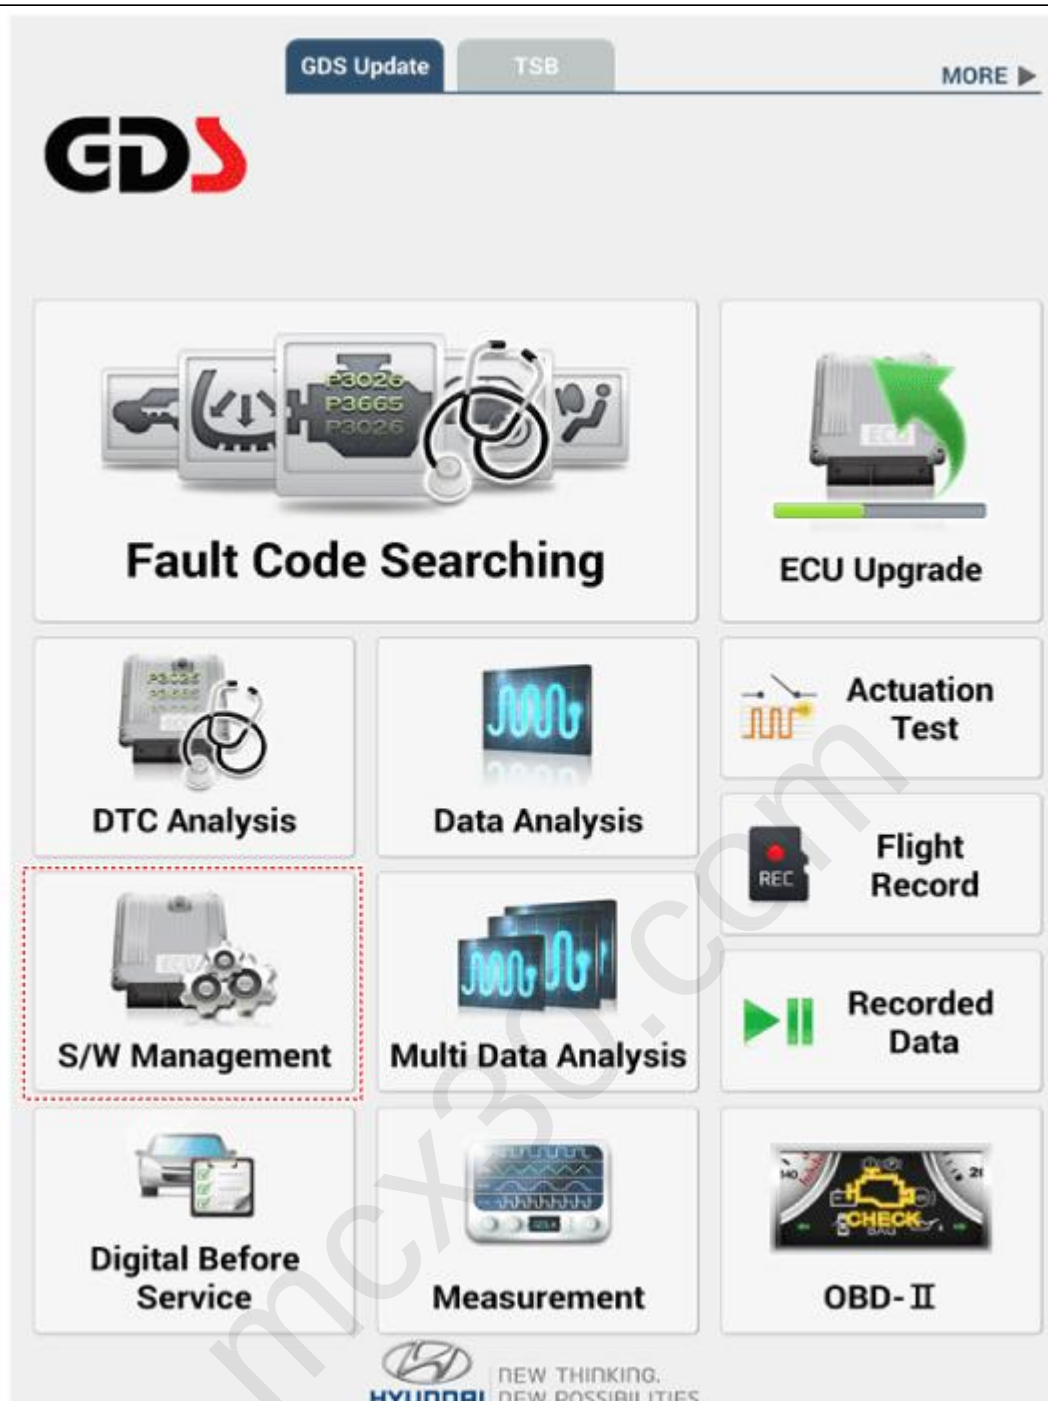

3. Select "Longitudinal G Sensor Calibration".

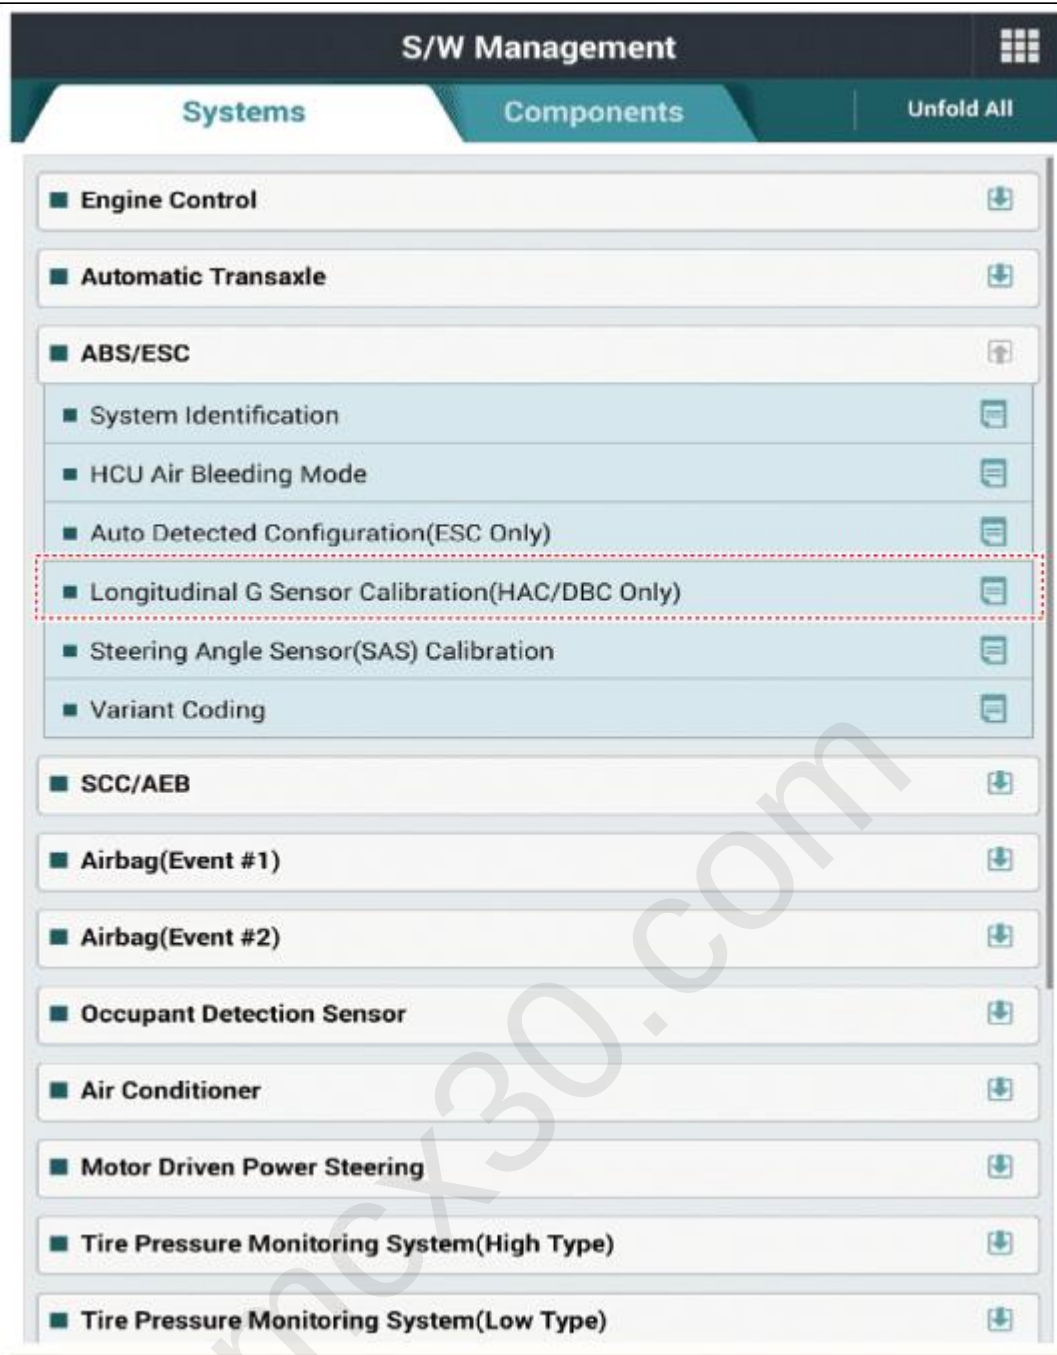

⚠ CAUTION

You must remove or install the SRSCM or other SRS components with the ignition switch OFF to avoid accidental airbag deployment.

Rate this Document

☐ Document Type : SHOP

☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value

1

2

3

4

5

Excellent Value