

Removal


1. Disconnect the negative (-) battery terminal.

⚠ WARNING


Disconnect the battery negative cable, and wait for at least three minutes before beginning work.

2. Disconnect the front impact sensor connector (B) and then remove the front impact sensor (A) after loosening the mounting bolt.

[LH]

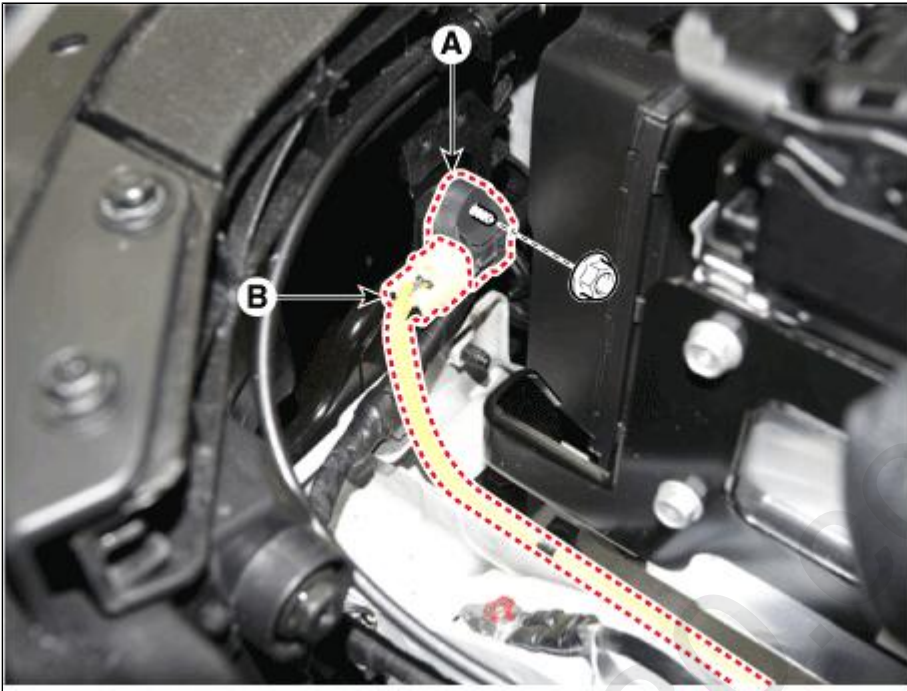

[RH]

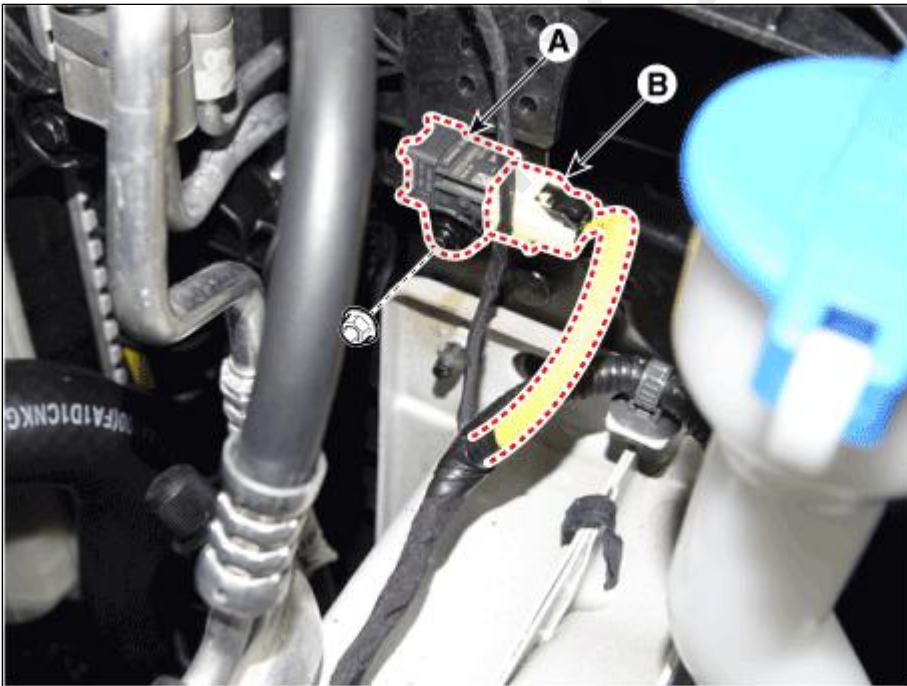

Installation

1. Check if the battery (-) cable is disconnected.

⚠ WARNING

Disconnect the battery negative cable, and wait for at least three minutes before beginning work.

2. Install a new front impact sensor and connect the front impact sensor connector.
3. Tighten the front impact sensor mounting bolt.

Tightening torque :

7.8 - 10.8 N.m (0.8 - 1.0 kgf.m, 6.5 - 5.8 lb-ft)

NOTICE

If tightening by excessive force beyond the specified tightening torque, the forward collision detecting sensor may be damaged. Therefore, make sure to do work in accordance with the specified tightening torque.

4. Reconnect the battery negative (-) terminal.
5. After installing the front impact sensor, confirm proper system operation.

NOTICE

Turn the ignition switch ON; the SRS indicator light should be turned on for about 6 seconds and then go off.

Rate this Document

☐ Document Type : SHOP

☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value