


Removal

1. Disconnect the negative (-) battery terminal.


⚠ WARNING

Disconnect the battery negative cable, and wait for at least three minutes before beginning work.


2. Remove the main crash pad assembly.
(Refer to Body (Interior and Exterior) - "Main Crash Pad Assembly")
3. Loosen the passenger airbag mounting nuts (A).

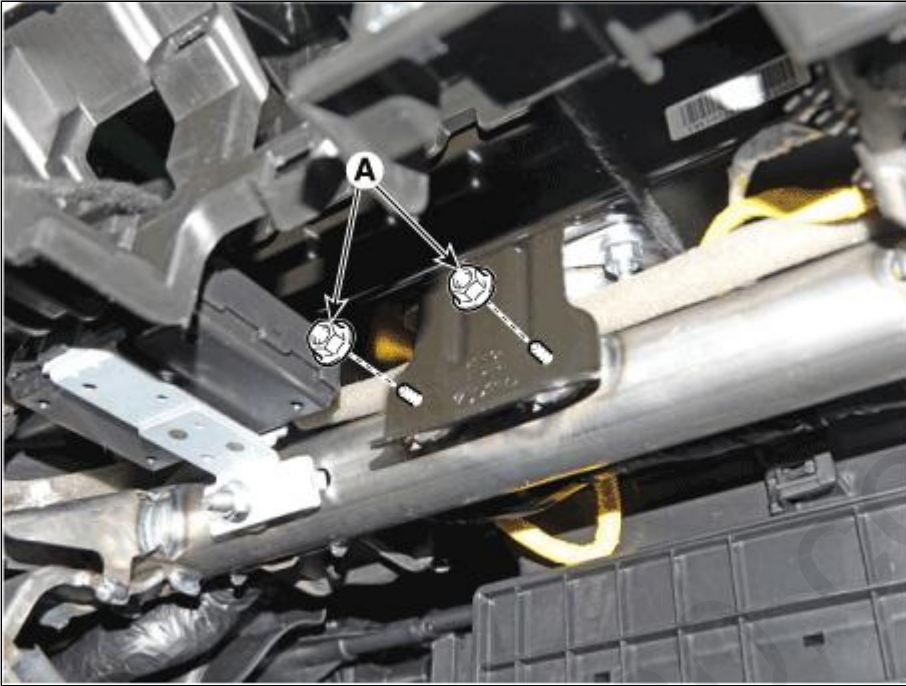

4. Disconnect the PAB module connector (A).

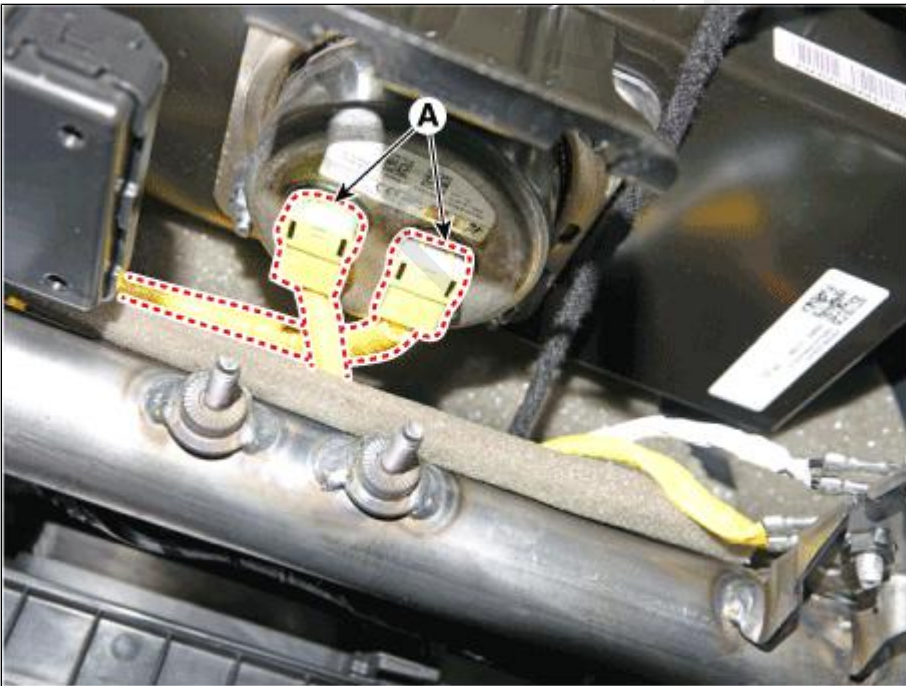

5. Remove the PAB module (A) after loosening the mounting bolts.

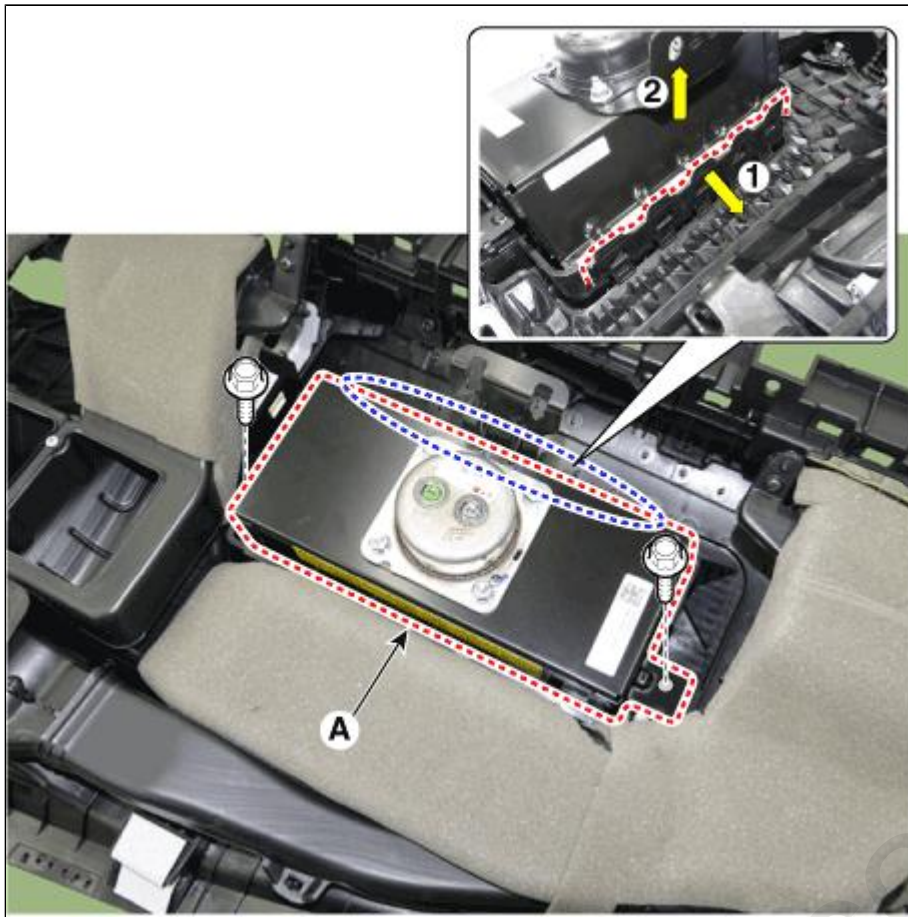

NOTICE

If the crash pad is damaged by the passenger's airbag deployment, replace the crash pad at the same time.

CAUTION

The removed airbag module is placed with the airbag cover side facing up.

Installation

1. Check if the battery (-) cable is disconnected.


WARNING

Disconnect the battery negative cable, and wait for at least three minutes before beginning work.


2. Place a passenger airbag (A) on the crash pad and tighten the passenger airbag mounting bolts.

Tightening torque :

3.9 - 5.9 N.m (0.4 - 0.6 kgf.m, 2.9 - 4.3 lb-ft)

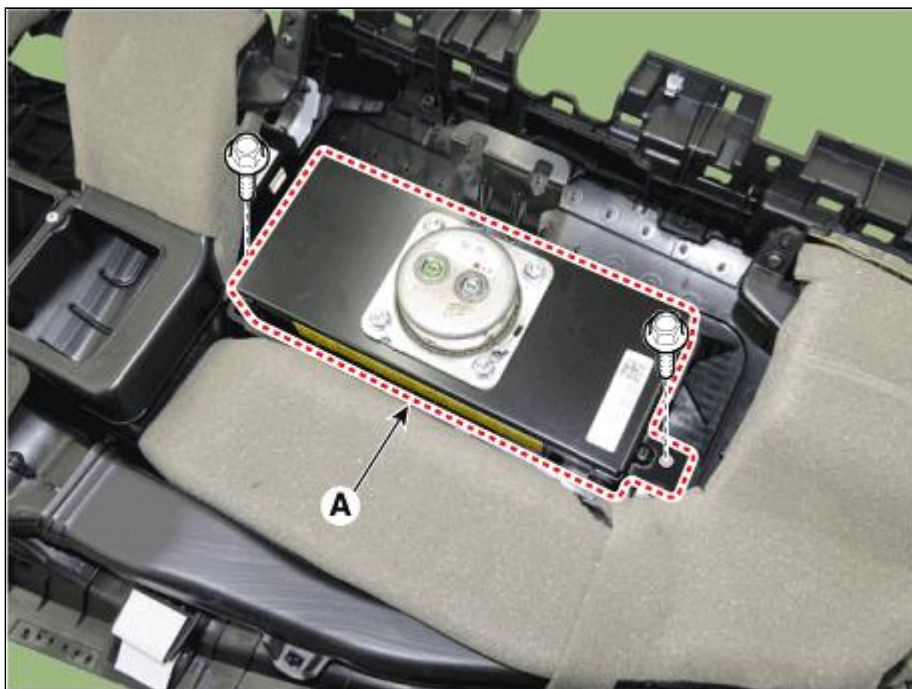


3. Install the main crash pad assembly.
(Refer to Body (Interior and Exterior) - "Main Crash Pad Assembly")
4. Connect the PAB module connector (A).

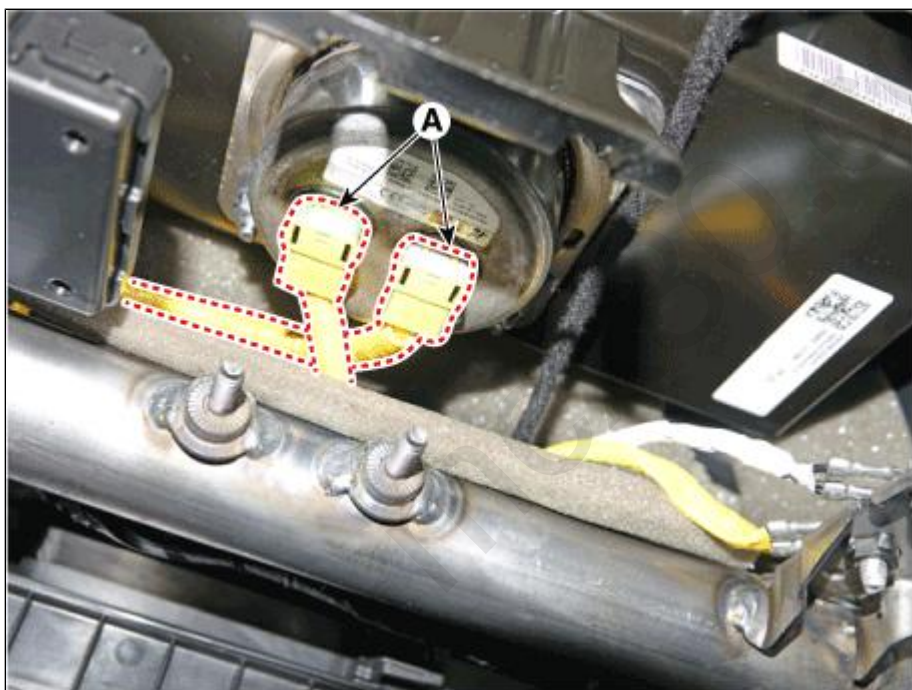

5. Tighten the passenger airbag mounting nuts (A).

Tightening torque :

3.9 - 5.9 N.m (0.4 - 0.6 kgf.m, 2.9 - 4.3 lb-ft)

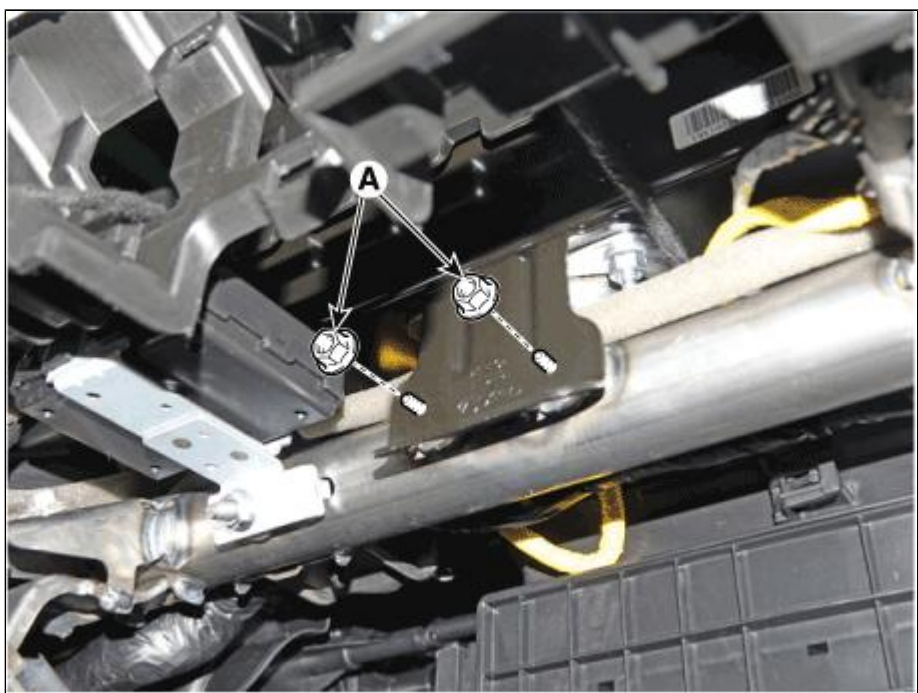

6. Reconnect the battery negative (-) terminal.
7. After installing the passenger airbag, confirm proper system operation.

NOTICE

Turn the ignition switch ON the airbag warning lamp should be turned on for about 6 seconds and then go off.

Rate this Document

- ☐ Document Type : SHOP
- ☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value