

Removal

1. Disconnect the negative (-) battery terminal.


⚠ WARNING

Disconnect the battery negative cable, and wait for at least three minutes before beginning work.

2. Remove the roof trim assembly.
(Refer to Body (Interior and Exterior) - "Roof Trim Assembly")
3. Disconnect the curtain airbag module connector (A).



4. Remove the curtain airbag module (A) after loosening the mounting bolts.

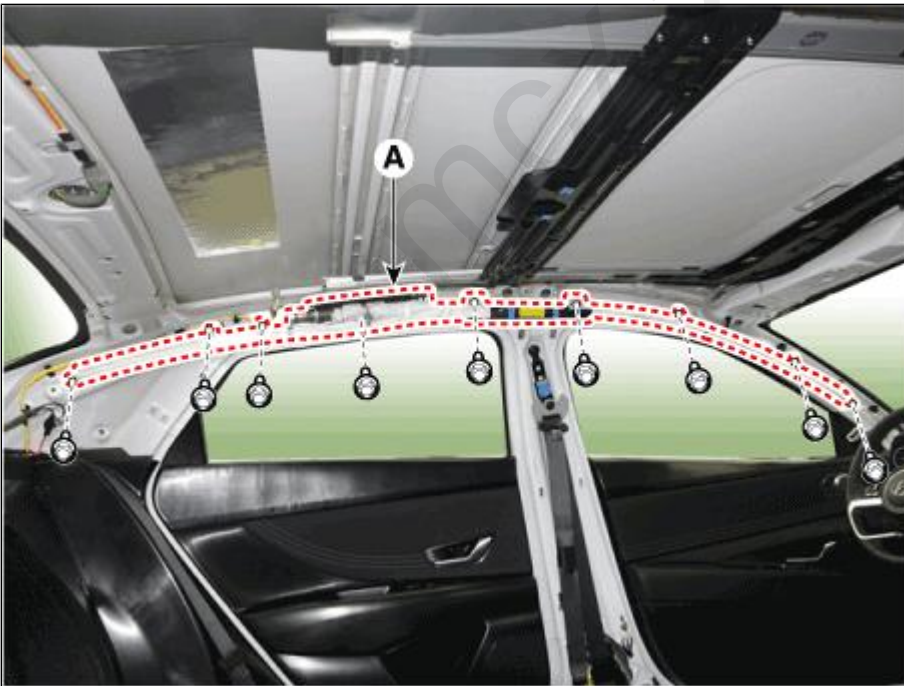

Installation

1. Check if the battery (-) cable is disconnected.

⚠ WARNING

Disconnect the battery negative cable, and wait for at least three minutes before beginning work.

2. Place a curtain airbag module and tighten the mounting bolts.

Tightening torque :

Bolt : 7.8 - 11.8 N.m (0.8 - 1.2 kgf.m, 5.8 - 8.7 lb-ft)

NOTICE

The left and right curtain airbags are identified by the color of the tape and warning sticker on the module as follows.

Left side : red tape (yellow : warning sticker)

Right side : blue tape (orange : warning sticker)

CAUTION

Never twist the airbag module when installing it. If the module is twisted, the airbag module may operate abnormally.

3. Connect the curtain airbag connector.
4. Install the roof trim assembly.
(Refer to Body (Interior and Exterior) - "Roof Trim Assembly")
5. Reconnect the negative (-) battery terminal.
6. After installing the curtain airbag (CAB), confirm proper system operation.

NOTICE

Turn the ignition switch ON the airbag warning lamp should be turned on for about 6 seconds and then go off.

Rate this Document

☐ Document Type : SHOP

☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value