

Replacement

[Floor console assembly]

CAUTION

When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.


Put on gloves to prevent hand injuries.

NOTICE


Take care not to bend or scratch the trim and panels.

1. To remove the gear knob & gear boots (A) pull both of it up.


[General type]

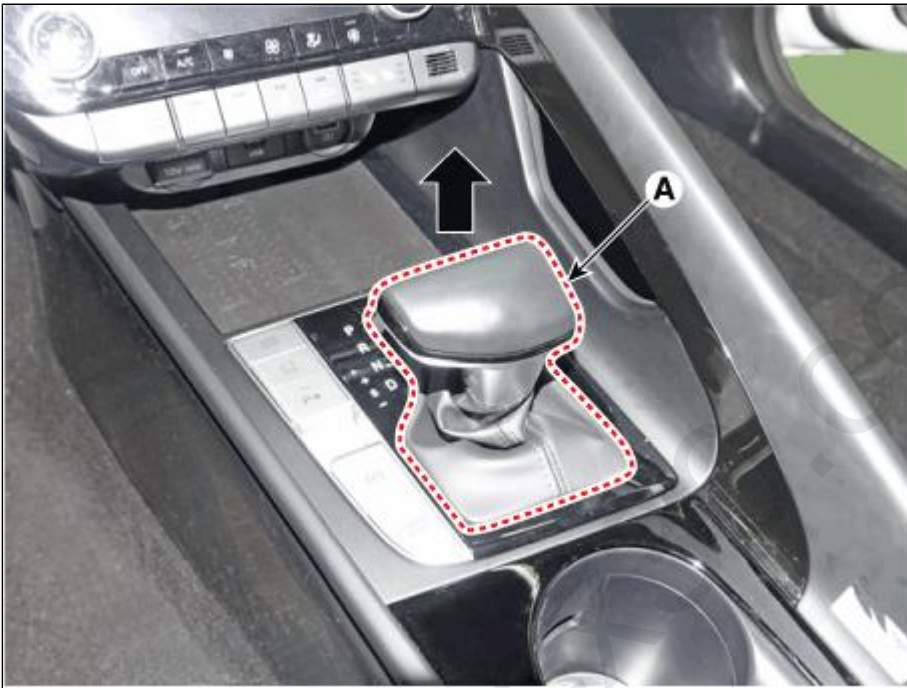

2. Using a screwdriver or remover, remove the floor console side garnish (A).

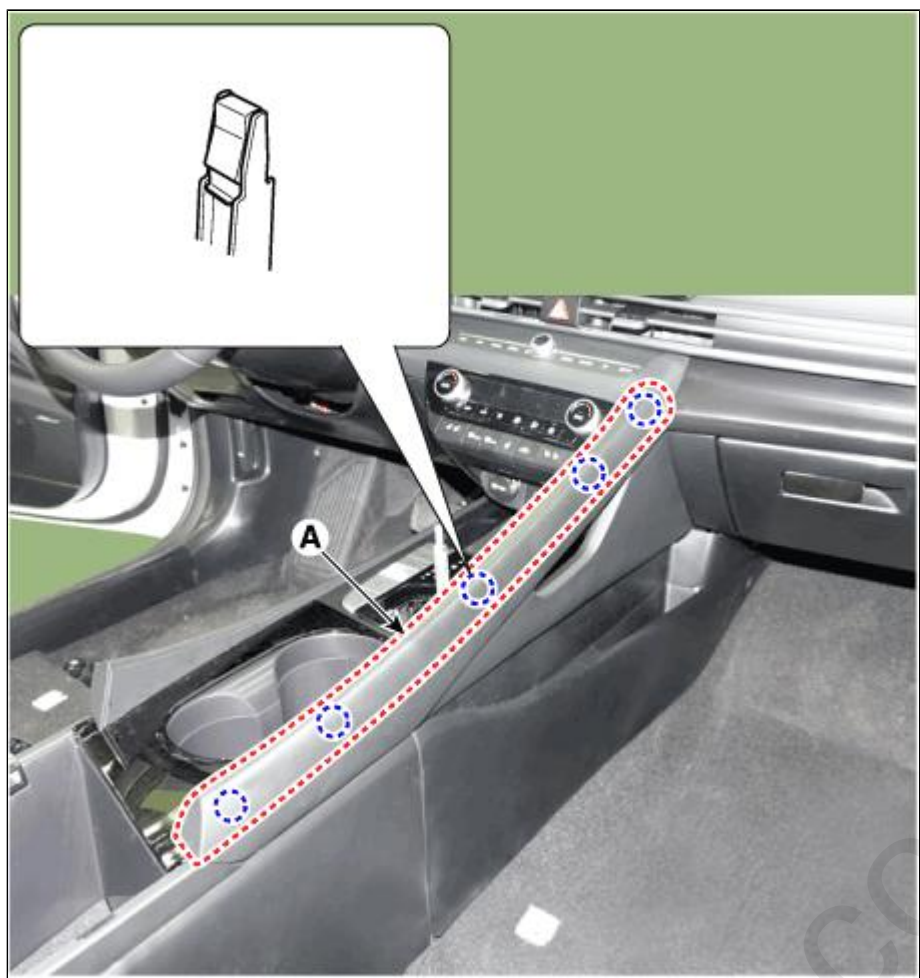


3. After loosening the mounting screw and then using a screwdriver or remover, remove the console upper cover (A).

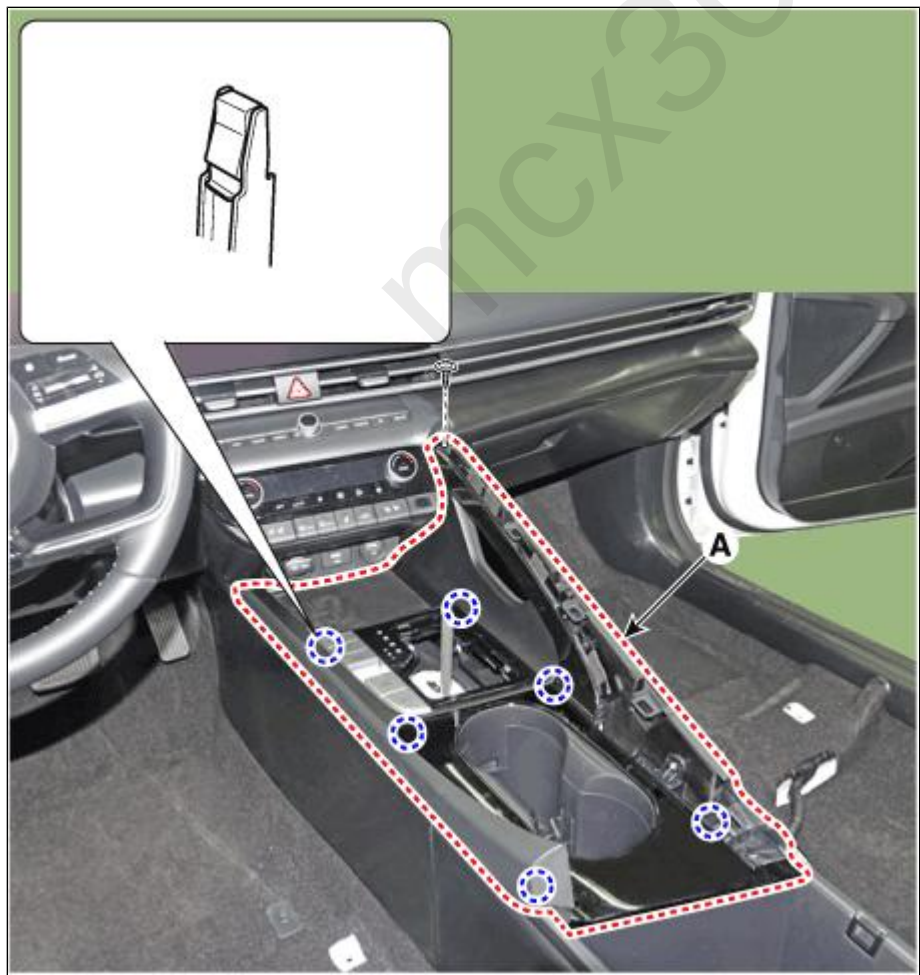


4. Disconnect the console upper cover connector (A).



5. Remove the storage box pad (A).

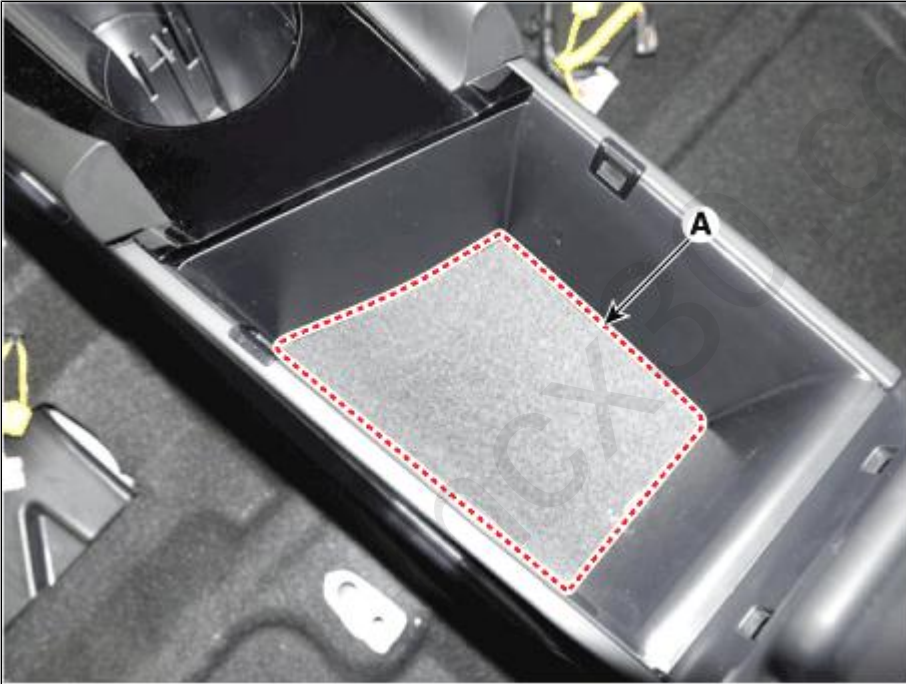

6. After loosening the mounting screws and bolts, remove the floor console assembly (A).

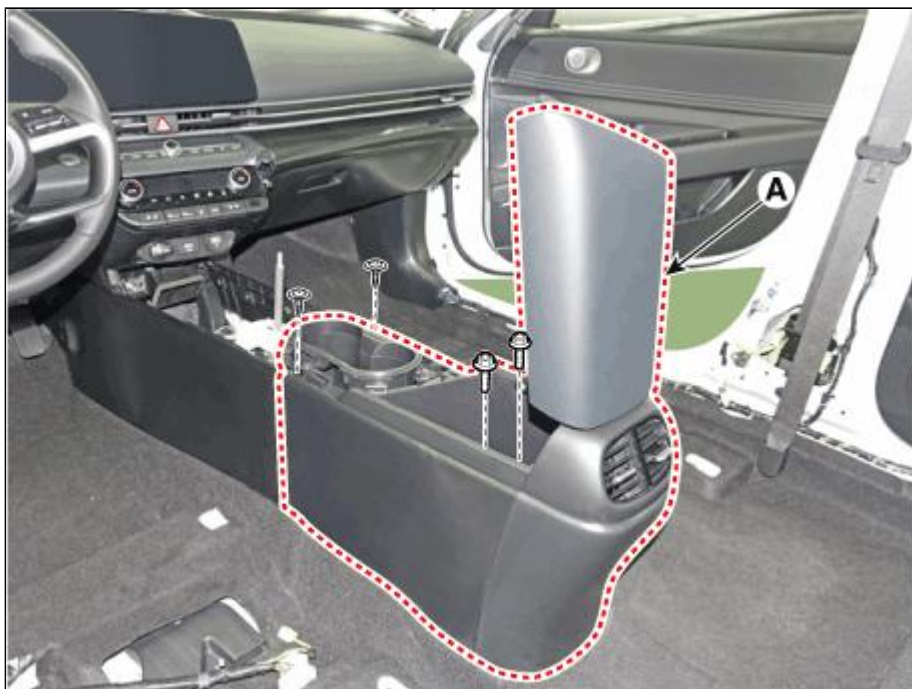

7. Disconnect the floor console connector (A).



8. To install, reverse the removal procedure.

Information

Make sure the connector is connected properly.
Replace any damaged clips (or pin - type retainers).

[Floor console side cover]


CAUTION

When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
Put on gloves to prevent hand injuries.


NOTICE

Take care not to bend or scratch the trim and panels.

1. Remove the floor console assembly.
(Refer to Floor console - "Floor Console Assembly")
2. After loosening the mounting clip (A) and screw, remove the floor console side cover (B).

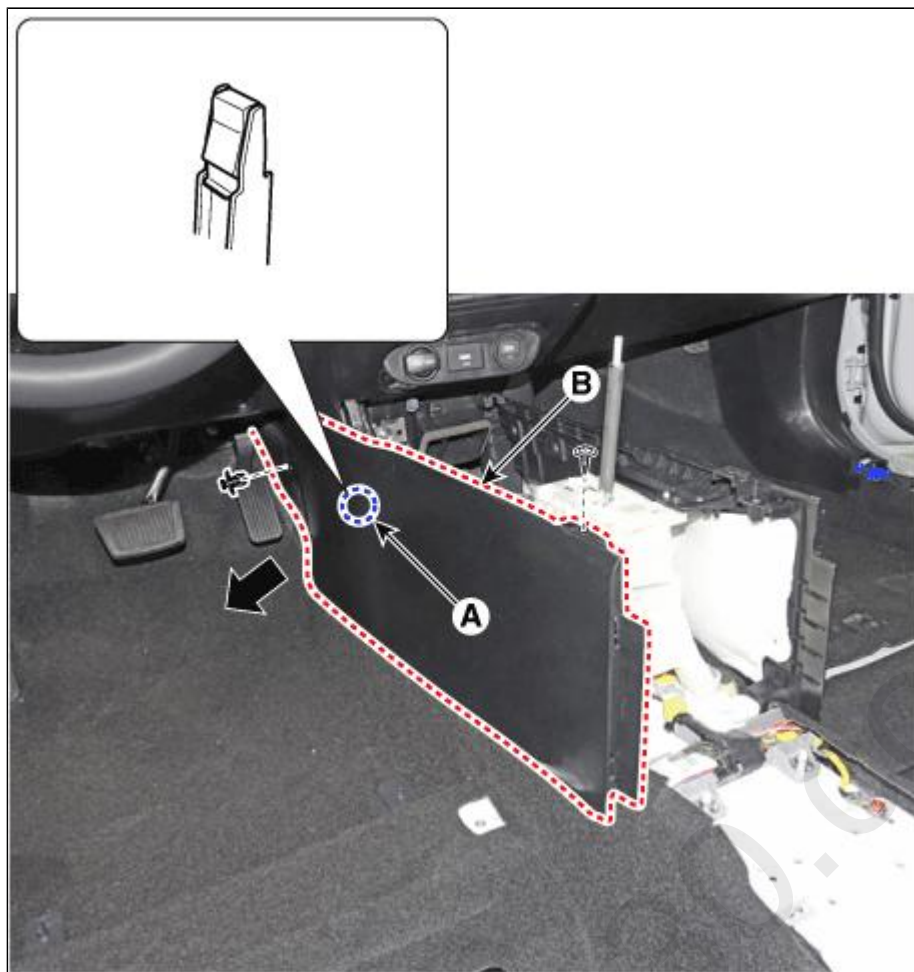

[RH]

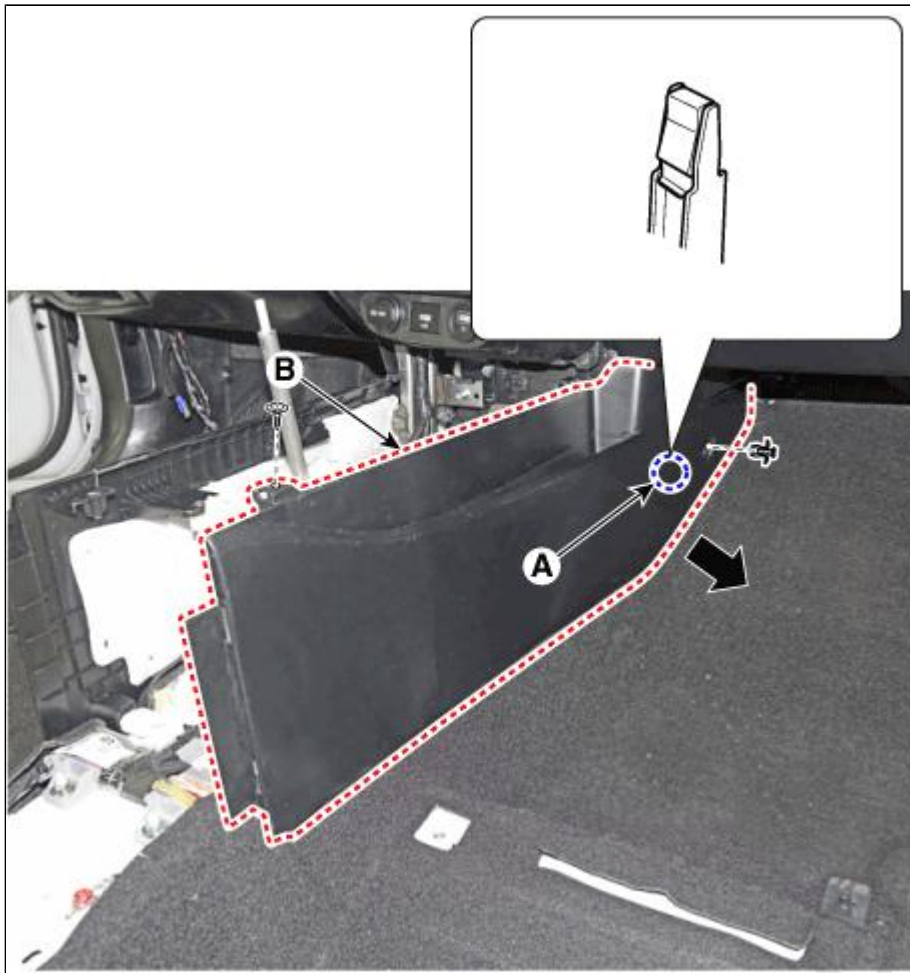

3. To install, reverse the removal procedure.

Information

Replace any damaged clips (or pin - type retainers).

Rate this Document

☐ Document Type : SHOP

☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value