

Replacement

[Steering column shroud upper panel]

⚠ CAUTION

When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

Put on gloves to prevent hand injuries.

NOTICE


Take care not to bend or scratch the trim and panels.

1. Using a screwdriver or remover, remove the steering column shroud upper panel (A).



⚠ CAUTION

When removing the shroud upper panel, excessive force may cause the leather to tear.

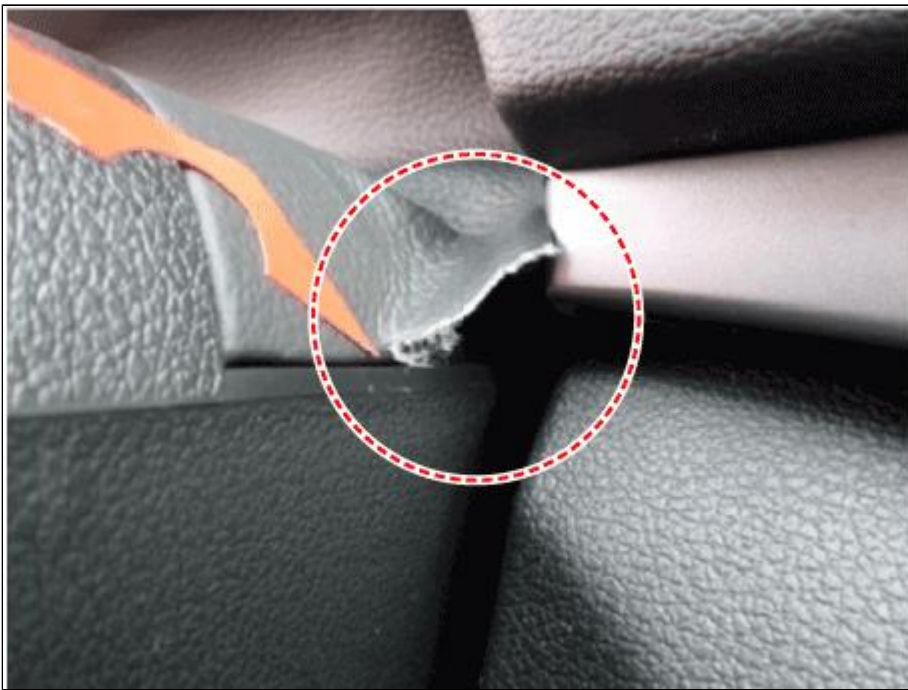

2. To install, reverse the removal procedure.

Information

Replace any damaged clips (or pin - type retainers).

[Steering column shroud lower panel]


CAUTION

When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
Put on gloves to prevent hand injuries.

NOTICE

Take care not to bend or scratch the trim and panels.

1. Remove the steering column shroud upper panel.
2. Remove the crash pad lower panel.
(Refer to Crash Pad - "Crash Pad Lower Panel")
3. Loosen the mounting screws by turning the steering wheel to the left and right, and remove the steering column shroud lower panel (A).

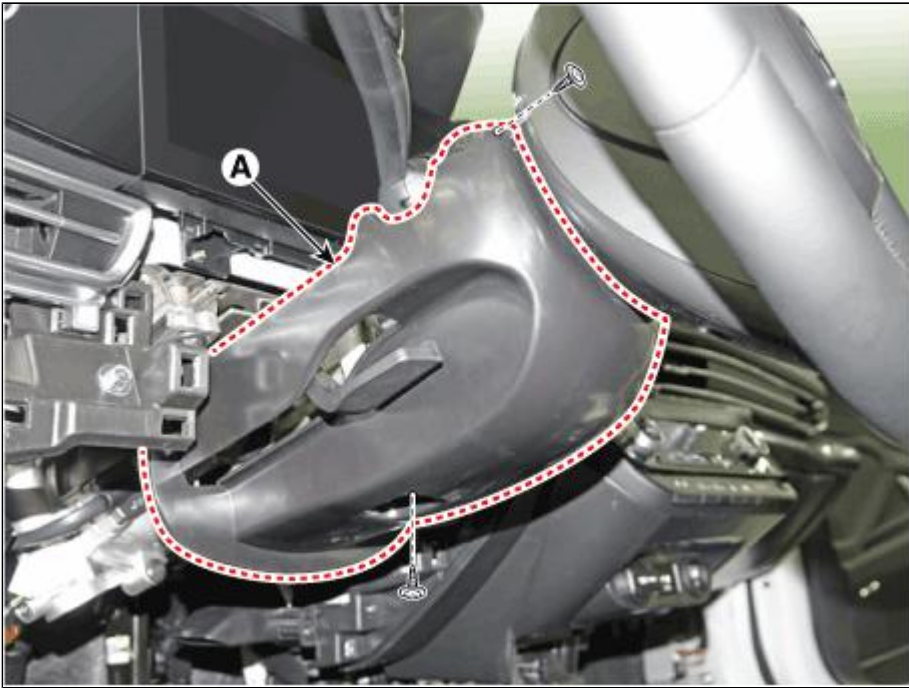

4. To install, reverse the removal procedure.

**Information**
Replace any damaged clips (or pin - type retainers).

- Rate this Document
- ☐ Document Type : SHOP
 - ☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value	1	2	3	4	5	Excellent Value
--------------	---	---	---	---	---	-----------------