

Replacement

[LH]

CAUTION

When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

Put on gloves to prevent hand injuries.


NOTICE

Take care not to bend or scratch the trim and panels.


1. Remove the front door body side weatherstrip (A).




2. Using a screwdriver or remover, remove the crash pad side cover (A).

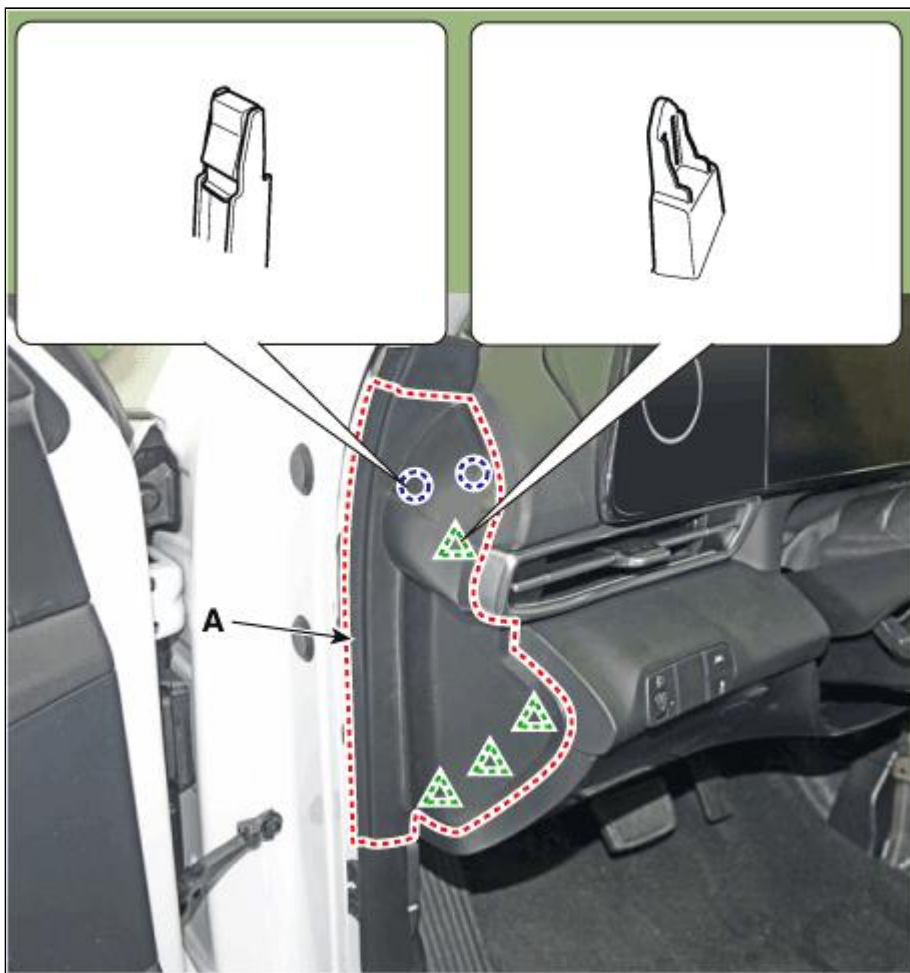

3. Remove the crash pad garnish [LH].
(Refer to Crash Pad - "Crash Pad Garnish")
4. Loosen the mounting screw, remove the crash pad air vent (A).

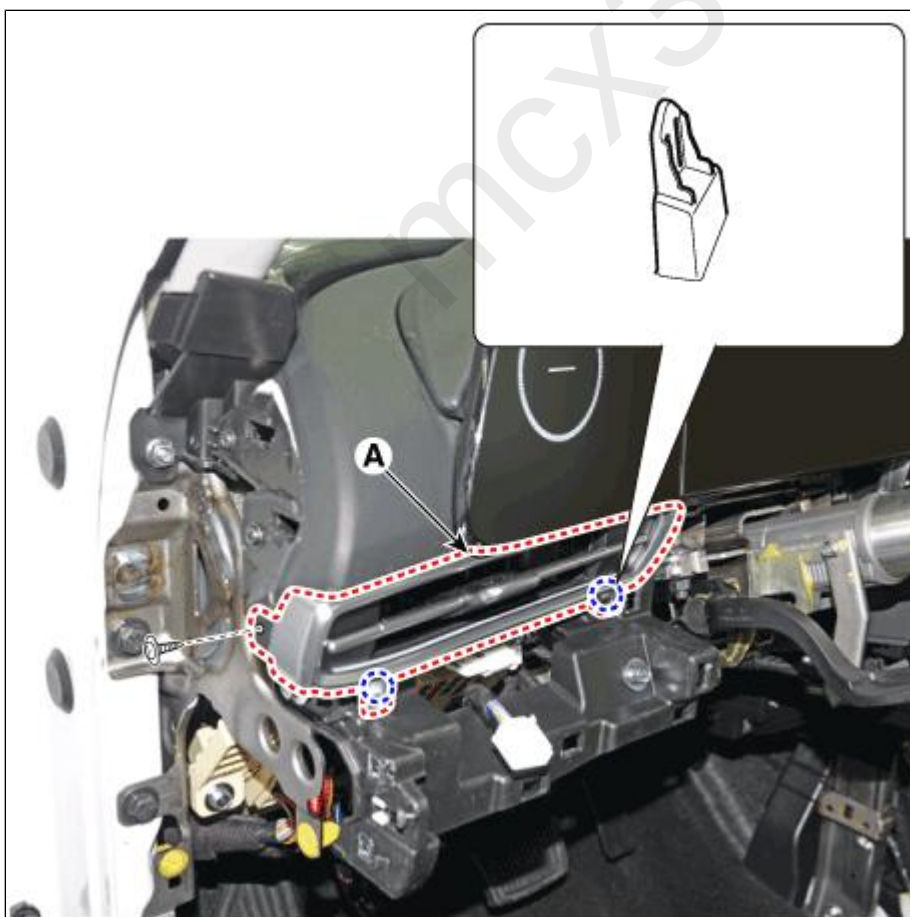

5. Disconnect the mood lamp connector (A).

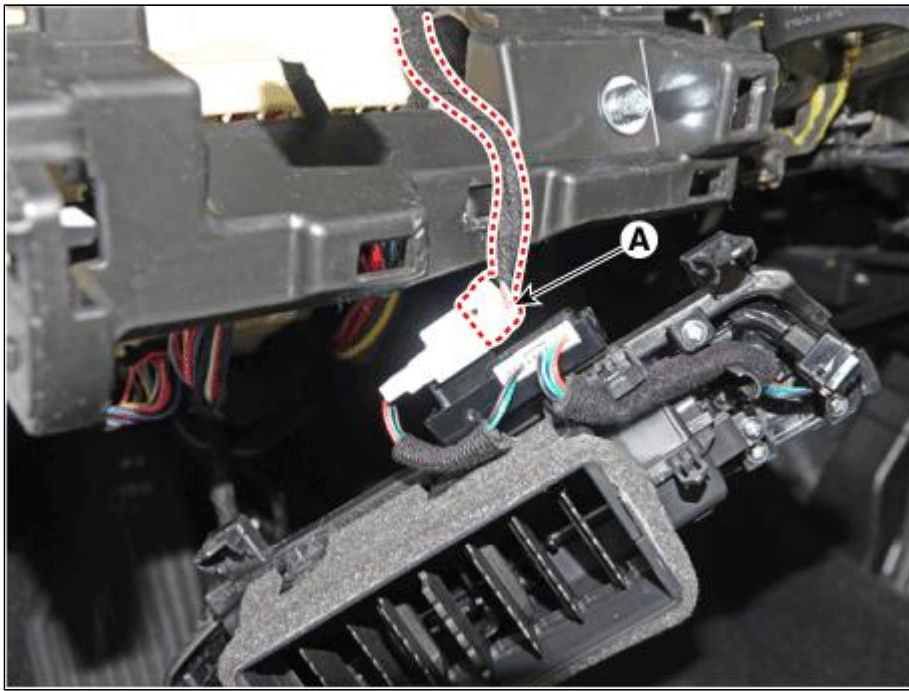

6. To install, reverse the removal procedure.

i Information

Make sure the connector are connected in properly.
Replace any damaged clips (or pin - type retainers).

[RH]

⚠ CAUTION

When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
Put on gloves to prevent hand injuries.


NOTICE

Take care not to bend or scratch the trim and panels.

1. Remove the instrument cluster.
(Refer to Body Electrical System - "Instrument Cluster")
2. Remove the crash pad lower panel.
(Refer to Crash Pad - "Crash Pad Lower Panel")
3. Remove the front door body side weatherstrip (A).



4. Using a screwdriver or remover, remove the crash pad side cover (A).

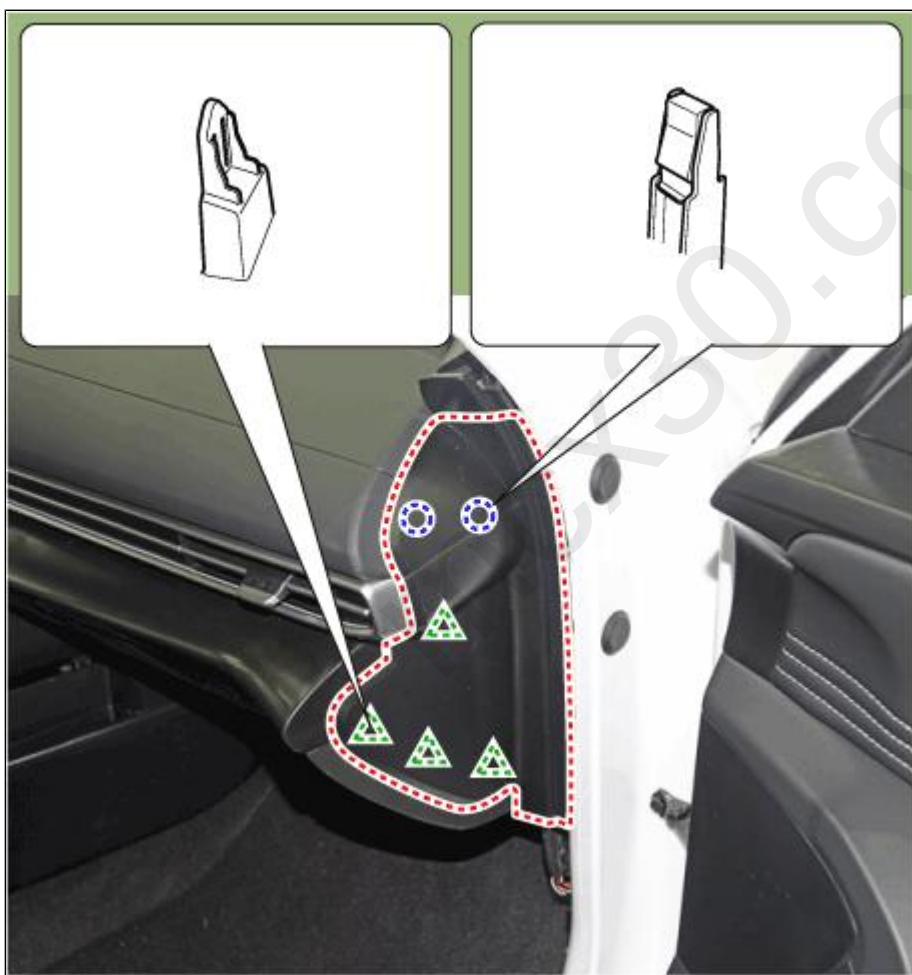


5. Using a screwdriver or remover, remove the steering column shroud upper panel (A).




6. To remove the gear knob & gear boots (A) pull both of it up.



7. Using a screwdriver or remover, remove the floor console side garnish (A).

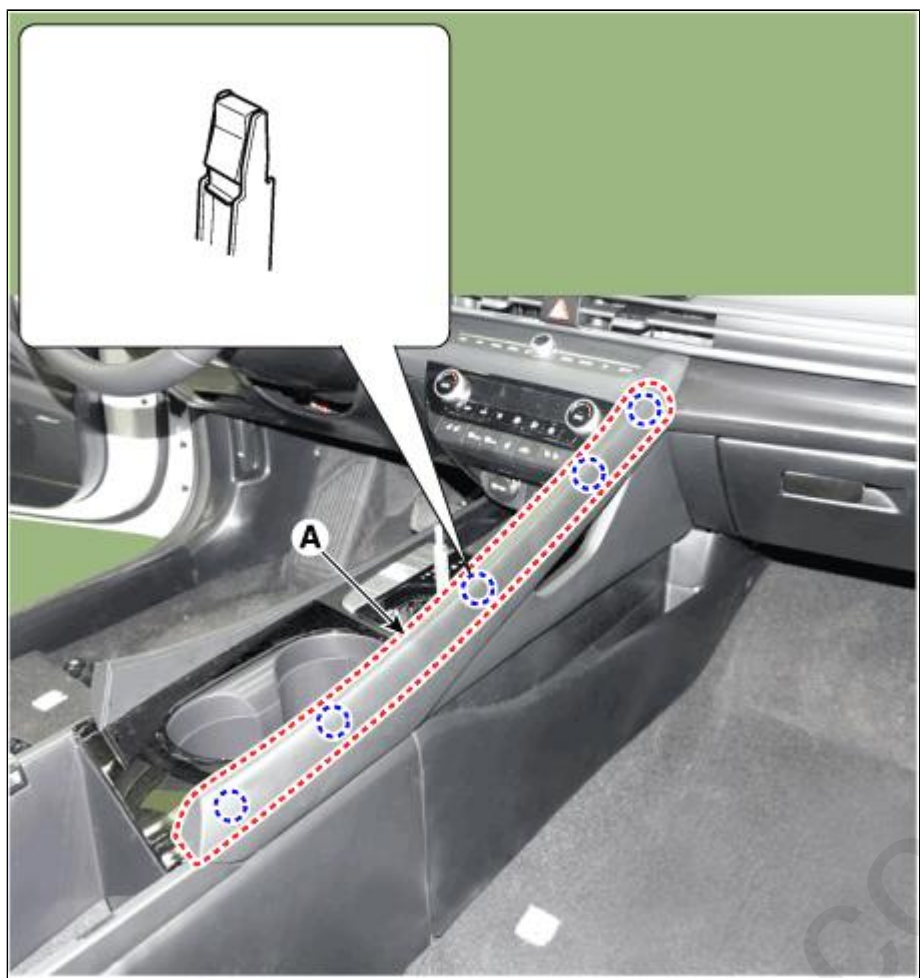


8. After loosening the mounting screw and then using a screwdriver or remover, remove the console upper cover (A).

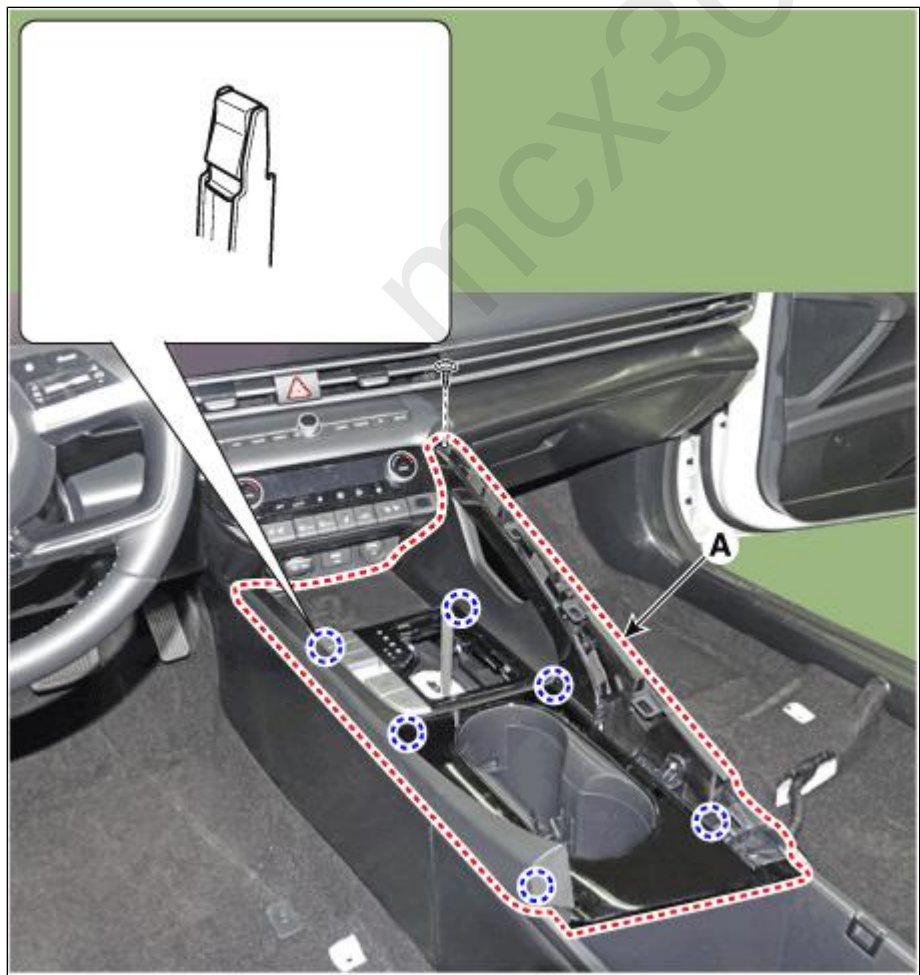


9. Disconnect the console upper cover connector (A).




10. Using a screwdriver or remover, remove the crash pad garnish [CTR] (A).

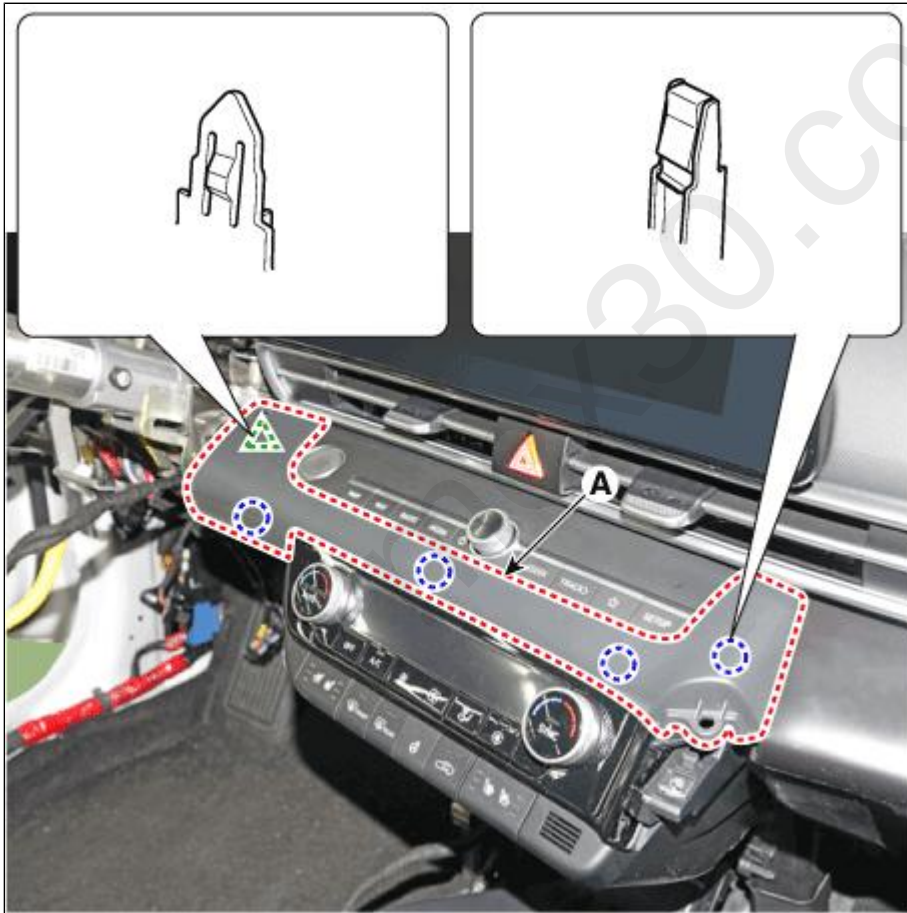


11. Loosen the mounting screws, remove the A/C & heater controller unit (A).

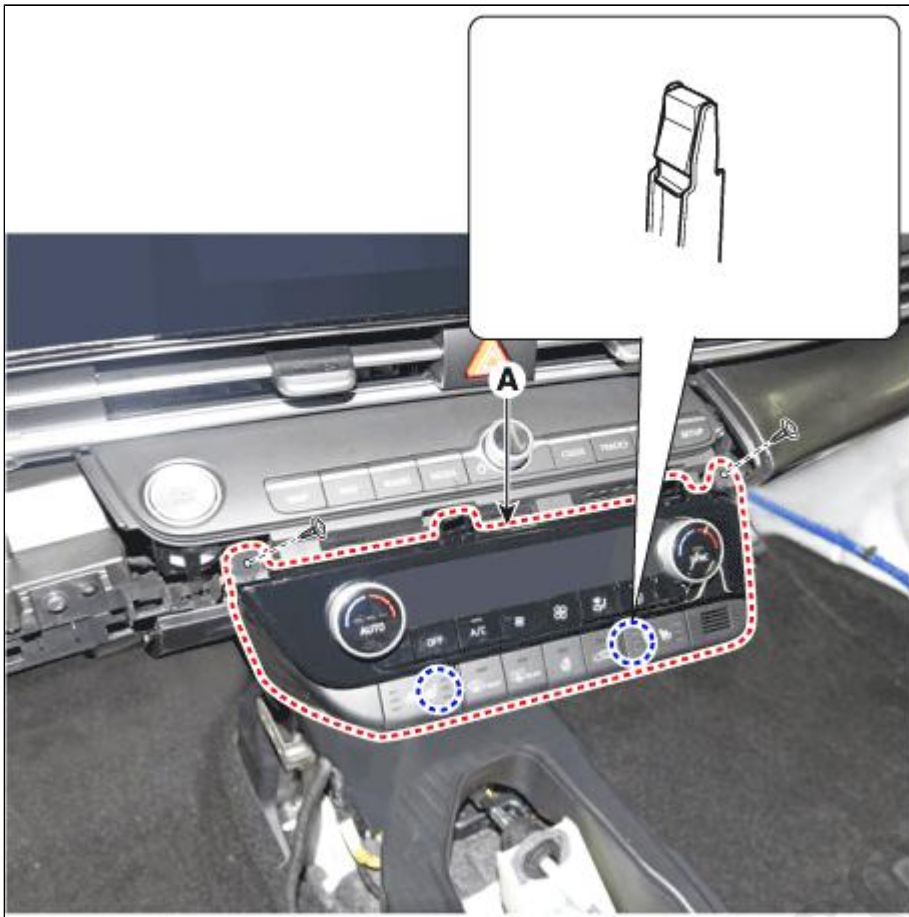


12. Disconnect the A/C & heater controller connectors (A) and hose (B).

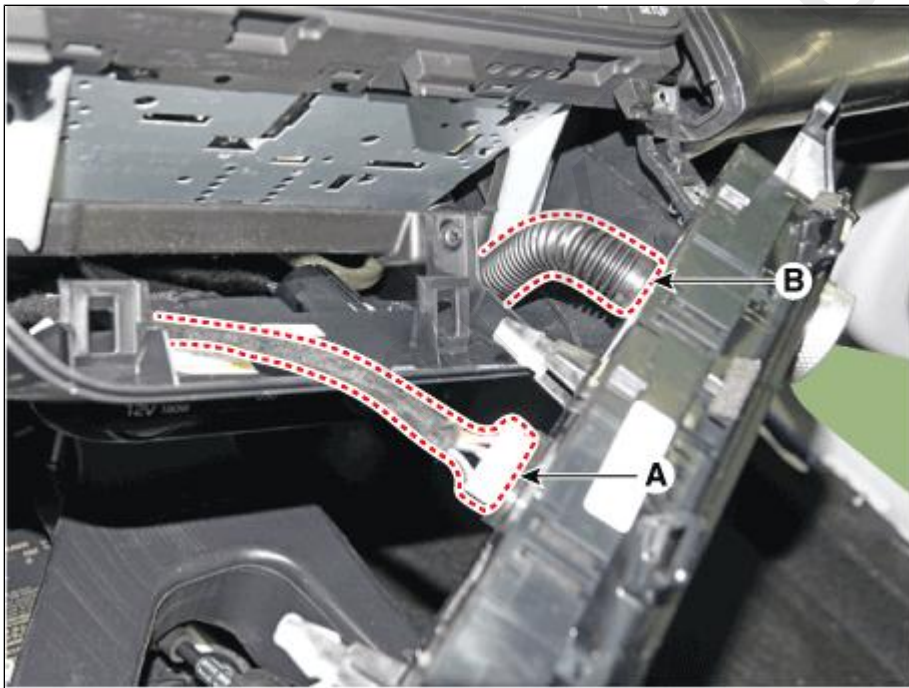


13. Loosen the mounting screws, remove the AVN keyboard assembly (A).

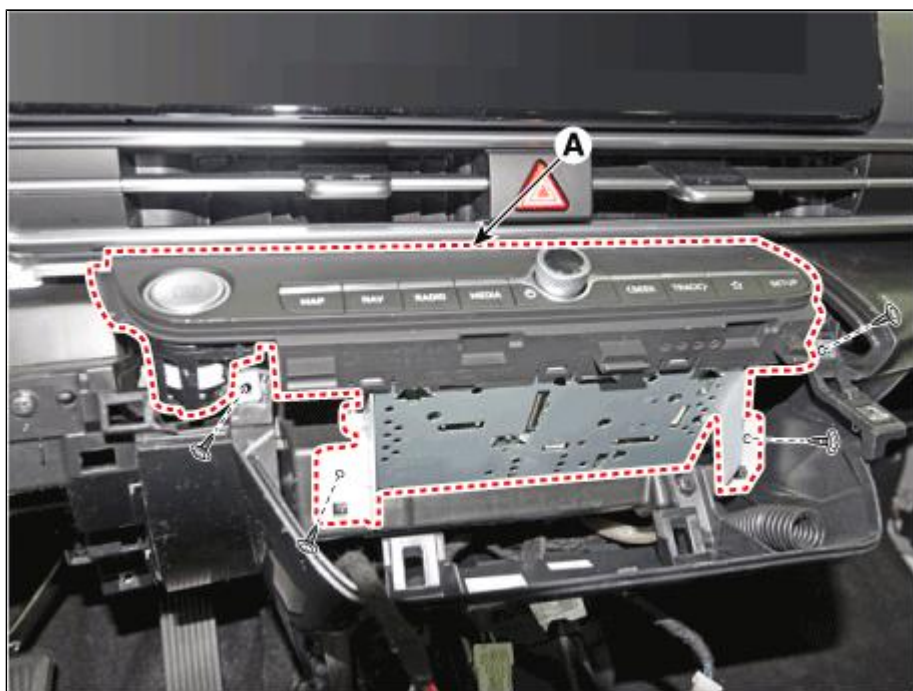


14. Disconnect the start button connector (A).

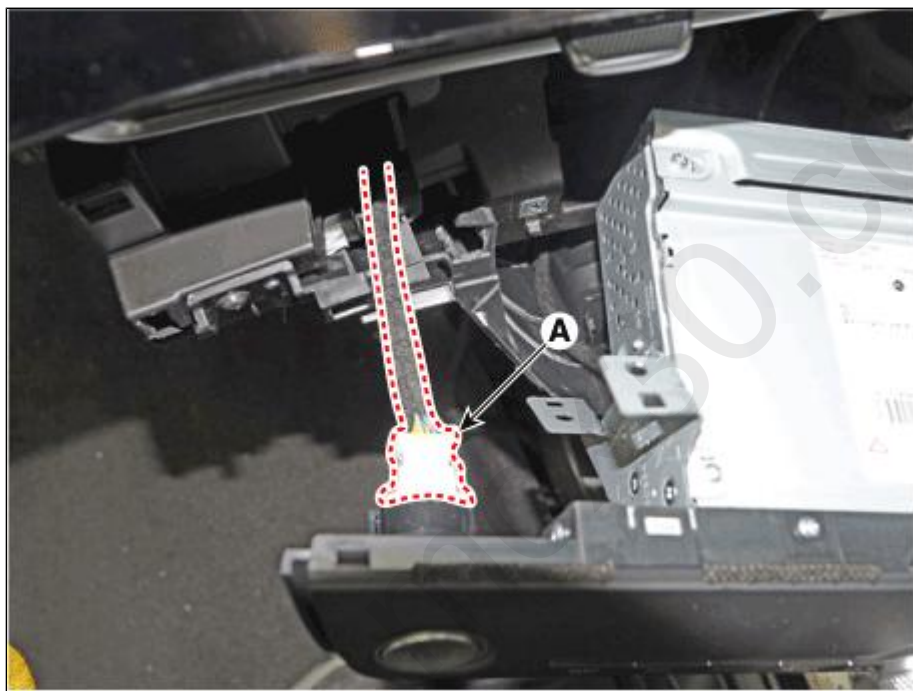


15. Disconnect the connectors (A).

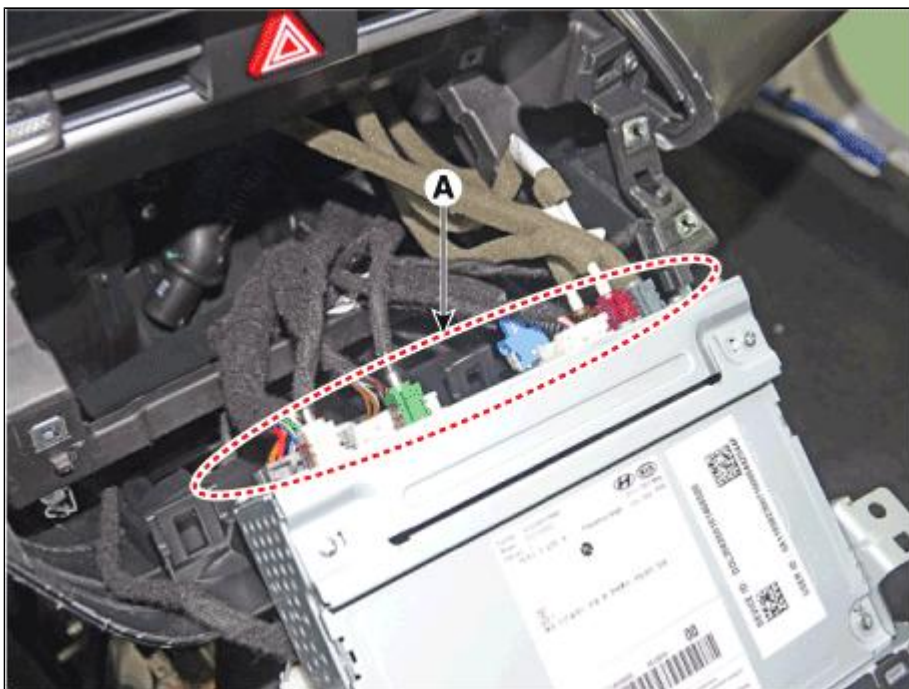


16. Loosening the mounting screws, using a screwdriver or remover, remove the crash pad garnish (A).

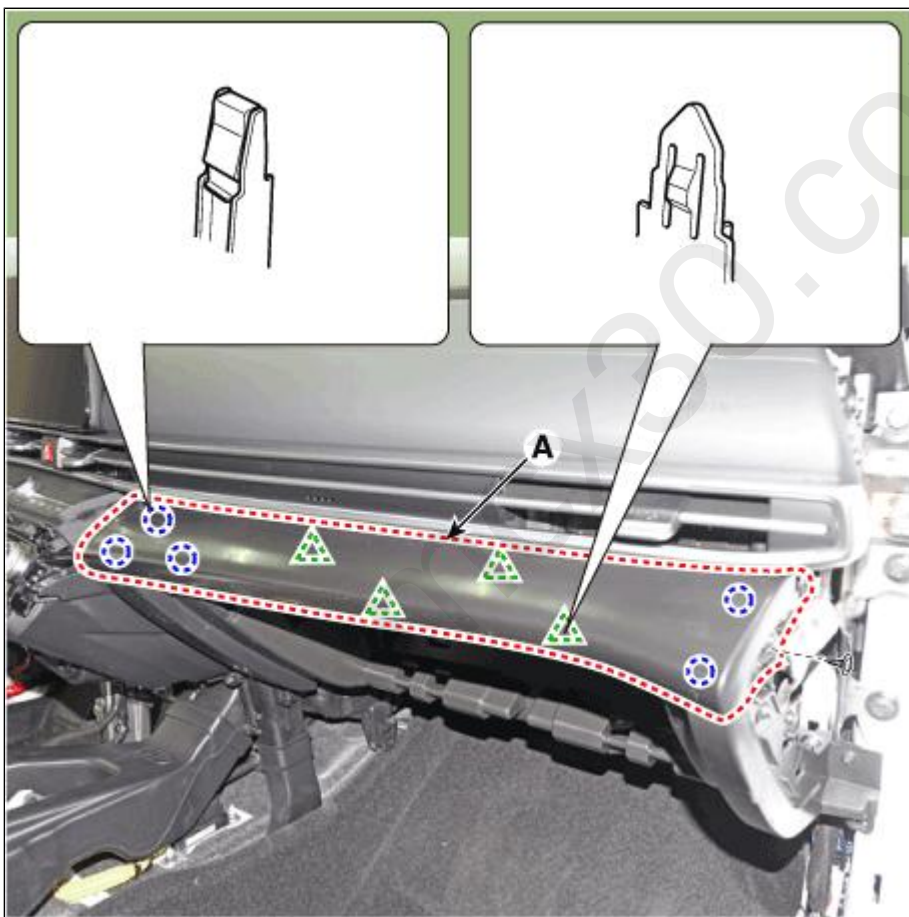


17. Loosen the mounting screw, remove the crash pad air vent (A).

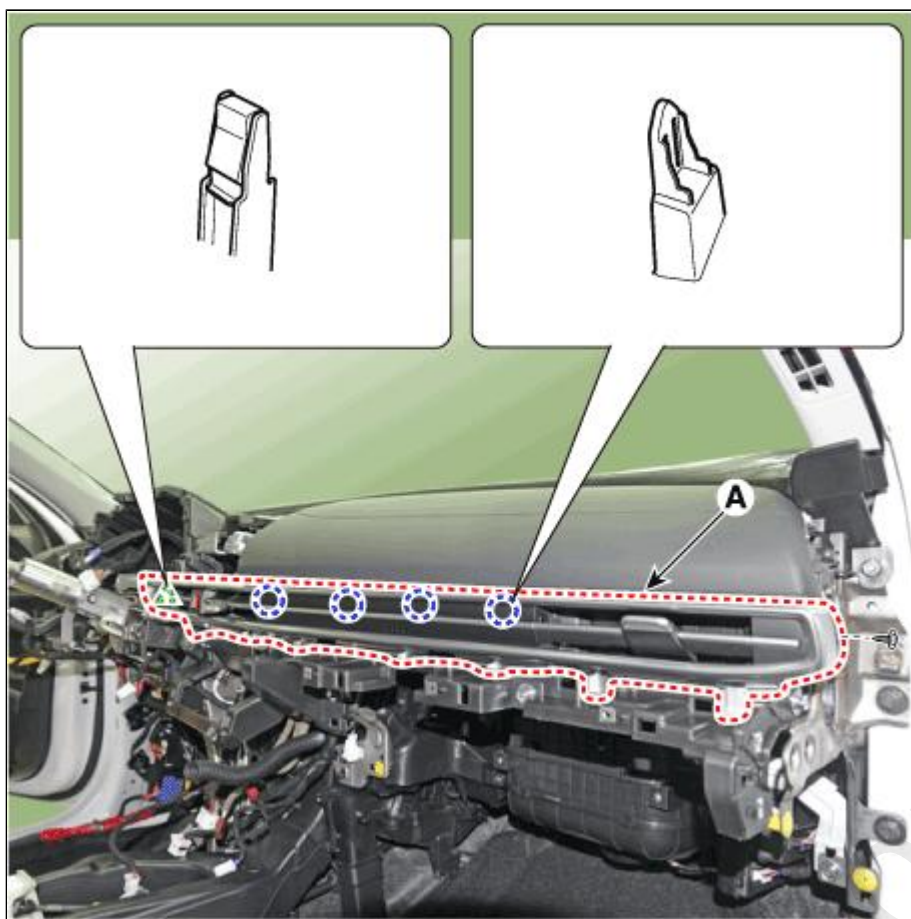

18. Disconnect the hazard switch connector (A).

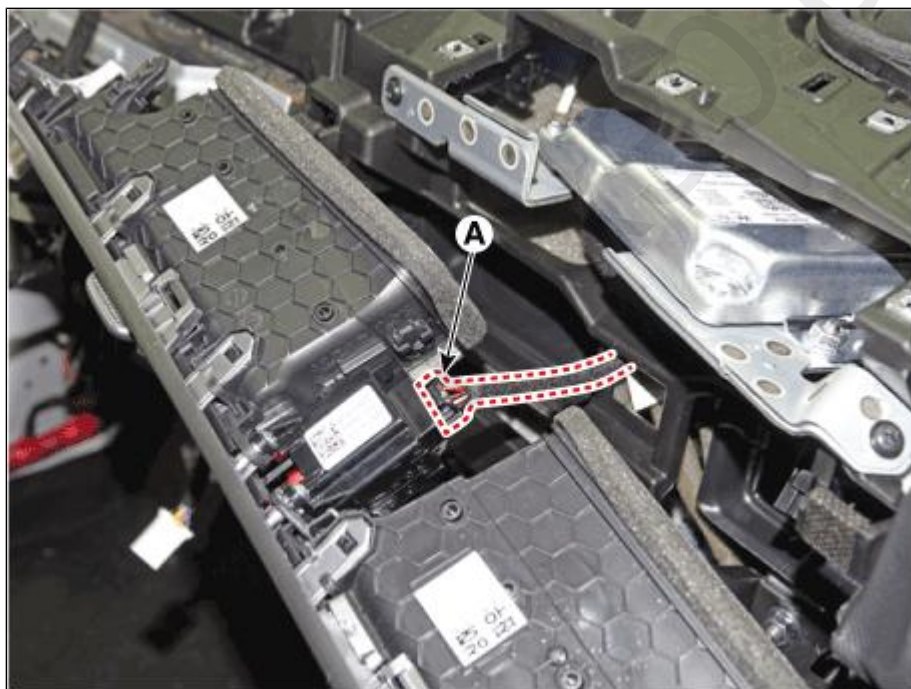

19. Disconnect the connectors (A).

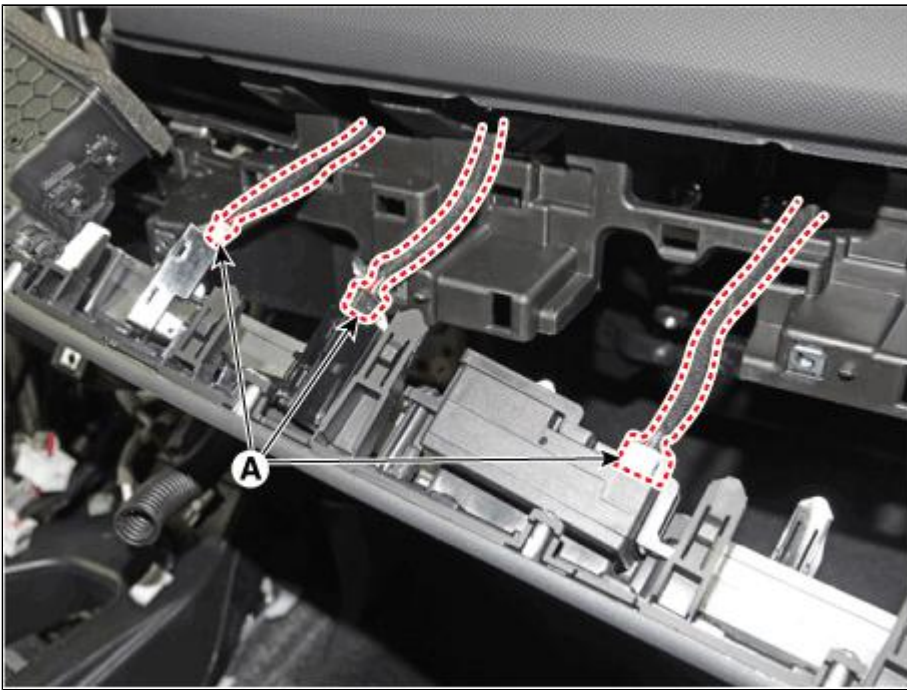

20. To install, reverse the removal procedure.

Information

Make sure the connector are connected in properly.
Replace any damaged clips (or pin - type retainers).

Rate this Document

- ☐ Document Type : SHOP
☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value