

## Replacement


### **⚠ CAUTION**

When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.


Use a plastic panel removal tool to remove interior trim pieces without marring the surface.

Put on gloves to prevent hand injuries.


1. Remove the crash pad garnish [CTR,RH].  
(Refer to Crash Pad -"Crash Pad Garnish")
2. Remove the glove box housing cover.  
(Refer to Crash Pad -"Glove Box Housing Cover")
3. Remove the crash pad lower panel.  
(Refer to Crash Pad -"Crash Pad Lower Panel")
4. To remove the gear knob & gear boots (A) pull both of it up.

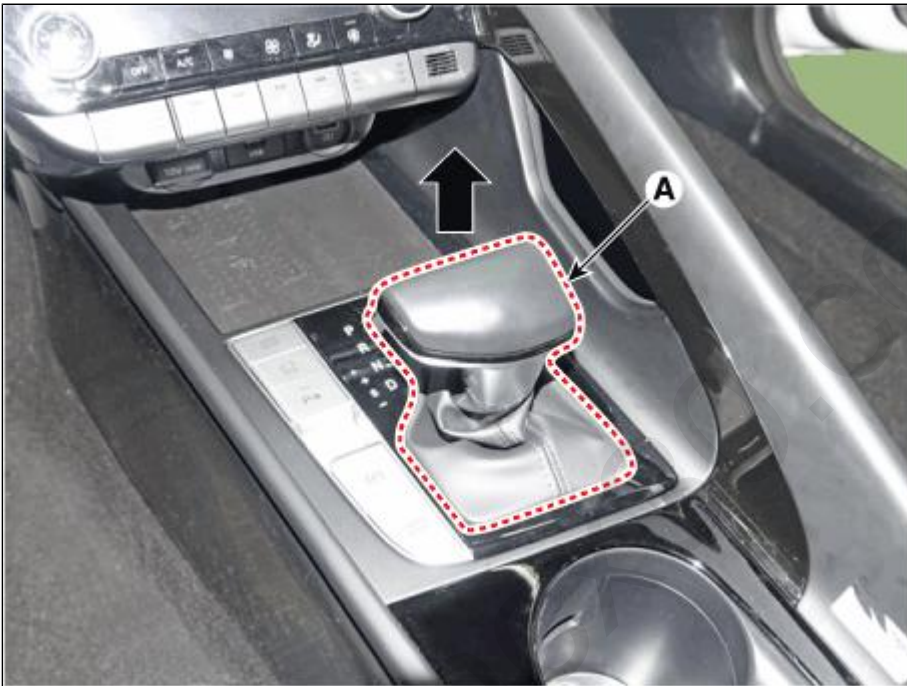

5. Using a screwdriver or remover, remove the floor console side garnish (A).

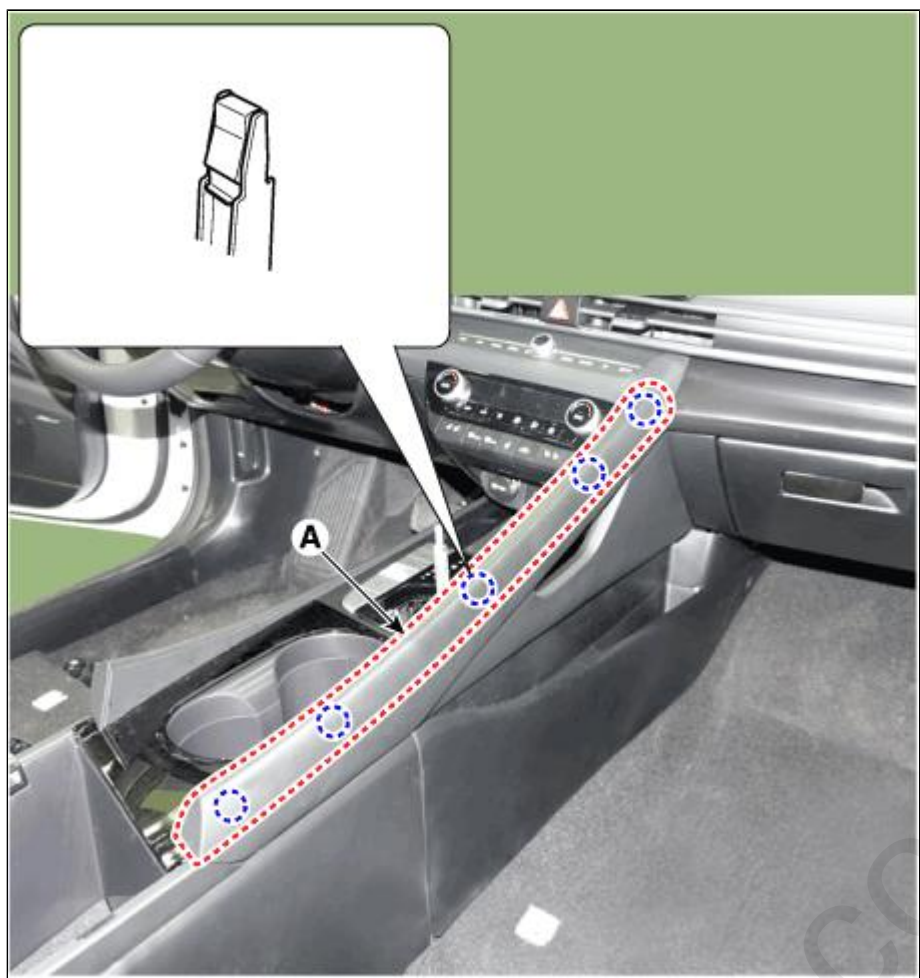


6. After loosening the mounting screw and then using a screwdriver or remover, remove the console upper cover (A).

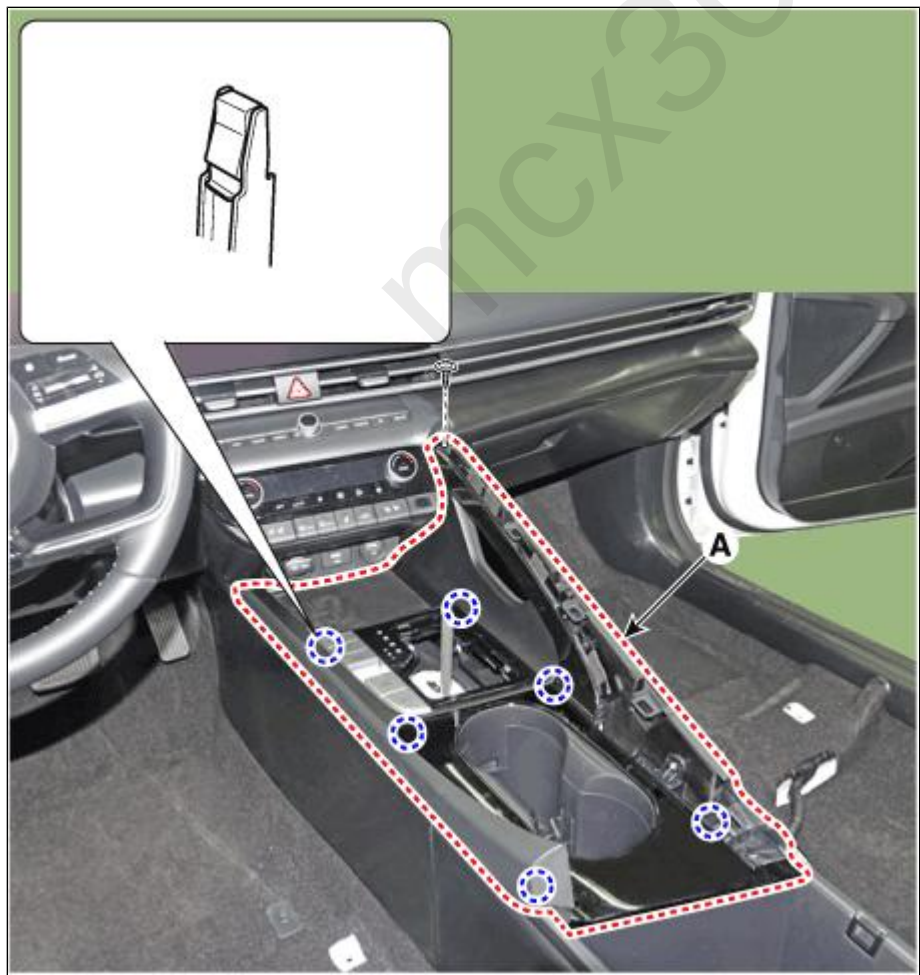


7. Disconnect the console upper cover connector (A).




8. Loosen the mounting screws, remove the A/C & heater controller unit (A).

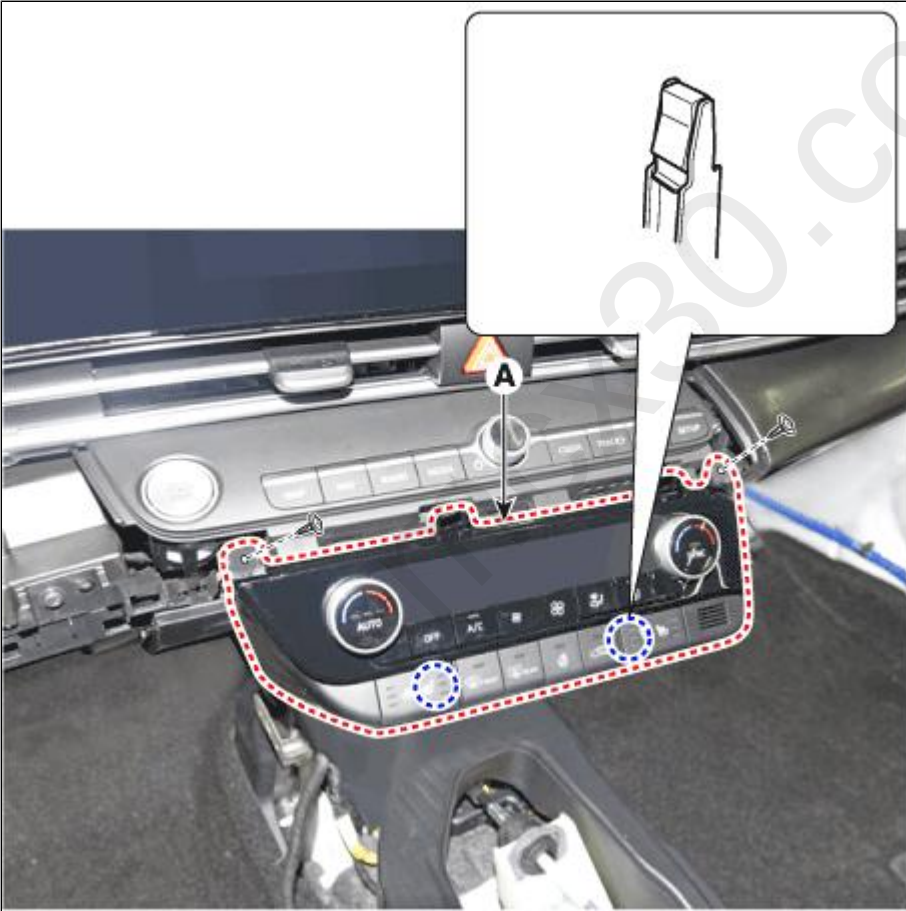


9. Disconnect the A/C & heater controller connectors (A) and hose (B).

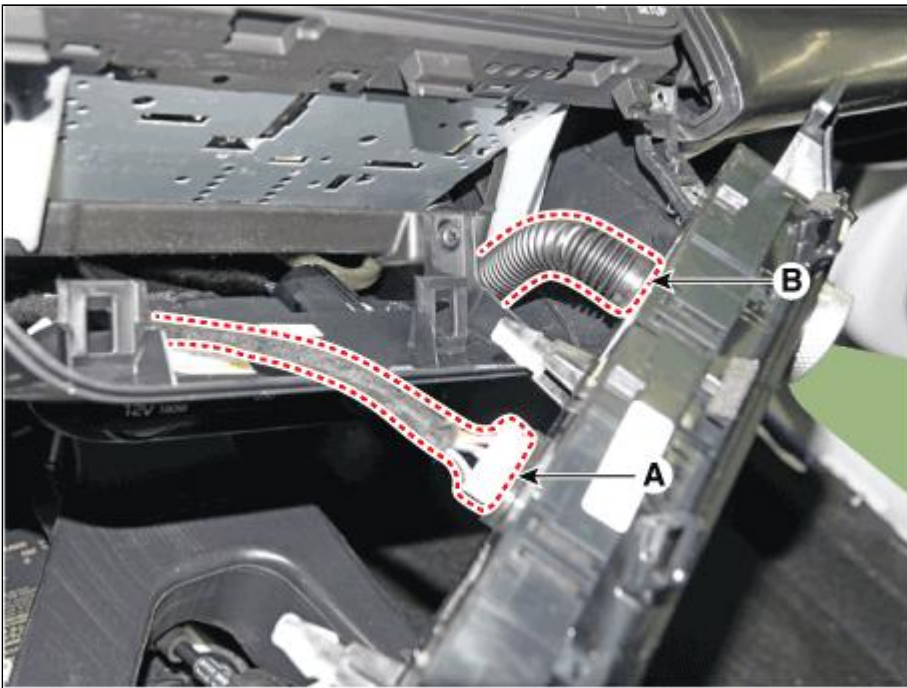


10. Loosen the mounting screws, remove the AVN keyboard assembly (A).

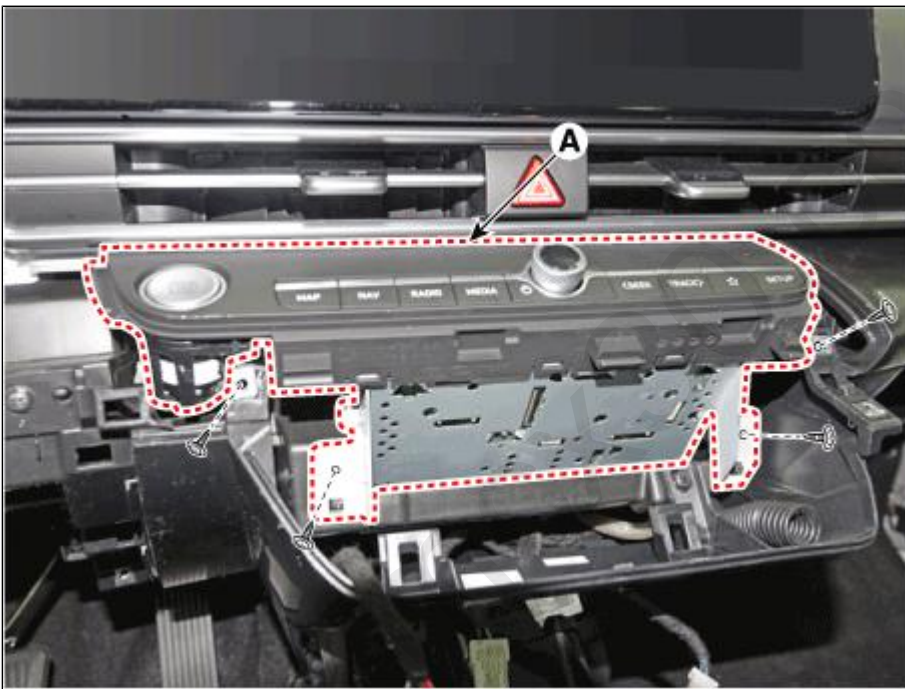


11. Disconnect the start button connector (A).

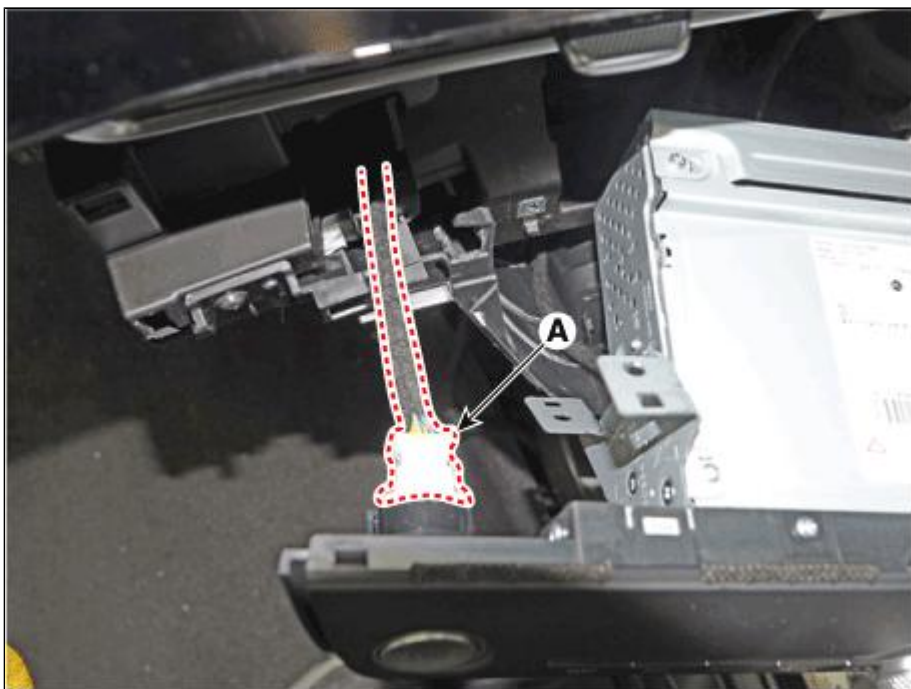


12. Disconnect the connectors (A).

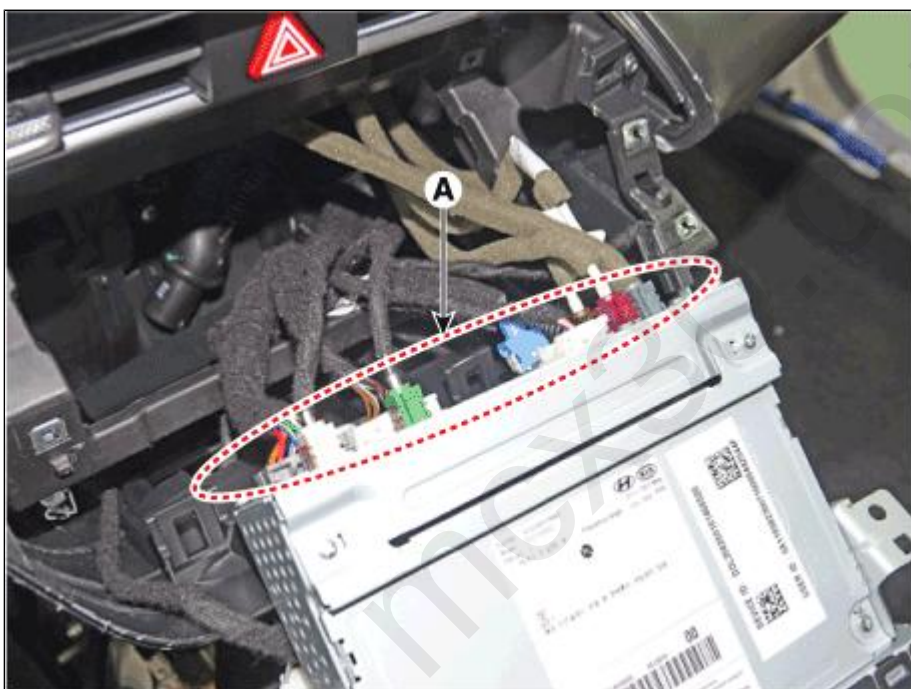


13. Remove the USB port assembly (A) by pulling it in the direction of the arrow.

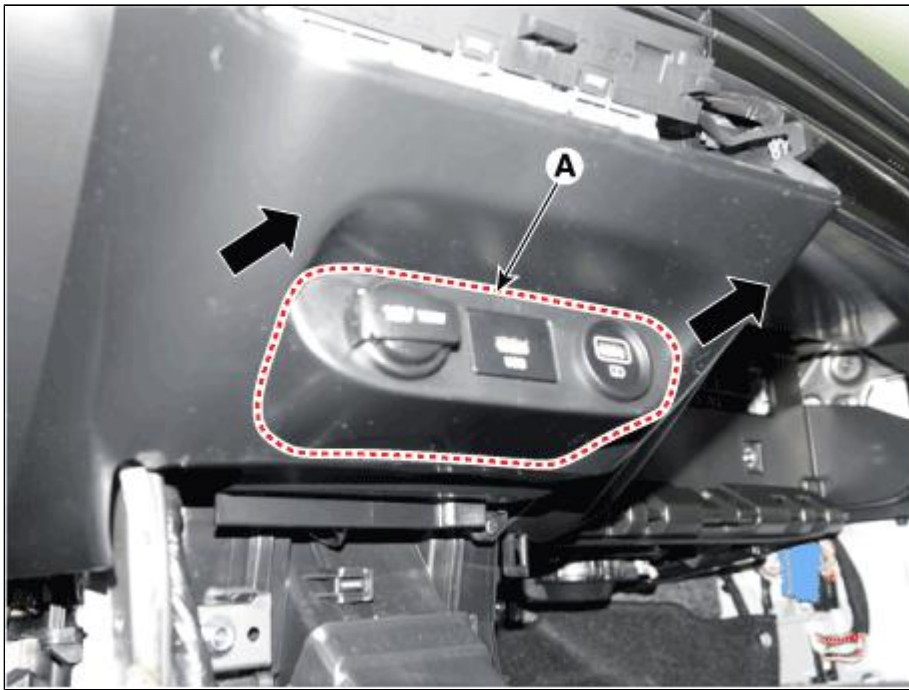

14. Disconnect the connectors (A).

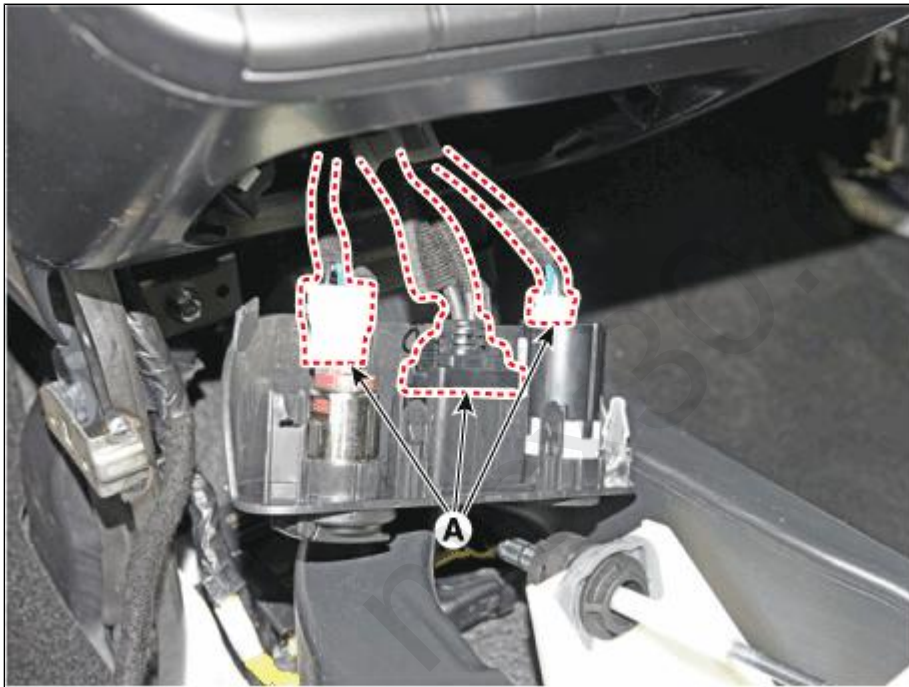

15. Loosen the mounting screws, remove the crash pad center panel (A).

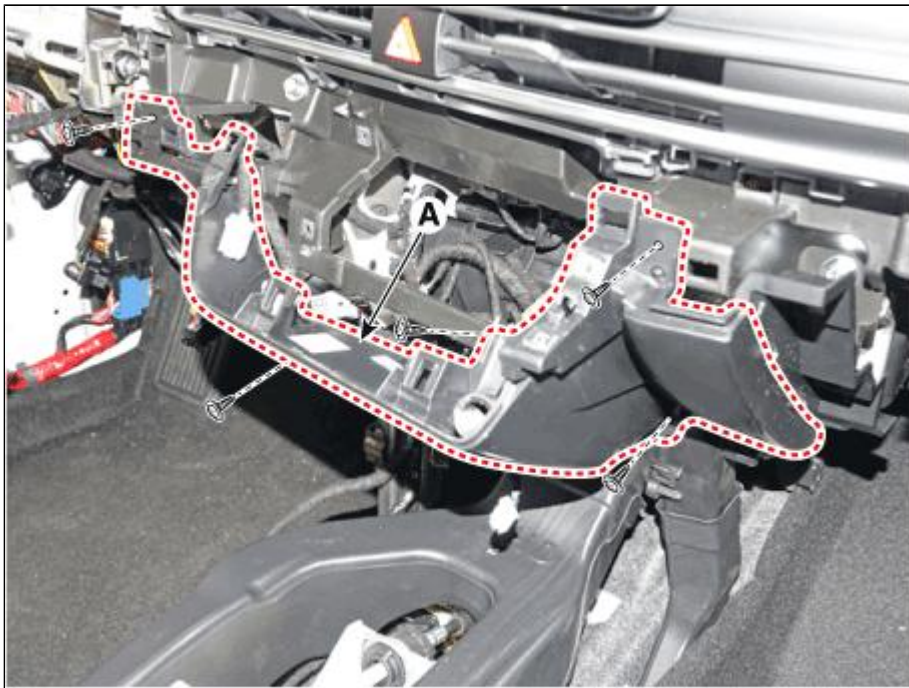

16. To install, reverse the removal procedure.

**i Information**

Make sure the connector are connected in properly.  
Replace any damaged clips (or pin - type retainers).

Rate this Document

☐ Document Type : SHOP

☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value      1      2      3      4      5      Excellent Value