

Replacement

CAUTION

When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

Put on gloves to prevent hand injuries.

NOTICE

Take care not to bend or scratch the trim and panels.


1. Disconnect the negative (-) battery terminal.
2. Remove the floor console assembly.
(Refer to Floor Console - "Floor Console Assembly")
3. Remove the front pillar trim.
 - 1) To remove the front pillar trim, the fastener remover (A) below must be used.




- 2) After slightly lifting up the front pillar trim and putting the tool in, remove the mounting clip (A) by pulling it.

i Information


Be sure to replace the existing clips with new ones when removing or replacing the front pillar trim.

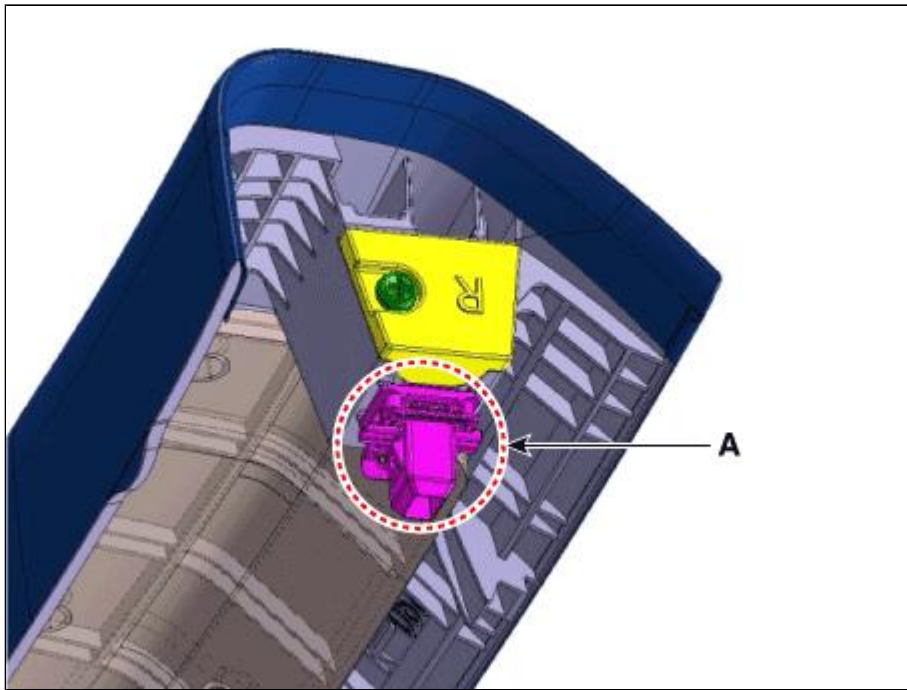

3) Remove the front pillar trim (A).
[LH]

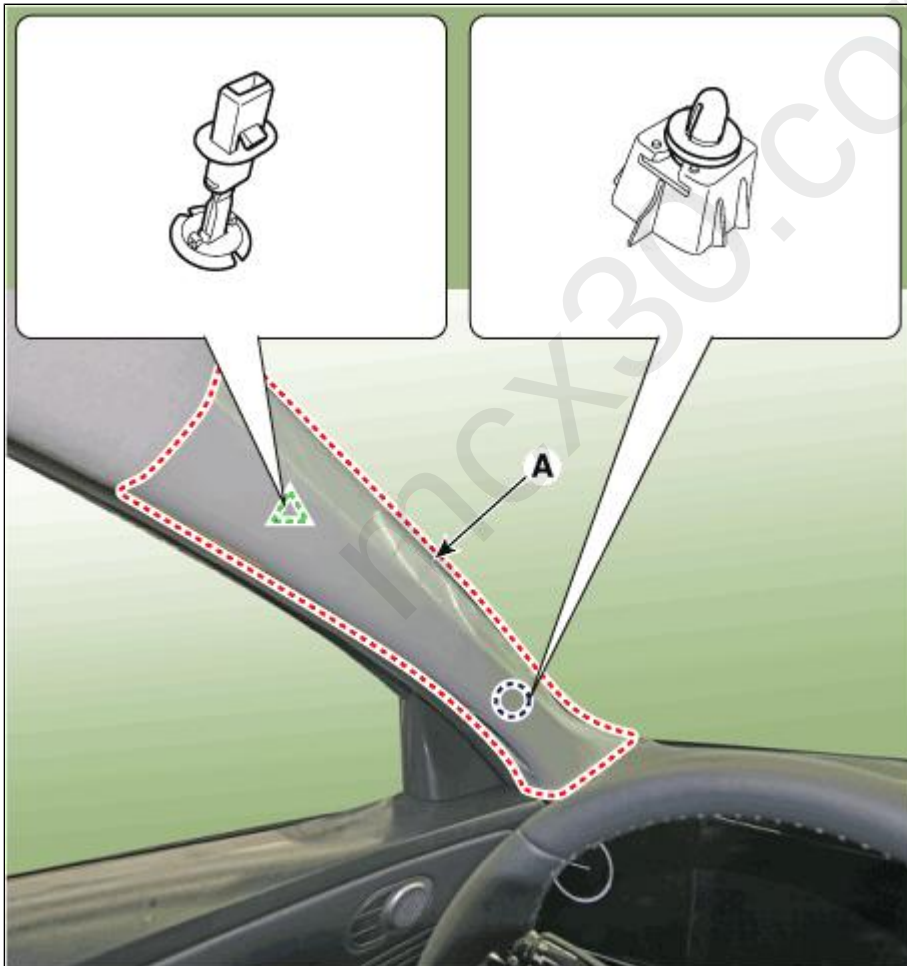


[RH]

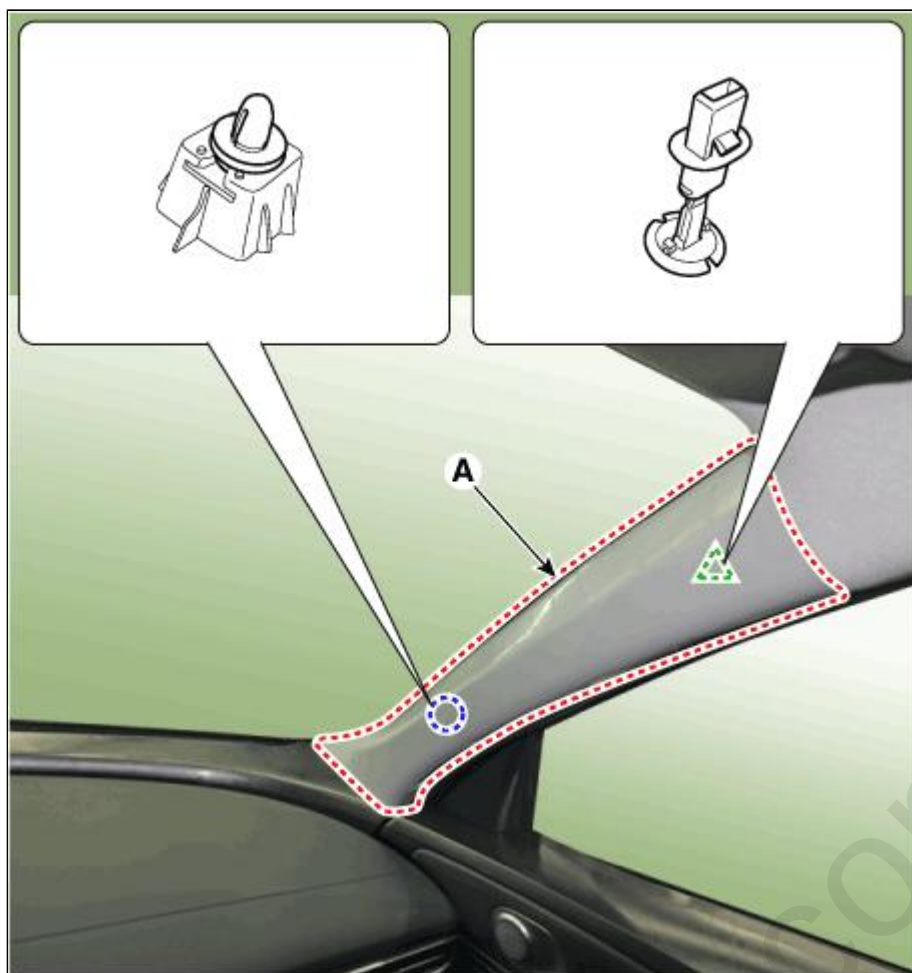

4. Remove the front door body side weatherstrip (A).


[LH]

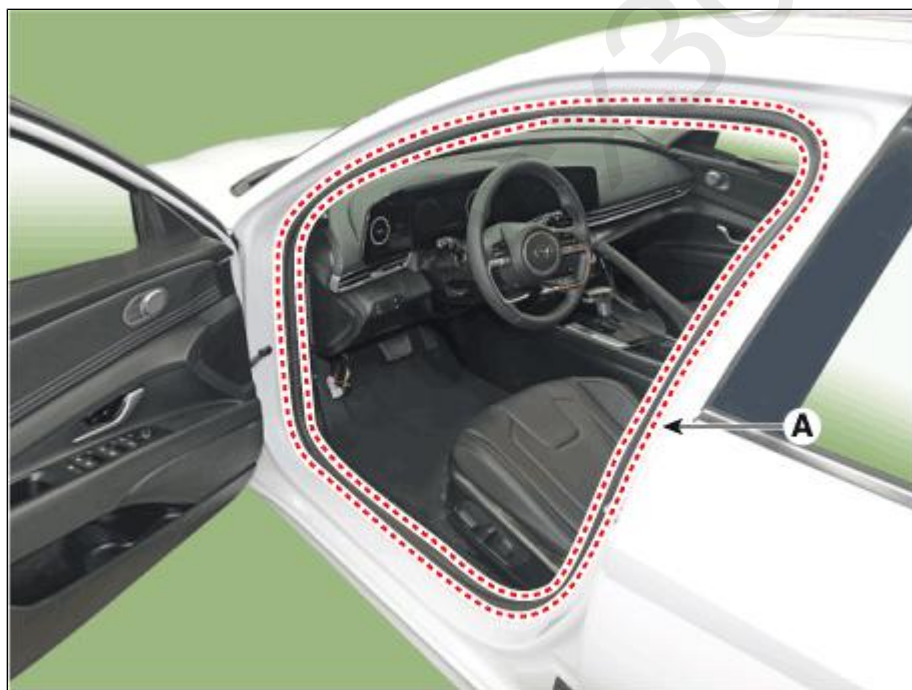


[RH]




5. Using a screwdriver or remover, remove the crash pad side cover (A).
[LH]

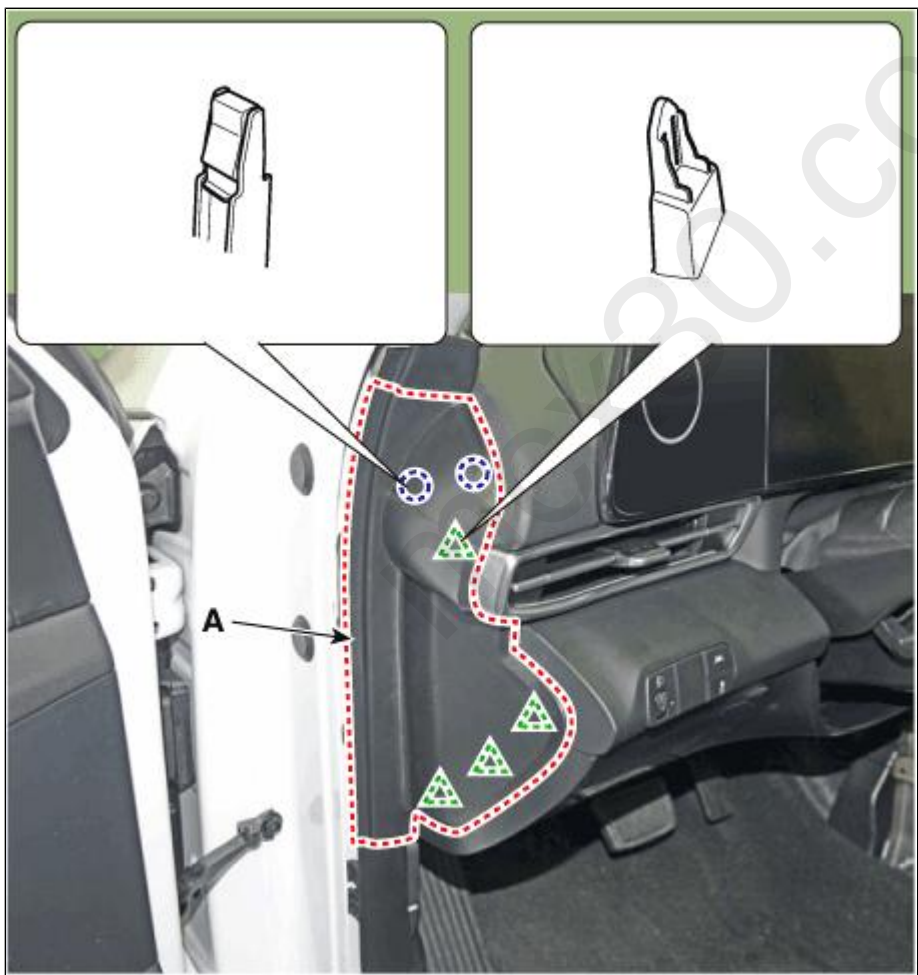

[RH]

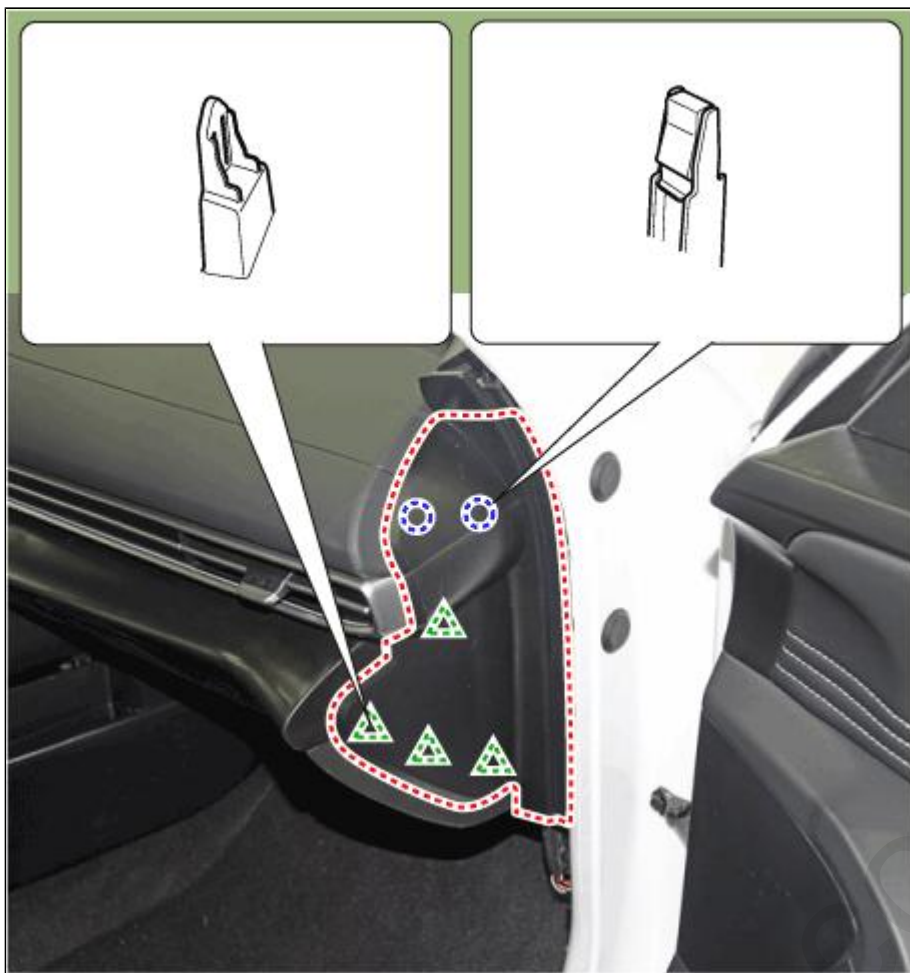


6. Loosen the mounting screws, remove the crash pad lower panel (A).

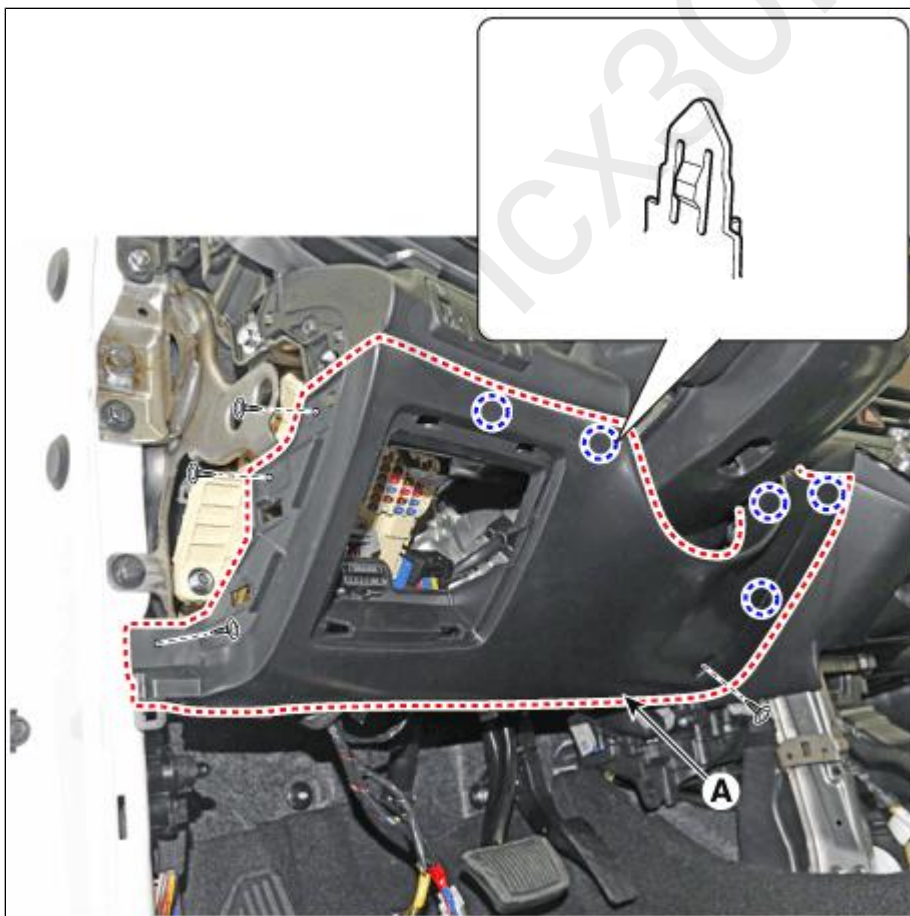


7. Disconnect diagnosis connector (A).




8. Using a screwdriver or remover, remove the photo sensor cover (A).

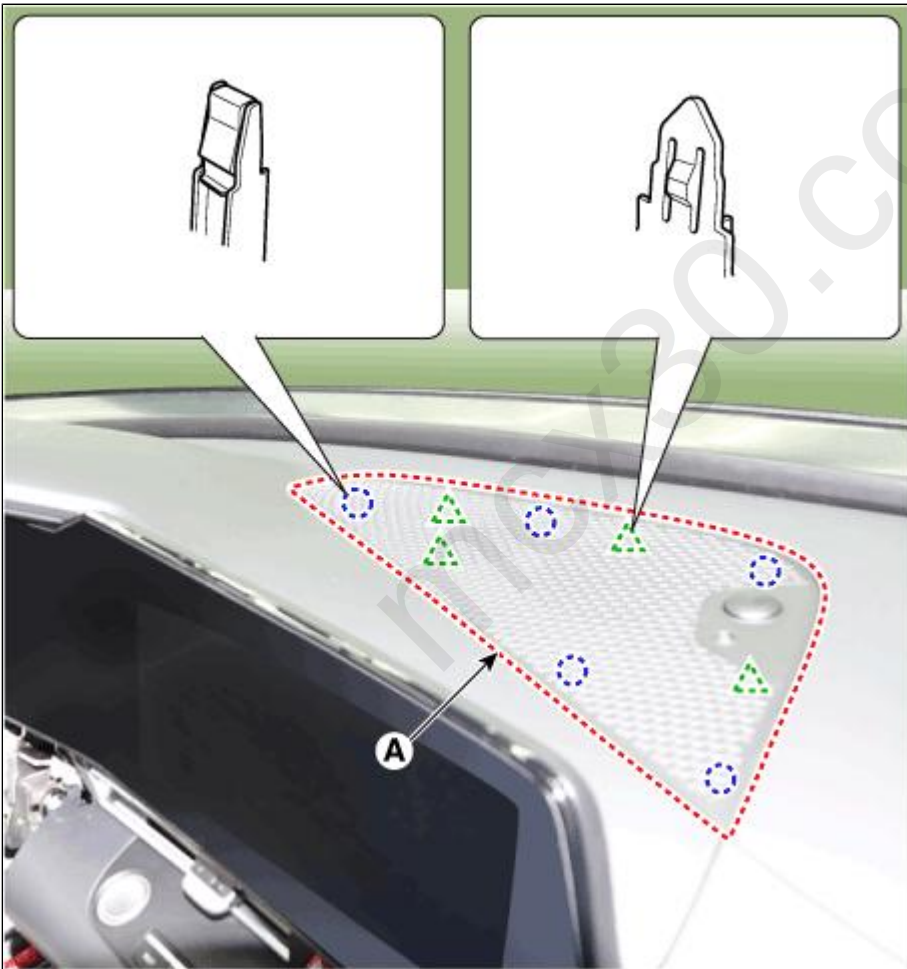

9. Disconnect the connectors (A).

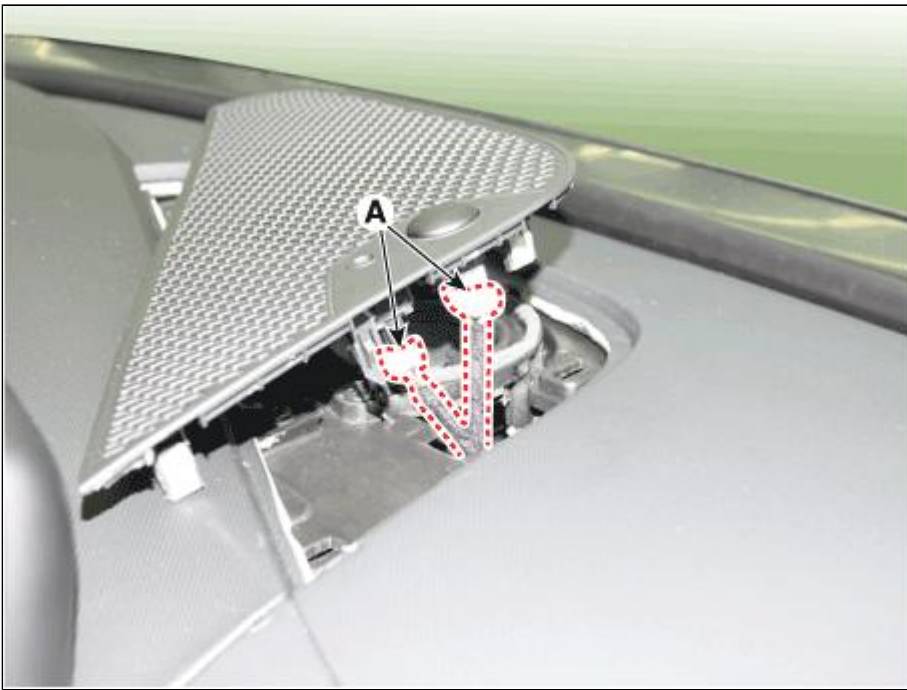


10. Using a screwdriver or remover, remove the cluster fascia panel upper garnish (A).

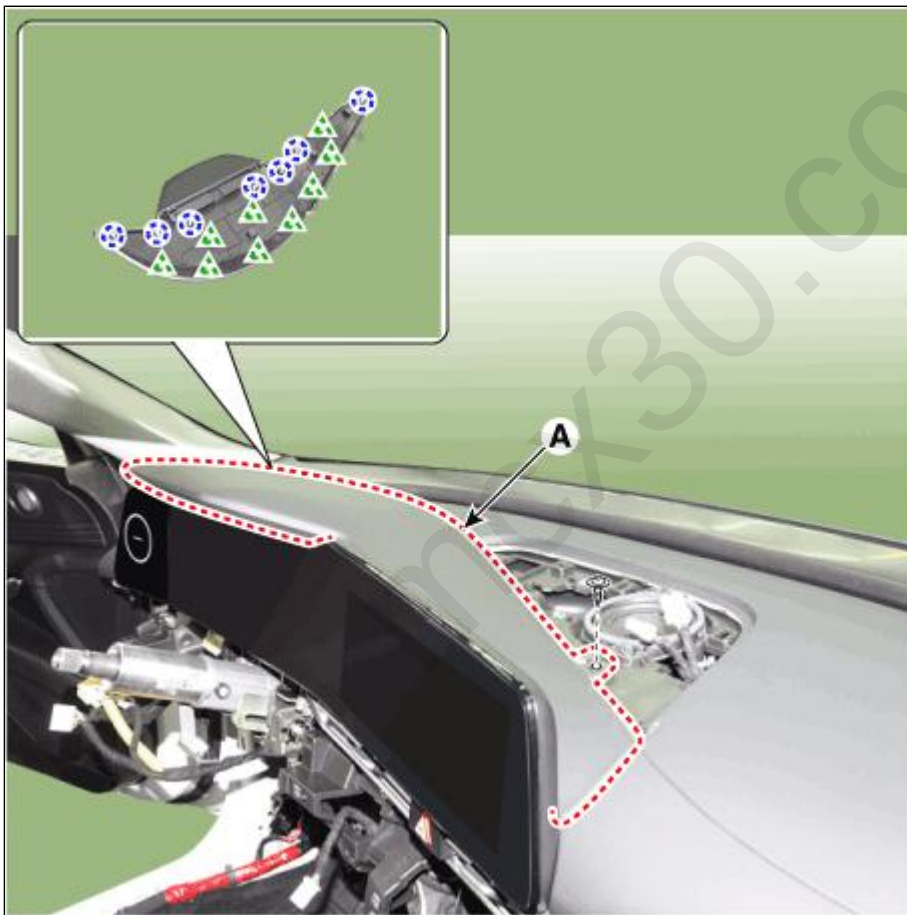


11. Remove the crash pad garnish
[LH]


1) Using screwdriver or remover, remove the steering column shroud upper panel (A).

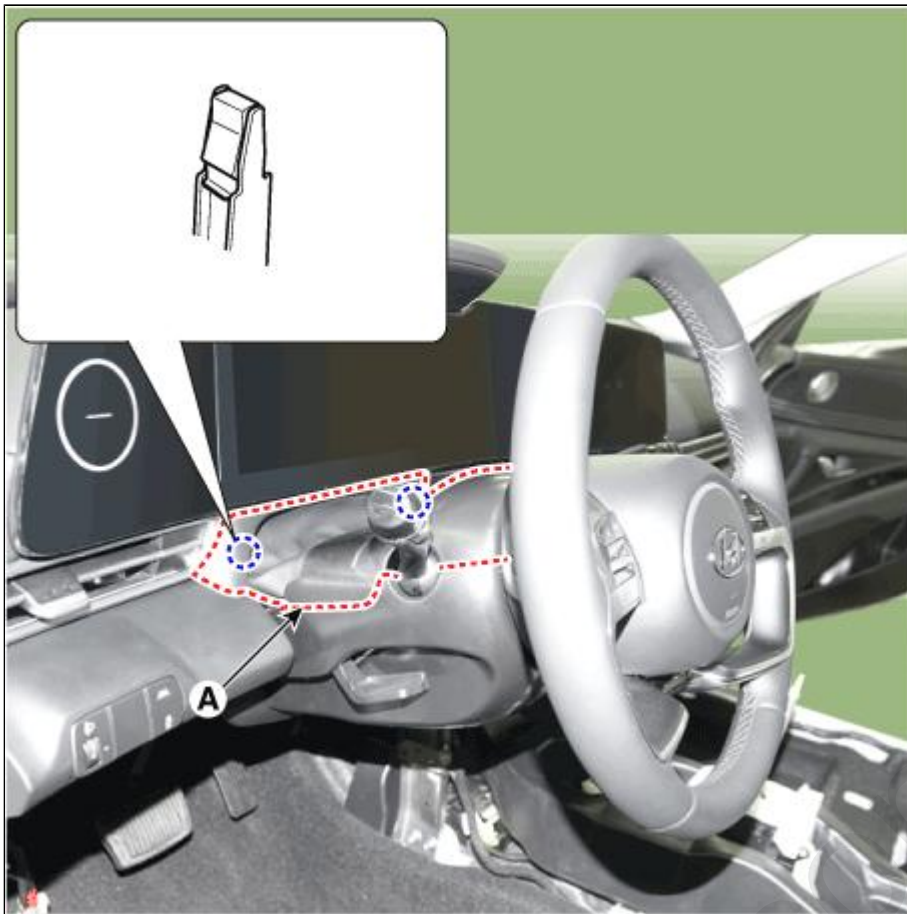

2) Loosening the mounting screws, using a screwdriver or remover, remove the crash pad garnish (A).

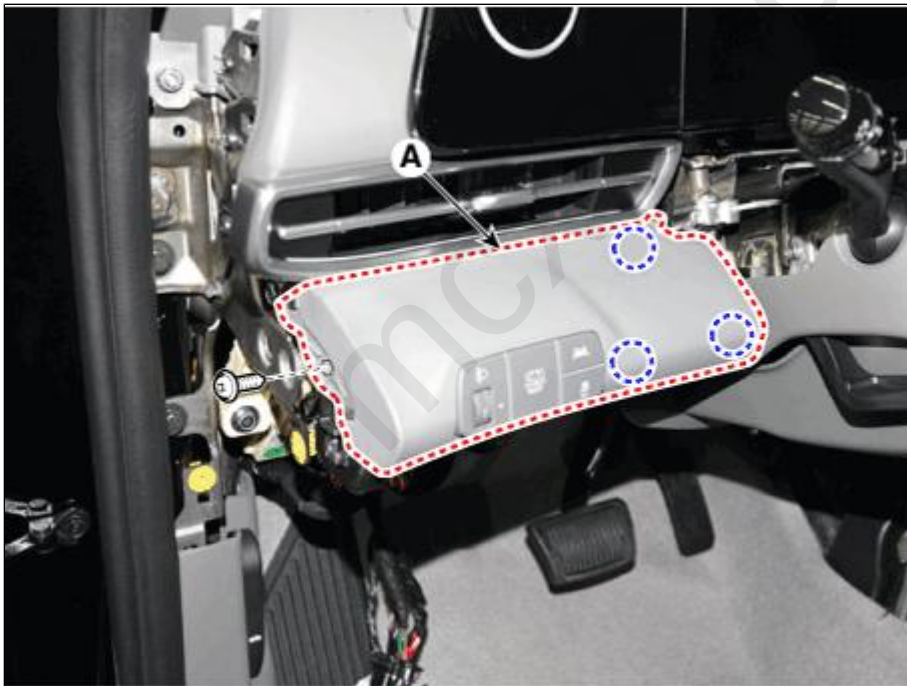


3) Disconnect the connector (A).

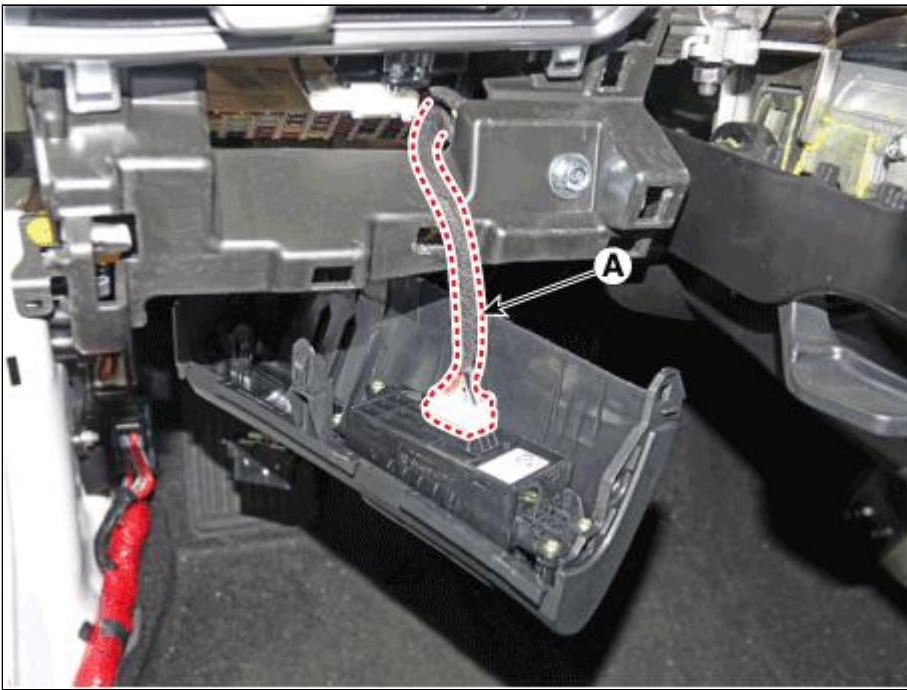


[RH]


1) Using a screwdriver or remover, remove the crash pad garnish [CTR] (A).

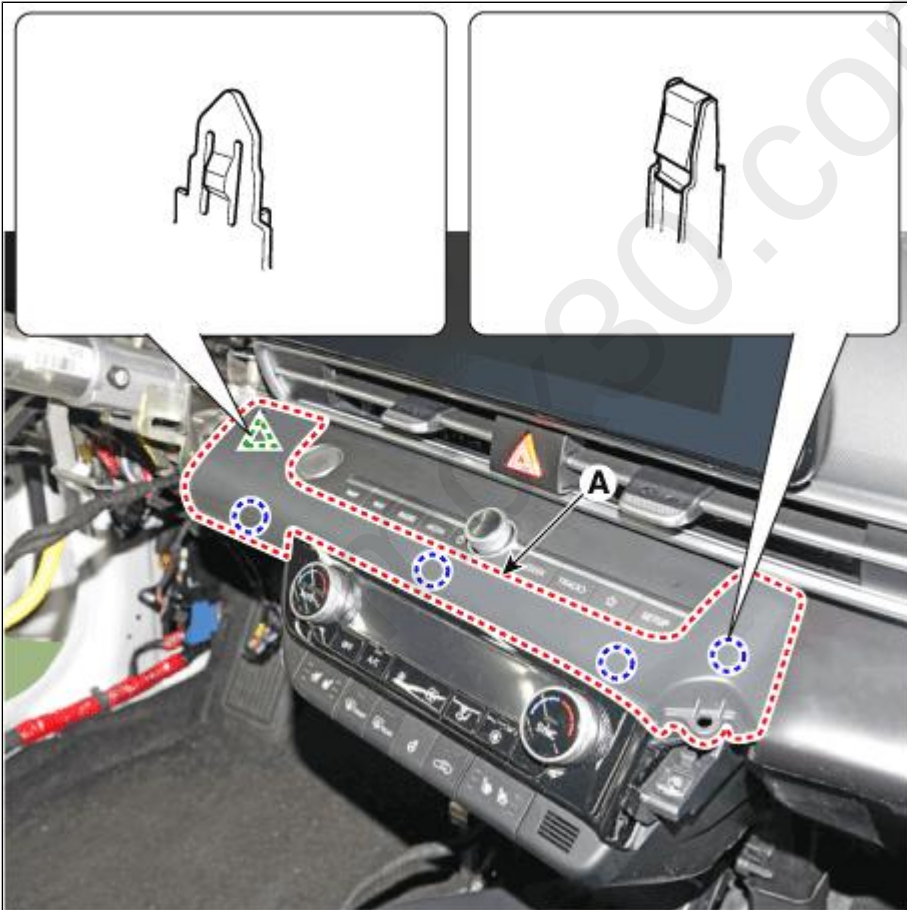

2) Loosening the mounting screws, using a screwdriver or remover, remove the crash pad garnish (A).

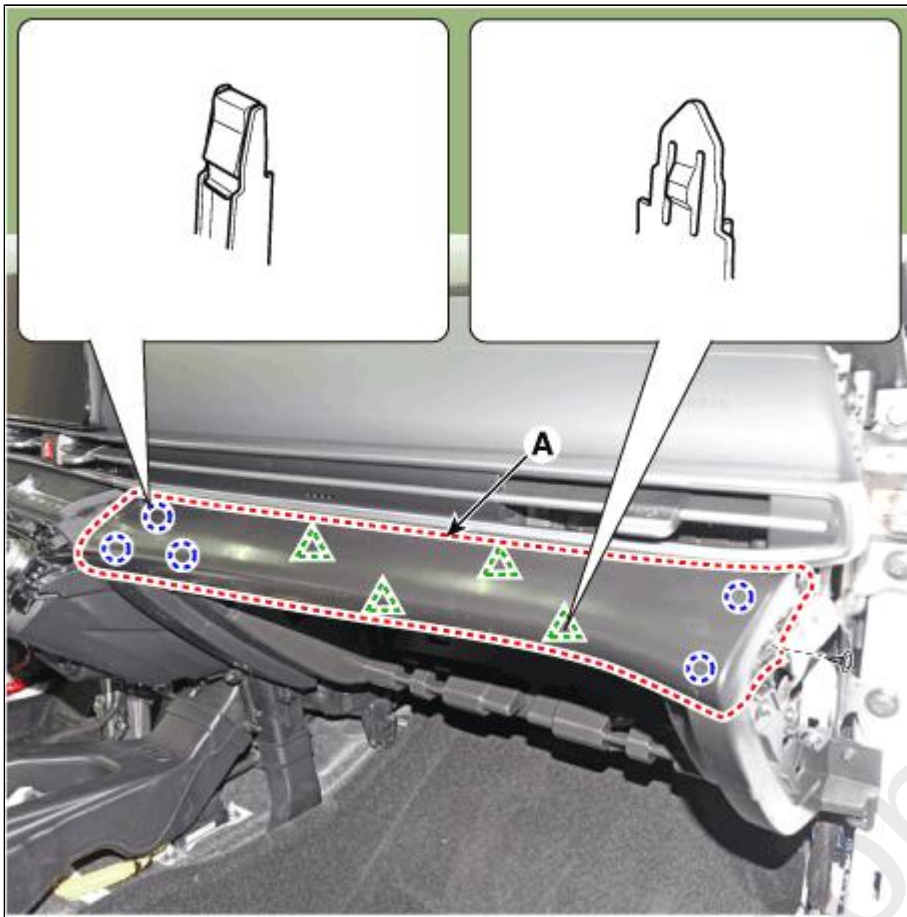


12. Loosen the mounting screws by turning the steering wheel to the left and right, and remove the steering column shroud lower panel (A).

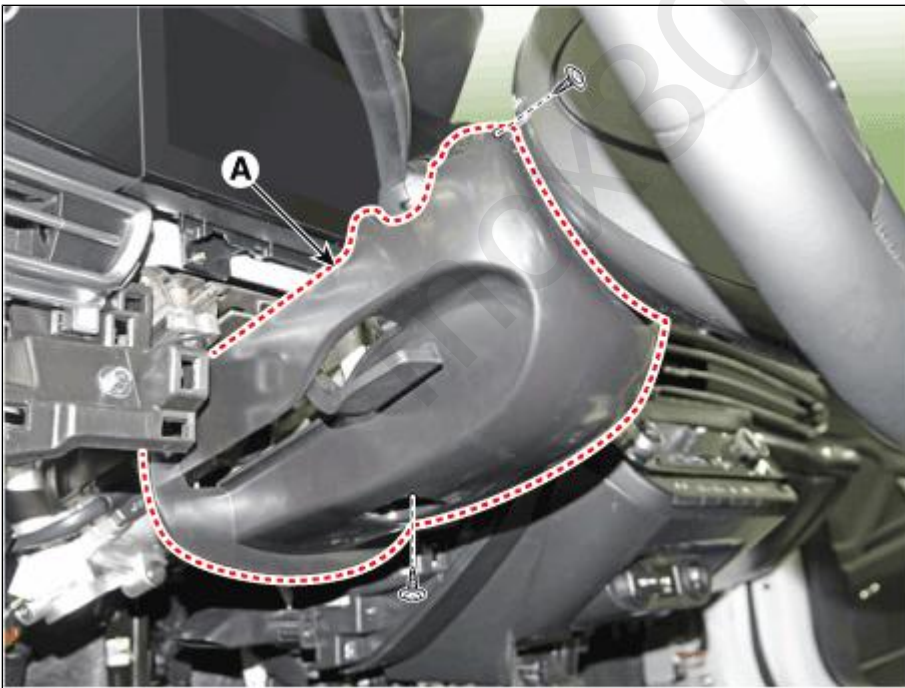

13. Remove the instrument cluster.
(Refer to Body Electrical System - "Instrument Cluster")
14. Loosen the mounting screw, remove the center speaker (A).




15. Disconnect the center speaker connector (A).

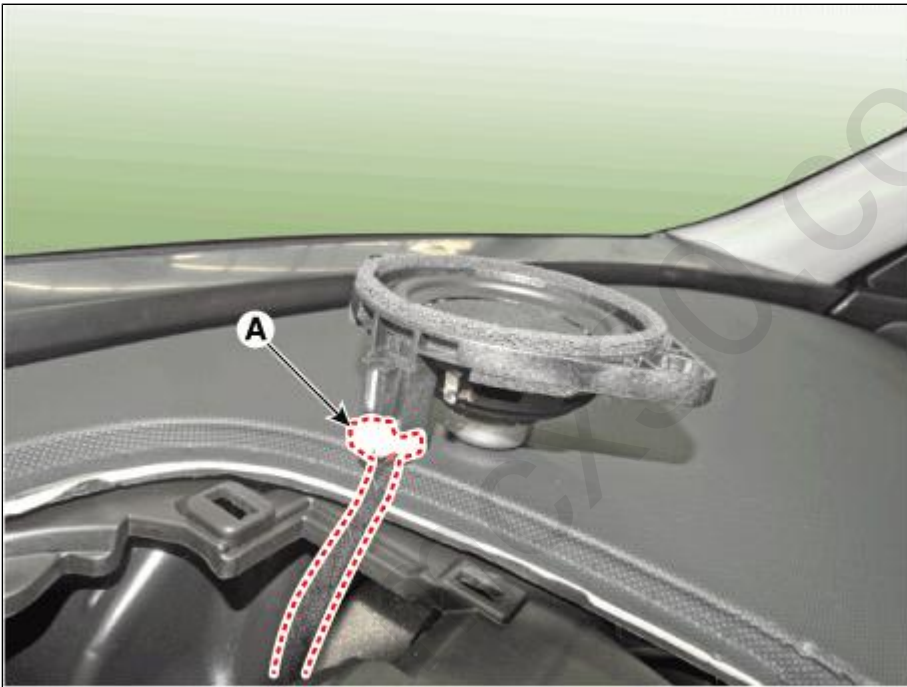


16. Remove the glove box housing cover.
(Refer to Crash Pad - "Glove Box Housing Cover")


17. Loosen the mounting screws, remove the A/C & heater controller unit (A).

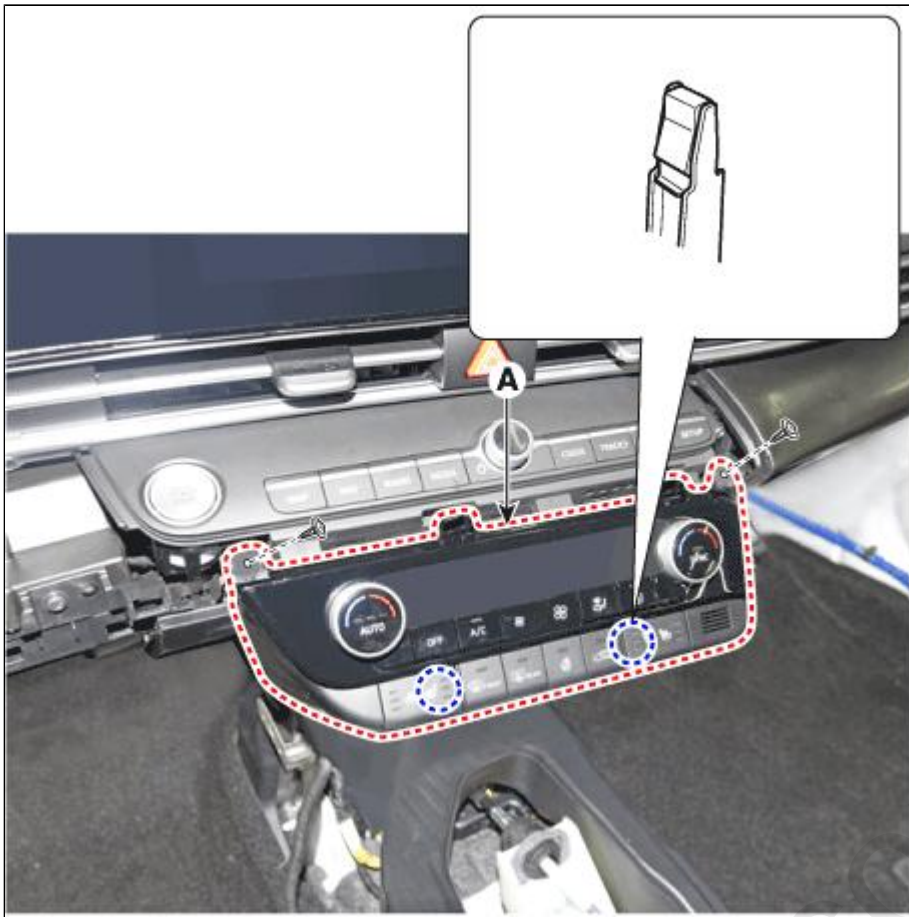


18. Disconnect the A/C & heater controller connectors (A) and hose (B).

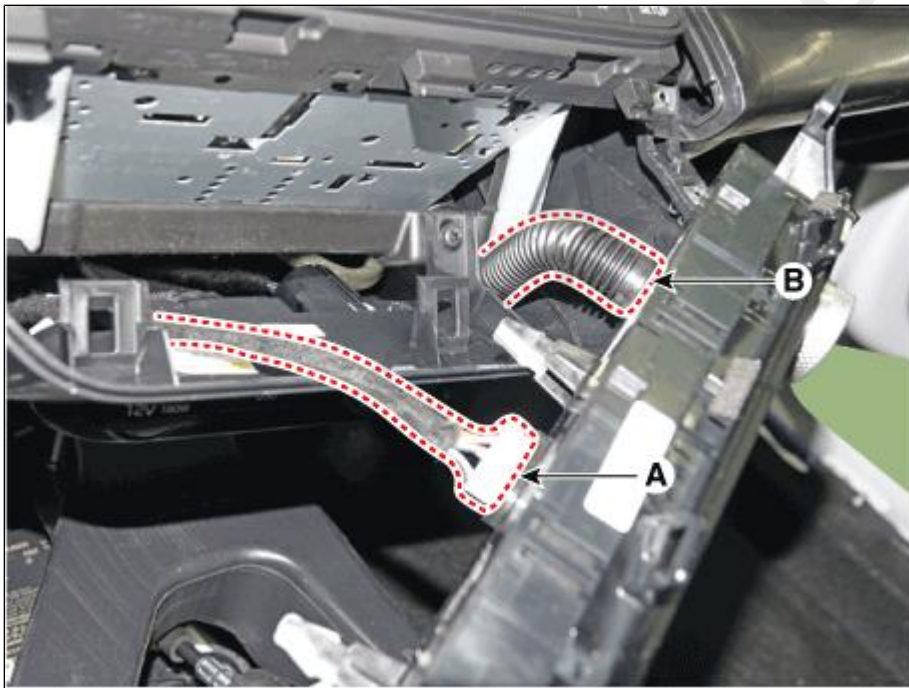


19. Loosen the mounting screws, remove the AVN keyboard assembly (A).

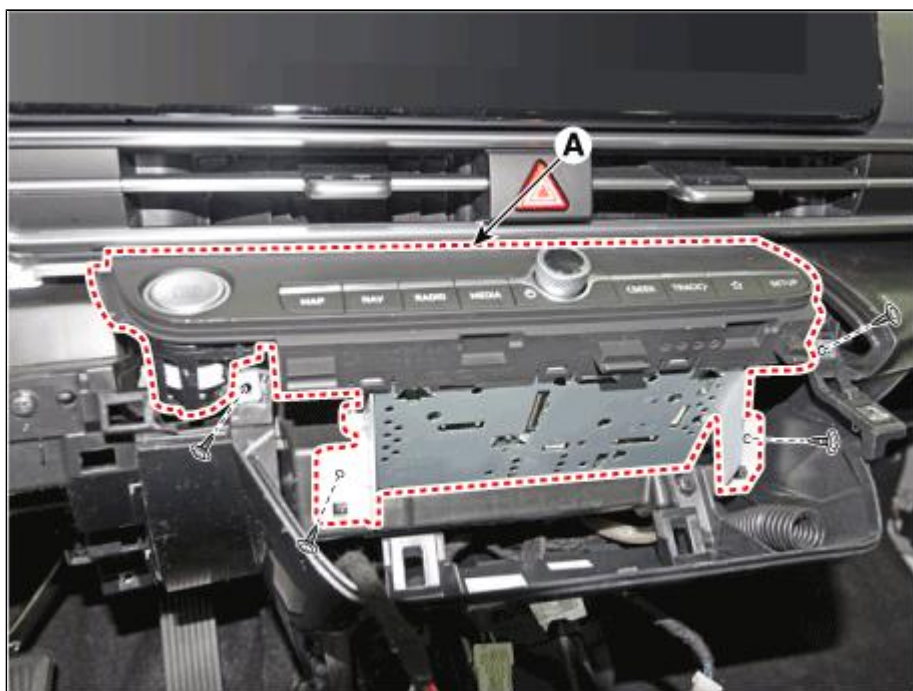


20. Disconnect the start button connector (A).

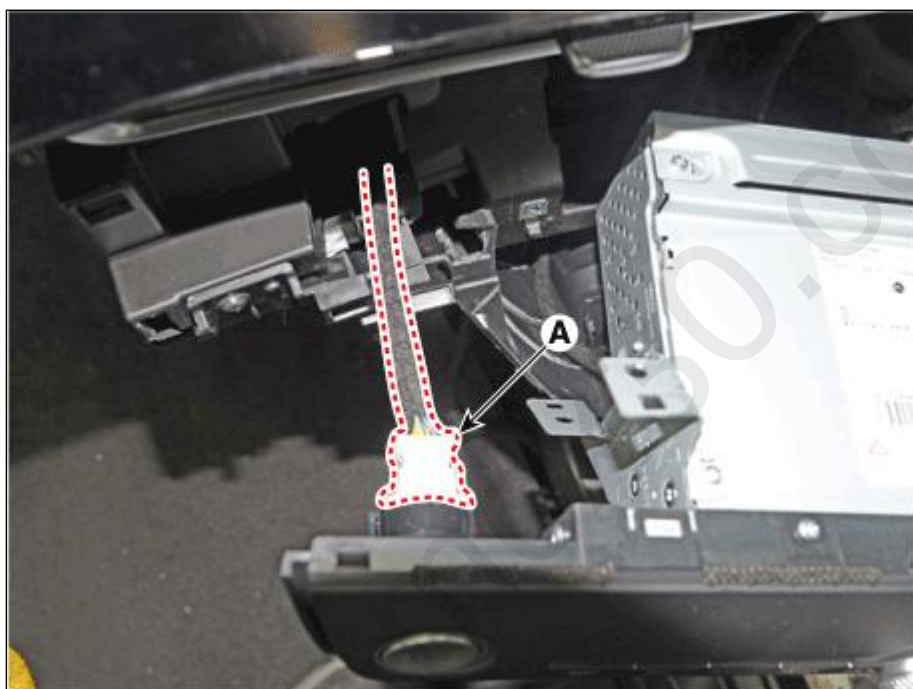

21. Disconnect the connectors (A).

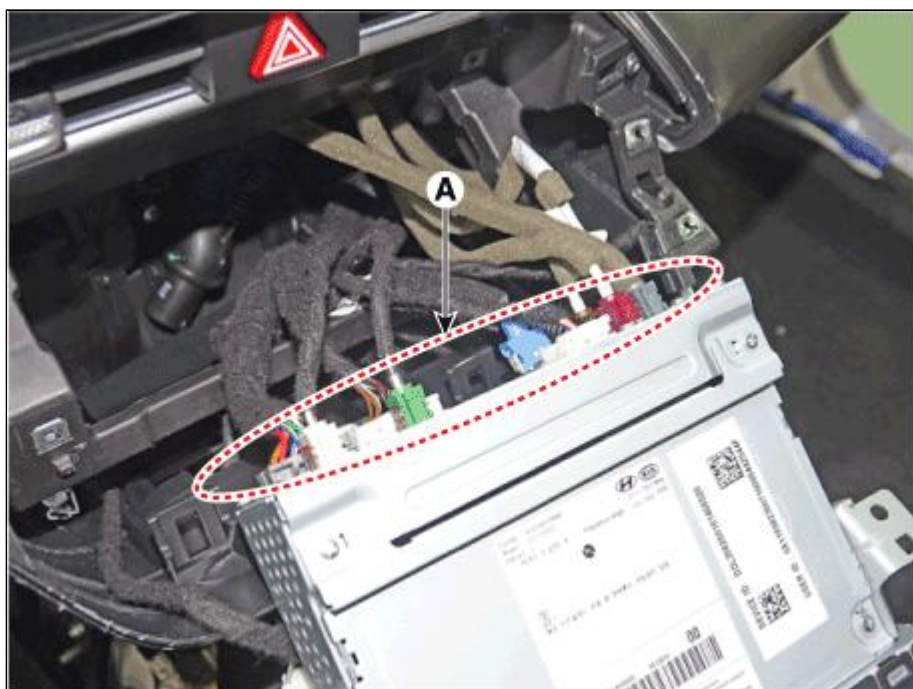


22. Remove the USB port assembly (A) by pulling it in the direction of the arrow.

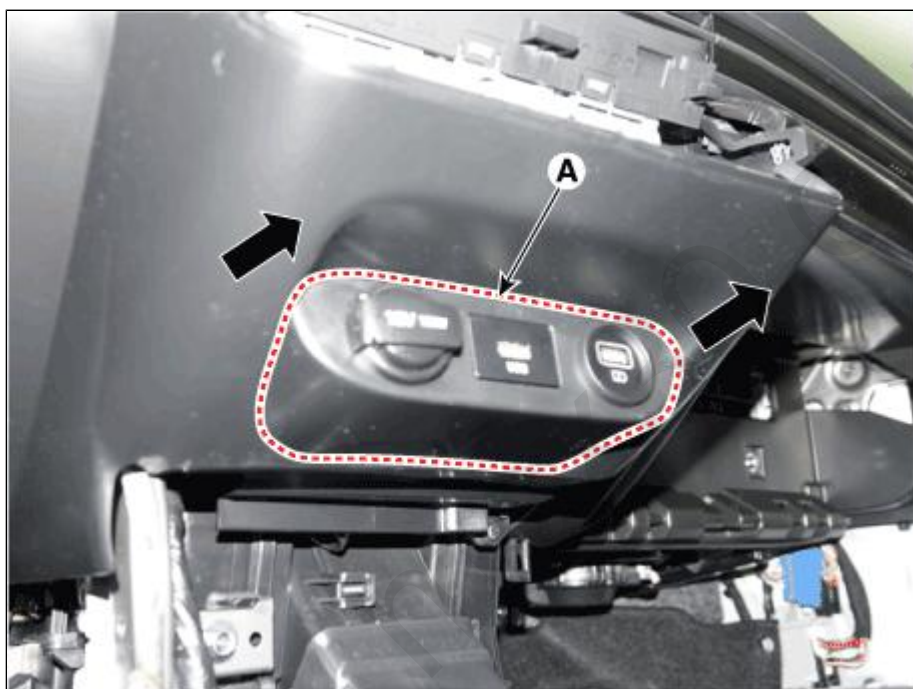

23. Disconnect the connectors (A).



24. Loosen the mounting screws, remove the crash pad center panel (A).

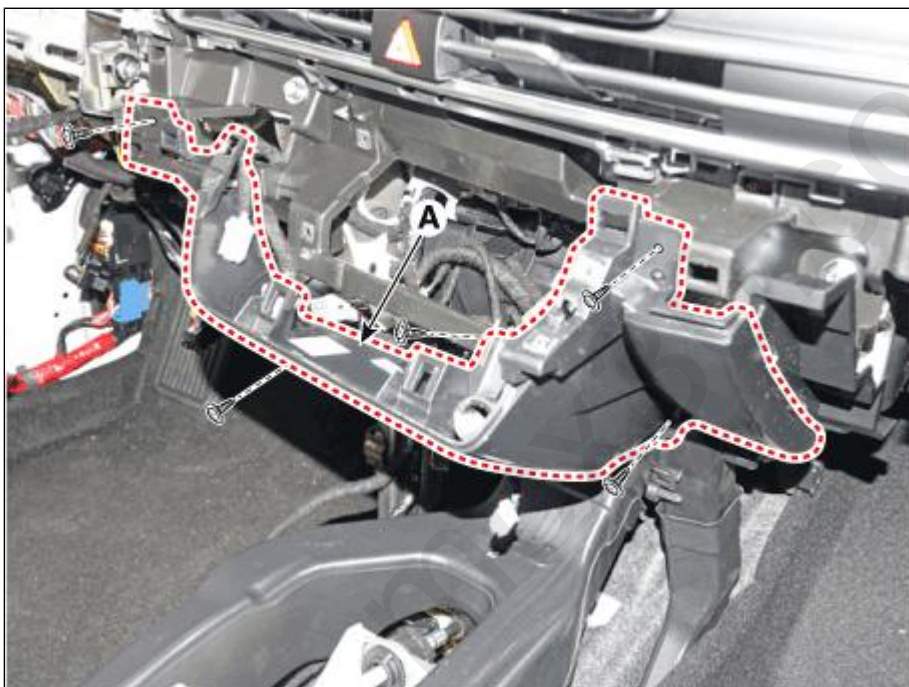

25. Remove the steering wheel.

(Refer to Steering System - "Steering Wheel")


26. Remove the multifunction switch assembly.

(Refer to Body Electrical System - "Multifunction Switch")


27. Remove the crash pad air vent.

[LH]

1) Loosen the mounting screw, remove the crash pad air vent (A).

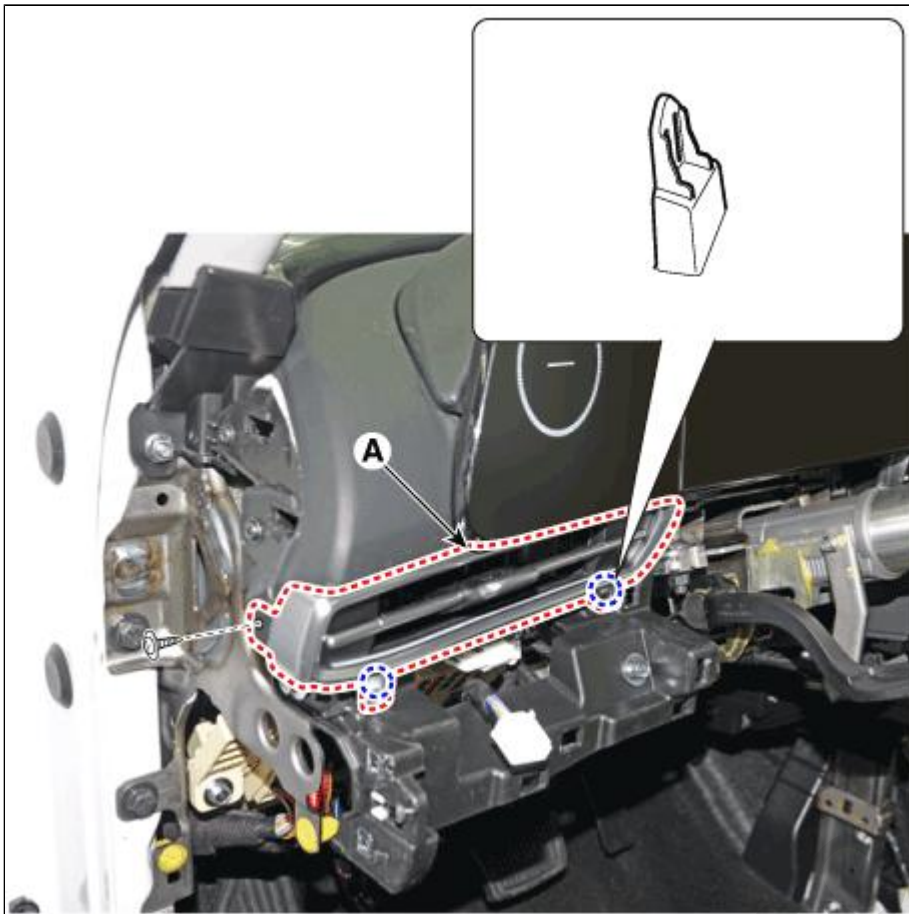


2) Disconnect the mood lamp connector (A).

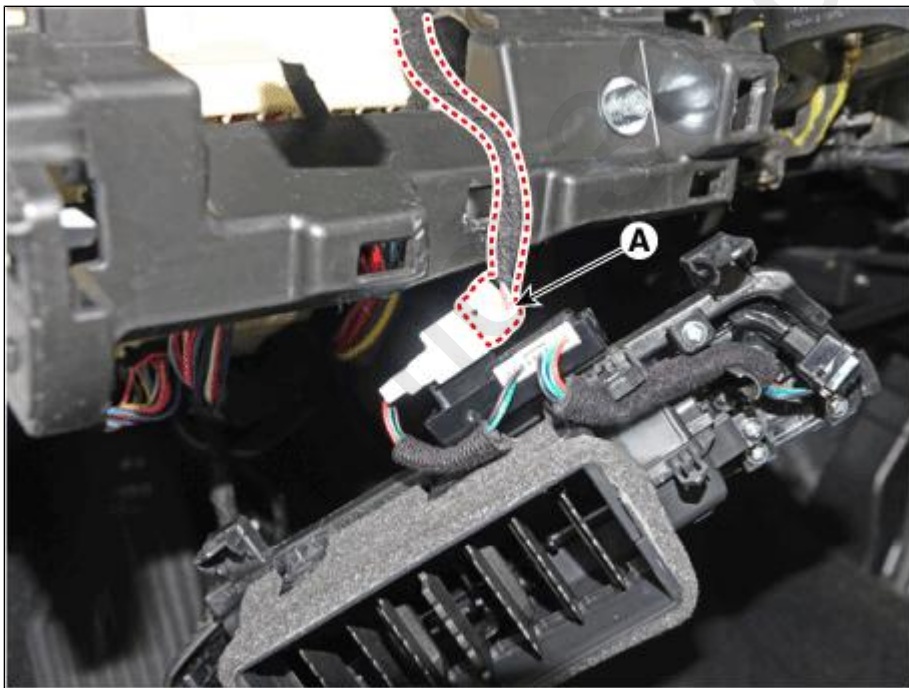


[RH]


1) Loosen the mounting screw, remove the crash pad air vent (A).

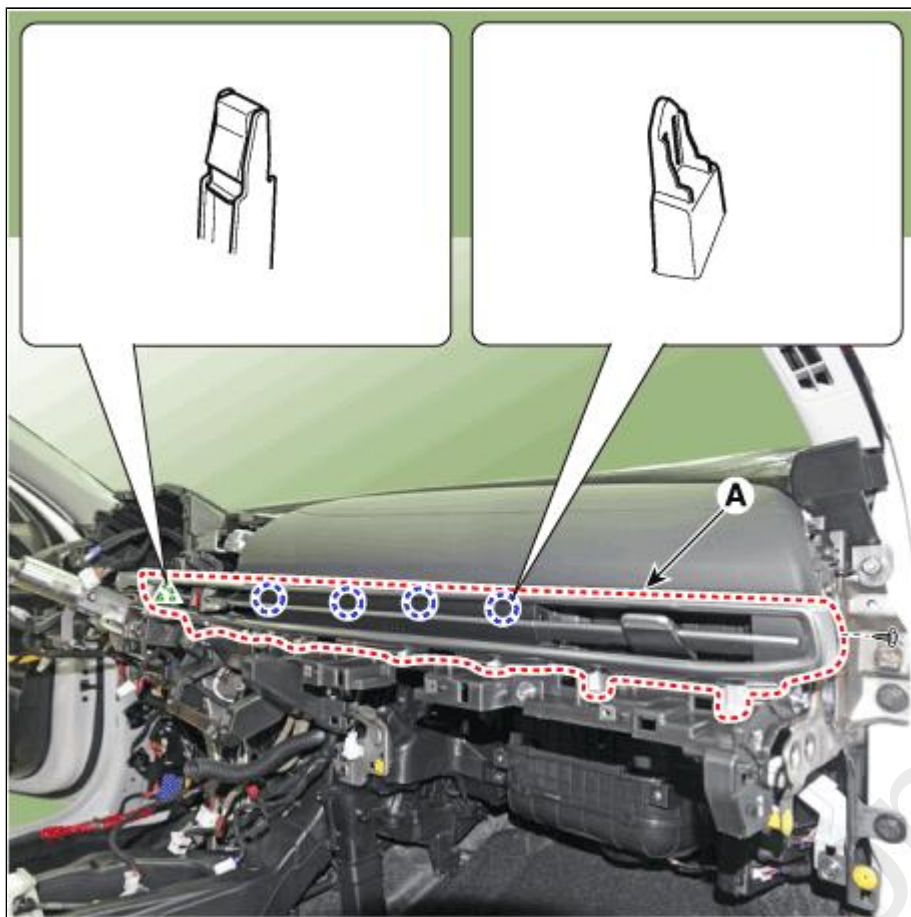

2) Disconnect the hazard switch connector (A).

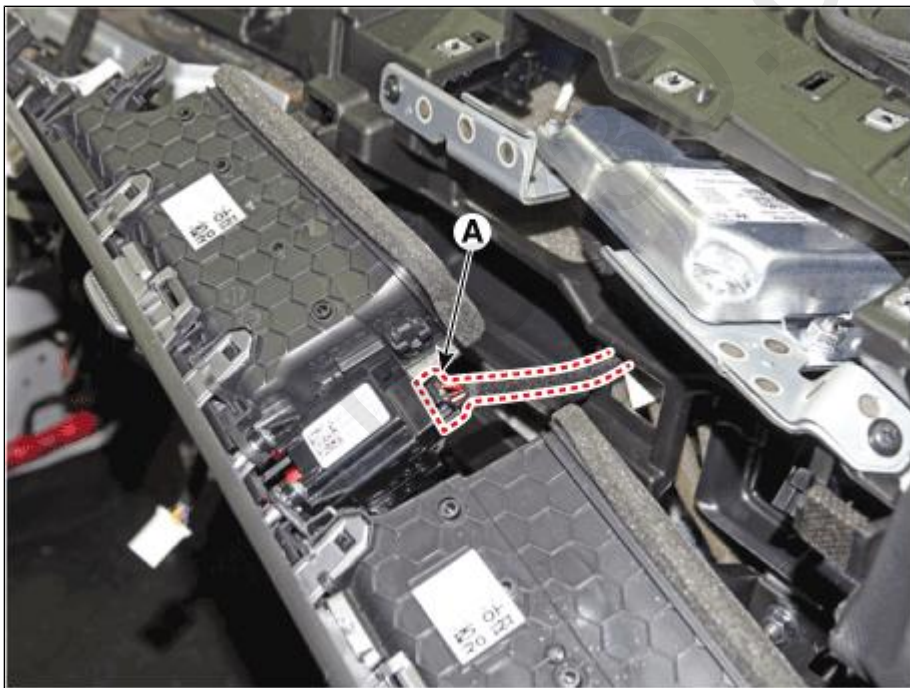


3) Disconnect the connectors (A).

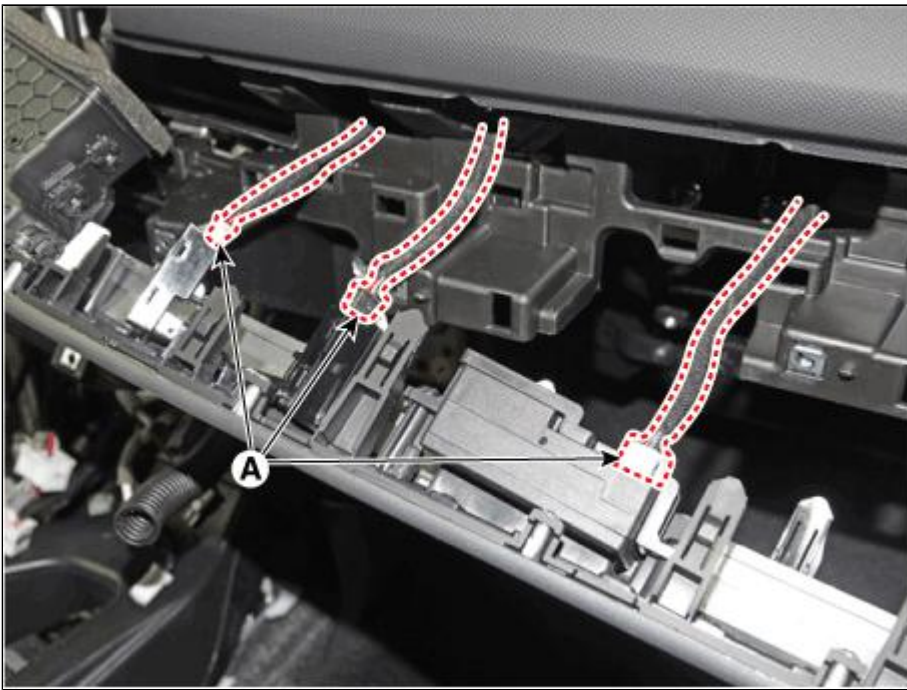

28. Loosen the passenger's airbag (PAB) mounting nuts (A).

Tightening torque :

3.9 - 5.9 N.m (0.4 - 0.6 kgf.m, 2.9 - 4.3 lb-ft)

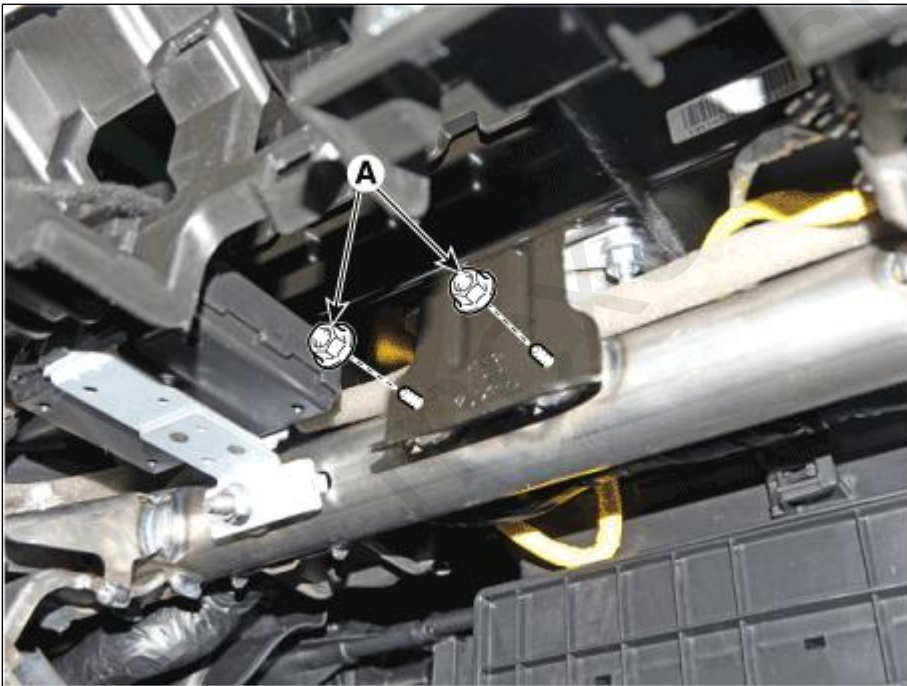


29. Loosen the mounting bolts and nuts and remove the main crash pad assembly (A).

Tightening torque :

16.7 - 25.5 N.m (1.7 - 2.6 kgf.m, 12.3 - 18.8 lb-ft)



30. Disconnect the passenger's airbag (PAB) connectors (A).

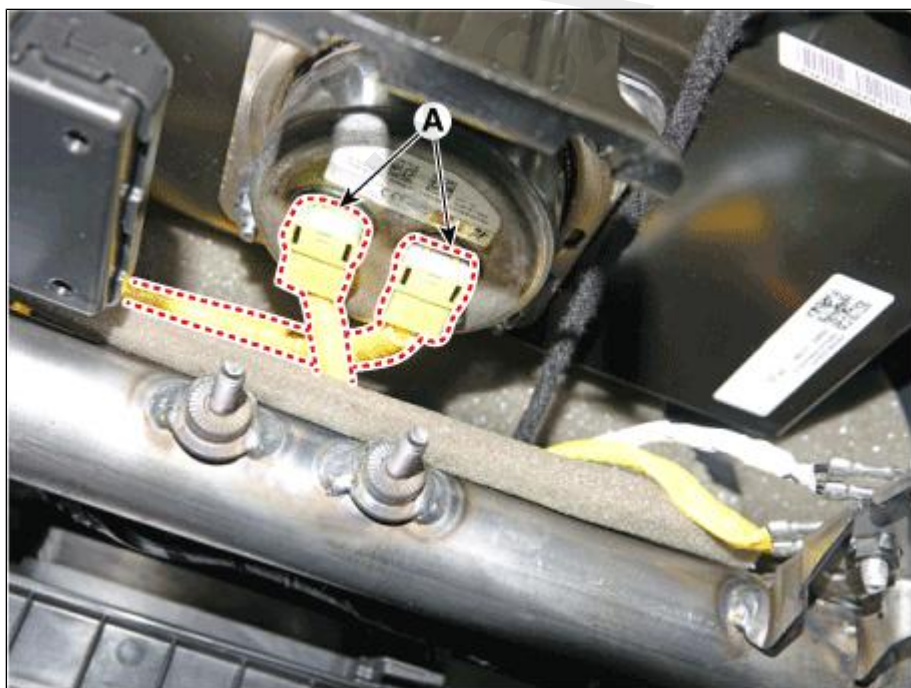

31. To install, reverse the removal procedure.

i Information

Make sure the crash pad fits onto the guide pins correctly.

Before tightening the bolts, make sure the crash pad wire harnesses are not pinched.
Make sure the connectors are plugged in properly, and the antenna lead is connected properly.
Make sure that each of the assembly components operates properly.
Replace any damaged clips (or pin - type retainers).

Rate this Document

- ☐ Document Type : SHOP
- ☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value	1	2	3	4	5	Excellent Value			

mcx30.com