

Replacement

[Front door scuff trim]

CAUTION

When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

Put on gloves to prevent hand injuries.

NOTICE

Take care not to bend or scratch the trim and panels.

1. Remove the front door body side weatherstrip.
(Refer to Front Door - "Front Door Side Weatherstrip")
2. Using a screwdriver or remover, remove the front door scuff trim (A).



3. To install, reverse the removal procedure.

Information

Replace any damaged clips (or pin - type retainers).

[Rear door scuff trim]

CAUTION

When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

Put on gloves to prevent hand injuries.

NOTICE

Take care not to bend or scratch the trim and panels.

1. Remove the rear door body side weatherstrip.
(Refer to Rear Door - "Rear Door Side Weatherstrip")
2. Remove the rear seat cushion assembly.
(Refer to Rear Seat - "Rear Seat Assembly")
3. Loosen the mounting screws and remove the rear door scuff trim (A).



4. To install, reverse the removal procedure.

Information

Replace any damaged clips (or pin - type retainers).

Rate this Document

- ☐ Document Type : SHOP
- ☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value