

Replacement

[Center pillar lower trim]

CAUTION


When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

Put on gloves to prevent hand injuries.

NOTICE

Take care not to bend or scratch the trim and panels.

1. Remove the front door scuff trim.
(Refer to Interior Trim - "Door Scuff Trim")
2. Remove the rear door scuff trim.
(Refer to Interior Trim - "Door Scuff Trim")
3. Using a screwdriver or remover, remove the center pillar lower trim (A).

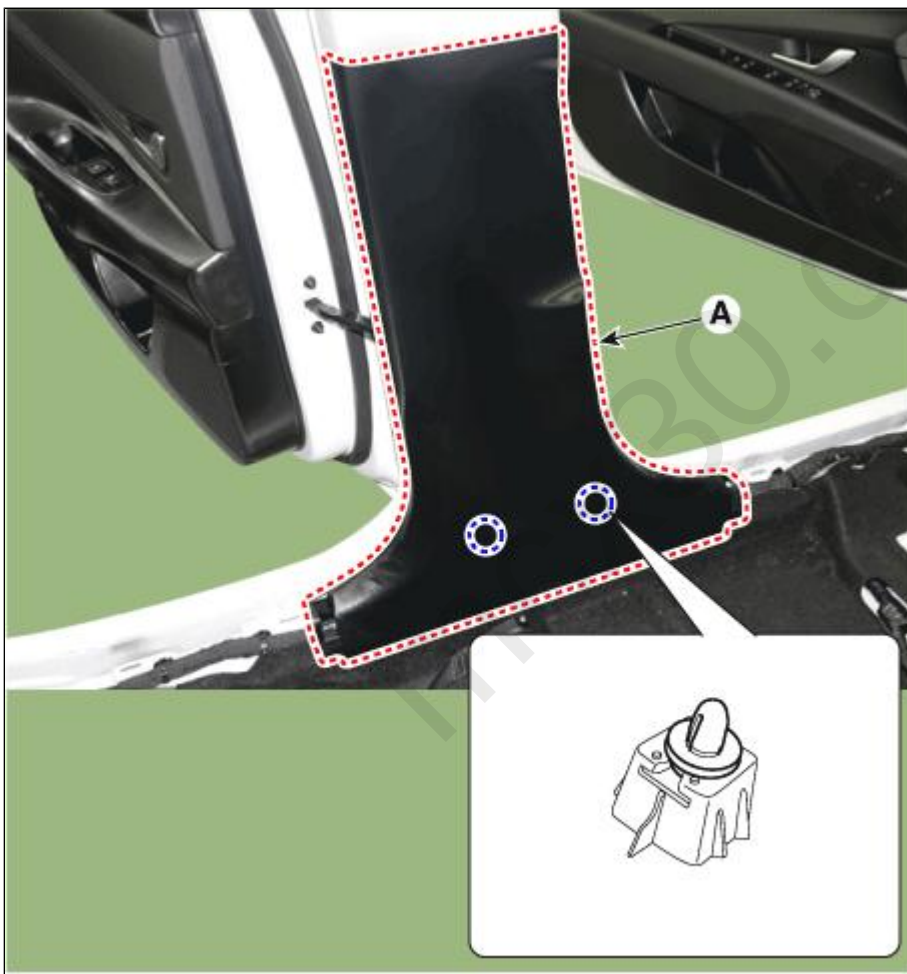

4. To install, reverse the removal procedure.

Information

Replace any damaged clips (or pin - type retainers).

[Center pillar upper trim]

CAUTION

When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

Put on gloves to prevent hand injuries.

NOTICE

Take care not to bend or scratch the trim and panels.

1. Remove the center pillar lower trim.
(Refer to Interior Trim - "Center Pillar Trim")
2. Remove the front seat belt lower anchor cover (A).



3. Loosen the mounting bolt, remove the front seat belt lower anchor (A).

Tightening torque :

39.2 - 53.9 N.m (4.0 - 5.5 kgf.m, 28.9 - 39.8 lb-ft)



4. Using a screwdriver or remover, remove the center pillar upper trim (A).



5. To install, reverse the removal procedure.

Information

Replace any damaged clips (or pin - type retainers).

Rate this Document

☐ Document Type : SHOP

☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value