

Replacement

⚠ CAUTION


When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

Put on gloves to prevent hand injuries.

NOTICE

Take care not to bend or scratch the bumper cover and panels.


1. Using a screwdriver or remover, remove the service cover (A).

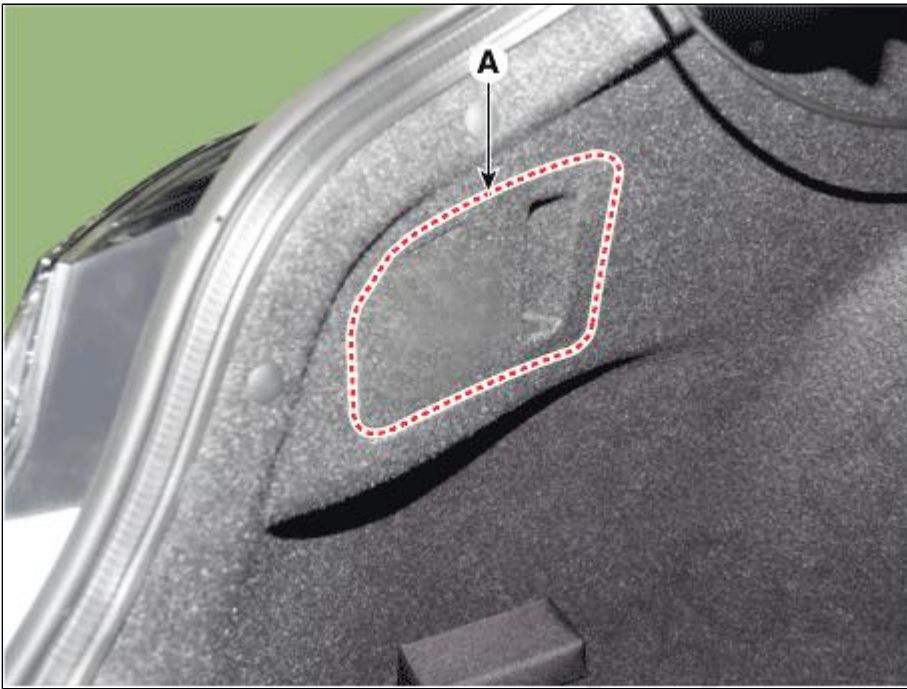


2. Detach the rear combination lamp connector (A).




3. Remove the rear combination mounting nuts and remove the rear combination lamp (A).

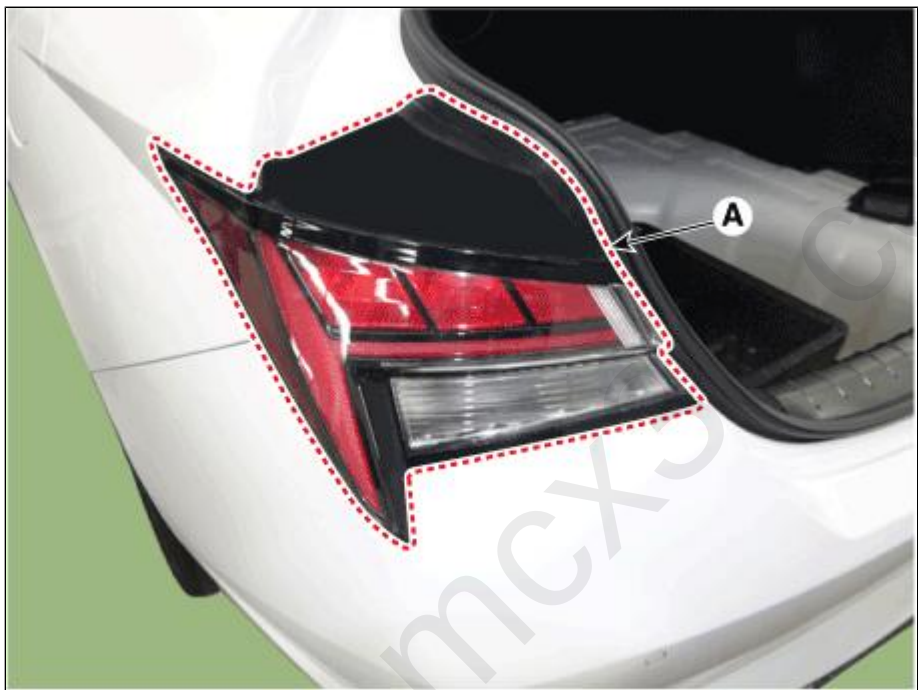


4. Loosen the mounting nuts and clips, remove the rear bumper under cover (A).
[CTR]

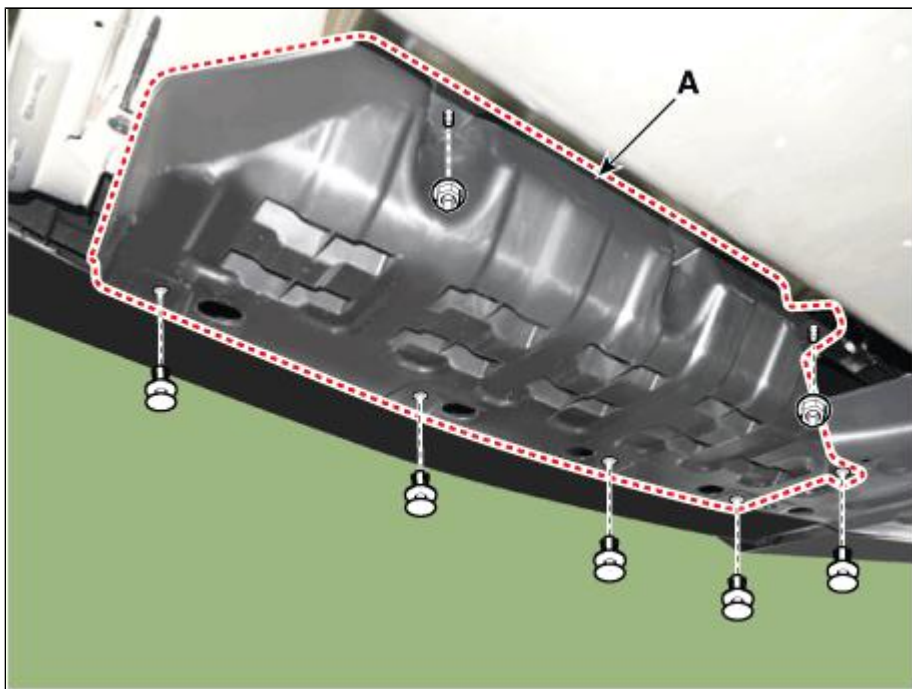

[LH]

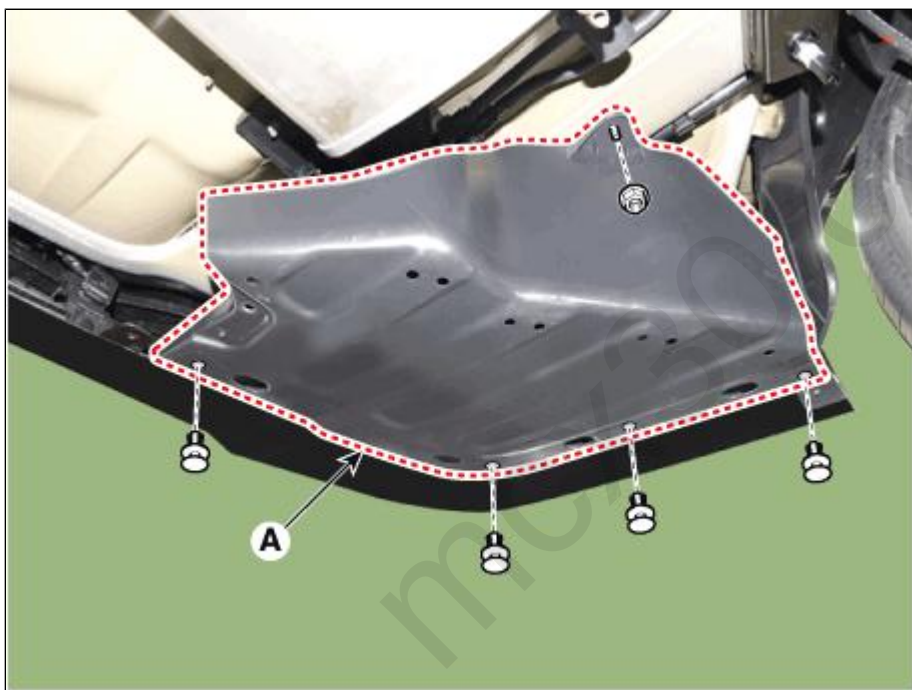


[RH]

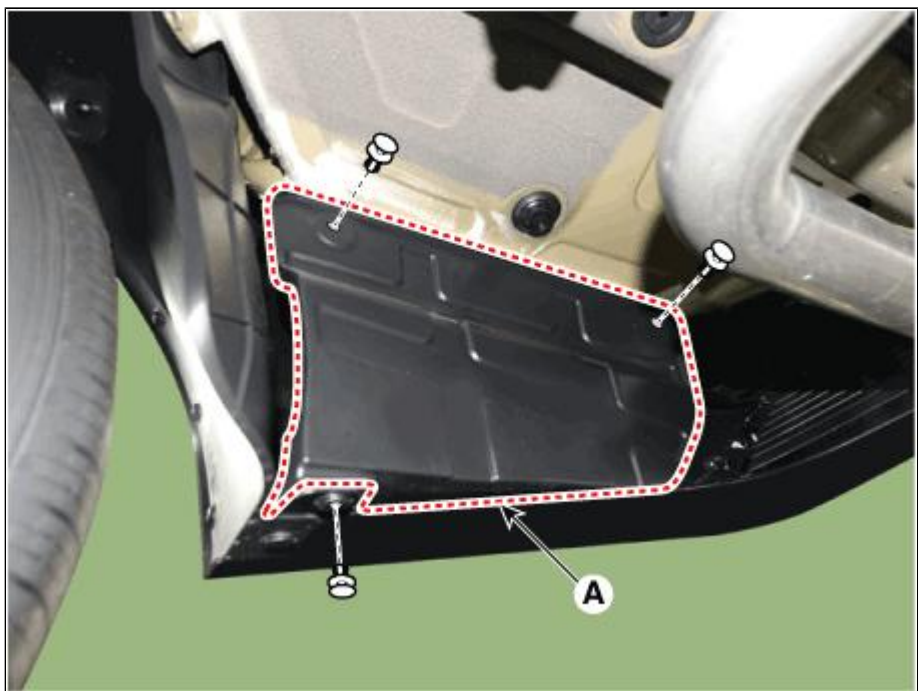

5. Loosen the rear bumper assembly mounting bolts (A).


[LH]

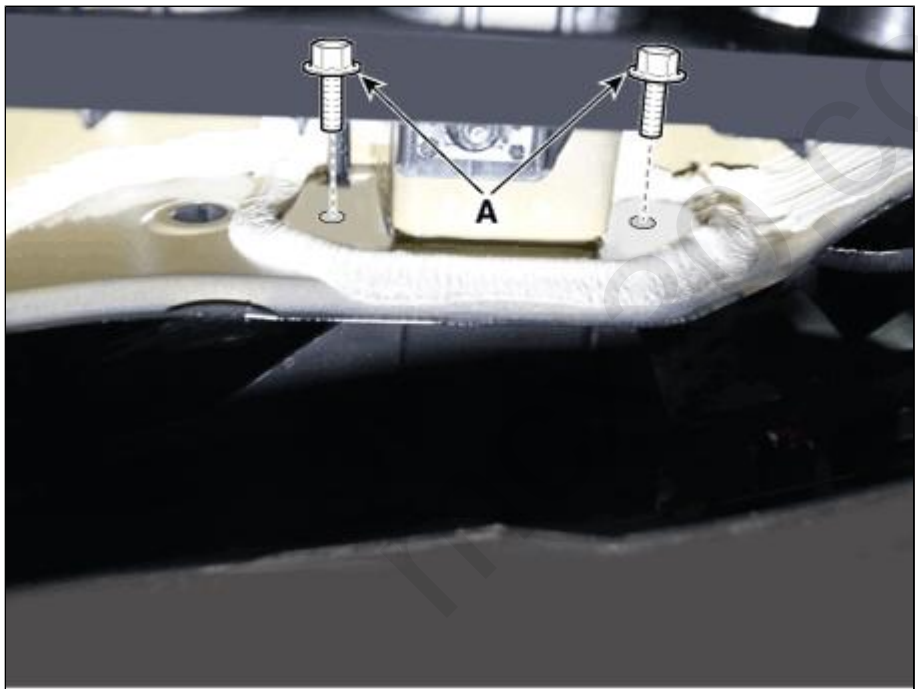

[RH]



6. Loosen the rear bumper lower mounting clips.

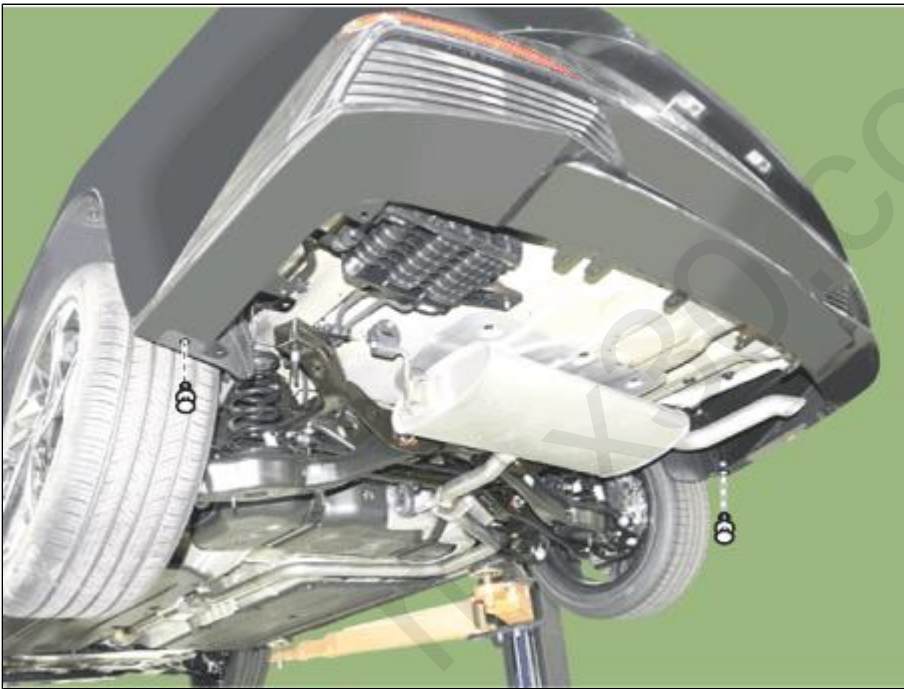

7. Remove the rear bumper upper mounting clips and bolts.




8. Loosen the mounting screws on the side of rear bumper (A), detach the side part of rear bumper.


NOTICE

Be careful not to damage the tabs on the side part of front bumper (A).




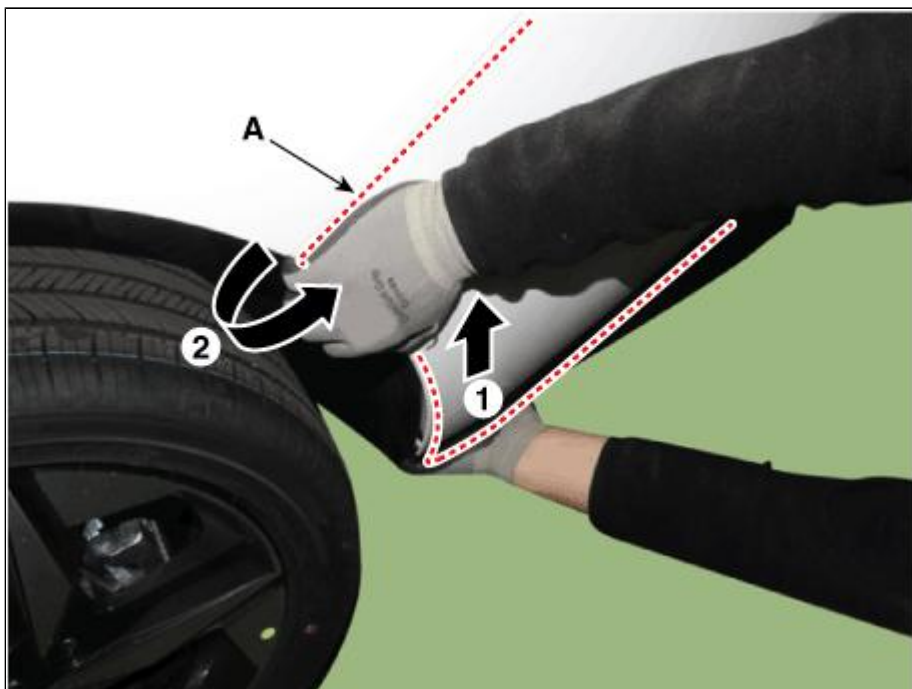

9. Disconnect the rear bumper connector (A).

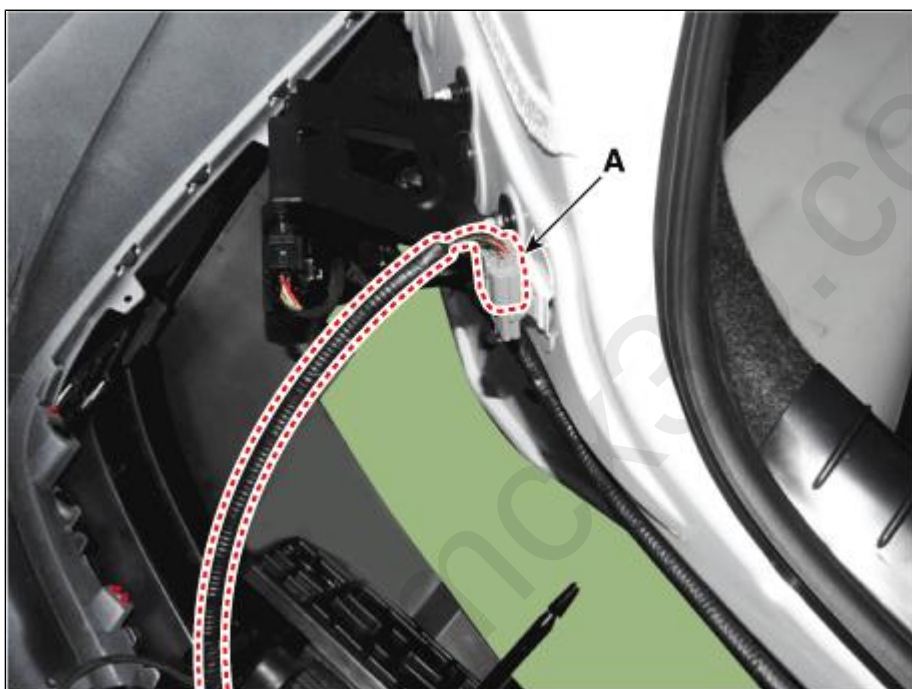

10. Remove the rear bumper assembly (A).

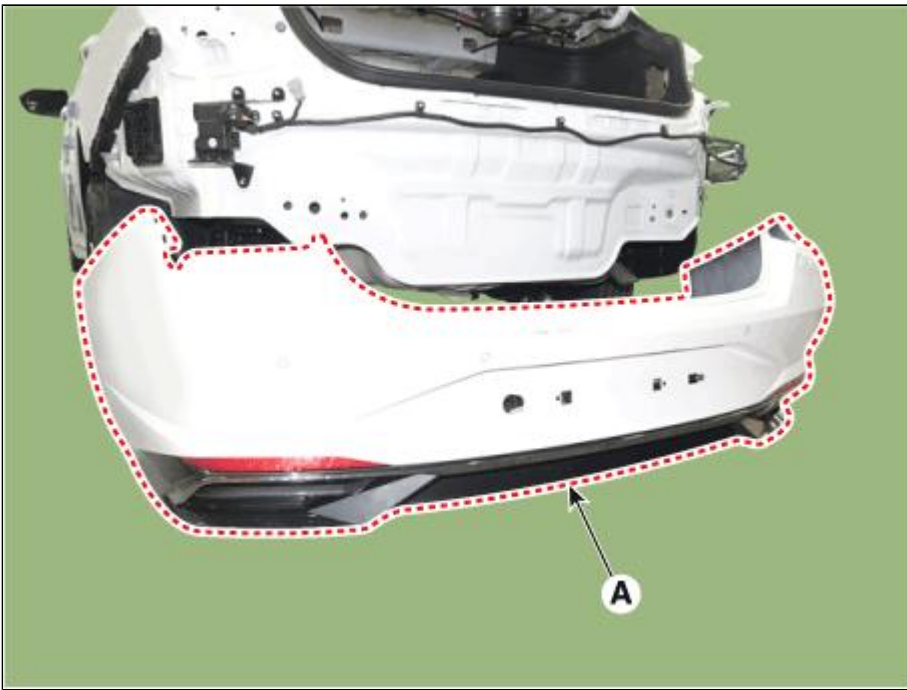

11. Install in the reverse order of removal.

NOTICE

Make sure the connector is connected properly.
Replace any damaged clips (or pin - type retainers).

Rate this Document

☐ Document Type : SHOP

☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value