


Replacement

⚠ CAUTION


When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

Put on gloves to prevent hand injuries.

1. Remove the front seat assembly.
(Refer to Front Seat - "Front Seat Assembly")
2. Remove the front seat headrest (A) by pulling it upward.

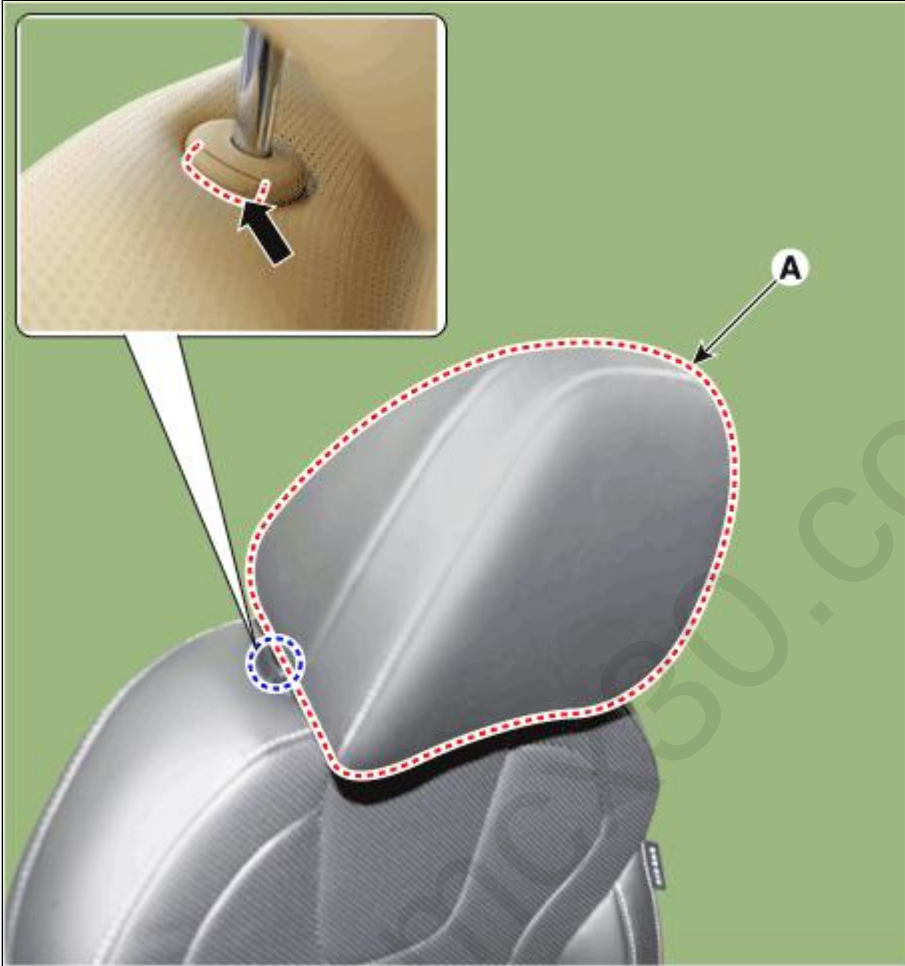


3. Remove the front seat lower protector (A).

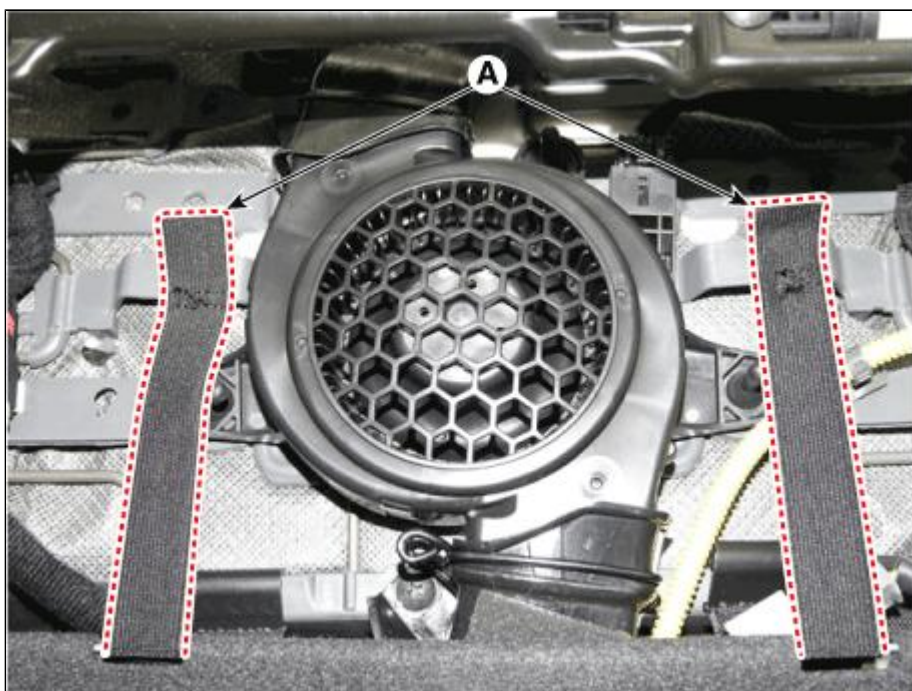


4. Remove the front seat back board (A).


NOTICE

Grasp the both lower sides of back board with hands and then remove it in the direction of the arrow.
Be careful not to damage the fixing clips.


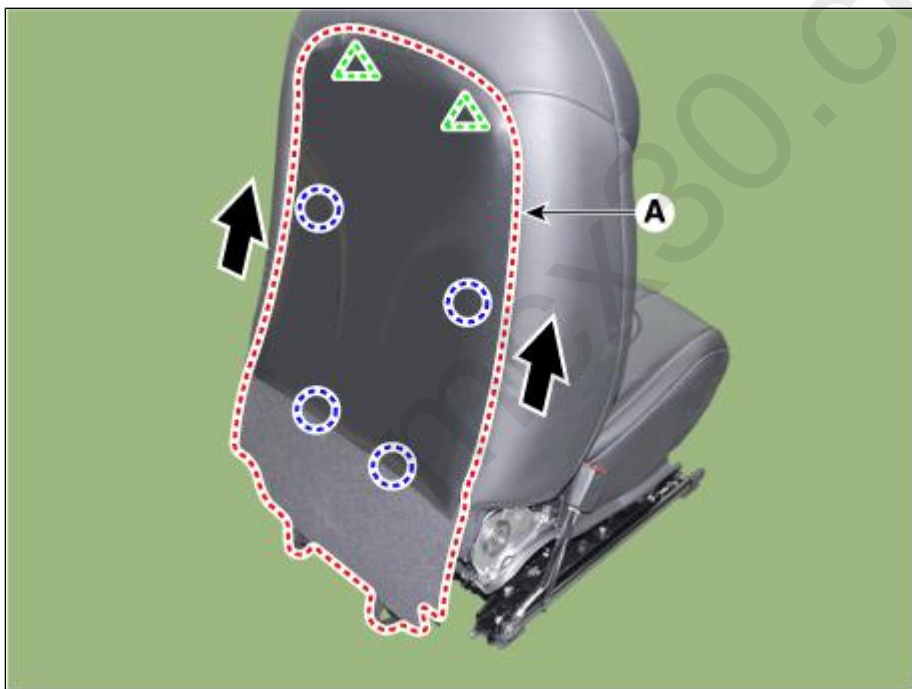


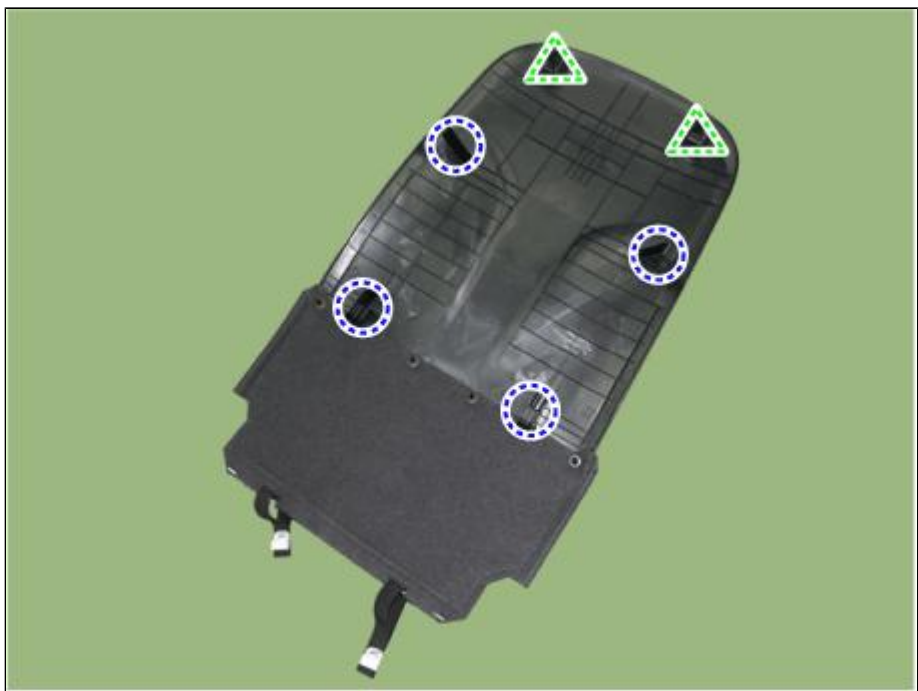


5. Disconnect the front seat ventilation duct (A).

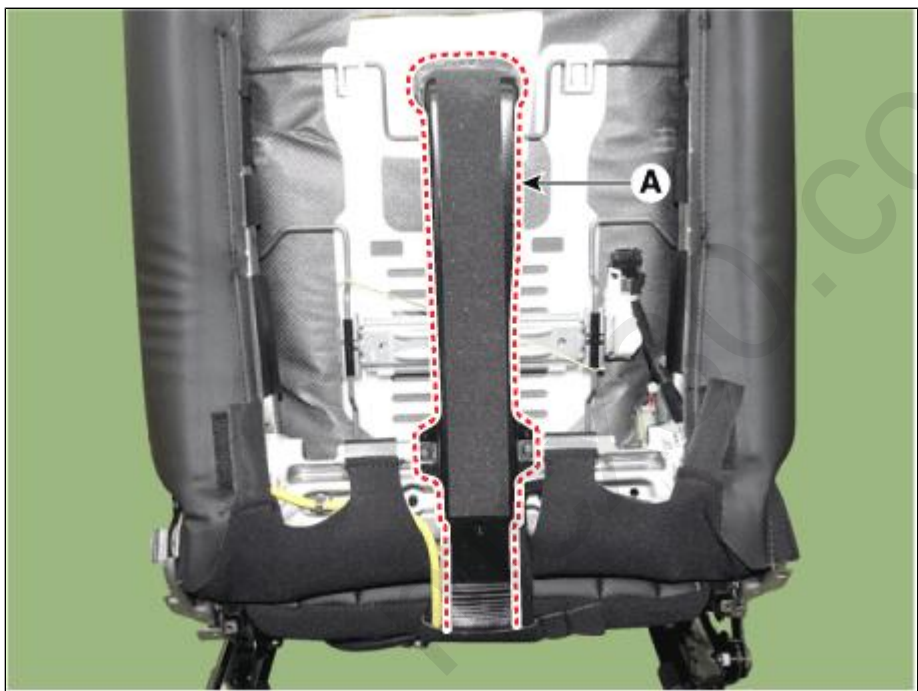

6. Press the both hook (B) and remove the headrest guides (A) by pulling upward.

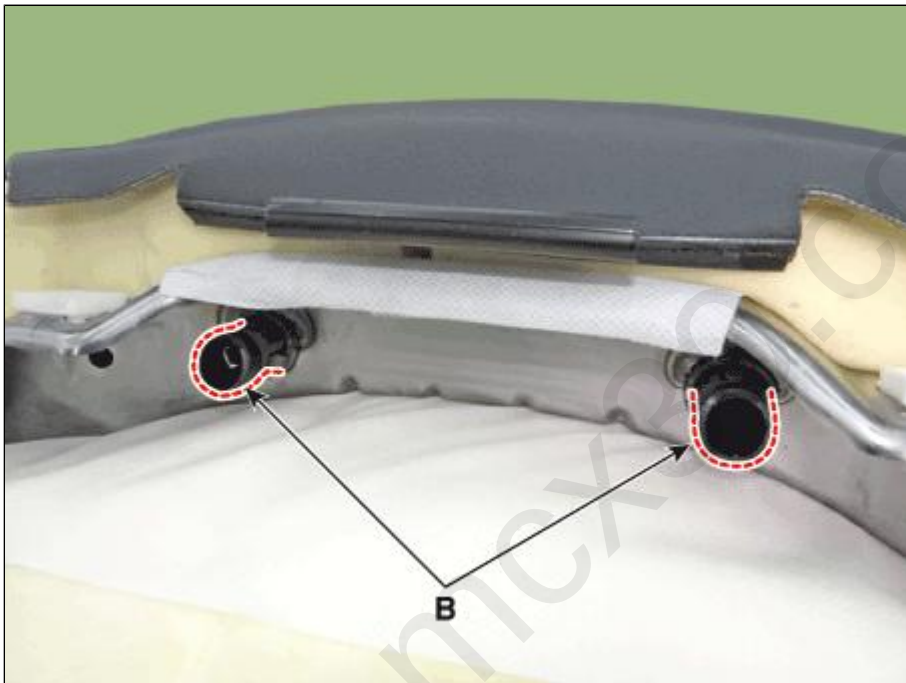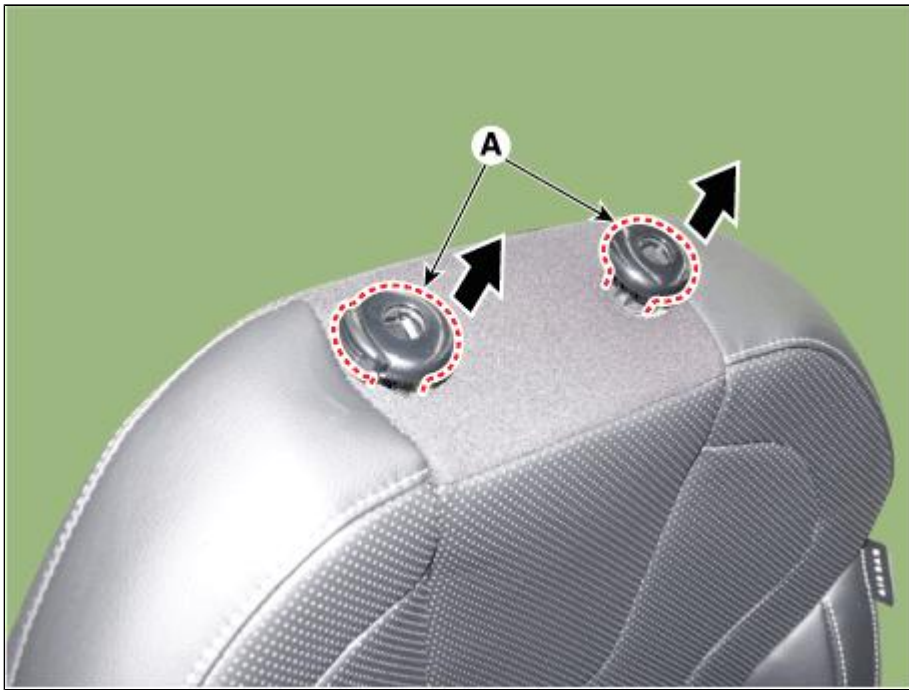

7. Disconnect the lock pin (A).

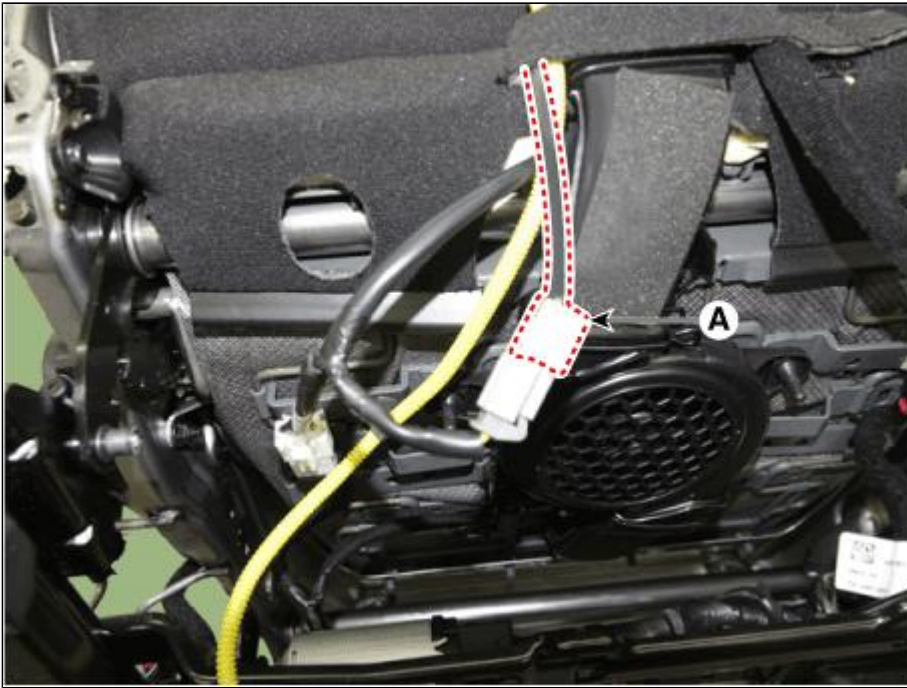


8. Separate the front seat back cover protector, remove the front seat back cover (A).



9. Remove the velcro tape (A) and tie down clips (B) inside the front seat back cover and remove the seat back cover (C).

⚠ CAUTION

Make sure that the sponge insert wire is not dislocated.

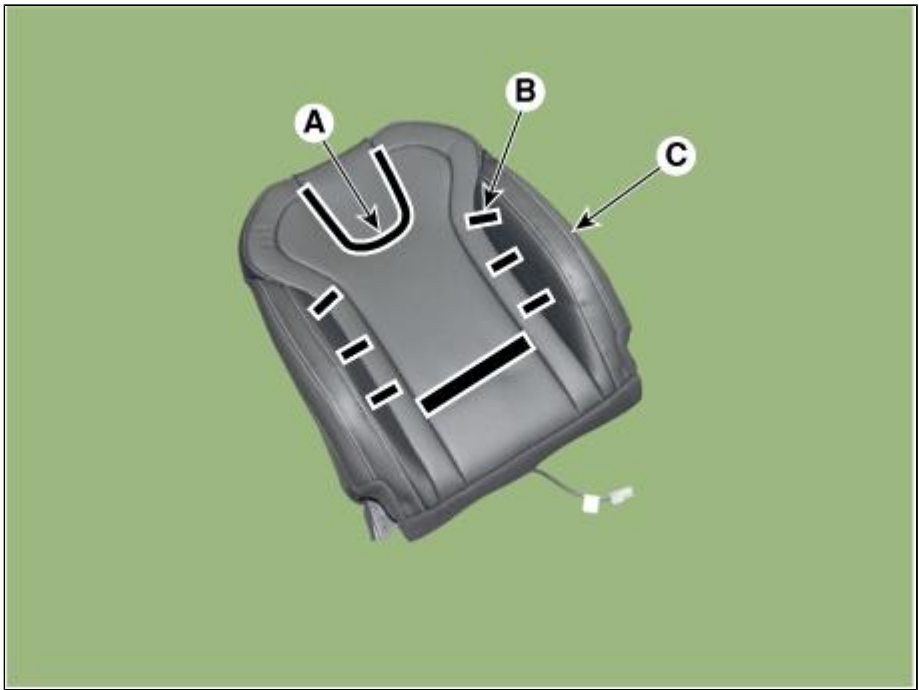

10. Install in the reverse order of removal.

Information

Make sure that the connectors are connected completely
Replace any damaged clips.

Rate this Document
☐ Document Type : SHOP
☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value	1	2	3	4	5	Excellent Value
--------------	---	---	---	---	---	-----------------