


⚠ CAUTION


When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

Put on gloves to prevent hand injuries.


1. Remove the rear seat assembly [LH].
(Refer to Rear Seat - "Rear Seat Assembly")
2. Push the lock pin, remove the rear seat headrest (A).

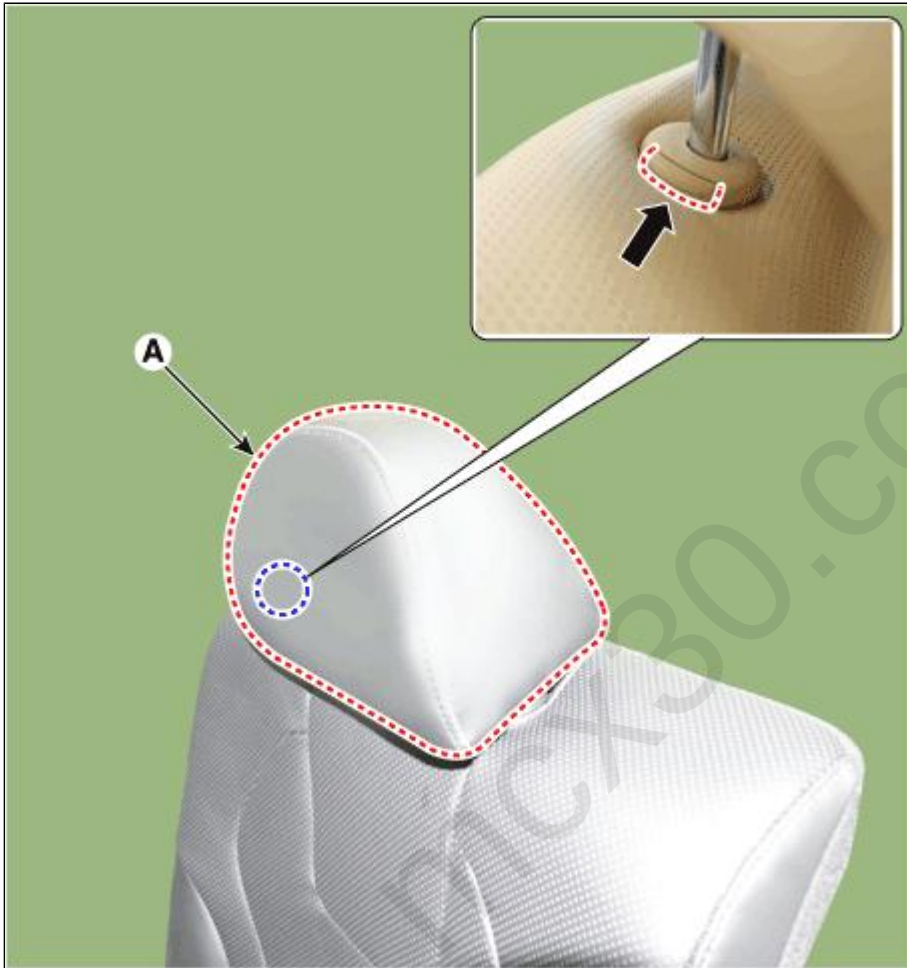


3. Using a screwdriver or remover, remove the rear seat back cover (A).

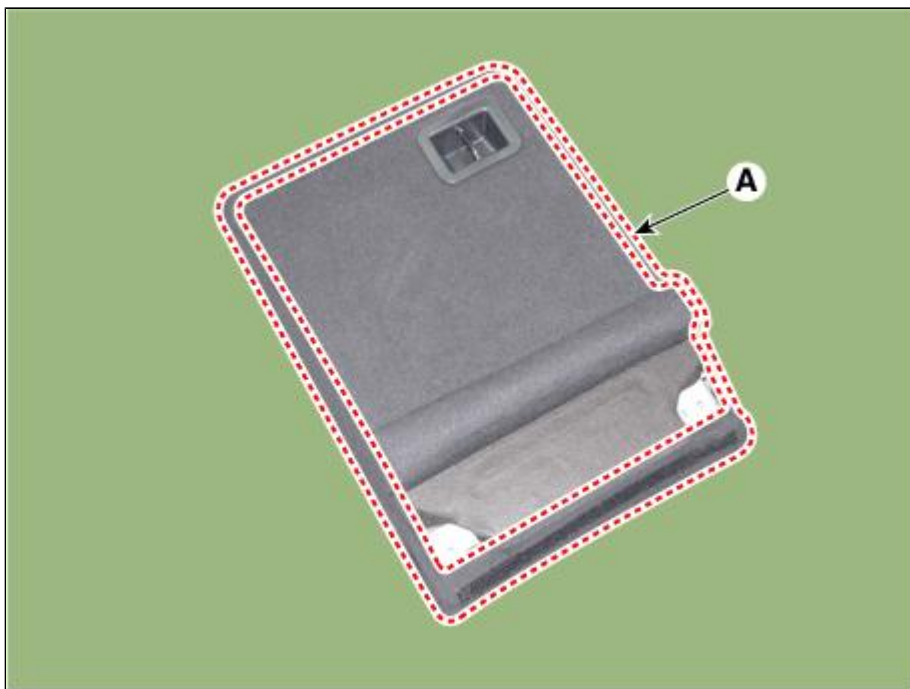

4. Press the both hook (B) and remove the headrest guides (A) by pulling upward.

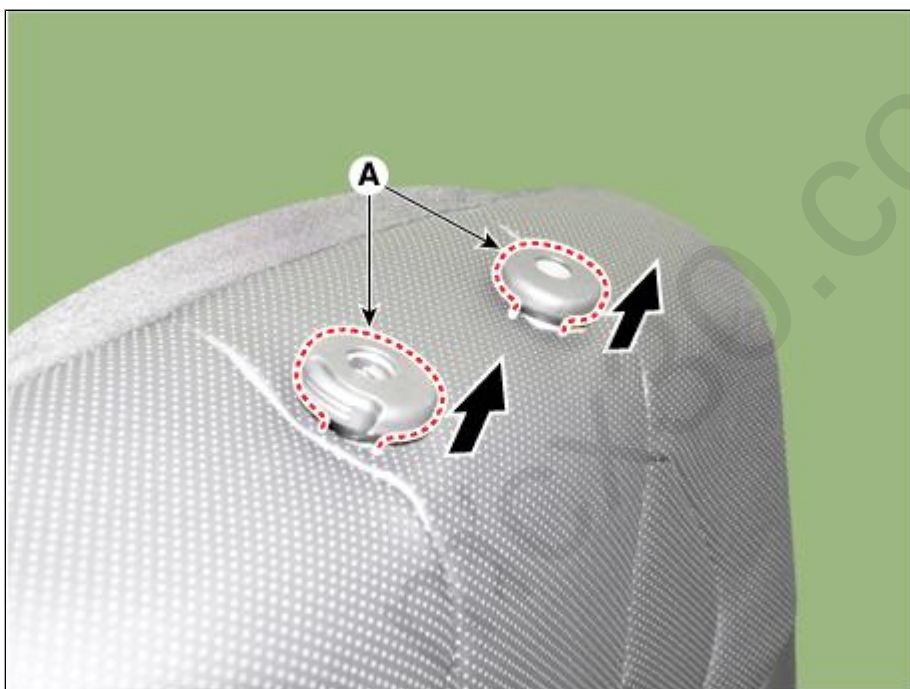


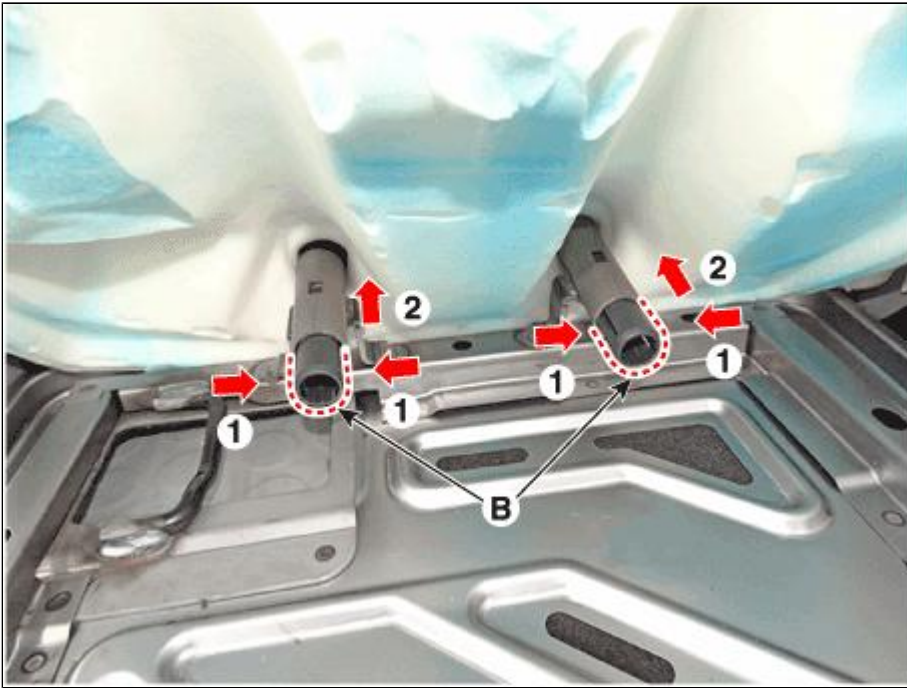

5. Remove the rear seat back cover assembly (A) from the rear seat back frame.



6. After removing the Velcro tape (A) and tie down clips (B) inside the rear seat cushion cover, remove the seat cushion cover (C).

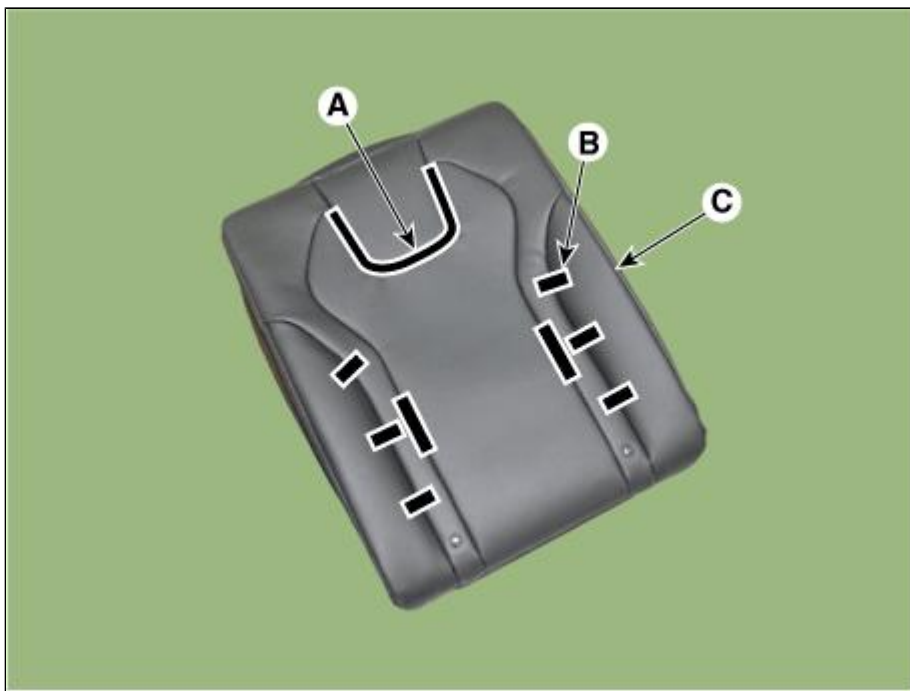

7. To install, reverse the removal procedure.


[RH]

⚠ CAUTION


When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.


Put on gloves to prevent hand injuries.

1. Remove the rear seat assembly [RH].
(Refer to Rear Seat - "Rear Seat Assembly")
2. Remove the rear back armrest.
(Refer to Rear Seat - "Rear Back Armrest")
3. Push the lock pins, and remove the rear seat headrest (A).

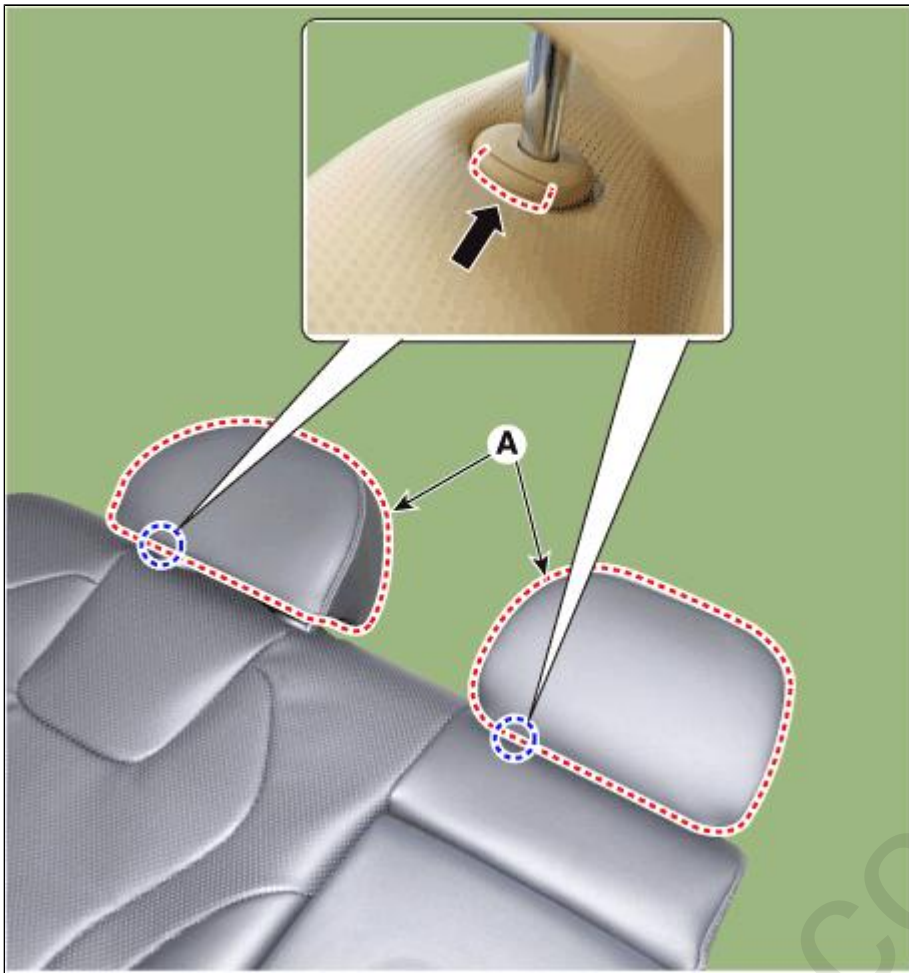


4. Loosen the mounting screws, remove the rear seat armrest board (A).


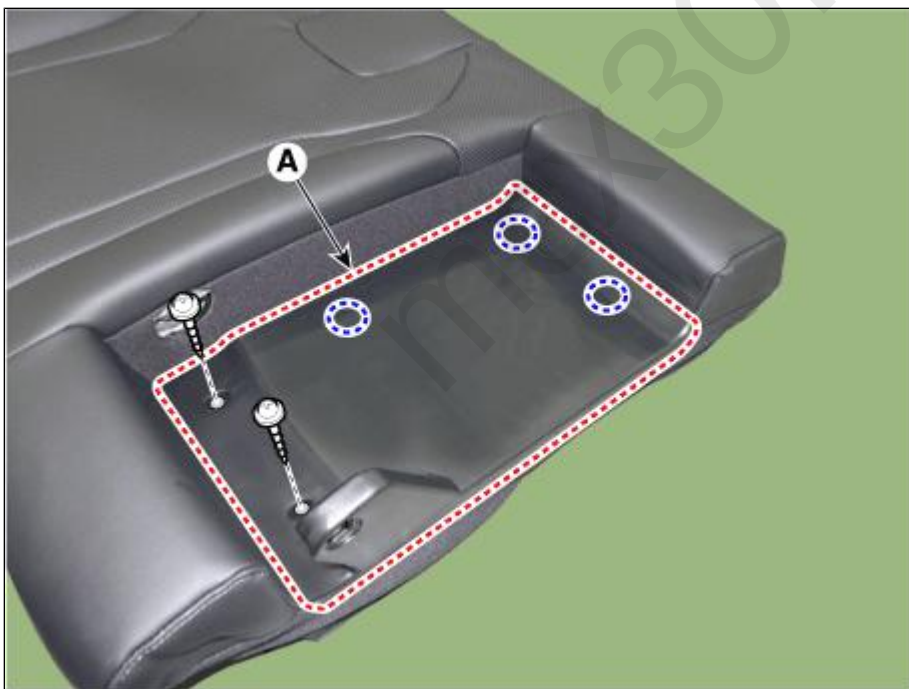


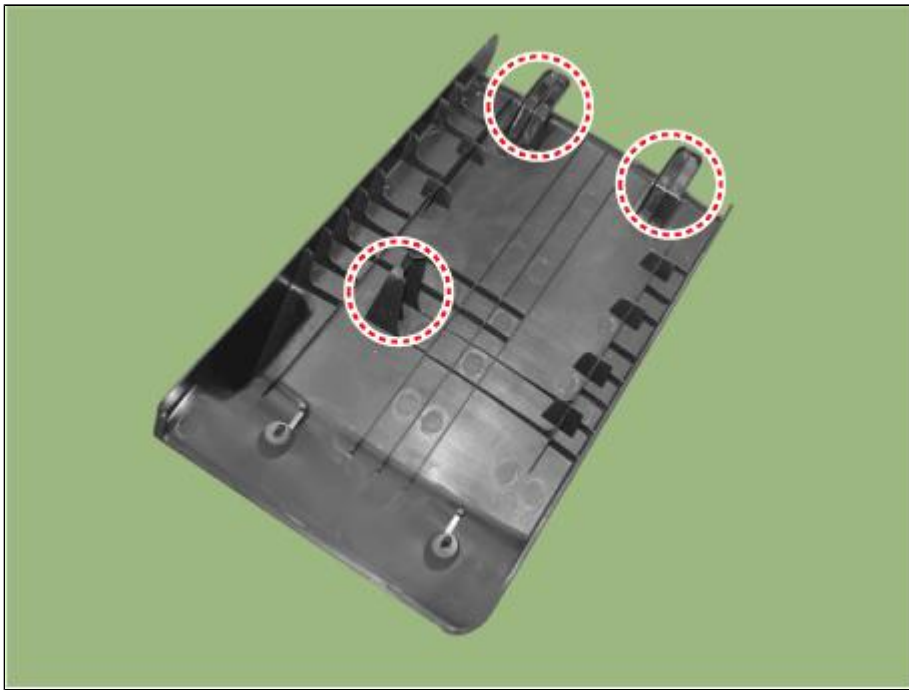


5. Using a screwdriver or remover, remove the rear seat back cover (A).

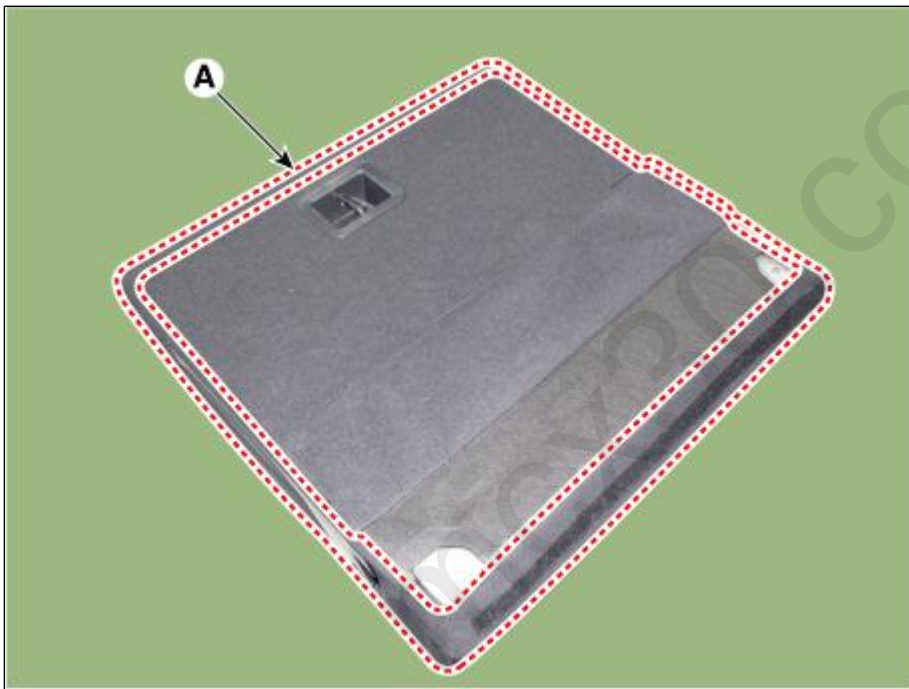


6. Press the both hook (B) and remove the headrest guides (A) by pulling upward.

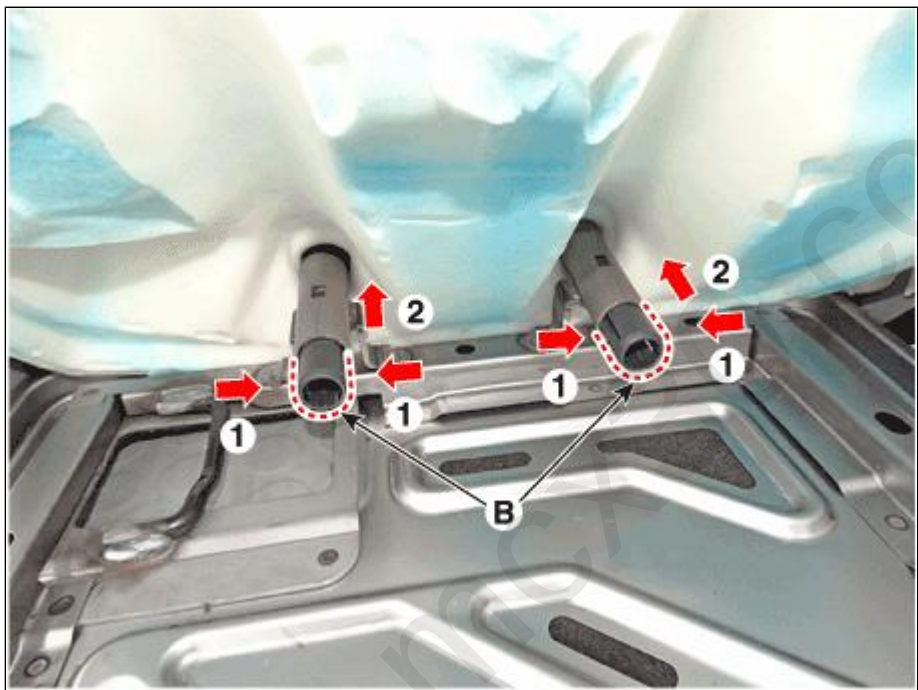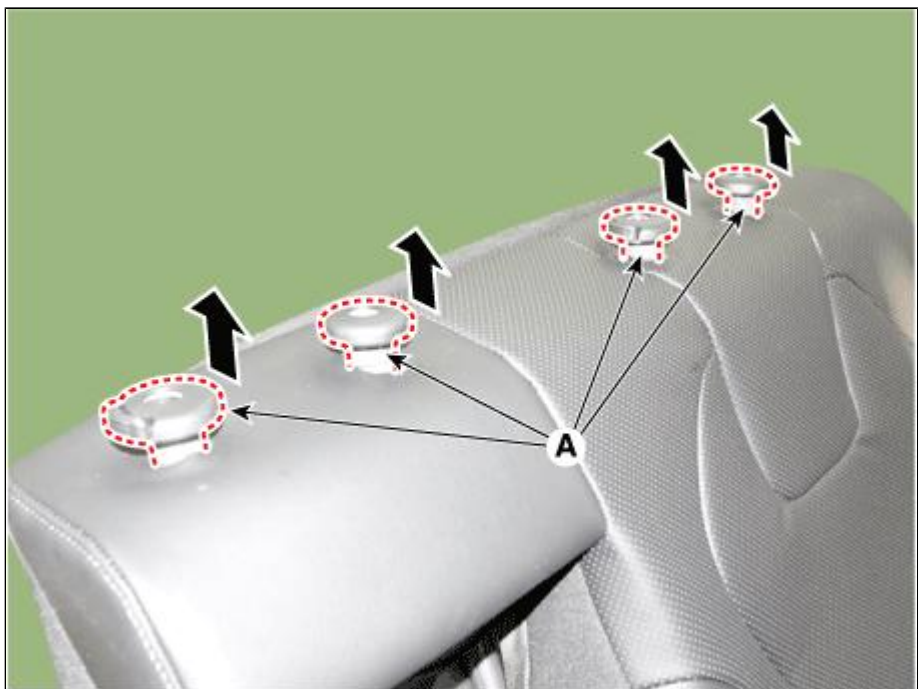

7. Remove the rear seat back cover assembly (A) from the rear seat back frame.

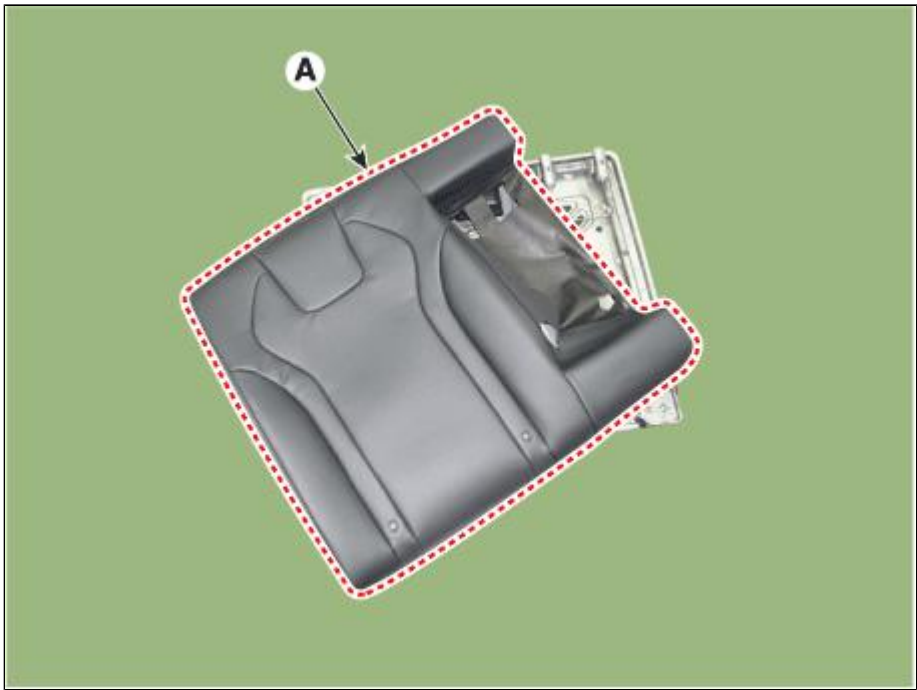

8. After removing the Velcro tape (A) and tie down clips (B) inside the rear seat cushion cover, remove the seat cushion cover (C).

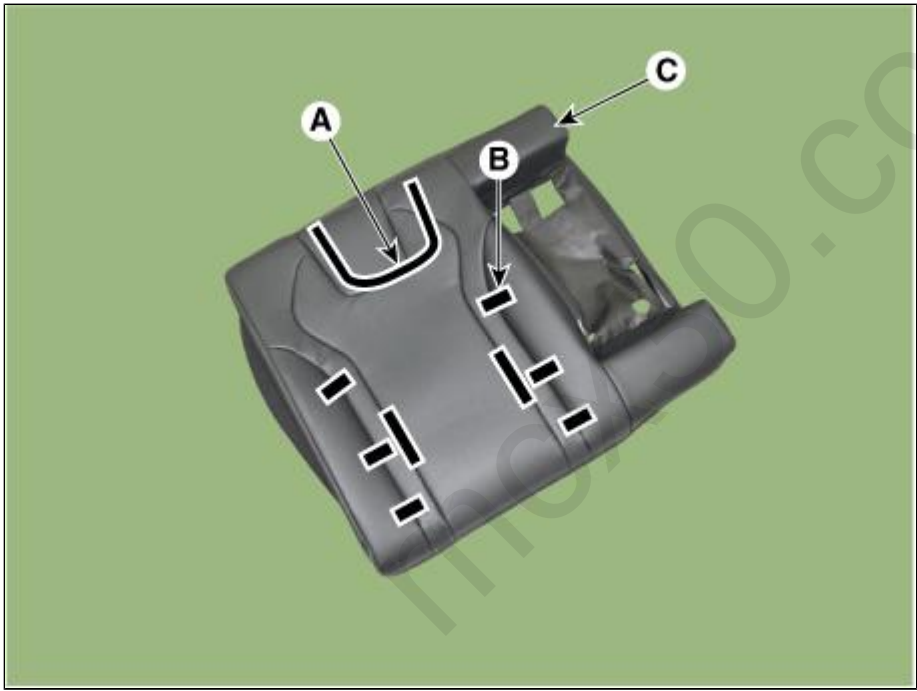

9. To install, reverse the removal procedure.

Rate this Document
☐ Document Type : SHOP
☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value