

Replacement

NOTICE

When installing the belt, make sure not to damage the pretensioner.


1. Remove the center pillar upper trim.
(Refer to Interior Trim - "Center Pillar Trim")
2. Remove the center pillar lower trim.
(Refer to Interior Trim - "Center Pillar Trim")
3. After loosening the front belt upper anchor mounting bolt, remove the front belt upper anchor (A).

Tightening torque :

39.2 - 53.9 N.m (4.0 - 5.5 kgf.m, 28.8 - 39.8 lb-ft)



4. Separate the seat belt retractor connector (A) and pre-active seat belt connector (B).

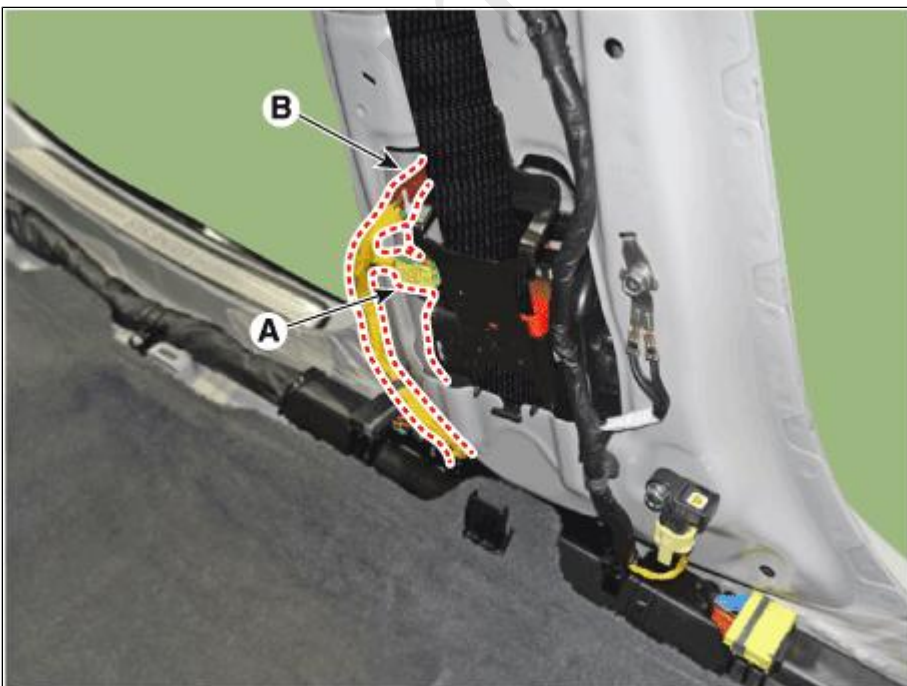


5. Loosen the mounting bolt (B) and (C), remove the front seat belt retractor (A).

Tightening torque :

Bolt B : 7.8 - 11.8 N.m (0.8 - 1.2 kgf.m, 5.8 - 8.7 lb-ft)

Bolt C : 39.2 - 53.9 N.m (4.0 - 5.5 kgf.m, 28.9 - 39.8 lb-ft)

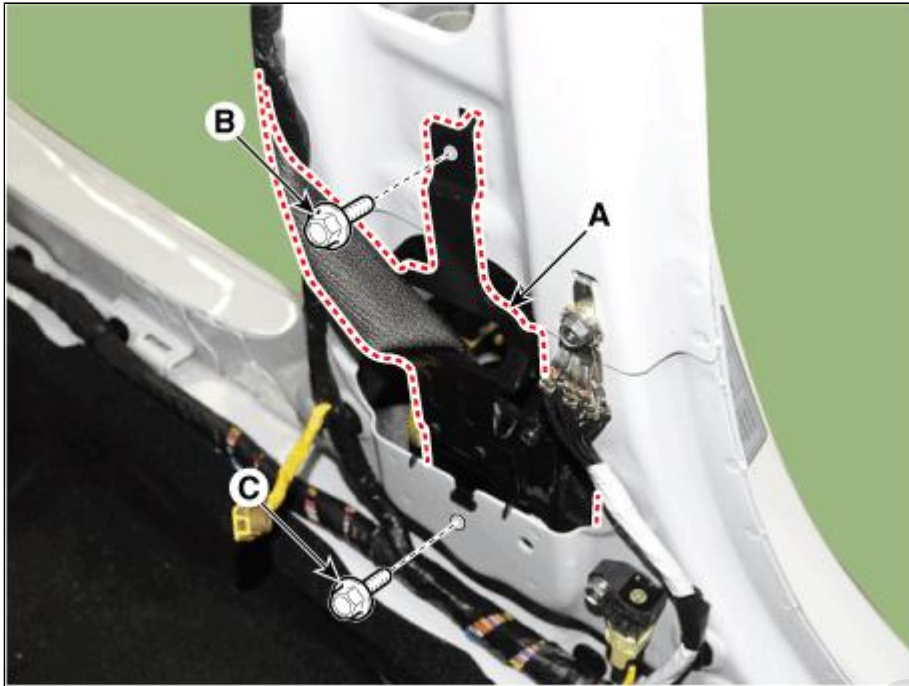

6. Install in the reverse order of removal.

Information

After installing the front seat belt retractor, check that the air bag warning indicator illuminates for about 6 seconds when the ignition is ON and then goes out.
Make sure the connector is plugged in properly.
Replace any damaged clips (or pin - type retainers).

Rate this Document

☐ Document Type : SHOP

☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value