


## Replacement

1. Remove the rear seat cushion assembly.  
(Refer to Rear Seat - "Rear Seat Assembly")
2. Remove the rear seat belt buckle.

**[LH, CTR]**

- 1) Disconnect the rear seat belt connector (A).

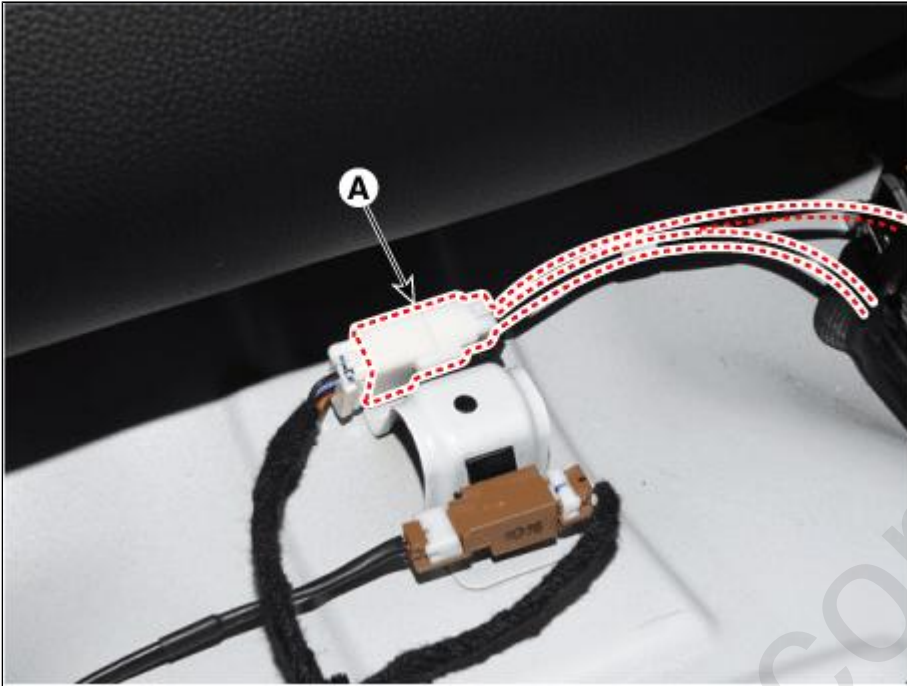


- 2) Loosen the mounting bolt, remove the rear seat belt buckle (A).

---

### Tightening torque :


39.2 - 53.9 N.m (4.0 - 5.5 kgf.m, 28.9 - 39.8 lb-ft)

---

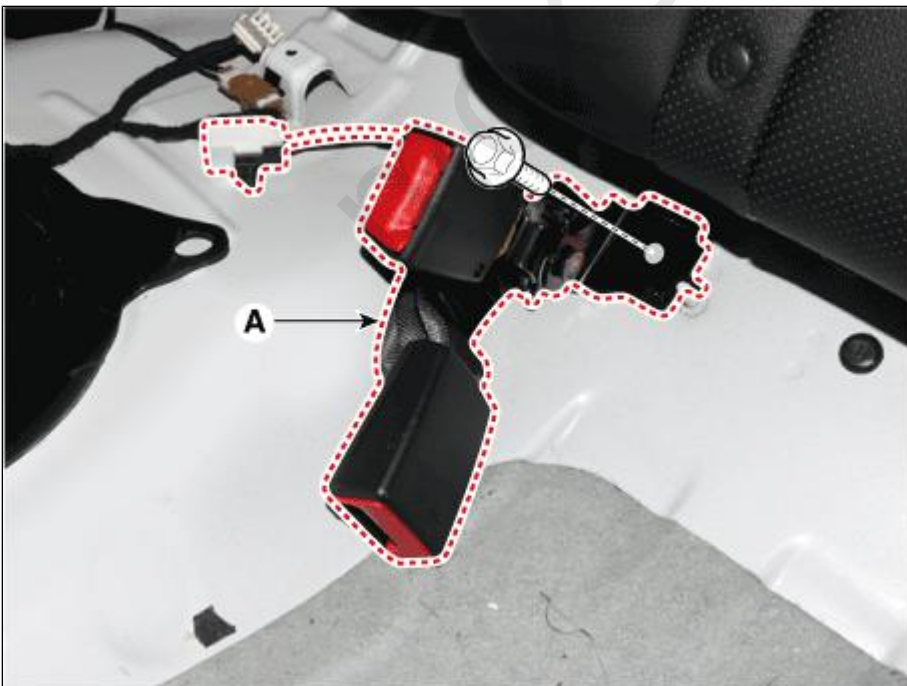

**[RH]**


- 1) Disconnect the rear seat belt connector (A).

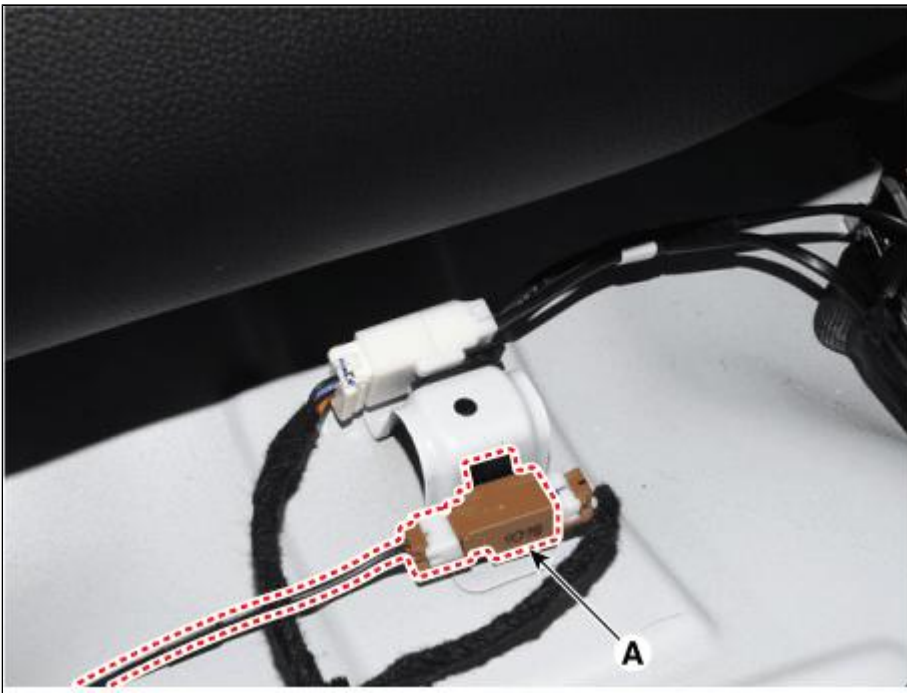

2) Loosen the mounting bolt, remove the rear seat belt buckle (A).

#### **Tightening torque :**

39.2 - 53.9 N.m (4.0 - 5.5 kgf.m, 28.9 - 39.8 lb-ft)

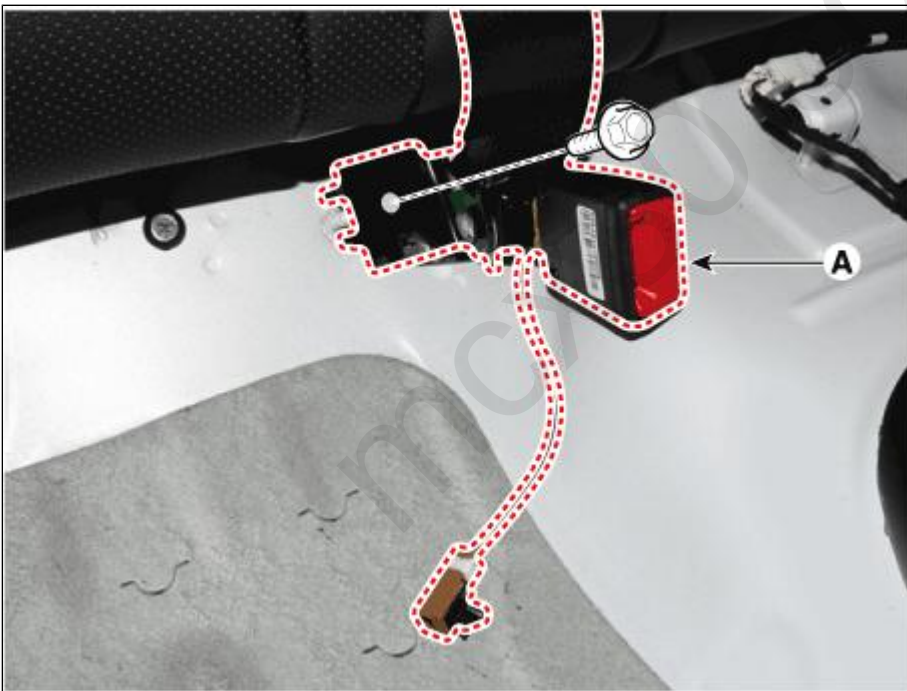

3. To install, reverse the removal procedure.

#### **Information**

The buckle and tongue of different types are impossible to be latched, so check that the buckle & tongue have the same types.

Distinguish the rear side seat buckle from the center seat buckle before latching.

If foreign materials are stuck in the inside button of buckle, it may cause interference during the latching process, leading to a functional problem (for example - beverages (viscous drinks), toothpicks, sand, plastic, vinyl, metal pieces, etc.)

After latching the buckle and tongue, check the fastening force using a Push - Pull Gauge (fastening force: 3kgf or less).

☐ Document Type : SHOP

☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value      1      2      3      4      5      Excellent Value

mcx30.com