


Removal


NOTICE

Take care not to scratch the cluster fascia panel and related parts.
Wrap the protective tape on the tool to disassemble with the screwdriver or remover.
Use caution in keeping and handling during disassembling/assembling because it is easily contaminated with lubricant and oil.


1. Disconnect the negative (-) battery terminal.
2. When removing with a flat-tip screwdriver or remover, remove the steering column shroud upper panel (A).

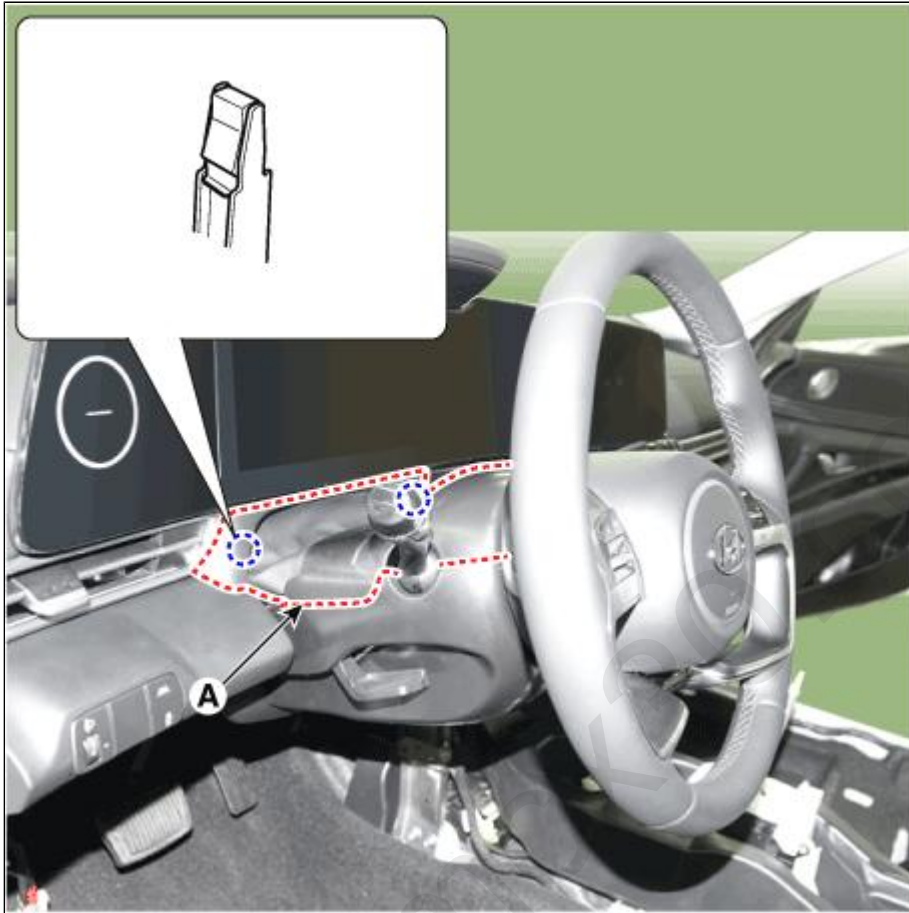

3. When removing with a flat-tip screwdriver or remover, remove the floor console side garnish (A).

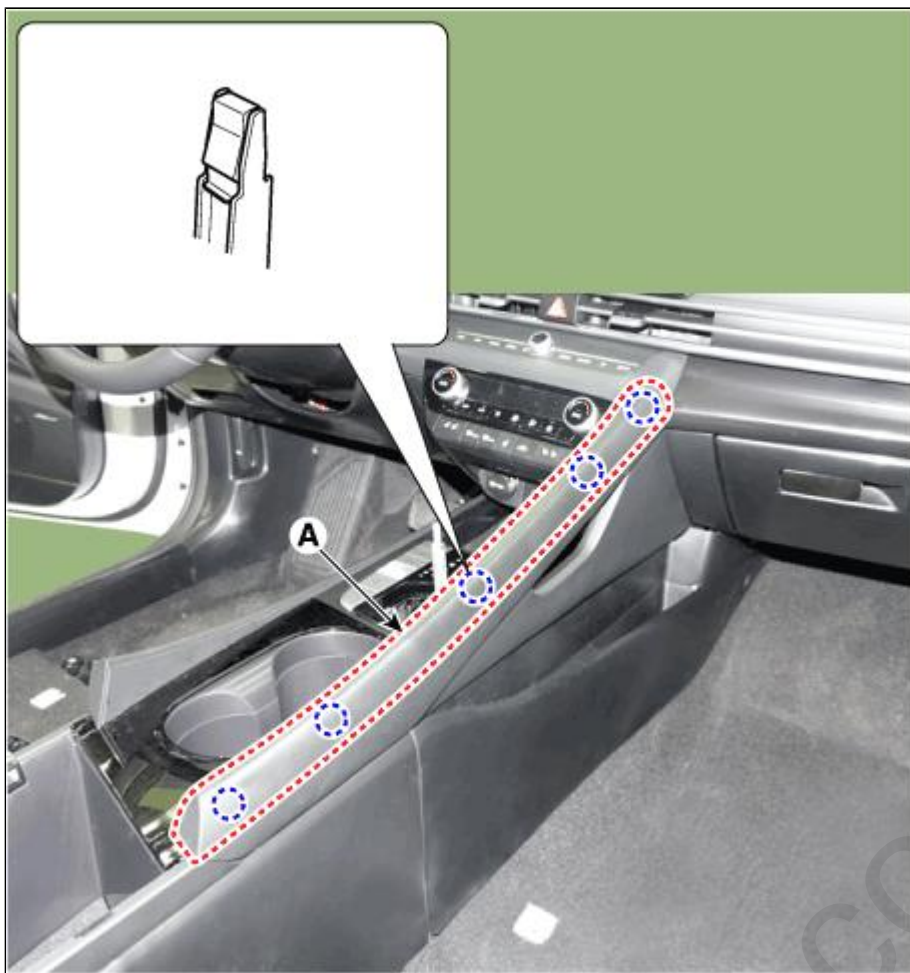


4. When removing with a flat-tip screwdriver or remover, remove the crash pad garnish[CTR] (A).

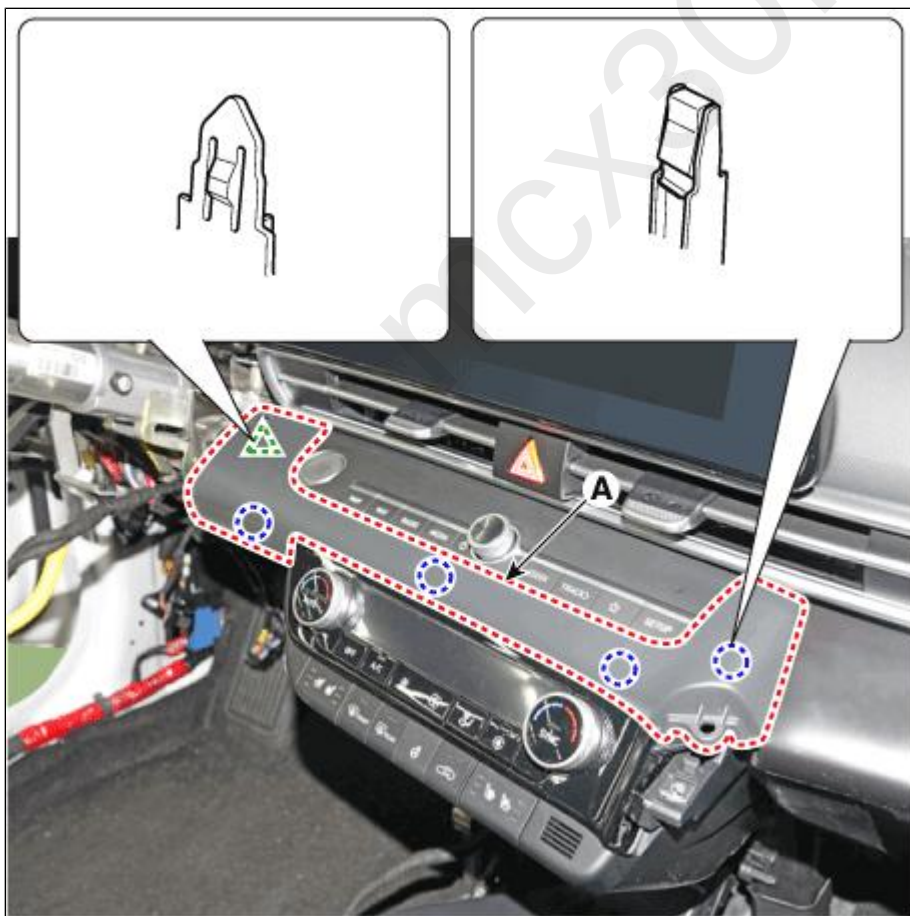


5. Remove the heater & A/C control unit.
 (Refer to Heating, Ventilation and Air Conditioning - "Heater & A/C Control Unit (DATC)")
 (Refer to Heating, Ventilation and Air Conditioning - "Heater & A/C Control Unit (Manual)")

6. Remove the AVN head unit (A) after loosening mounting screws.

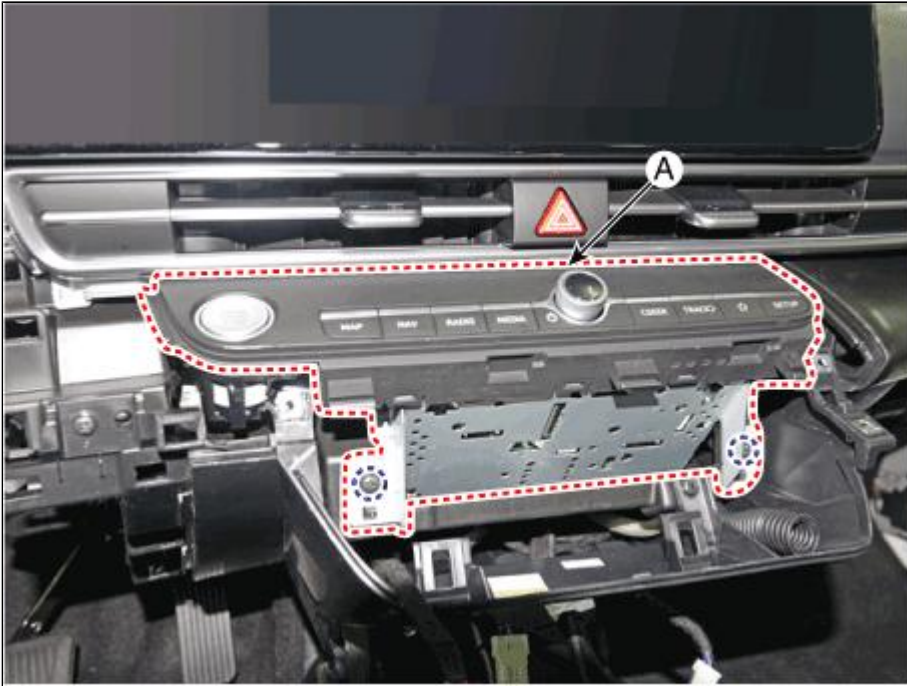

7. Remove the AVN head unit connectors and cables (A).

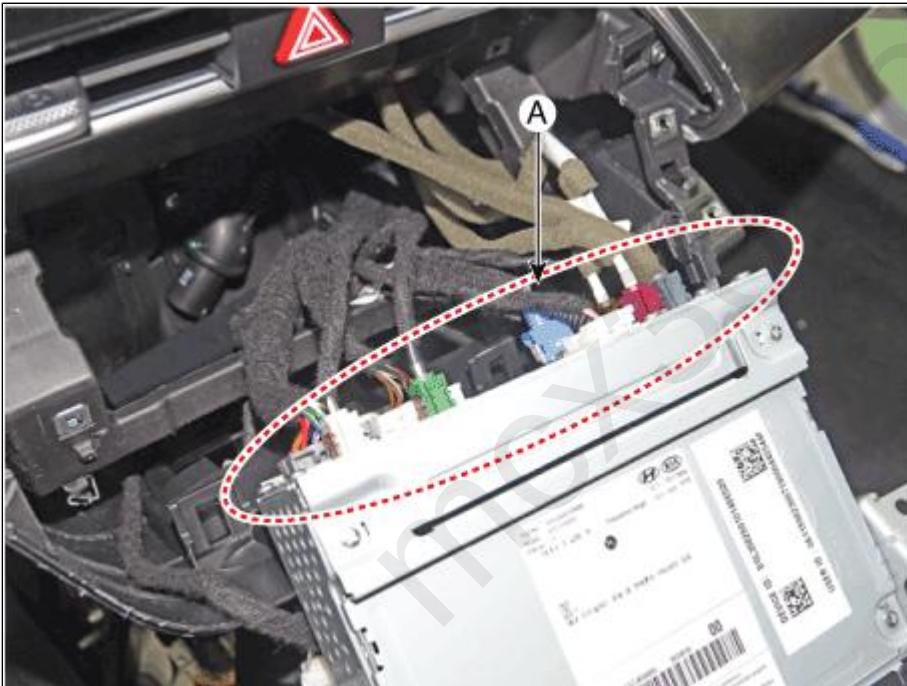

Installation

1. Install the AVN head unit.
2. Install the heater & A/C control unit.
3. Install the crash pad garnish[CTR].
4. Install the floor console side garnish.
5. Install the steering column shroud upper panel.
6. Disconnect the negative (-) battery terminal.

CAUTION

Make sure that the cables and connectors are plugged in properly.
Check the AVN system for normal operation.

Rate this Document

☐ Document Type : SHOP

☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value

1

2

3

4

5

Excellent Value

mcx30.com