

Removal

[Room Lamp]

1. Disconnect the negative (-) battery terminal.
2. Using a screwdriver or remover, Separate the room lamp lens (A) from the room lamp.


CAUTION

Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.




3. If it is necessary to replace the bulb, remove the bulb (A) after disengaging the room lamp lens.
4. Disengage the room lamp (B) after loosening the mounting screws.

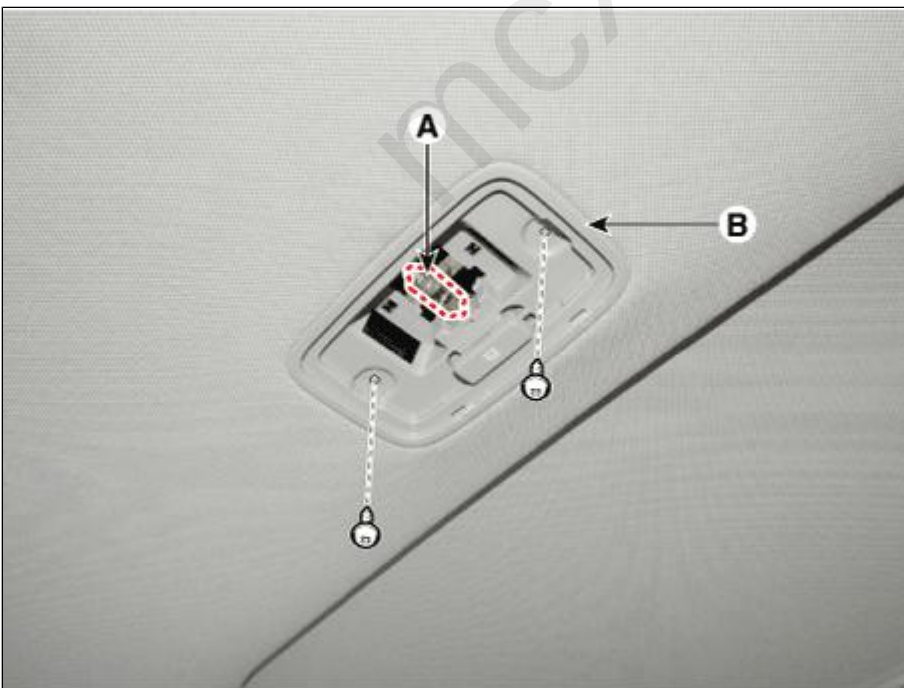

NOTICE

When removing the room lamp, be careful of the direction in which the tool is inserted.
Use caution when inserting the tool in the opposite direction, as the room lamp is damaged.

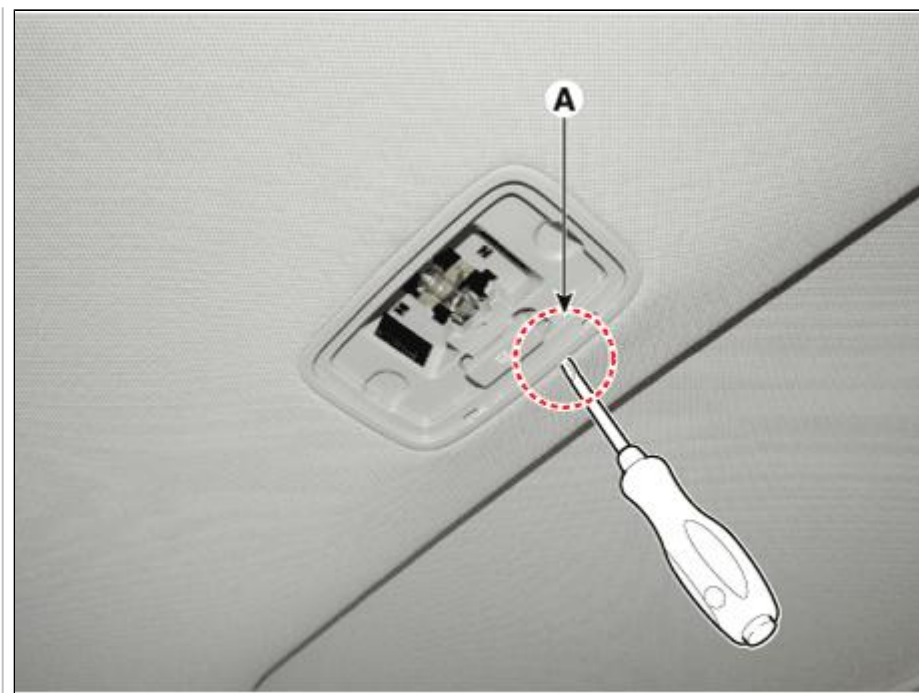


5. Remove the room lamp assembly after disconnect the room lamp connector.



[Vanity Lamp]

1. Separate the vanity Lamp (A) from the roof trim after disengaging the mounting clip (B).

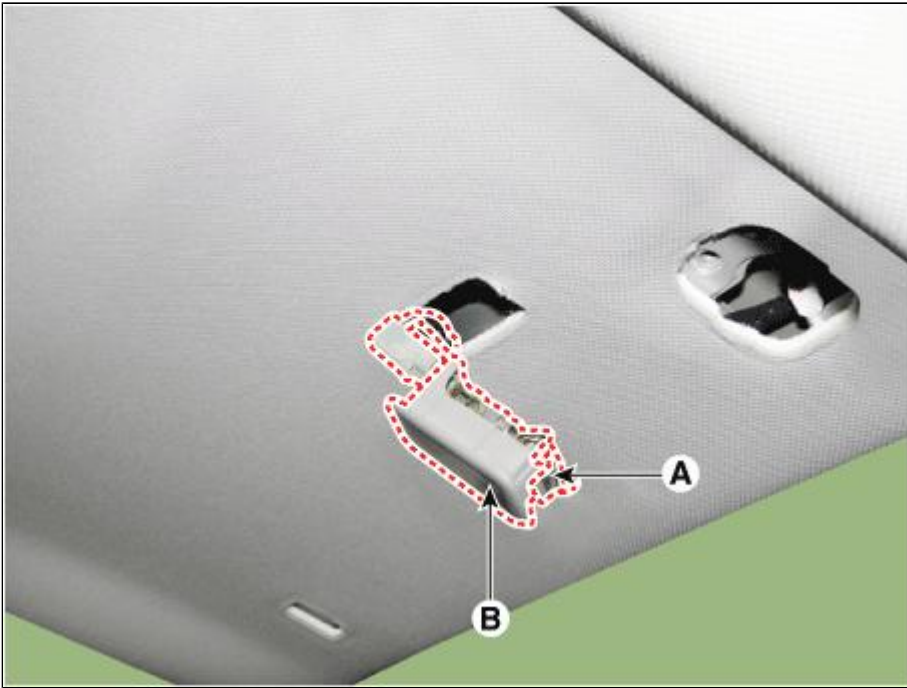

Installation

[Room Lamp]

1. Install the room lamp after connect the connector.
2. Install the room lamp lens
3. Connect the negative (-) battery terminal.

[Vanity Lamp]

1. Install the vanity lamp.
2. Connect the negative (-) battery terminal.

Rate this Document

- ☐ Document Type : SHOP
- ☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value