


Removal

Outside Combination Lamp


1. Disconnect the negative (-) battery terminal.
2. Remove the combination lamp cover (A).

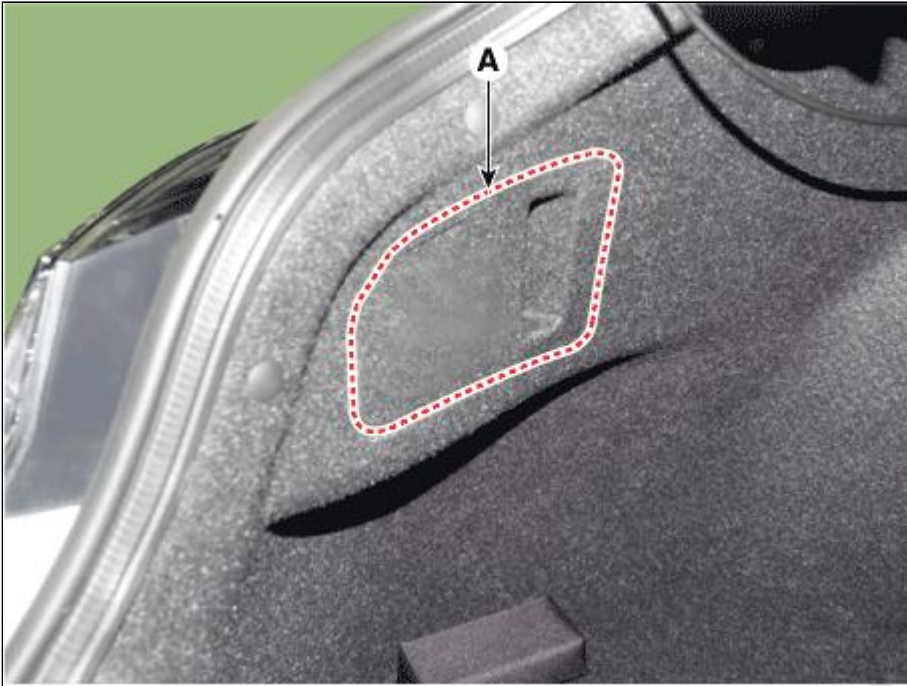


3. Disconnect the rear combination lamp connector (A).



4. Loosen the mounting nuts and remove the rear combination lamp (A).

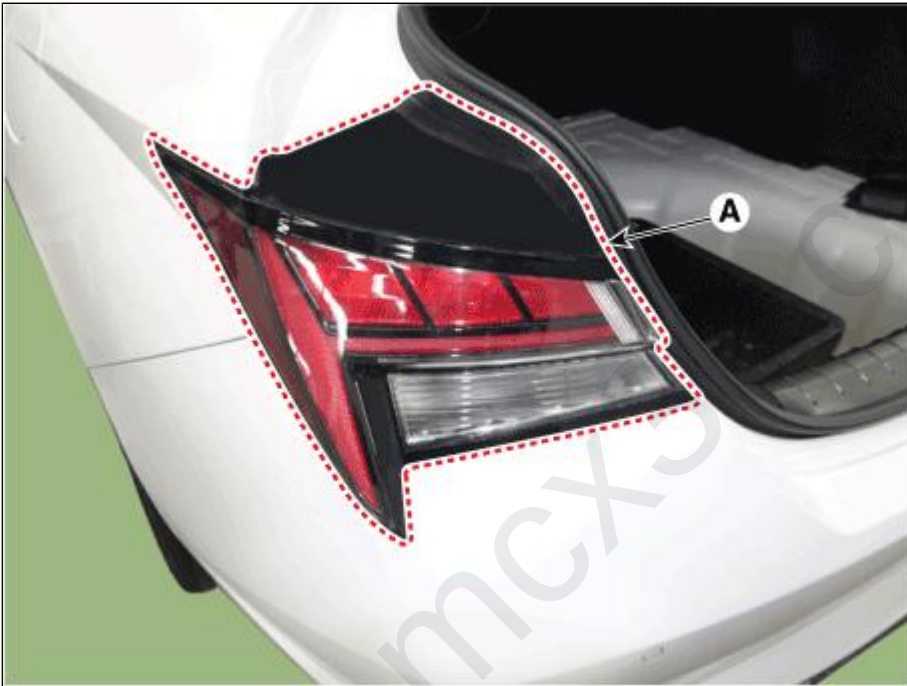

5. Remove the socket (A) and replace the bulb (B).

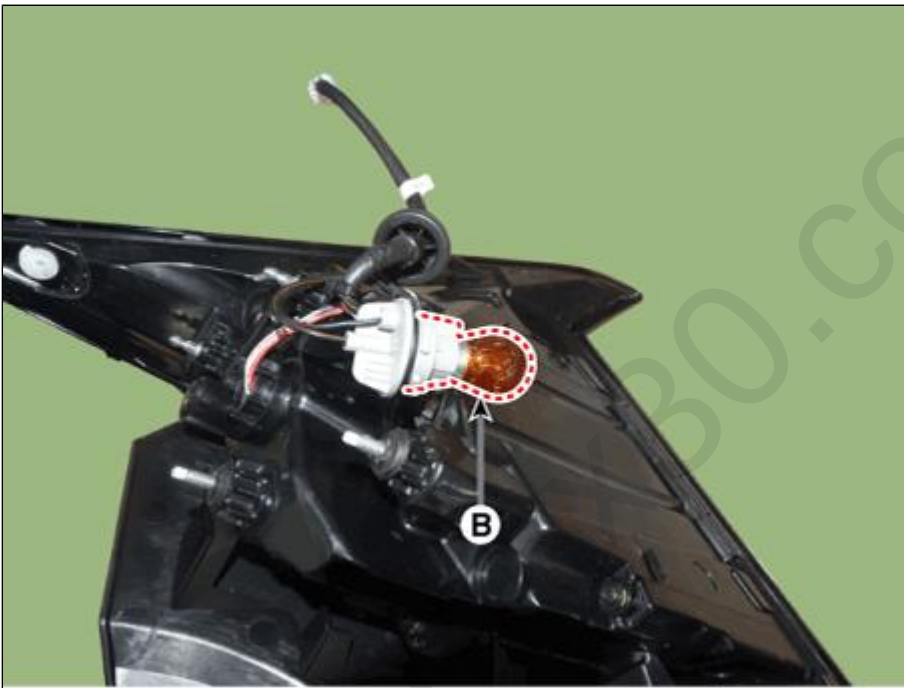


Inside Combination Lamp

1. Disconnect the negative (-) battery terminal.
2. Remove the trunk lid trim.
(Refer to Body - "Trunk Lid Trim")
3. Disconnect the rear inside combination lamp connectors and trunk lid button connector (A).
4. Loosen the mounting nuts and remove the rear inside combination lamp (B).




5. Remove the rear inside combination lamp socket [back-up lamp] (A) and replace the bulb (B).

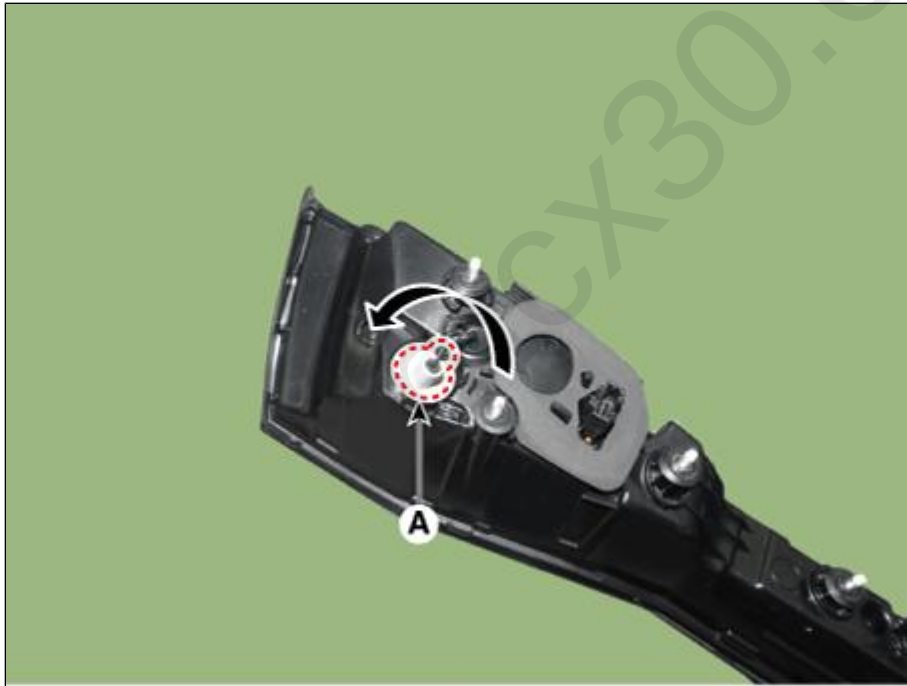




6. Remove the rear inside combination lamp socket [tail lamp] (A) and replace the bulb (B).

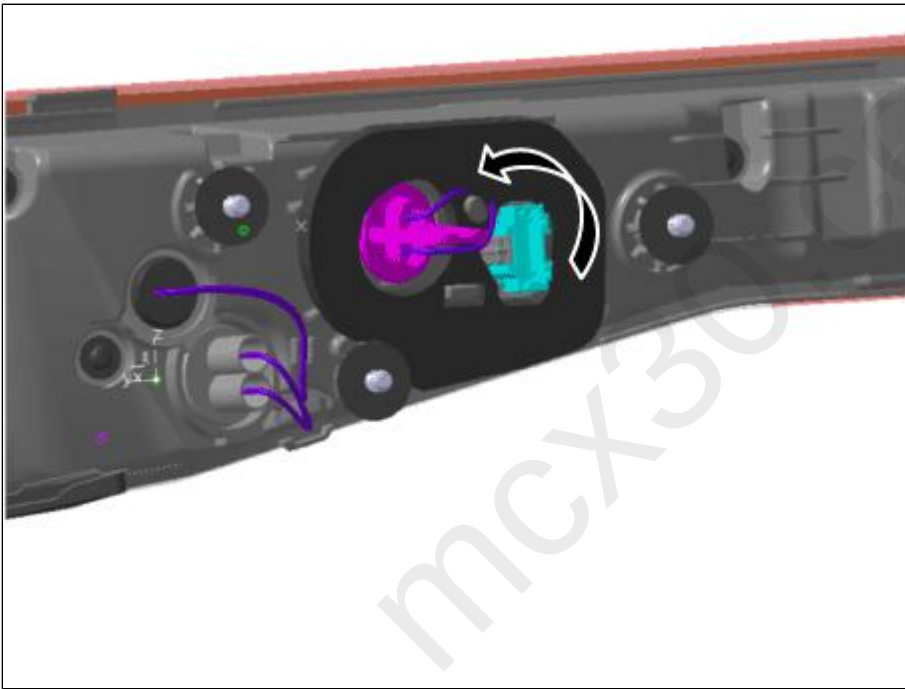

Replacement

Outside Combination Lamp

1. Turn the head lamp power off.
2. Remove the bulb socket and turn signal lamp bulb (A) from the lamp assembly.

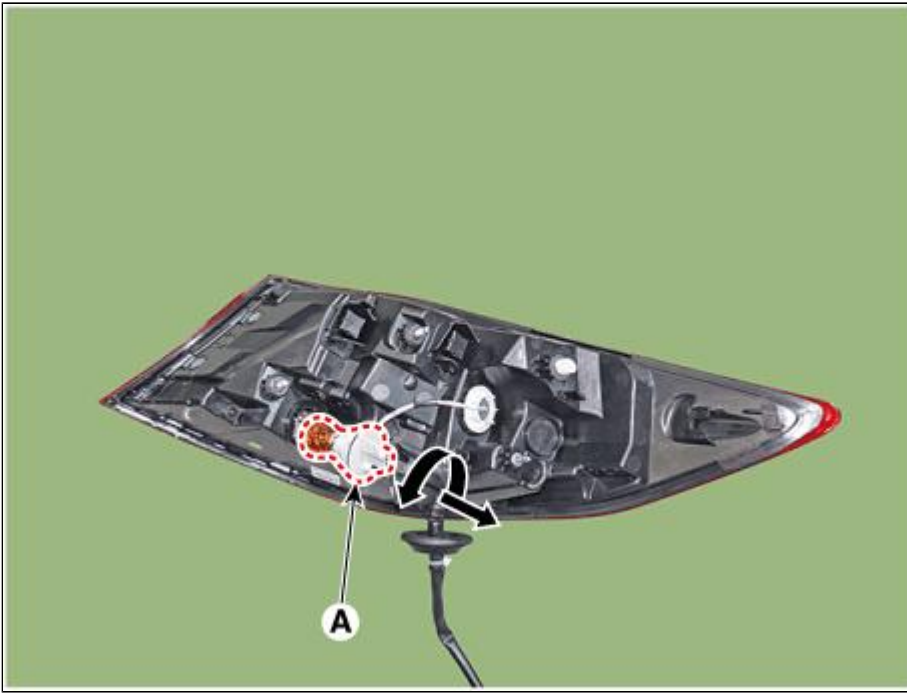

Inside Combination Lamp

1. Turn the head lamp power off.
2. Remove the trunk lid trim.
(Refer to Body - "Trunk Lid Trim")
3. Remove the bulb socket and turn signal lamp bulb (A) from the lamp assembly.



Installation

1. Connecting the lamp connector.
2. Install the inside/outside rear combination lamp assembly.
3. Install the trunk lid trim. [Inside combination lamp only]

Rate this Document

- ☐ Document Type : SHOP
- ☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value

mcx30.com