



Removal

Mood lamp unit

1. Disconnect the negative (-) battery terminal.
2. Remove the main crash pad assembly.
(Refer to Body - "Main Crash Pad Assembly")
3. Loosen the mounting screws and remove the main crash pad air duct (A).

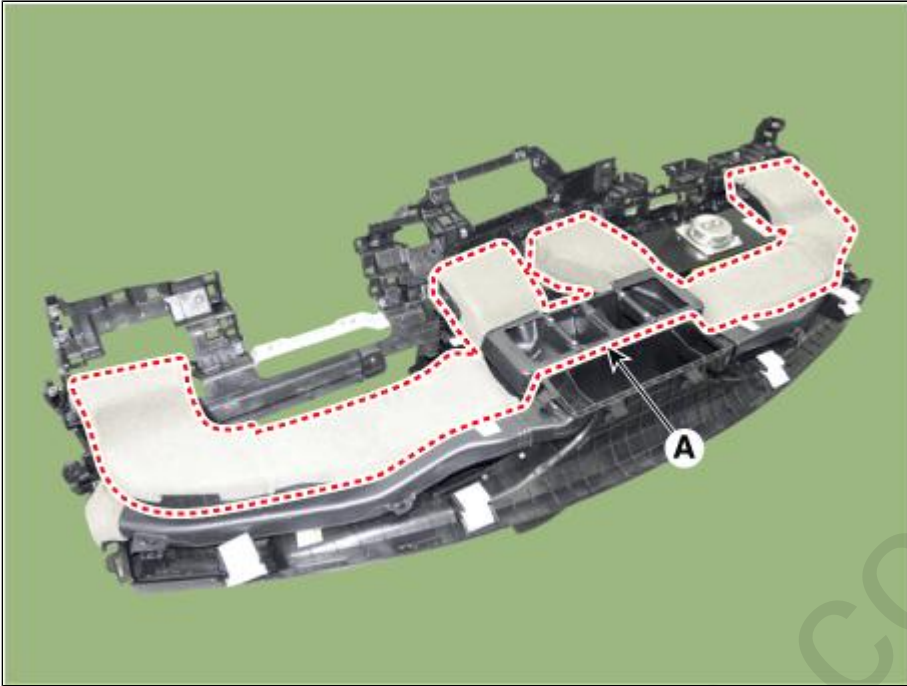

4. Loosen the mounting screws and remove the mood lamp unit (A).

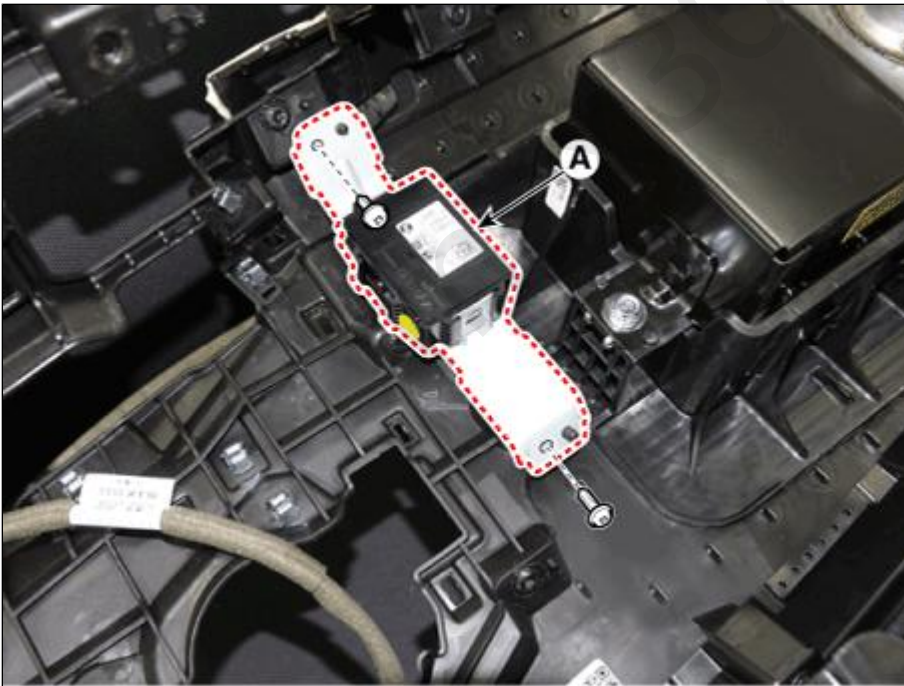


Crash pad mood lamp [LH]


1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad lower panel.
(Refer to Body - "Crash Pad Lower Panel")
3. Loosen the mounting screws and remove the crash pad lower switch (A).




4. Disconnect the crash pad lower switch connector (A).

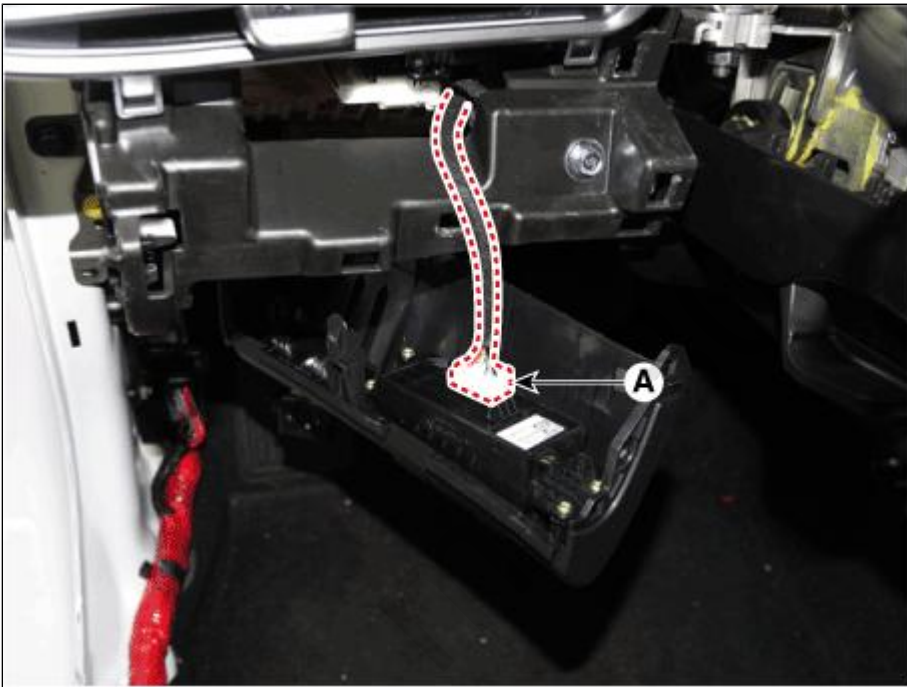

5. Loosen the mounting screw and remove the crash pad air vent [LH]

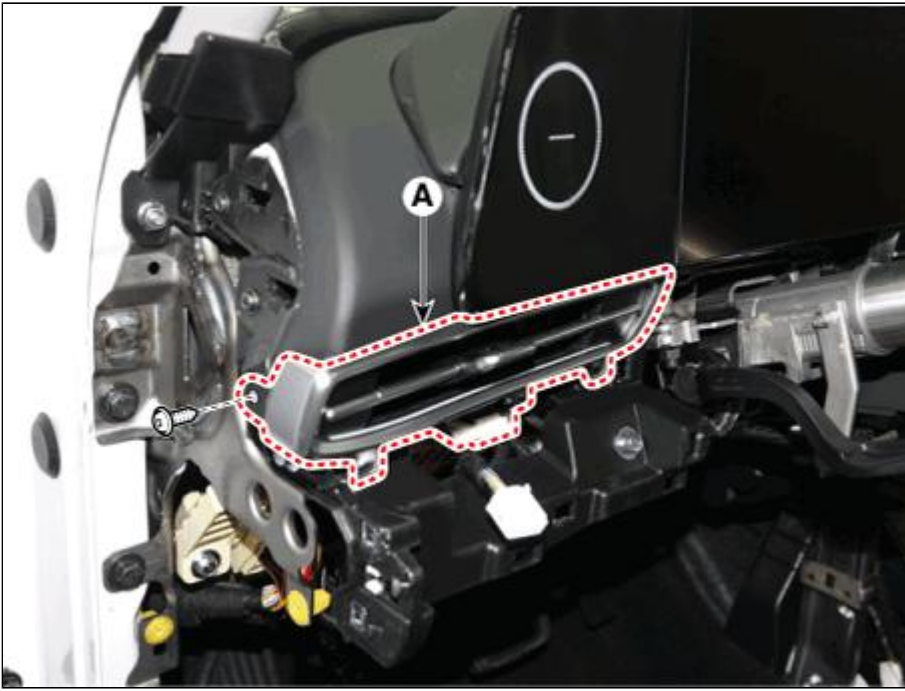

6. Disconnect the mood lamp connector (A).

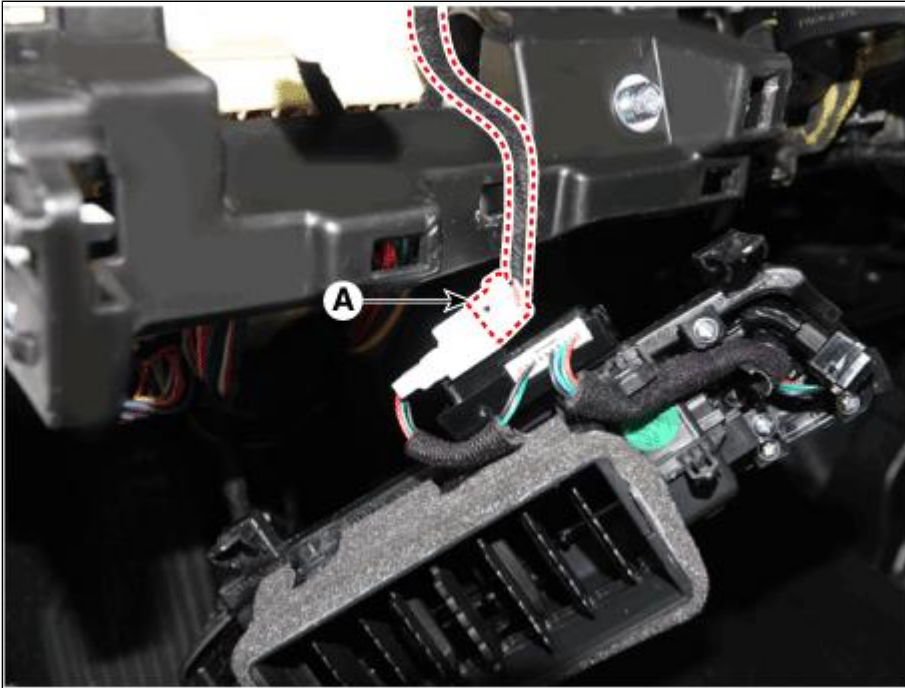


7. Loosen the mounting screw and connector and remove the crash pad mood lamp [LH] (A).



Crash pad mood lamp [RH]

1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad air vent [RH].
(Refer to Body - "Crash Pad Air Vent")
3. Loosen the mounting screws and remove the crash pad mood lamp [RH] (A).

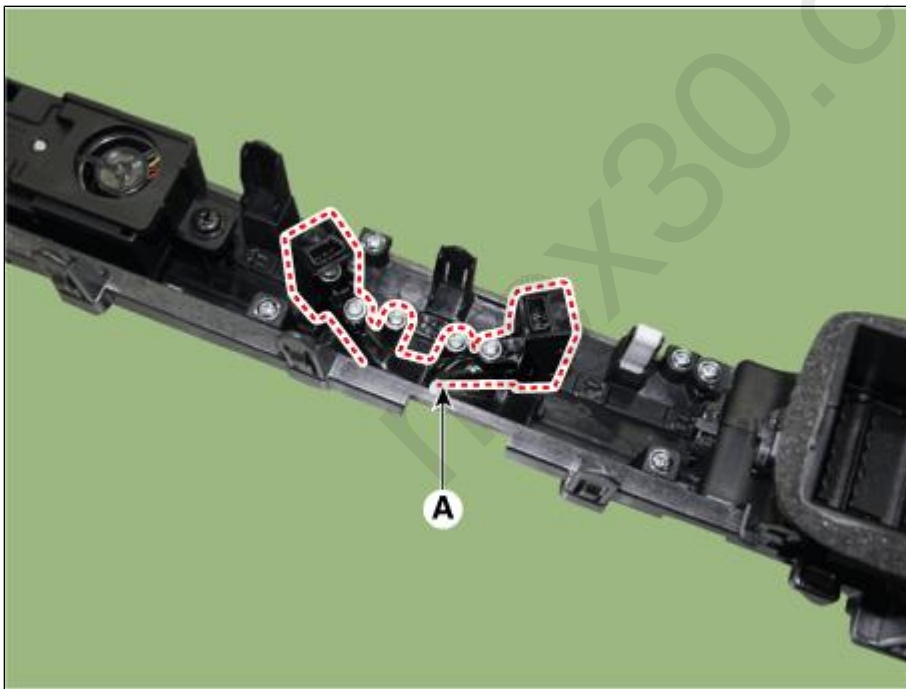

Installation

1. To install, reverse the removal procedure.

Rate this Document

- ☐ Document Type : SHOP
- ☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

☐ Little Value
 1 2 3 4 5 Excellent Value

