



Replacement

1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad lower panel (A).
(Refer to Body - "Crash Pad Lower Panel")
3. Loosen the mounting screw and remove the crash pad lower switch (A).

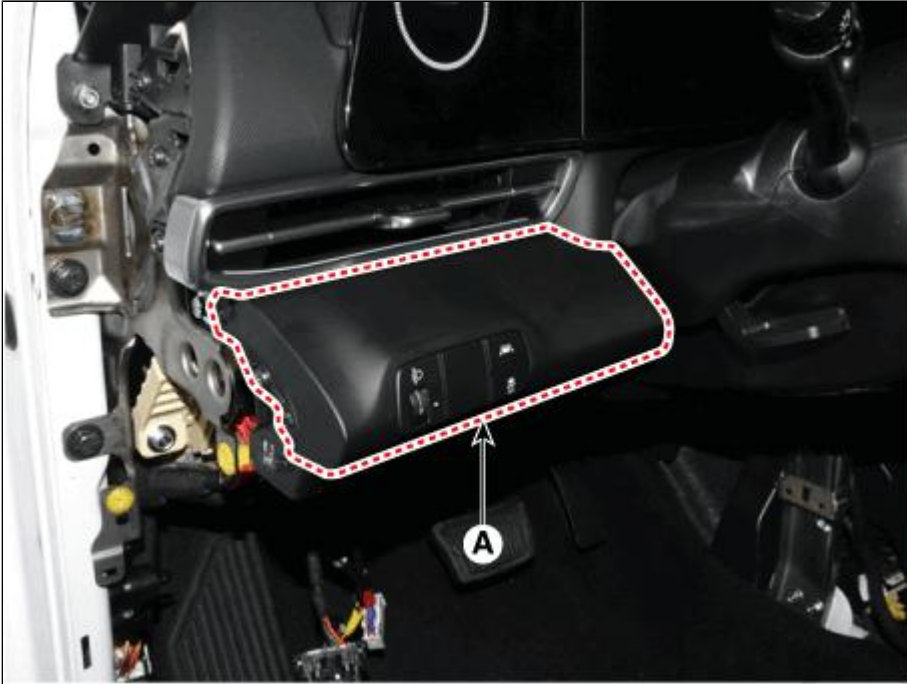

4. Disconnect the crash pad lower switch connector (A).

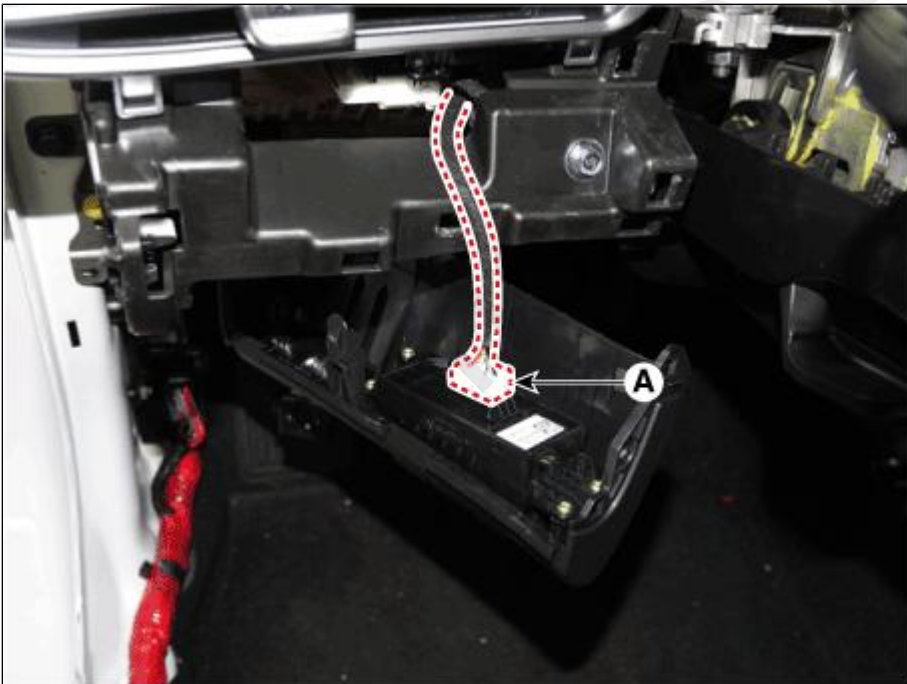

5. To install, reverse the removal procedure.

Rate this Document

☐ Document Type : SHOP

☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.



Little Value 1 2 3 4 5 Excellent Value

