


[Manual Transaxle Type]

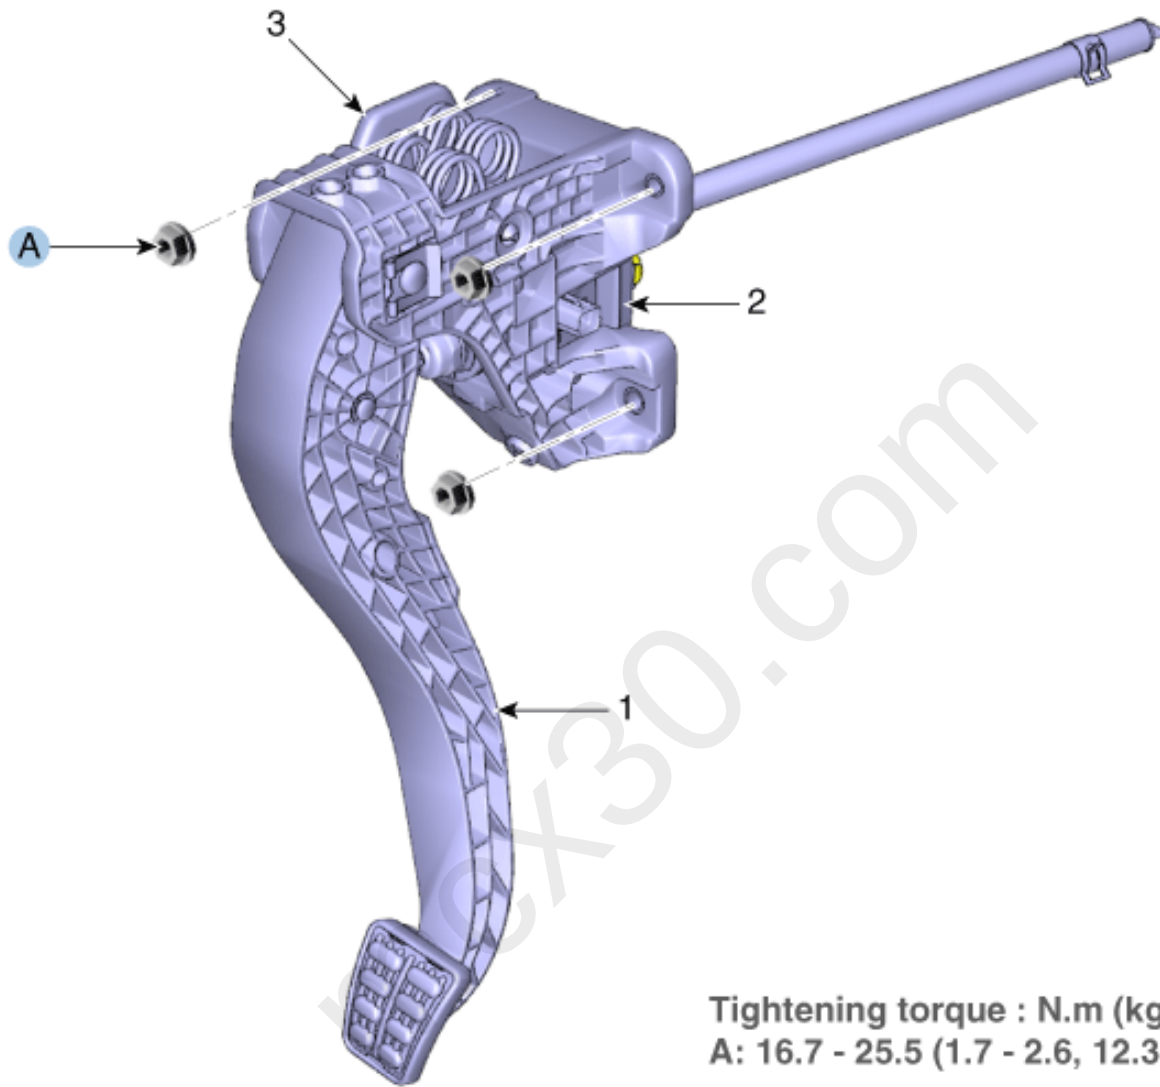


Tightening torque : N.m (kgf.m, lb-ft)
A: 16.7 - 25.5 (1.7 - 2.6, 12.3 - 18.8)

- 1. Clutch pedal arm
- 2. Clutch master cylinder

- 3. Clutch pedal assembly

Intelligent Manual Transaxle Type

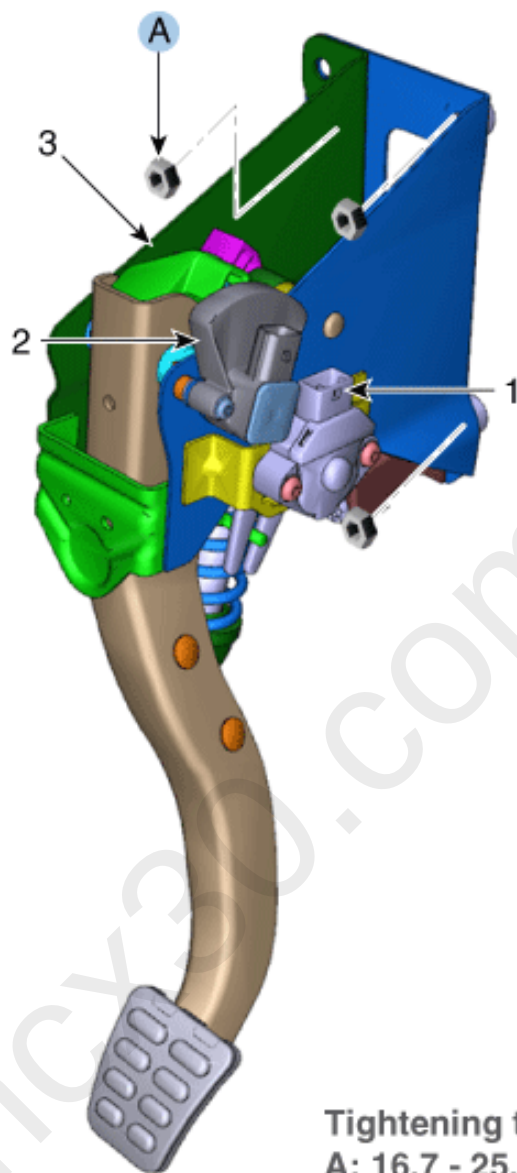

Tightening torque : N.m (kgf.m, lb-ft)
A: 16.7 - 25.5 (1.7 - 2.6, 12.3 - 18.8)


- 1. Ignition lock & clutch switch
- 2. Clutch pedal stroke sensor

- 3. Clutch pedal assembly


Removal

[Manual Transaxle Type]

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Remove the air cleaner assembly and air duct.
(Refer to In case by Gasoline 1.6 T-GDI System - "Air Cleaner")
(Refer to In case by Diesel 1.6 TCI System - "Air Cleaner")
(Refer to In case by Gasoline 2.0 MPI System - "Air Cleaner")
3. Remove the battery and battery tray.
(Refer to In case by Gasoline 1.6 T-GDI System - "Battery")
(Refer to In case by Diesel 1.6 TCI System - "Battery")
(Refer to In case by Gasoline 2.0 MPI System - "Battery")
4. Pull the snap pin (A) and then separate the clutch regulator (B).
5. Separate the reservoir hose (C).

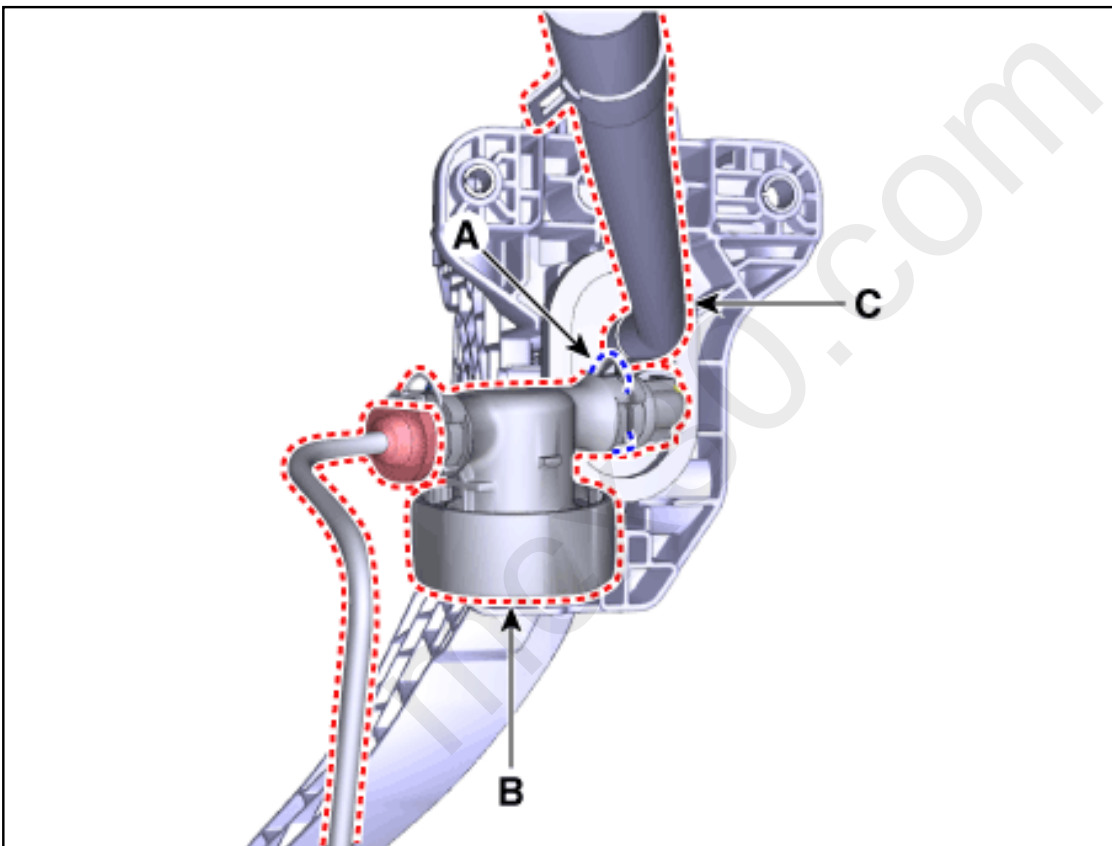


6. Disconnect the ignition lock & clutch switch connector (A).

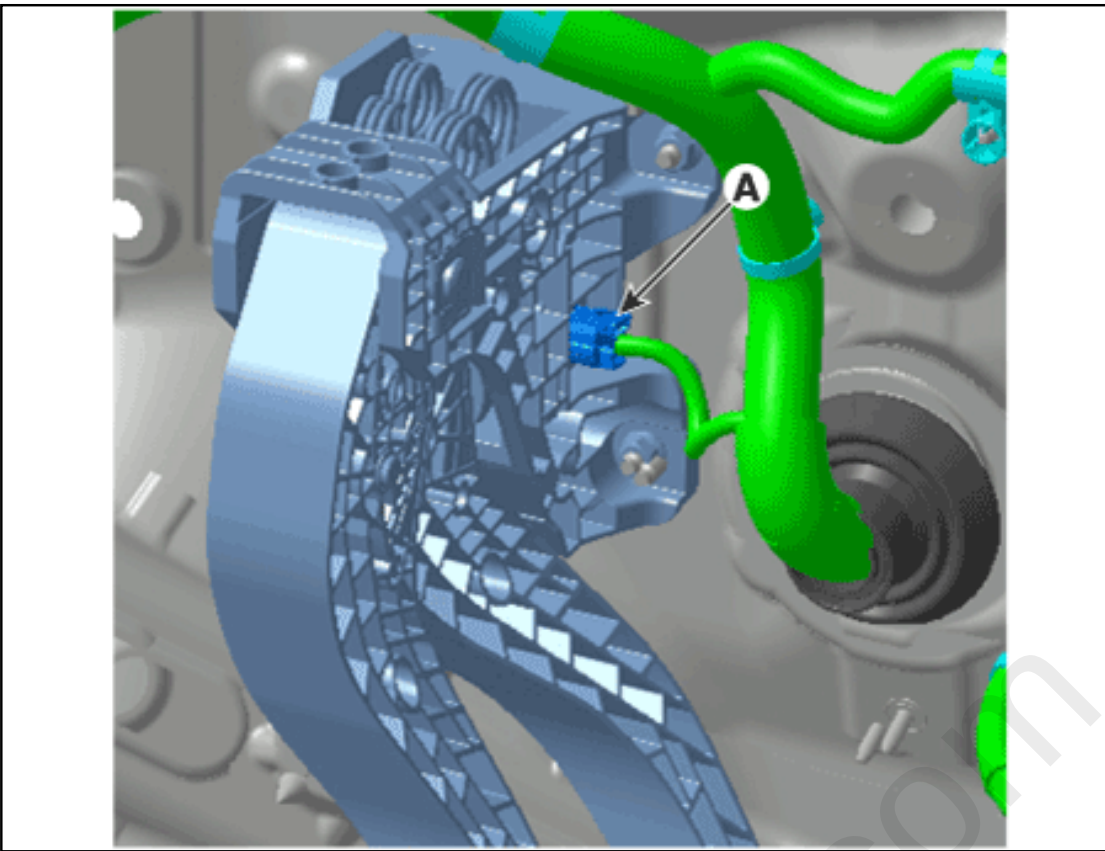

7. Loosen the nuts (A) and then removing the clutch pedal.


Tightening torque :

16.7 - 25.5 N.m (1.7 - 2.6 kgf.m, 12.3 - 18.8 lb-ft)

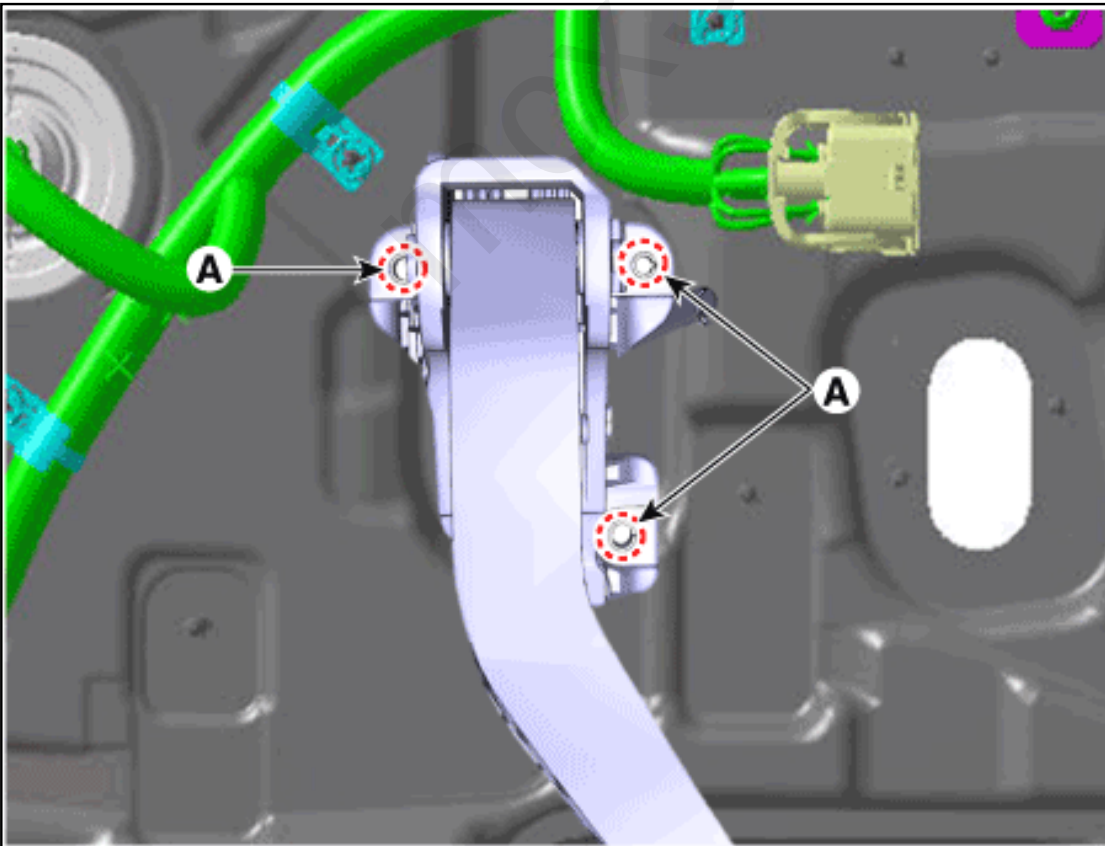

[Intelligent Manual Transaxle Type]


8. Turn ignition switch OFF and disconnect the negative (-) battery cable.
9. Disconnect the ignition lock & clutch switch (A) and clutch pedal stroke sensor connector (B).

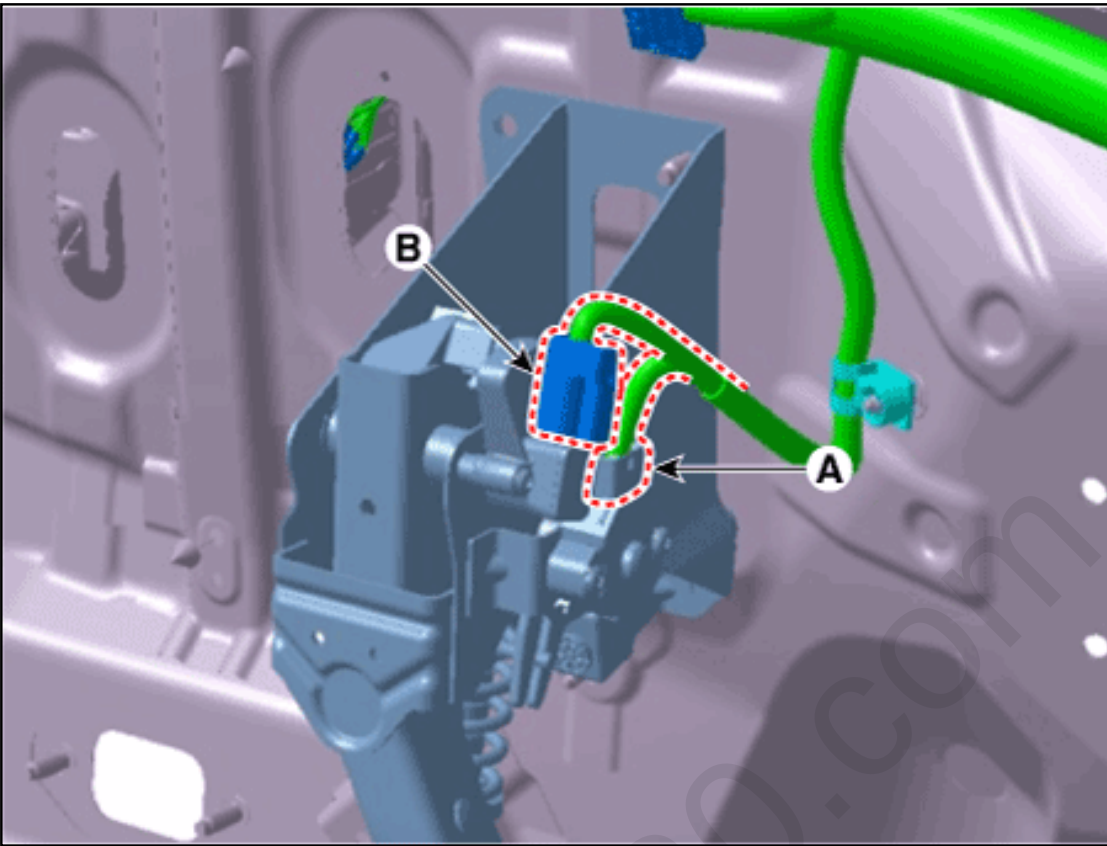

10. Loosen the nuts and then removing the clutch pedal (A).

Tightening torque :

16.7 - 25.5 N.m (1.7 - 2.6 kgf.m, 12.3 - 18.8 lb-ft)

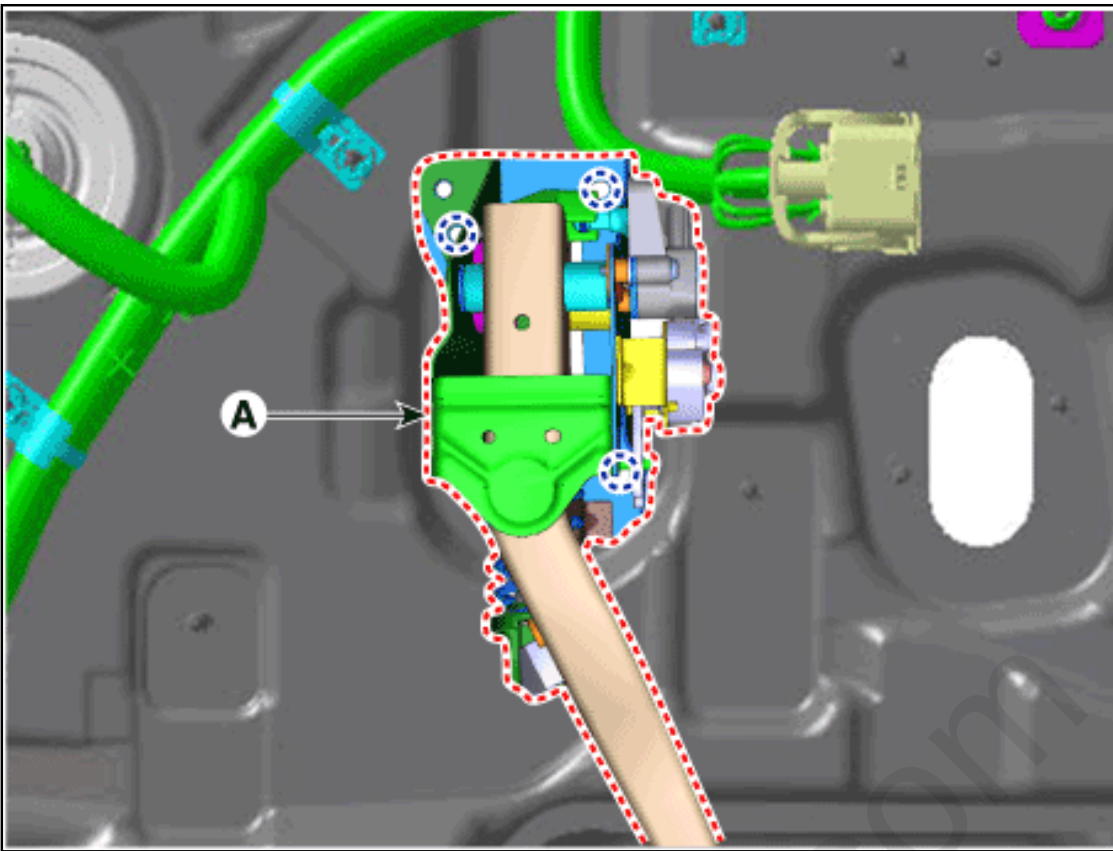

Installation

1. To install, reverse the removal procedures.
2. Perform bleeding air procedure in concentric slave cylinder after pouring the brake fluid.
(Refer to Clutch System - "Concentric Slave Cylinder Assembly")