

Removal


1. Turn ignition switch OFF and then disconnect the battery (-) cable.
2. Remove the floor console assembly.
(Re fer to Body (Interior and Exterior) - " Floor Console")
3. Remove the floor air duct (A).




4. Separate the wiring clips (A, B).



5. Remove the snap pin (A) in the arrow "F" direction.

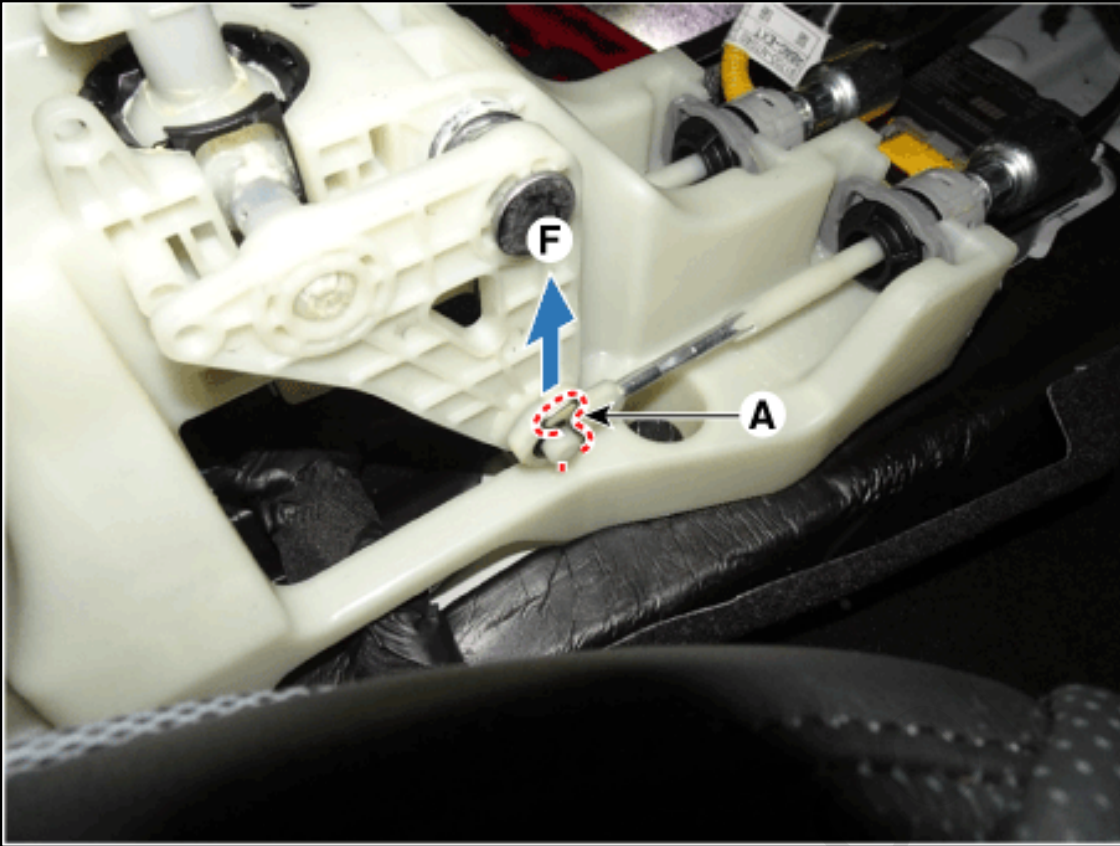


6. Separate the select cable end (A) in the arrow "F" direction.

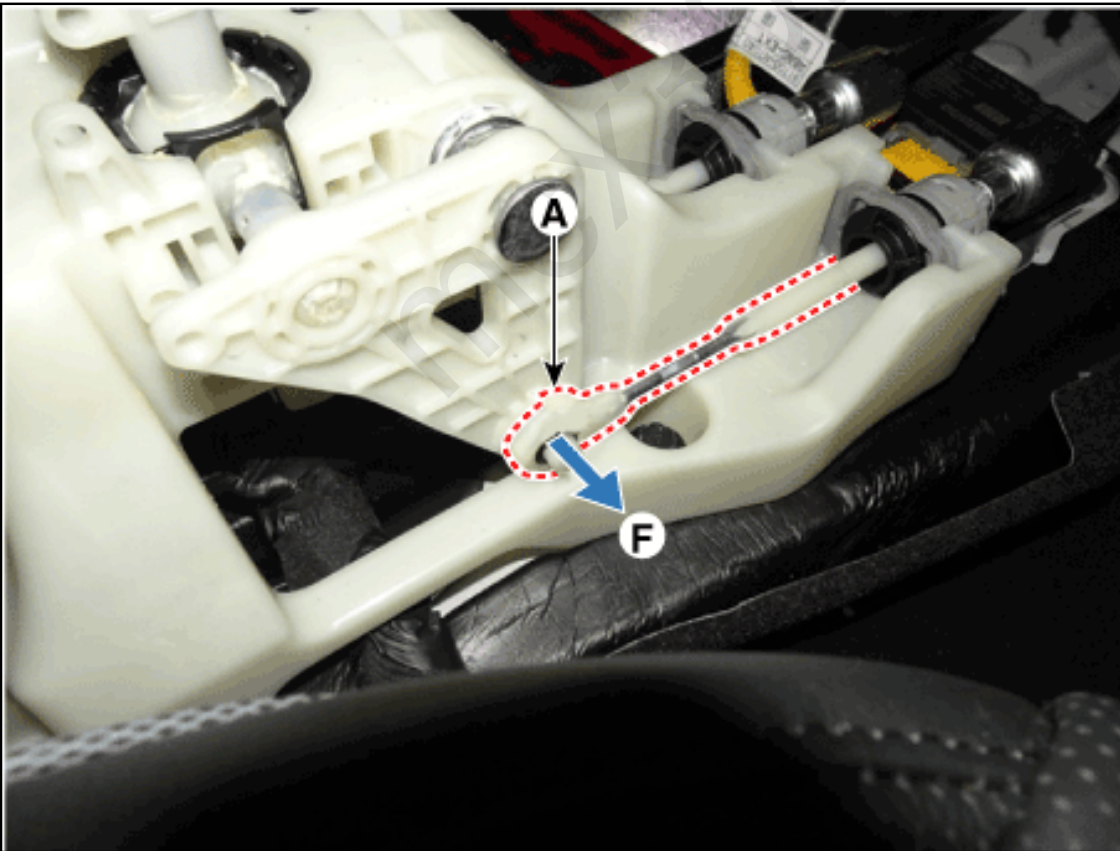


7. Separate the select cable socket.

(1) Pull the select cable socket clip (A) in the arrow "F" direction.

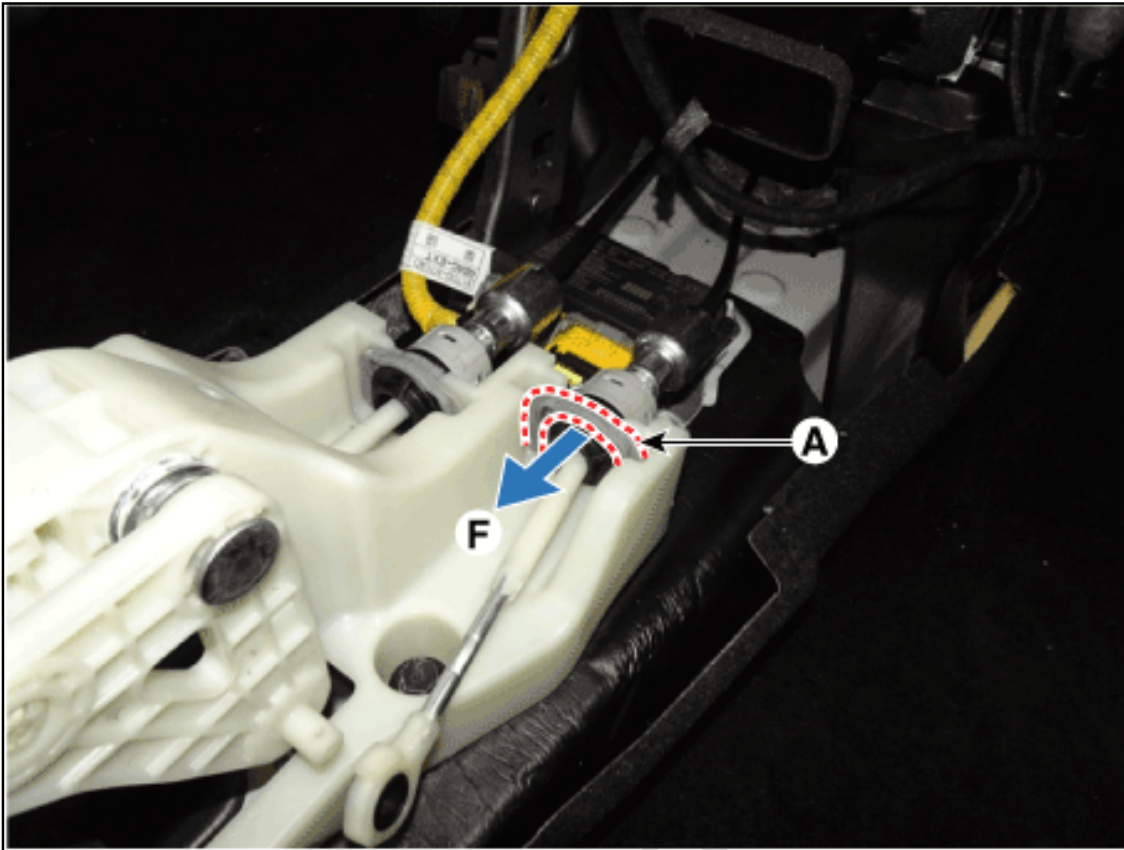


(2) Pull the select cable socket (A) in the arrow "F" direction.

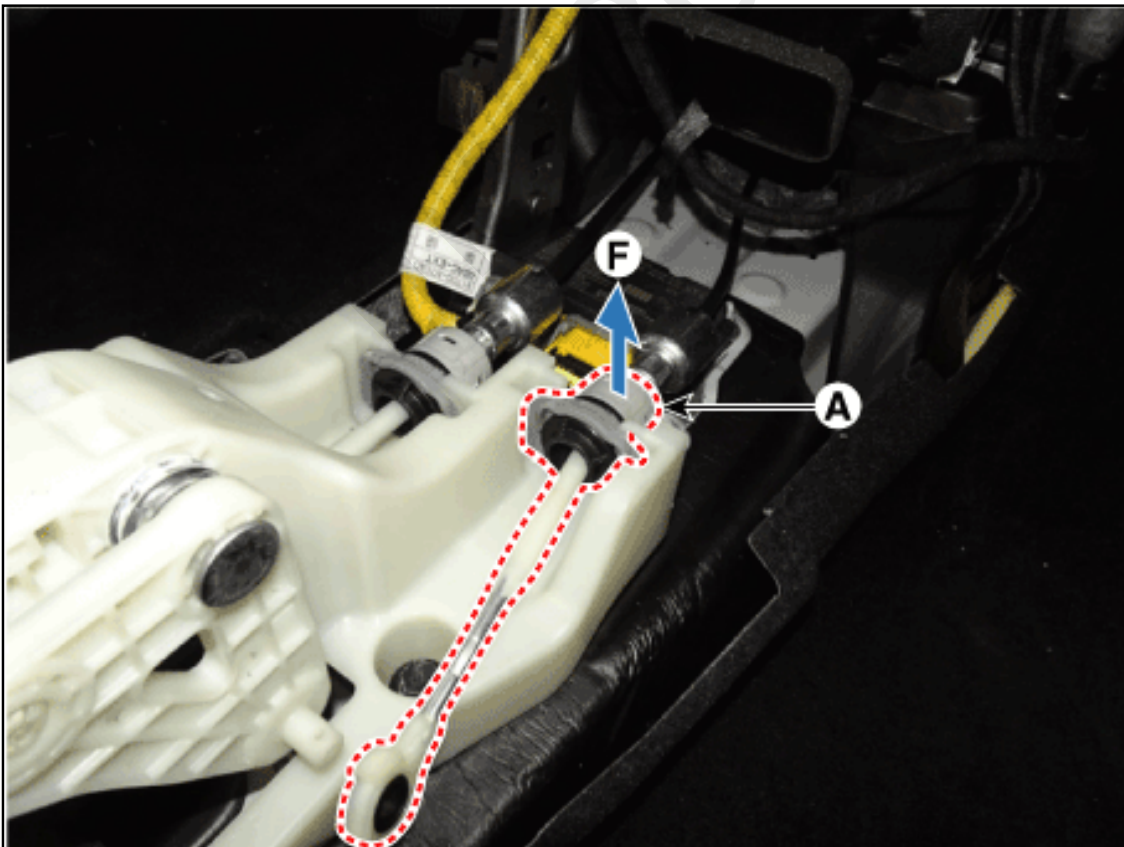


8. Separate the shift cable socket.

(1) Pull the shift cable socket clip (A) in the arrow "F" direction.

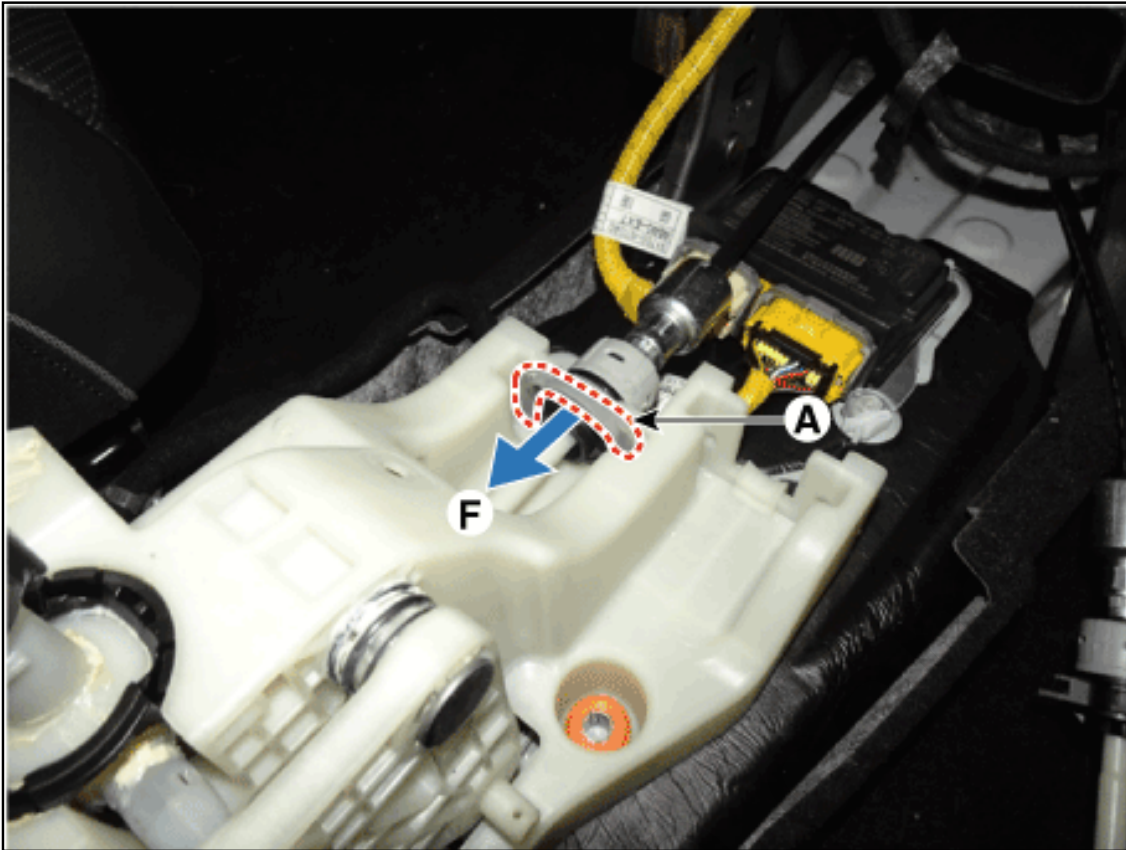


(2) Pull the shift cable socket (A) in the arrow "F" direction.

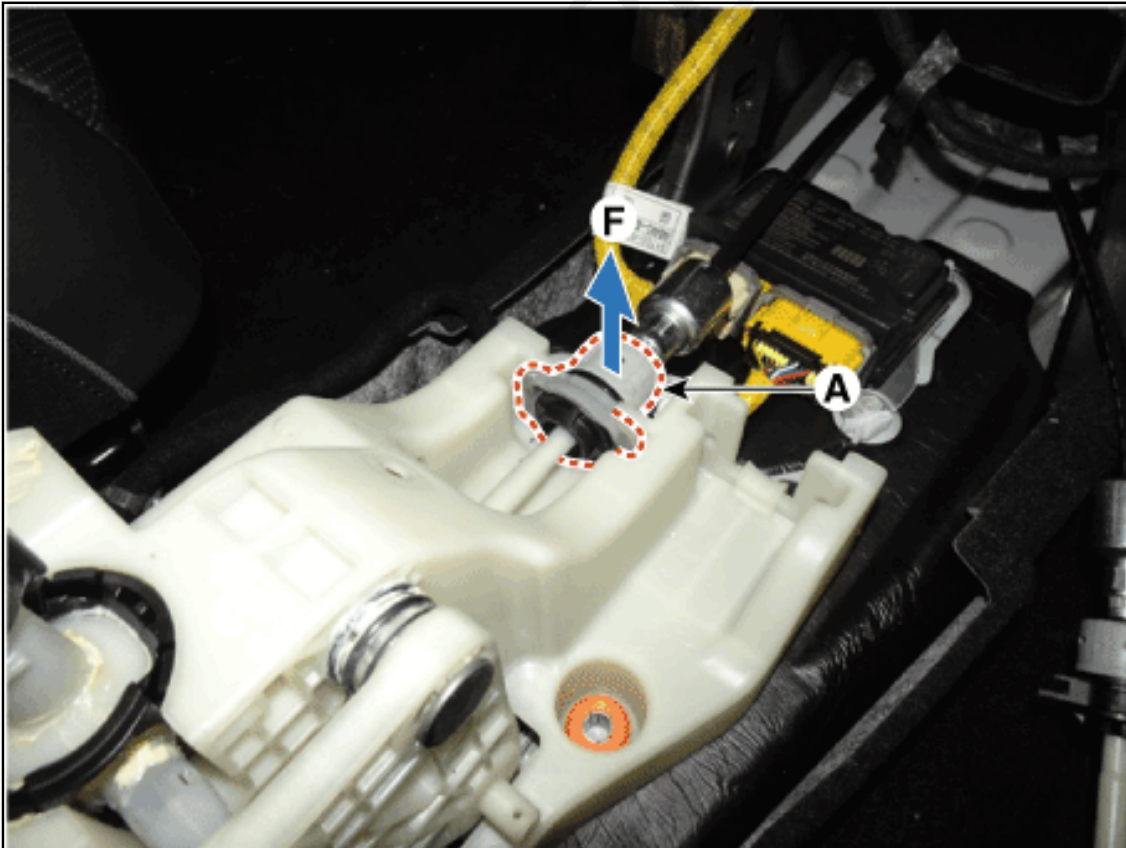


9. Loosen the bolts and then separate the shift lever (A).

Tightening torque :


8.8 - 13.7 N.m (0.9 - 1.4 kgf.m, 6.5 - 10.1 lb-ft)

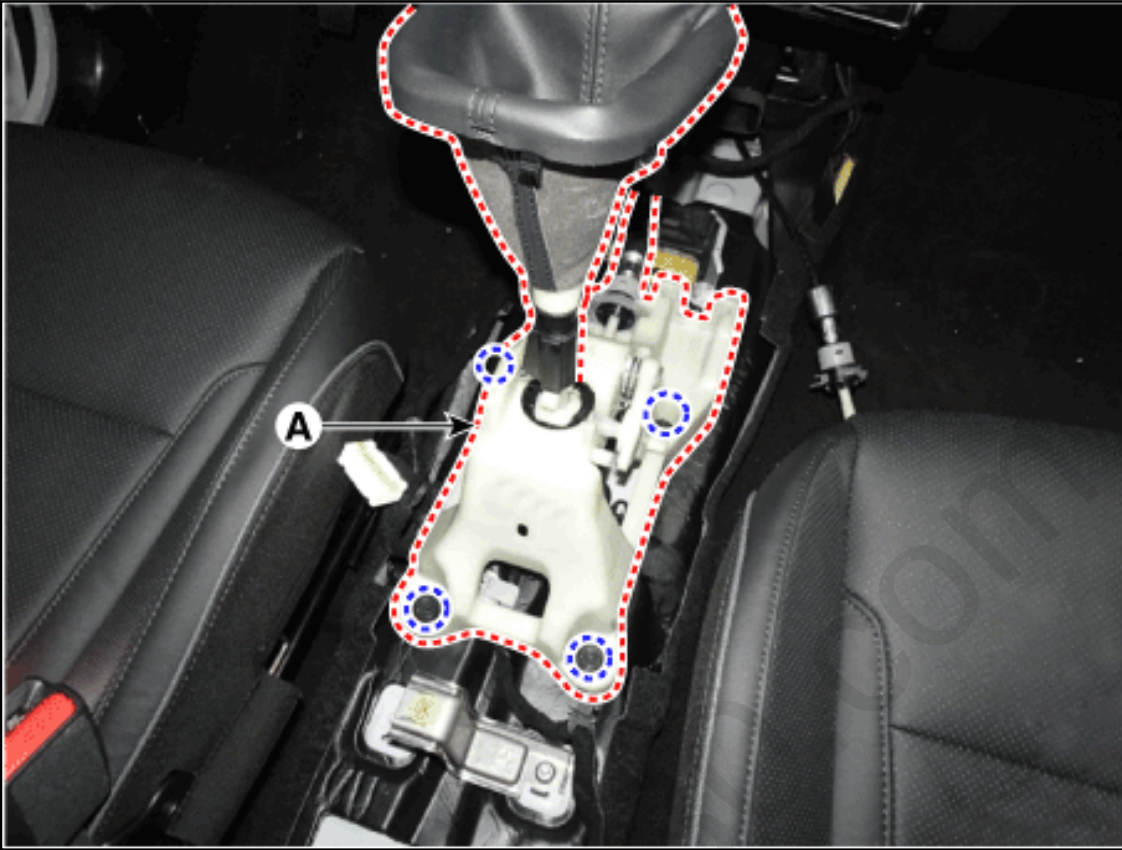

10. Remove the clip, in the shape of a "U"(A), from the shift cable end by spreading it towards both sides.

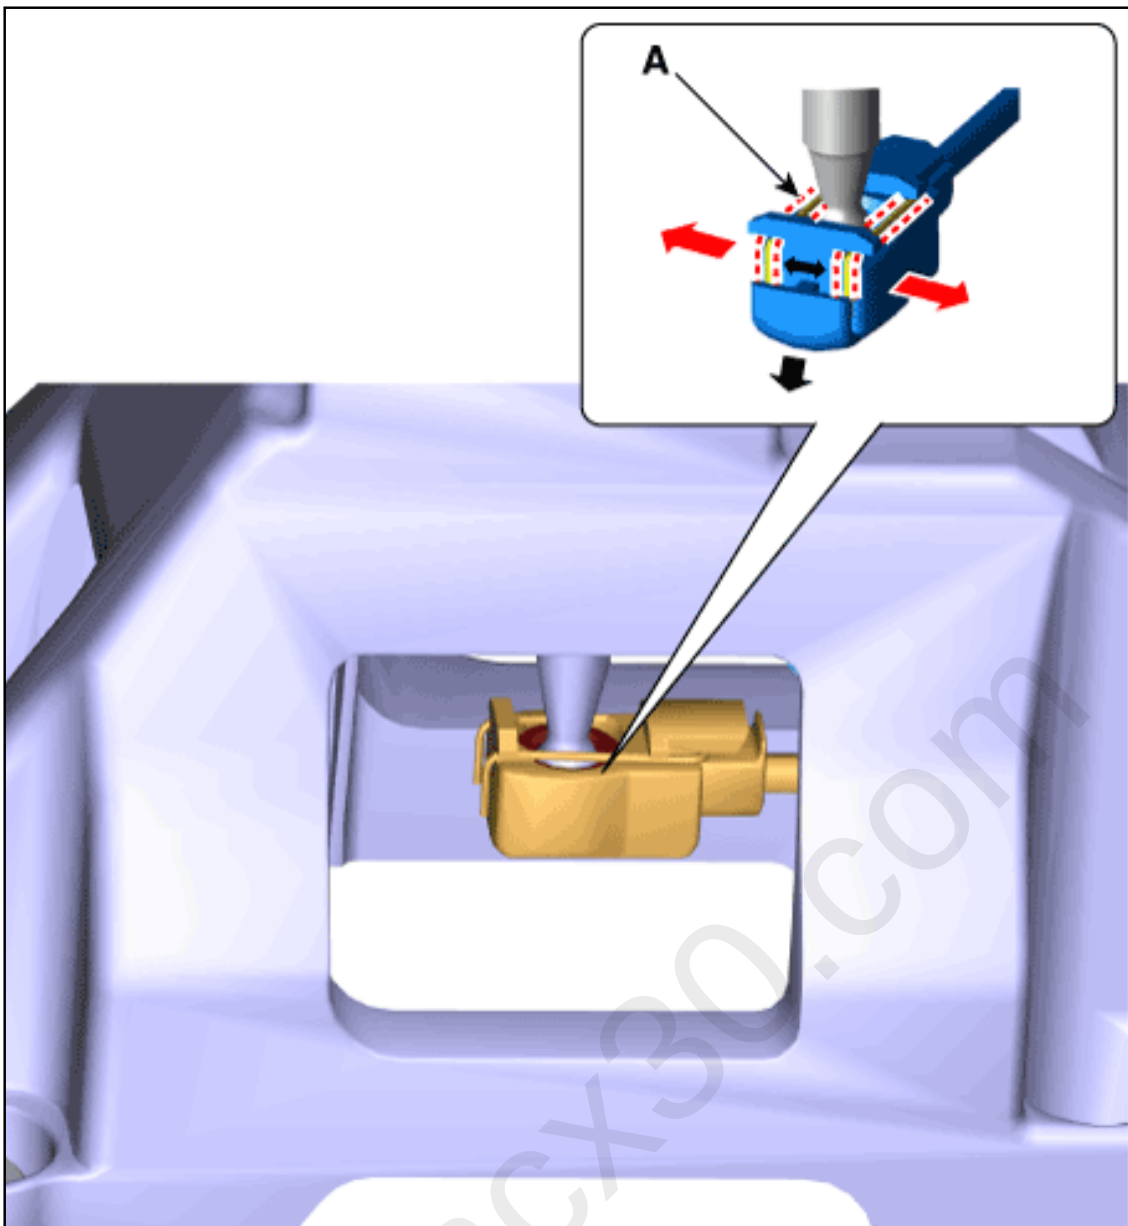

11. Remove the shift lever (A) from shift cable end.

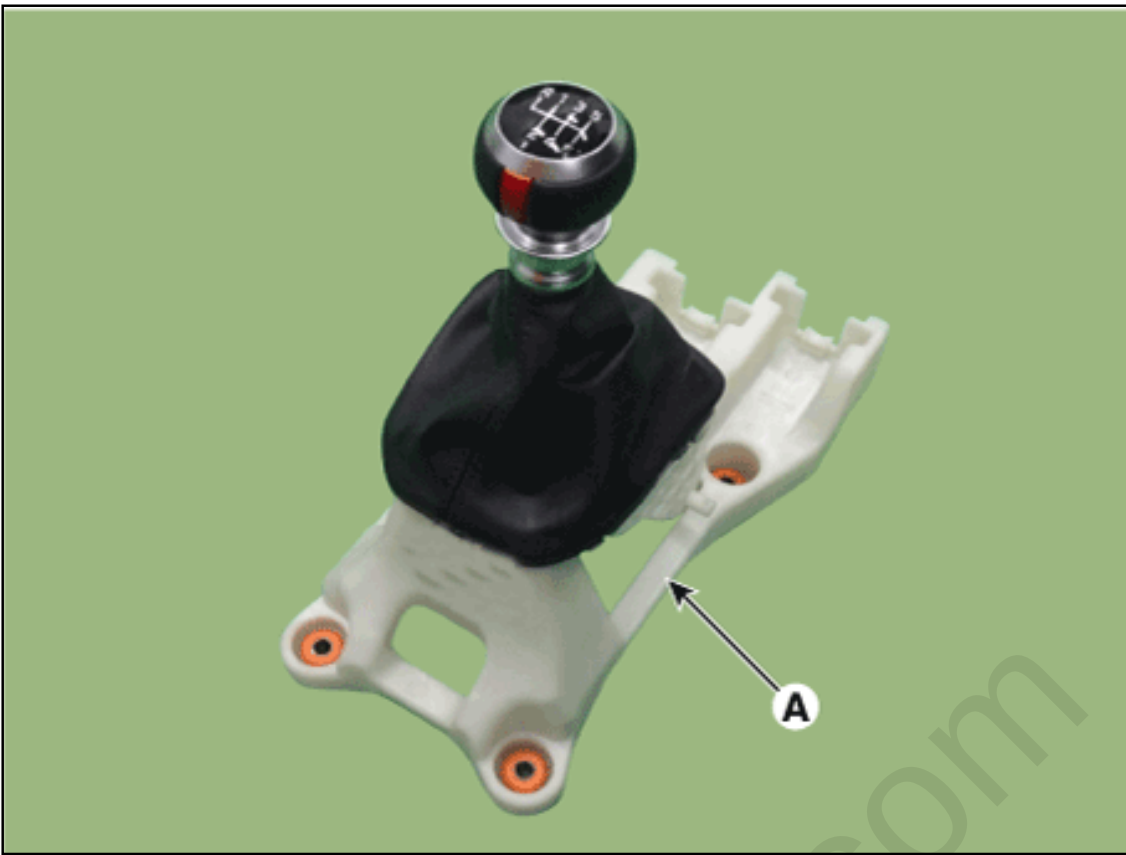

Installation

1. To install, reverse the removal procedures.



- New shift lever assembly is mounted in the 4th fixing pin.
- After installation, remove the 4th fixed pin.
- Check operating of lever of transaxle side when operating shift lever after assembly. (1~6,R)