



Removal

1. Turn OFF ignition switch and disconnect the negative (-) battery cable.
2. Remove the air duct and air cleaner assembly.
(Refer to Engine Mechanical System - "Air Cleaner")
3. Remove the battery and battery tray.
(Refer to Engine Electrical System - "Battery")
4. Remove the control cable.
 - (1) Remove the snap pin (A).
 - (2) Separate the select cable (B) and then shift cable (C).

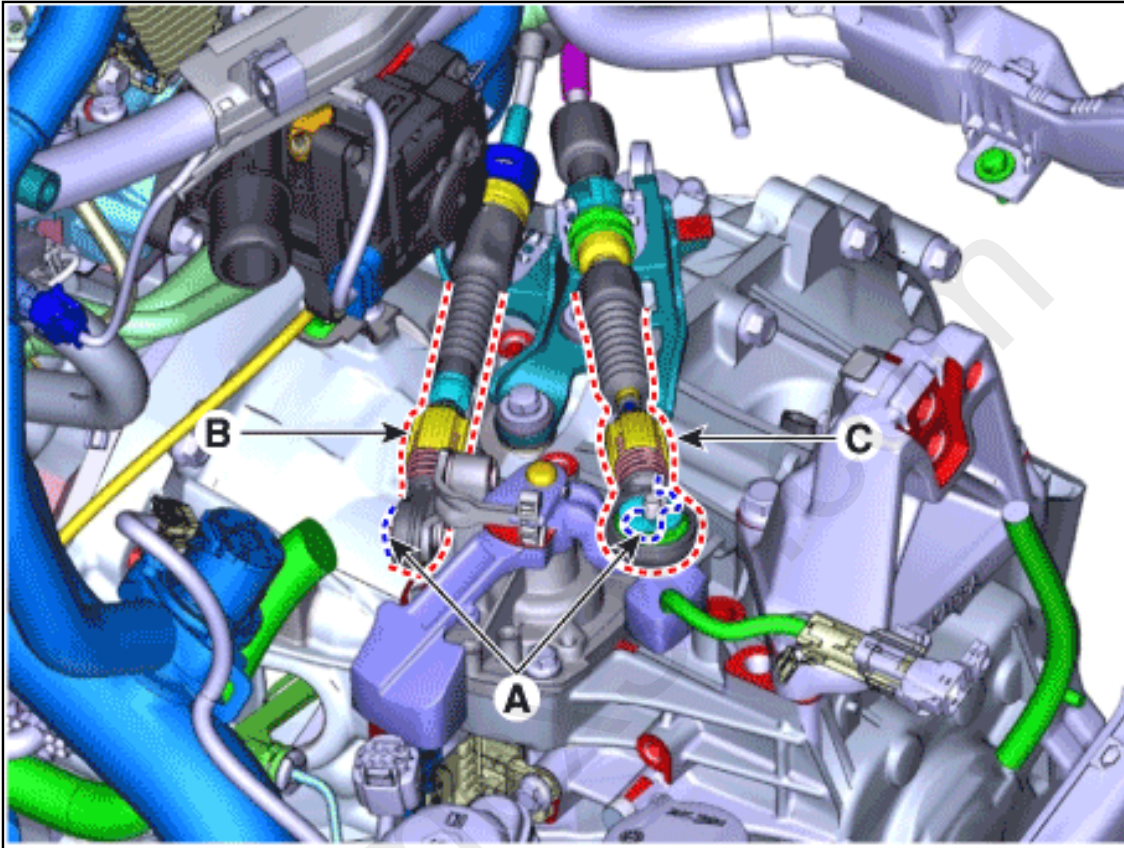

5. Remove the shift lever.
(Refer to Manual Transaxle Control System - "Shift Lever")
6. Loosen the nuts (A) and then removing the control cable retainer (B).S

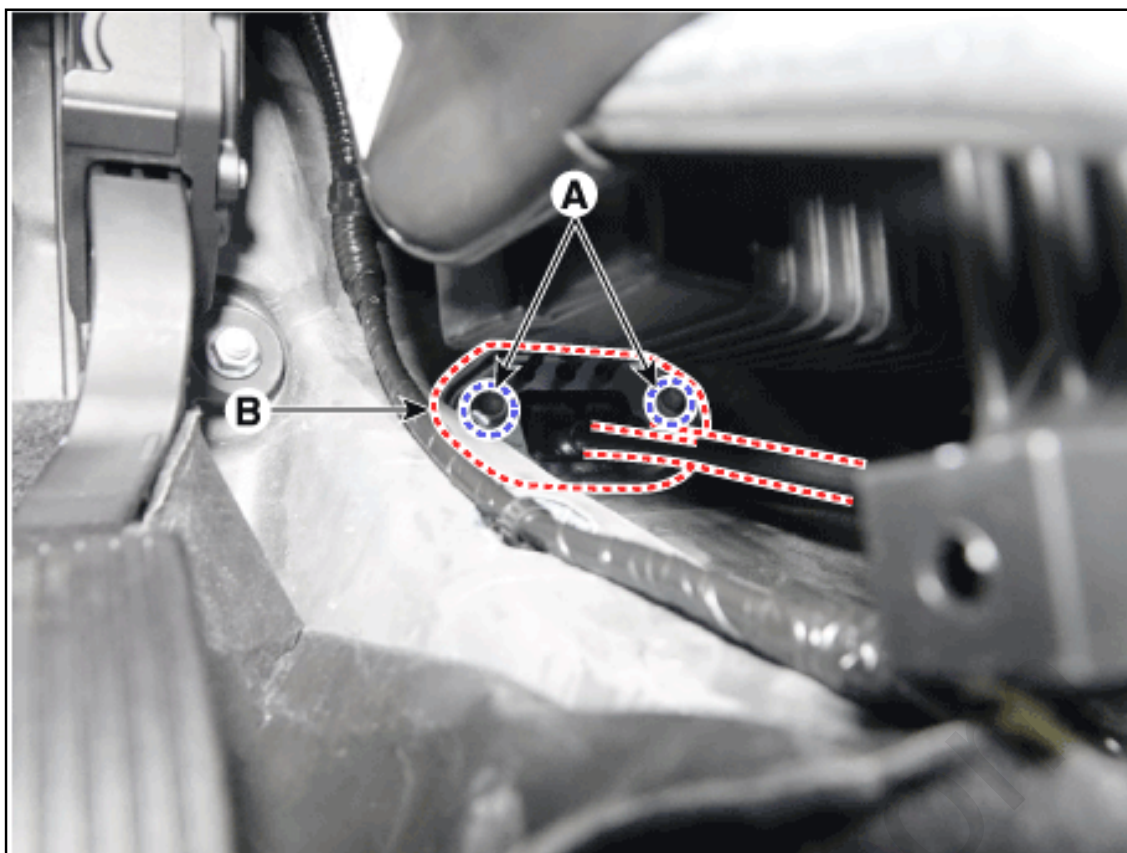


7. Remove the control cable from vehicle.

Installation




- Check if the 4th fixing pin (A) is installed.

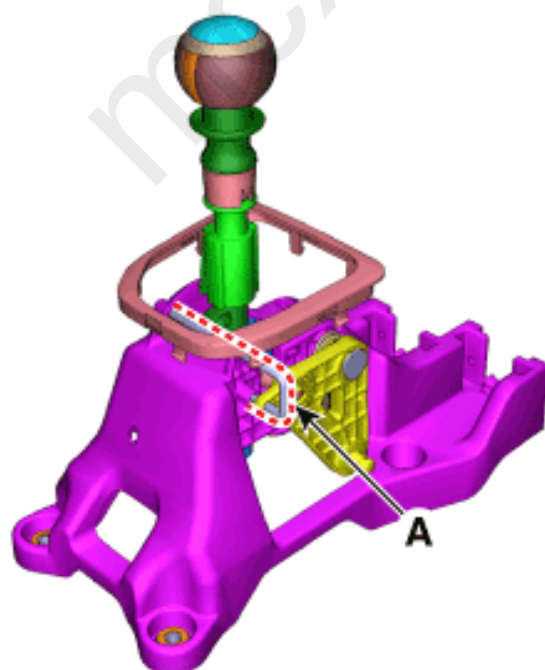


1. Install the control cable retainer (B) and then tightening the nuts (A).

Tightening torque:

11.8 - 14.7 N.m (1.2 - 1.5 kgf.m, 8.7 - 10.8 lb-ft)

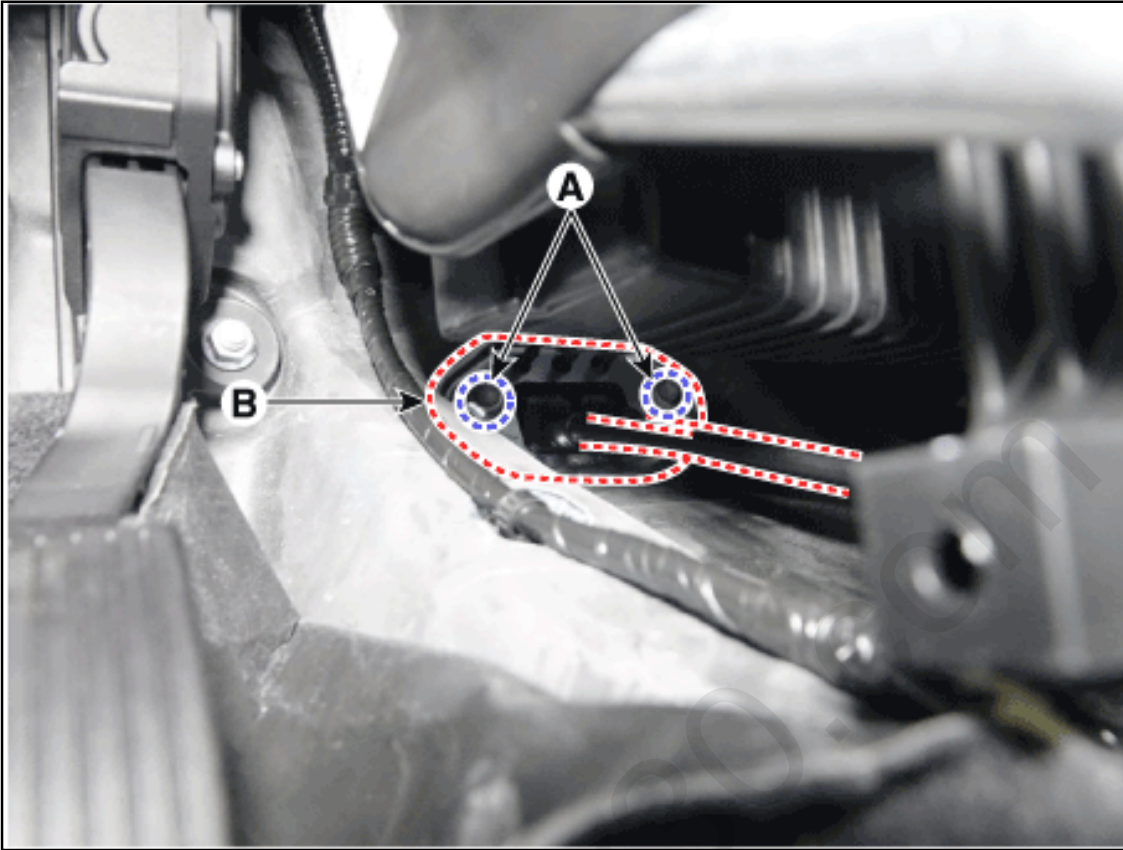

2. Install the clip, in the shape of a "U"(A), from the cable end by spreading it towards both sides.

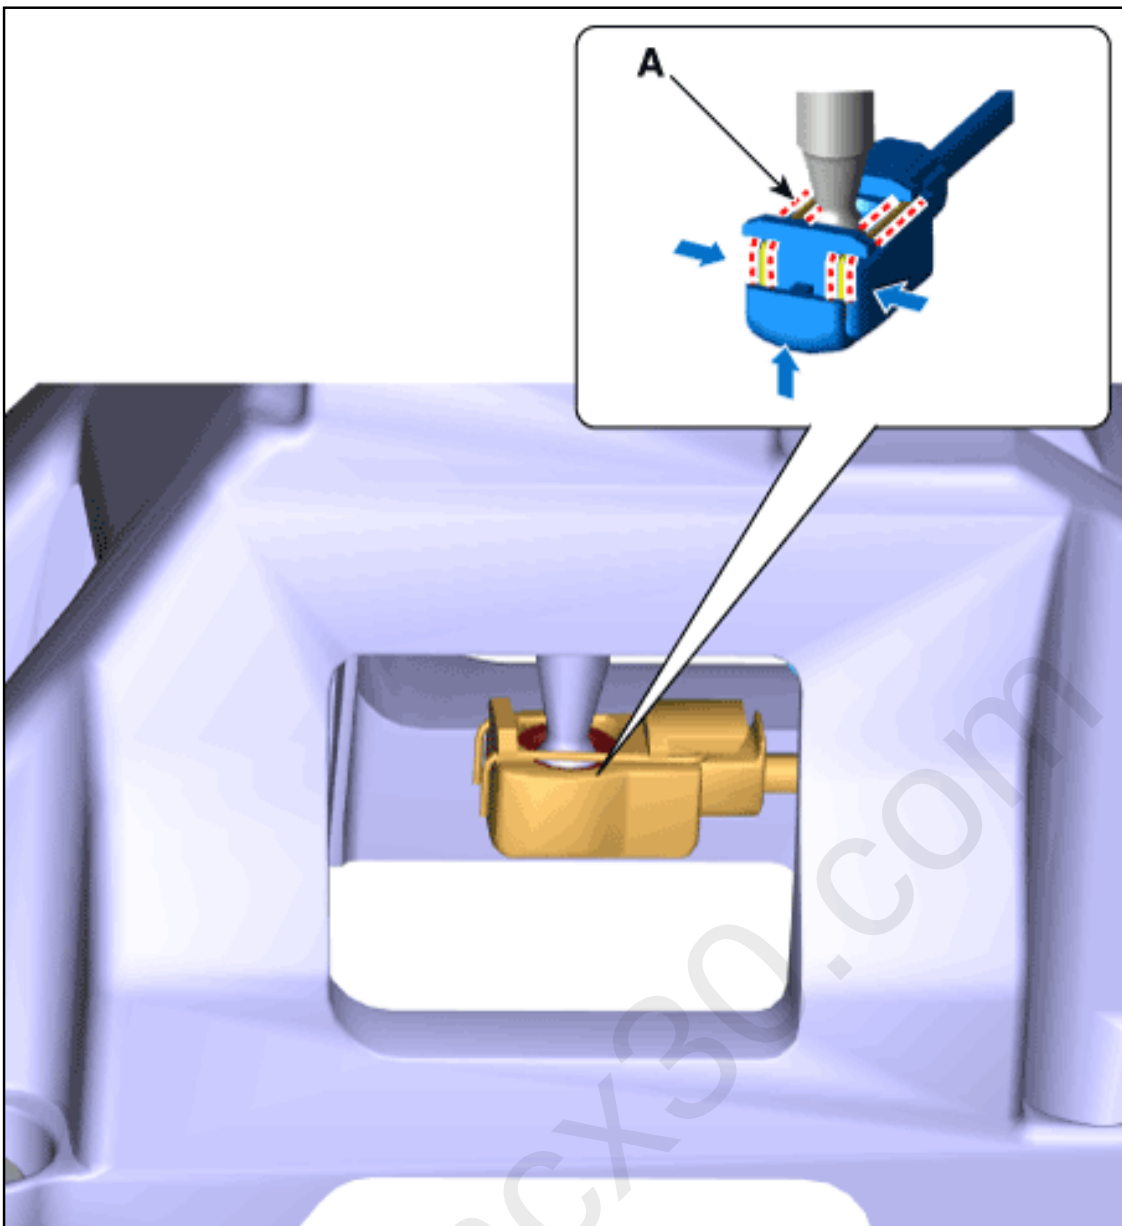


3. Install the shift lever (A) after tightening the bolts.

Tightening torque :


8.8 - 13.7 N.m (0.9 - 1.4 kgf.m, 6.5 - 10.1 lb-ft)




4. Insert the shift cable socket (A) in the "F" direction.

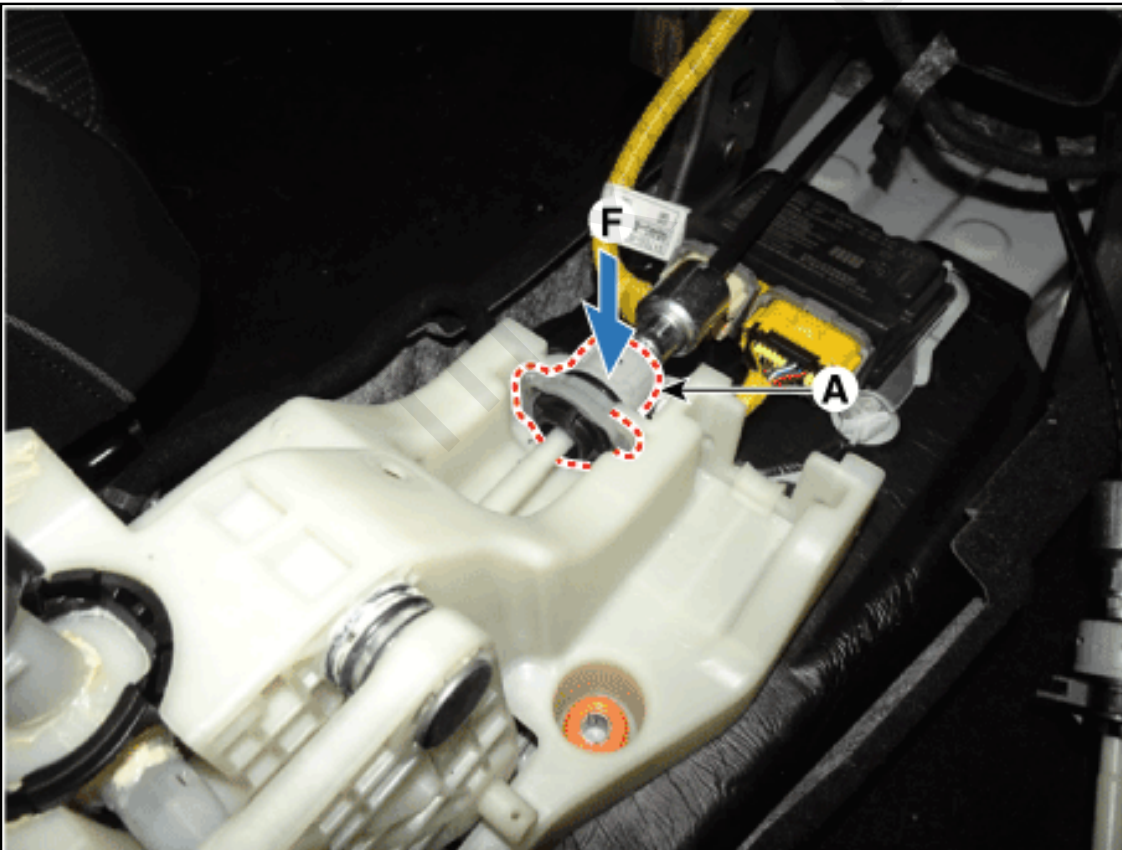


5. Insert the select cable socket (A) in the "F" direction.

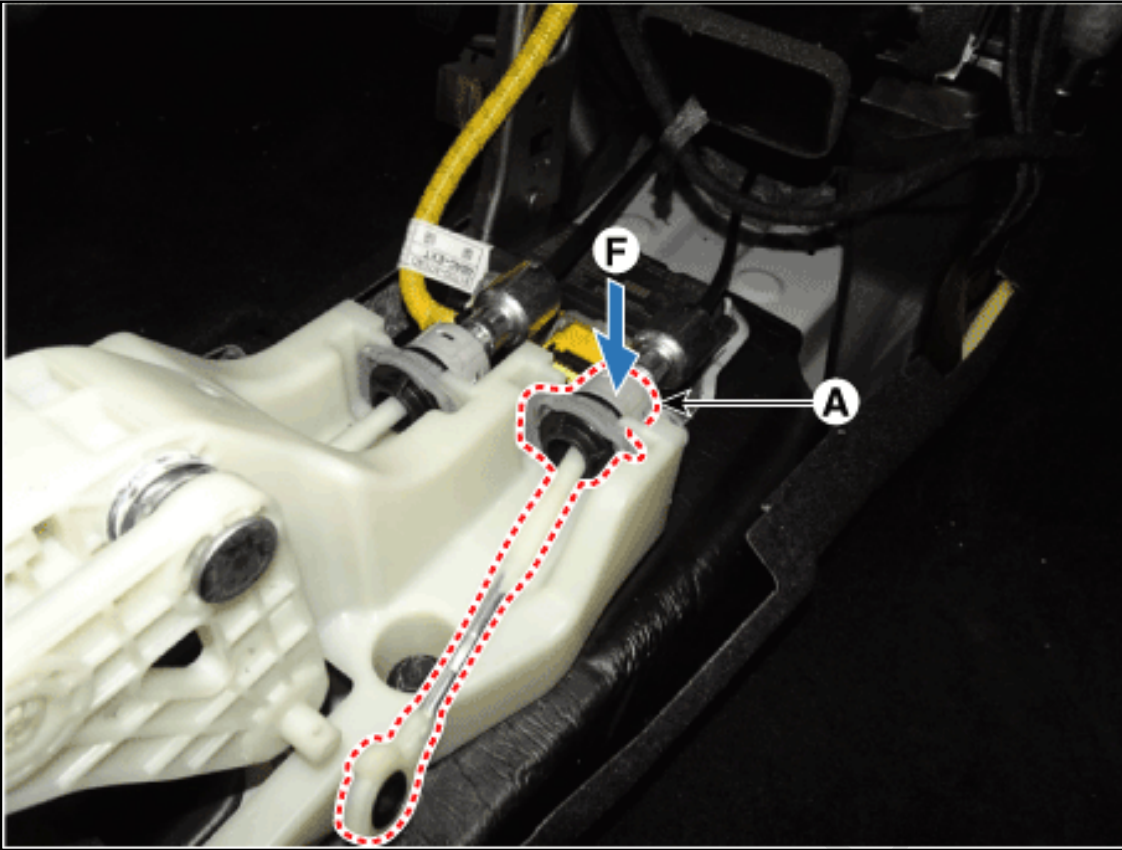


6. Insert the select cable end (A) in the "F" direction.

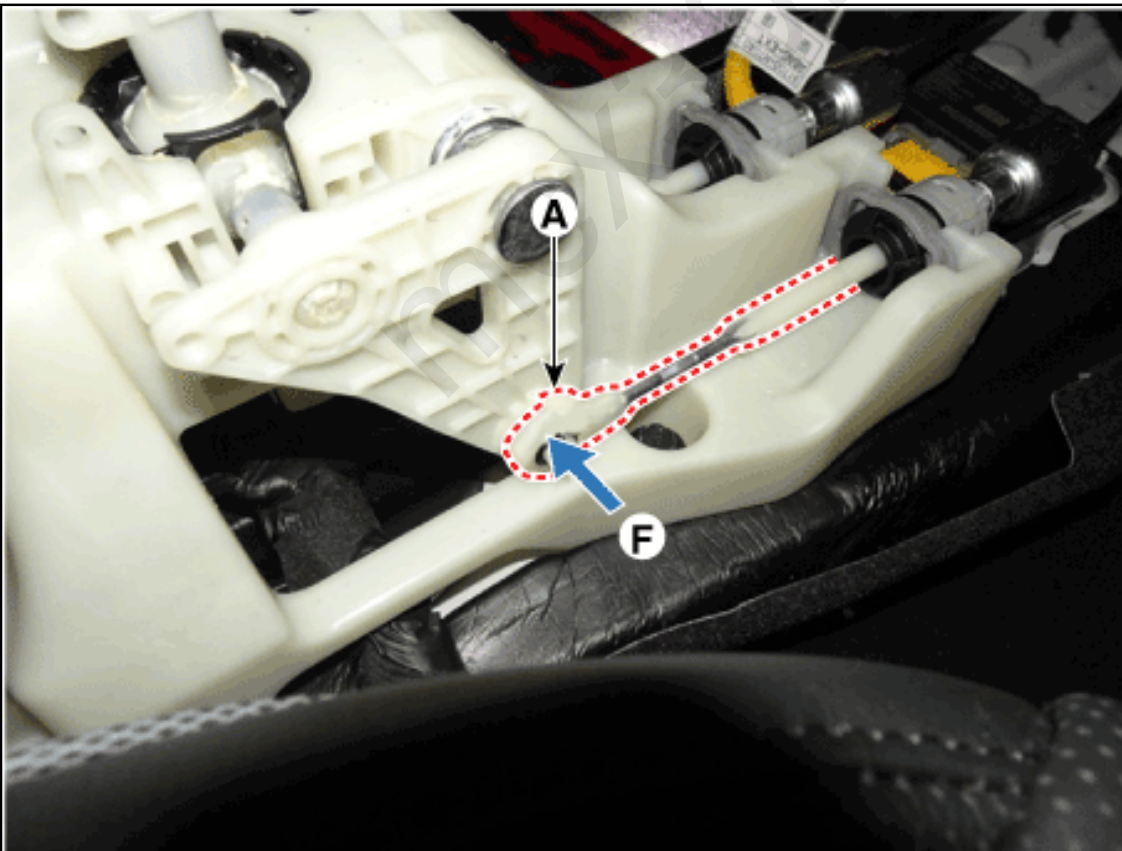

7. Insert the snap pin (A) in the "F" direction.

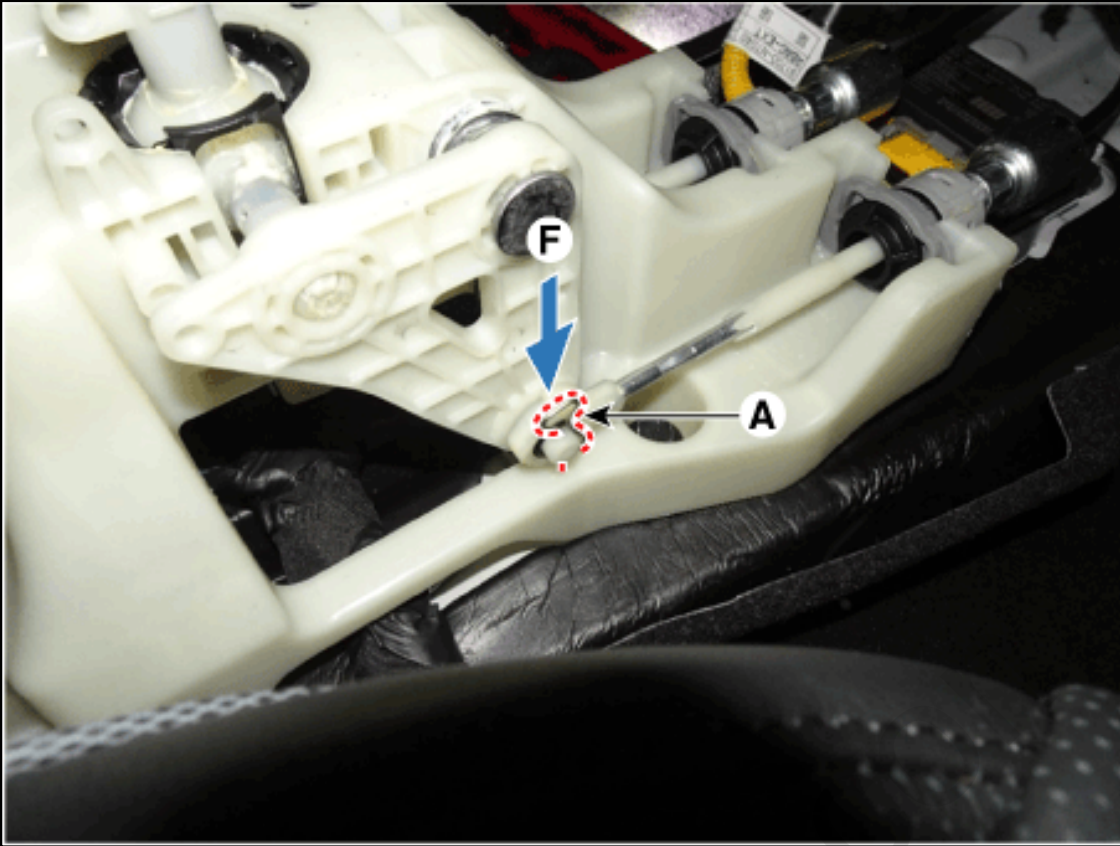


8. Move the adjust locking button (B) in the direction of "F" with pulling the holder (A) in the direction of "P".

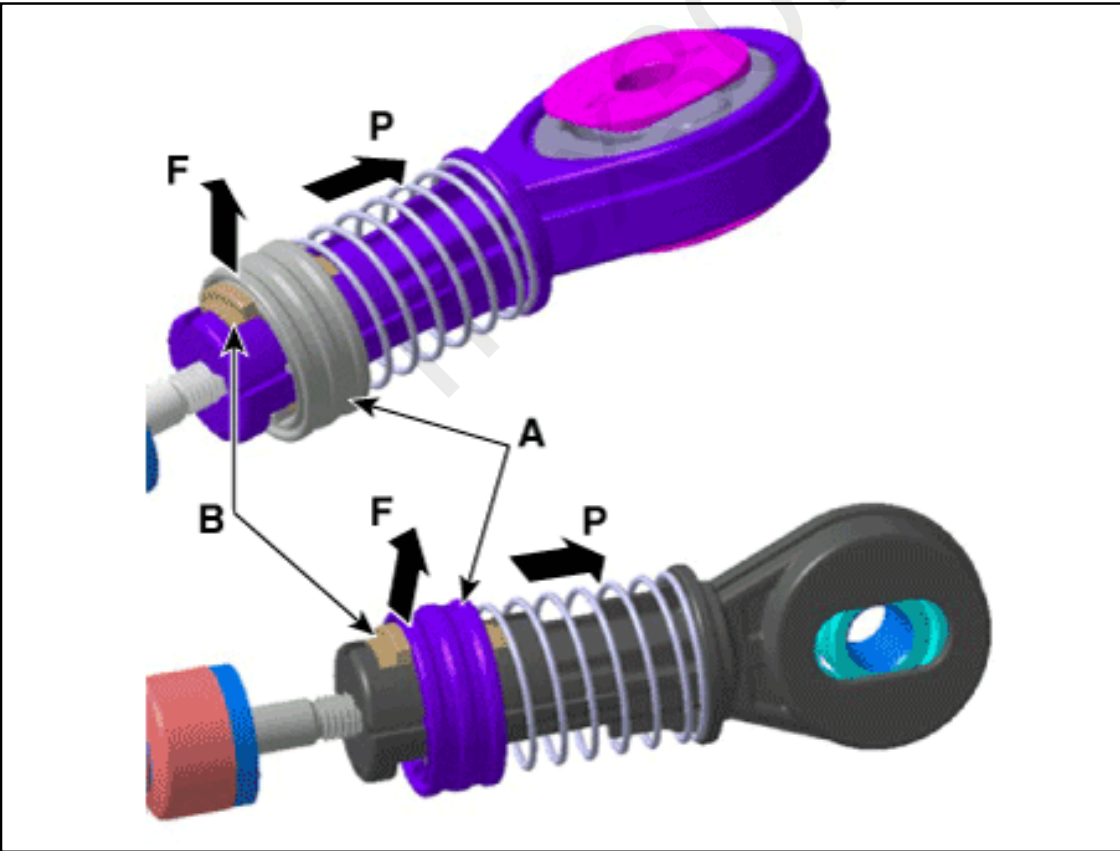


9. Install the control cable.



- Replace the cable clip with new clip.

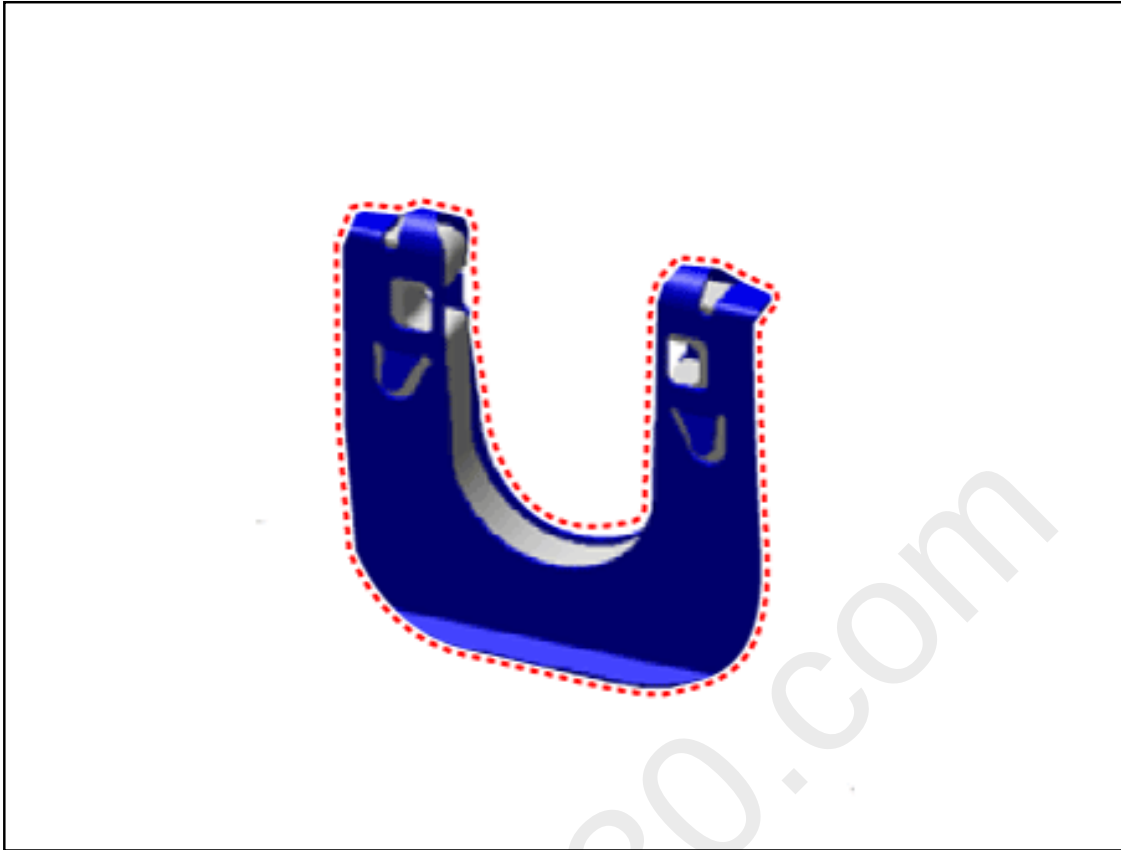


- Insert the control cable (A) correctly into the bracket (B).

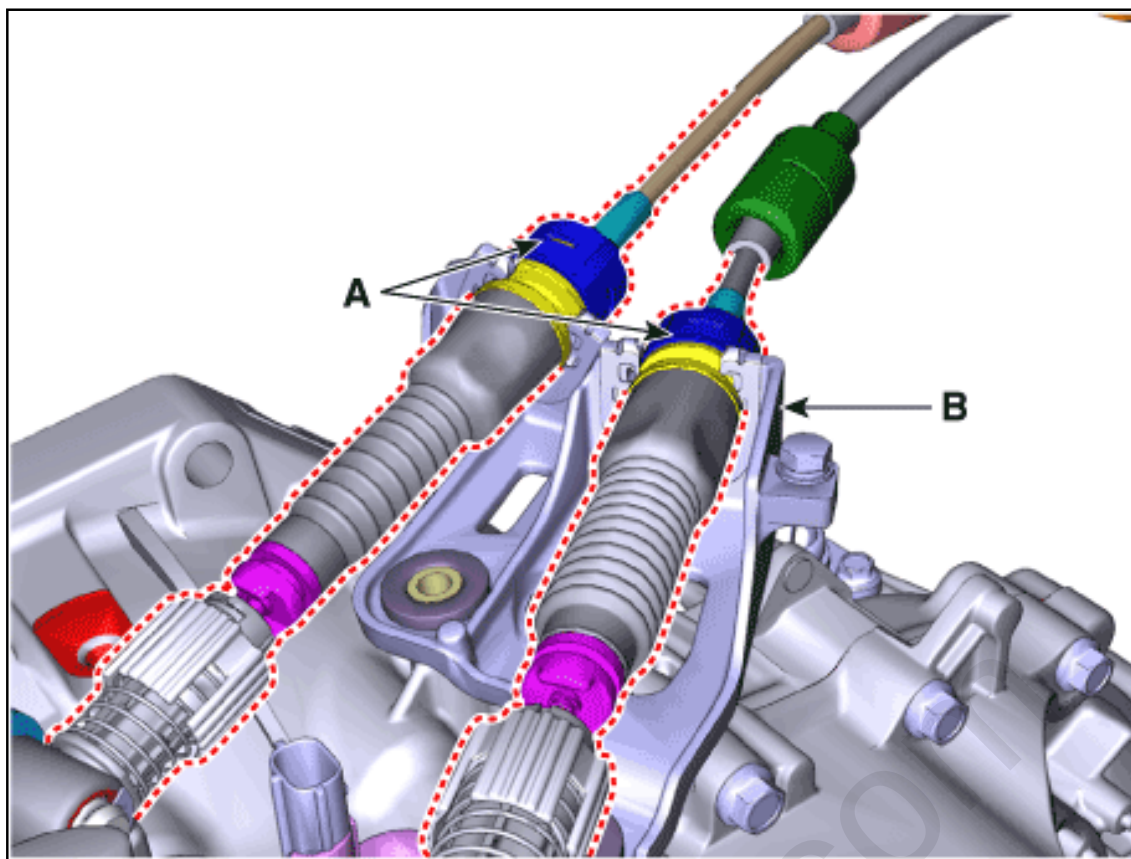


•When installing, please install by hand.

- 1) Install the snap pin (A).
- 2) Install the select cable (B) and then shift cable (C).

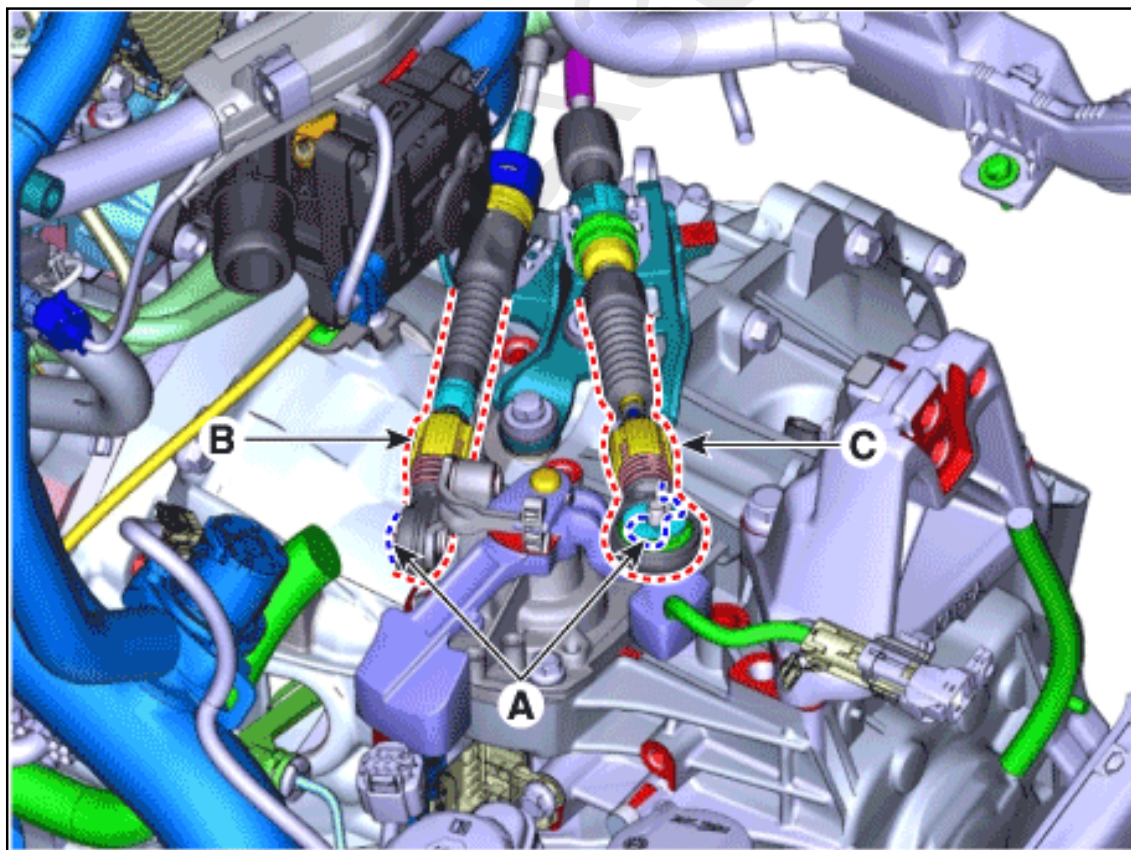

10. Tighten the holder (A) to the "P" directions after fixing the adjust locking button (B) in the "F" direction.

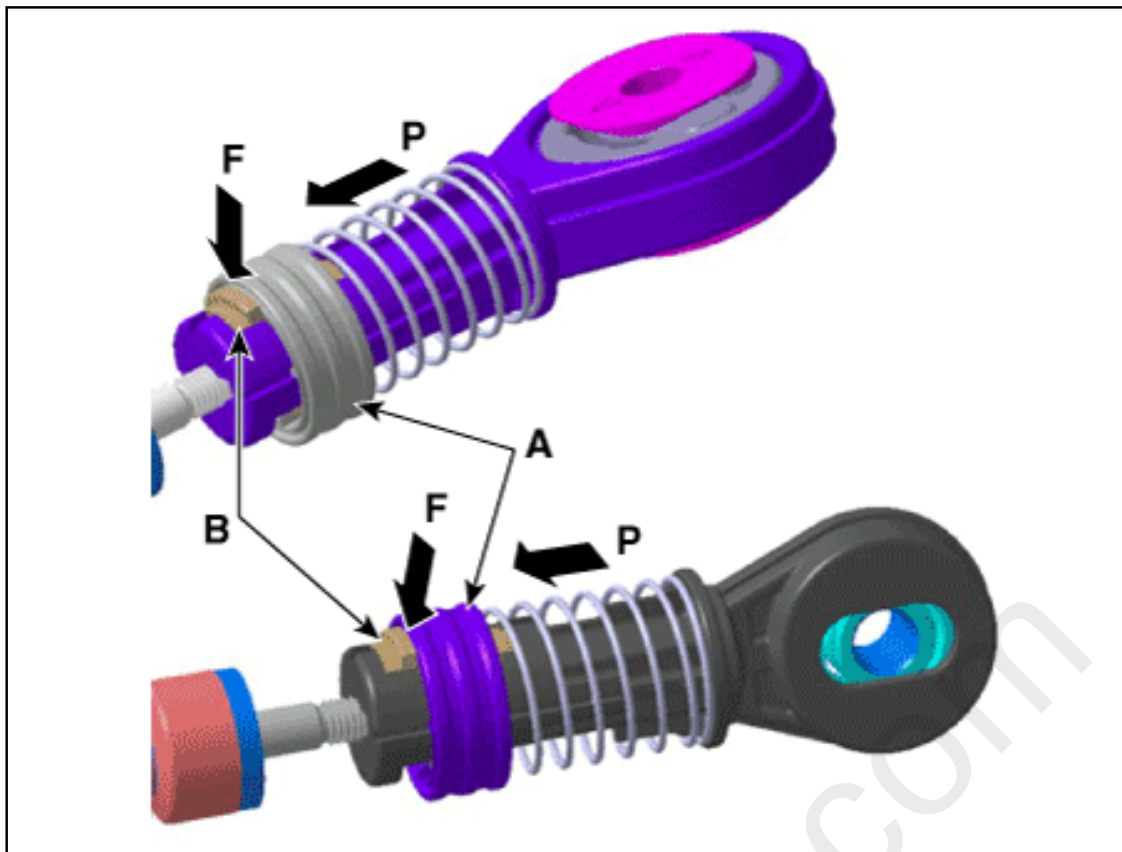

- After assembling the snap pin, be sure to fix the adjust locking button.
- If the cable boot is twisted, attach the cable by rotating the boot to loosen it, then pull the cable to see if there is a possibility that the cable will come off the bracket.


11. Install the battery and battery tray.

(Refer to Engine Electrical System - "Battery")

12. Install the air duct and air cleaner assembly.

(Refer to Engine Mechanical System - "Air Cleaner")

13. Remove the 4th fixing pin (A).

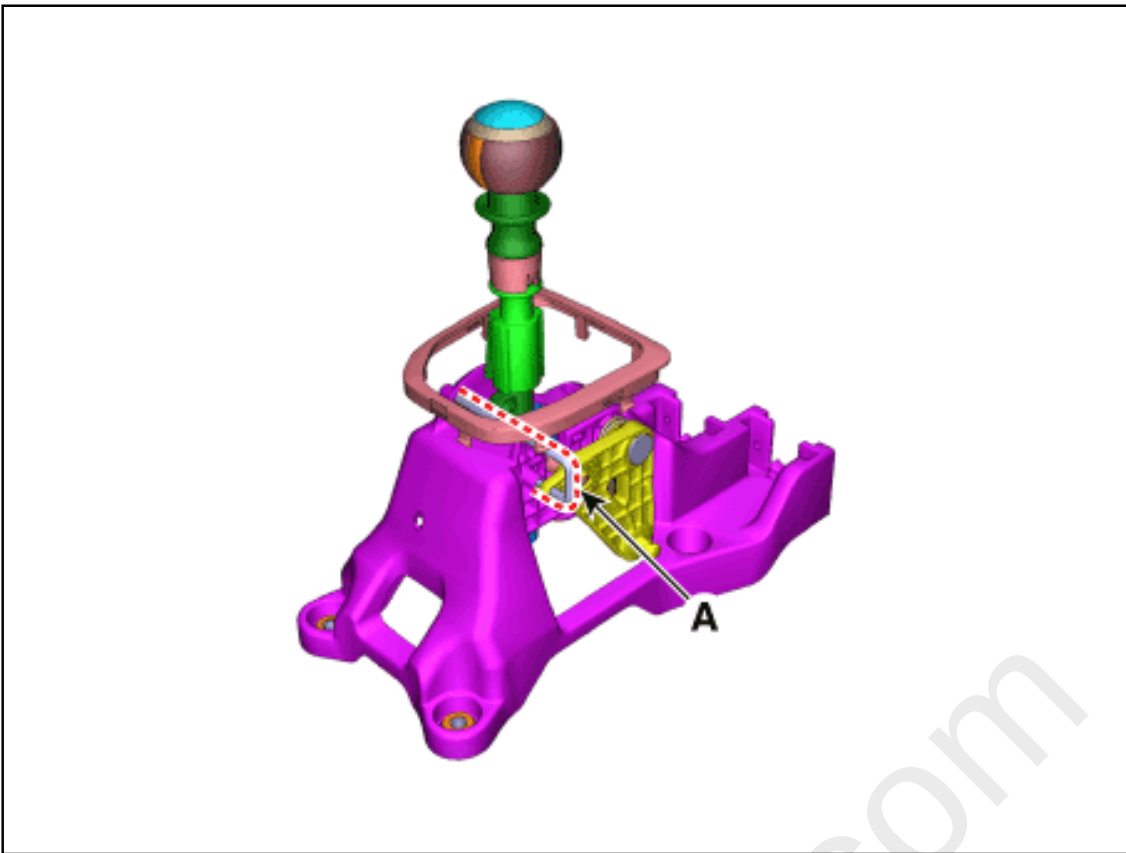

14. Install the floor air duct (A).



15. Install the floor console assembly.
(Re fer to Body (Interior and Exterior) - " Floor Console")

16. Connect the negative (-) battery cable.



- New shift lever assembly is mounted in the 4th fixing pin.
- After installation, remove the 4th fixed pin.
- Check operating of lever of transaxle side when operating shift lever after assembly. (1~6,R)
- If the jamming occurs at each stage when changing gears, readjust the cable length.

mcx30.com