

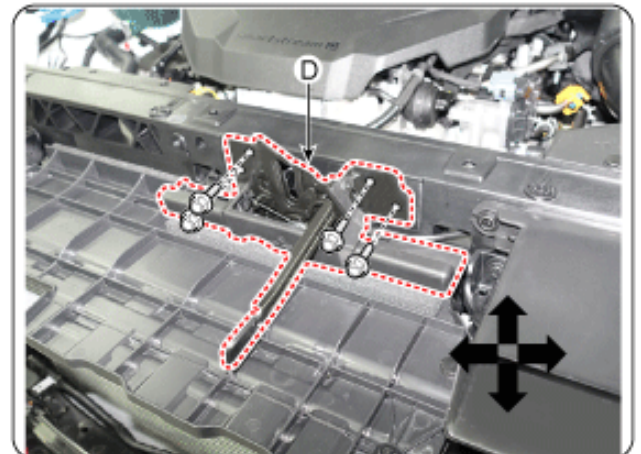
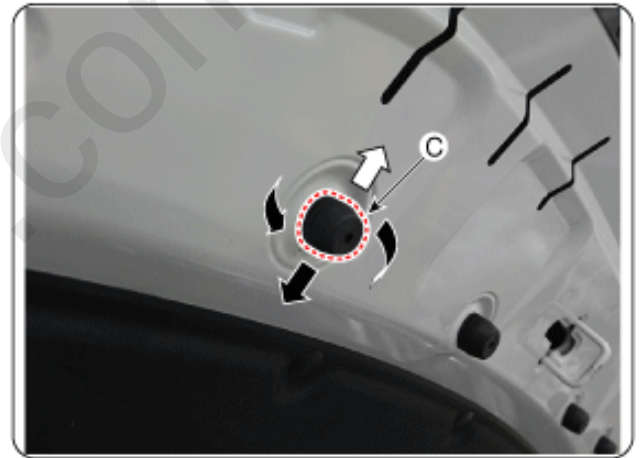
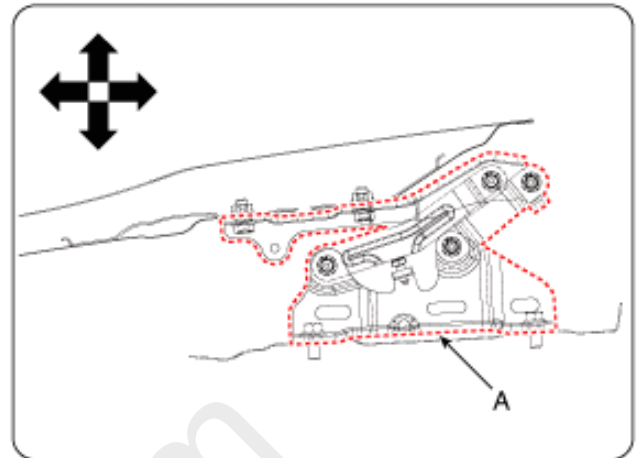
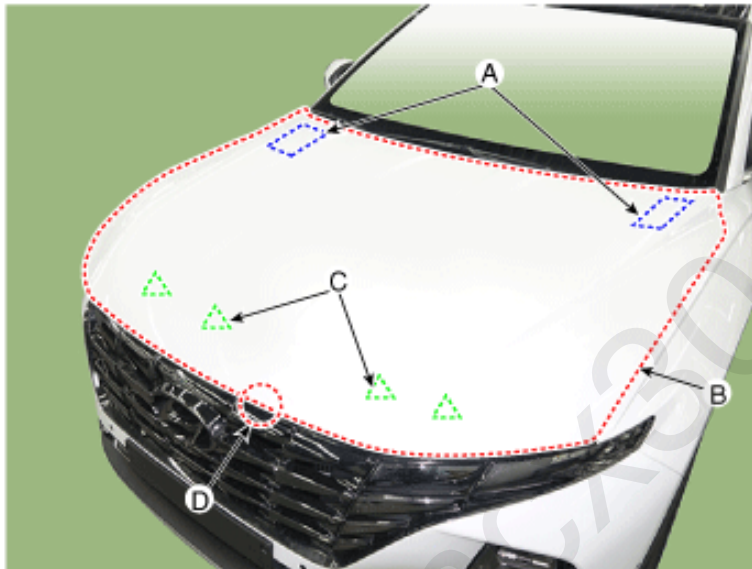


Adjustment

1. After loosening the hinge (A) mounting bolt, adjust the hood (B) by moving it up and down or from side to side and tighten the bolt.
2. Adjust the hood height by moving the hood overslam bumpers (C) up and down.
3. After loosening the hood latch (D) mounting bolts, adjust the latch by moving it up and down or from side to side.

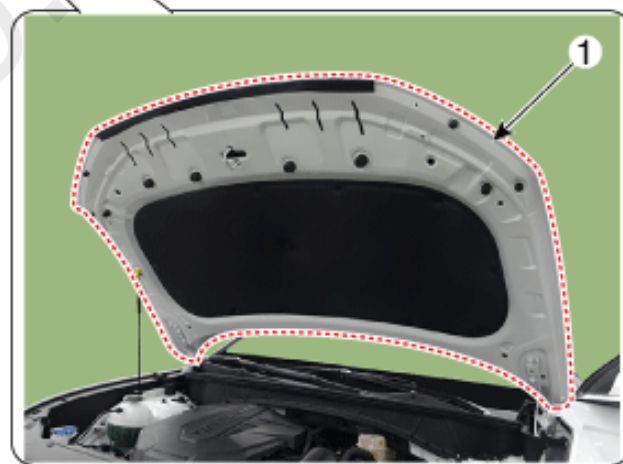

Component
Location

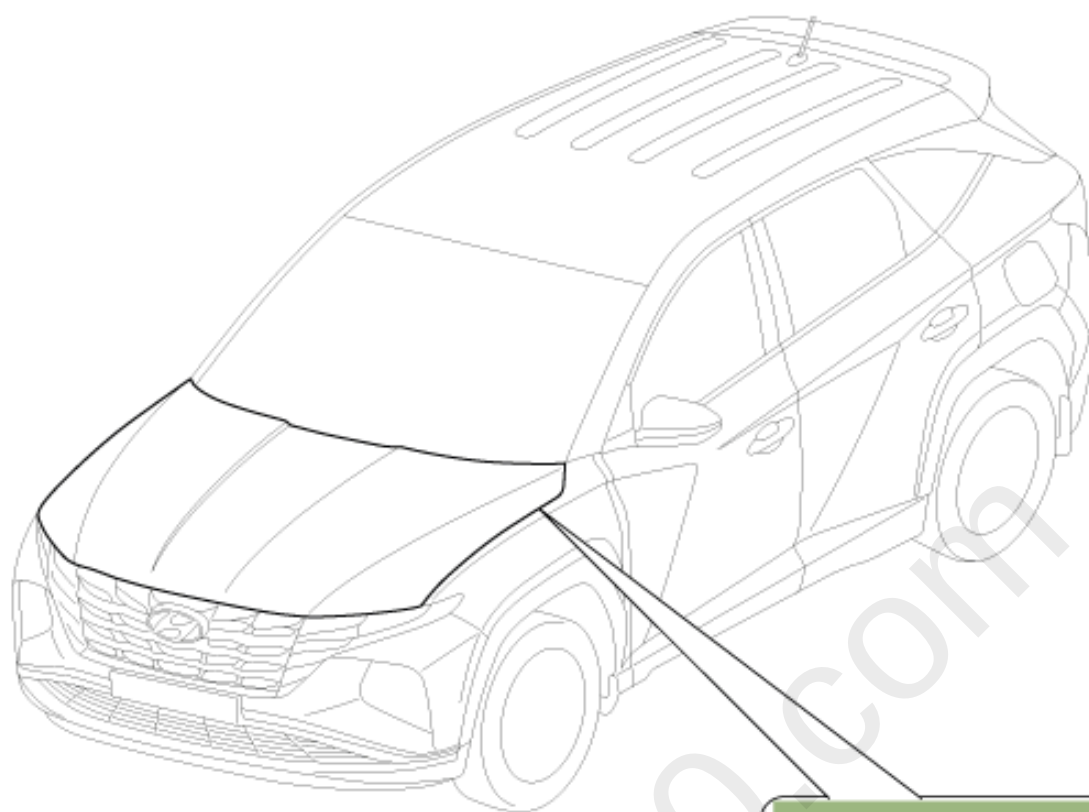

1. Hood assembly

Replacement



- Wear gloves to protect hands from injury.



- Be careful not to damage the hood and body.




- When removing and installing the tailgate, an assistant is needed.

1. After loosening the hood hinge (B) mounting bolts, remove the hood assembly (A).

Tightening torque :

21.6 - 26.5 N.m (2.2 - 2.7 kgf.m, 15.9 - 19.5 lb-ft)

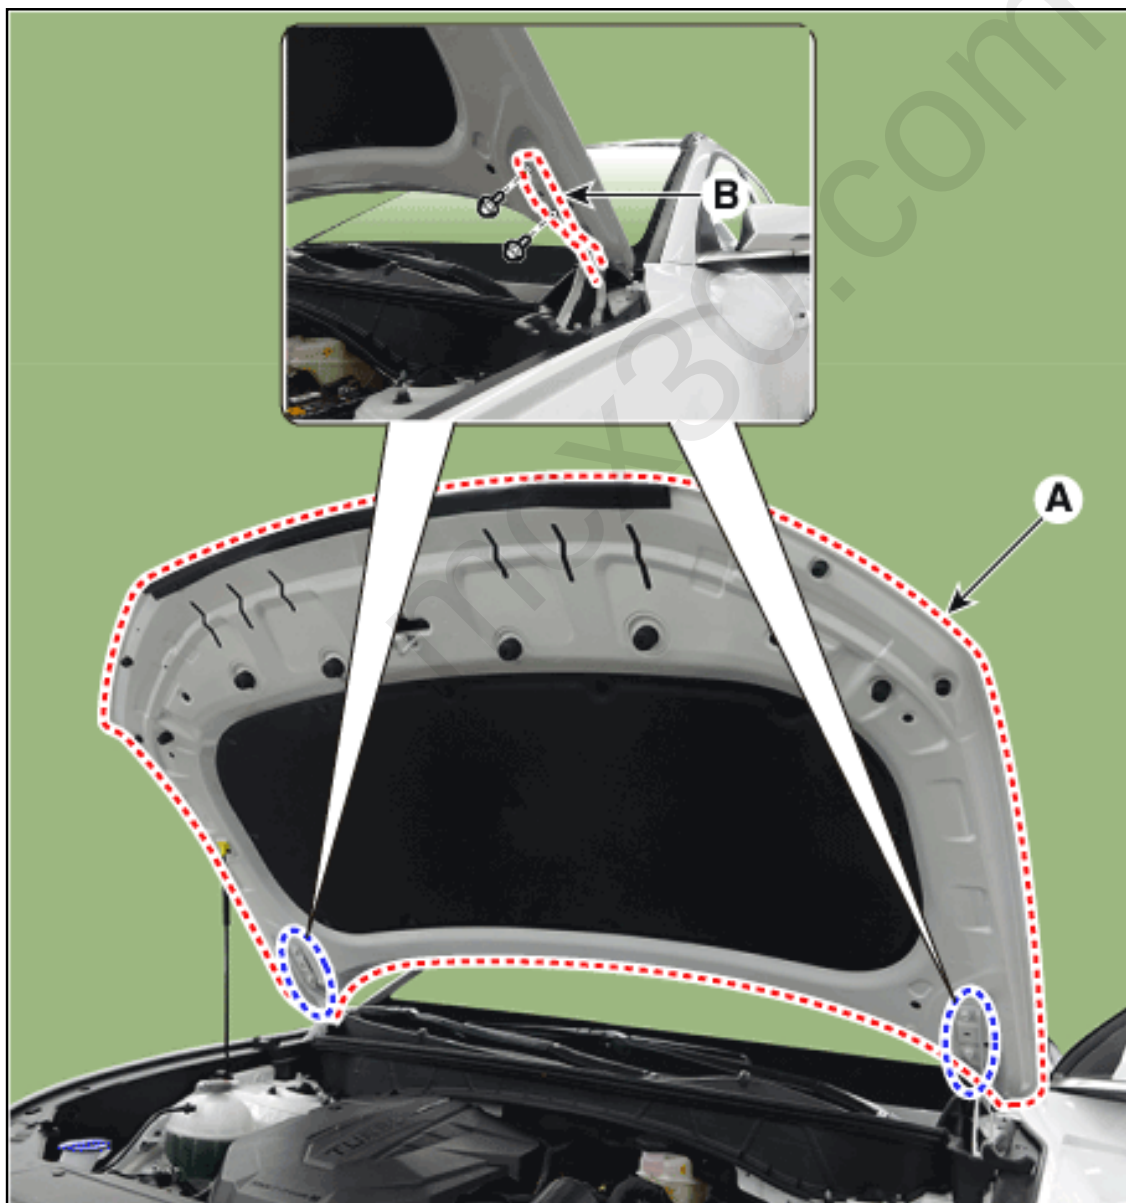

2. To install, reverse removal procedure.



- Make sure the hood locks / unlocks and opens / closes properly.
- Adjust the hood alignment.
(Refer to Hood - Repair procedures")


mcx30.com

Replacement



- Be careful not to scratch the hood panel.

1. Using a clip remover, remove the clips and then the hood insulator pad (A).

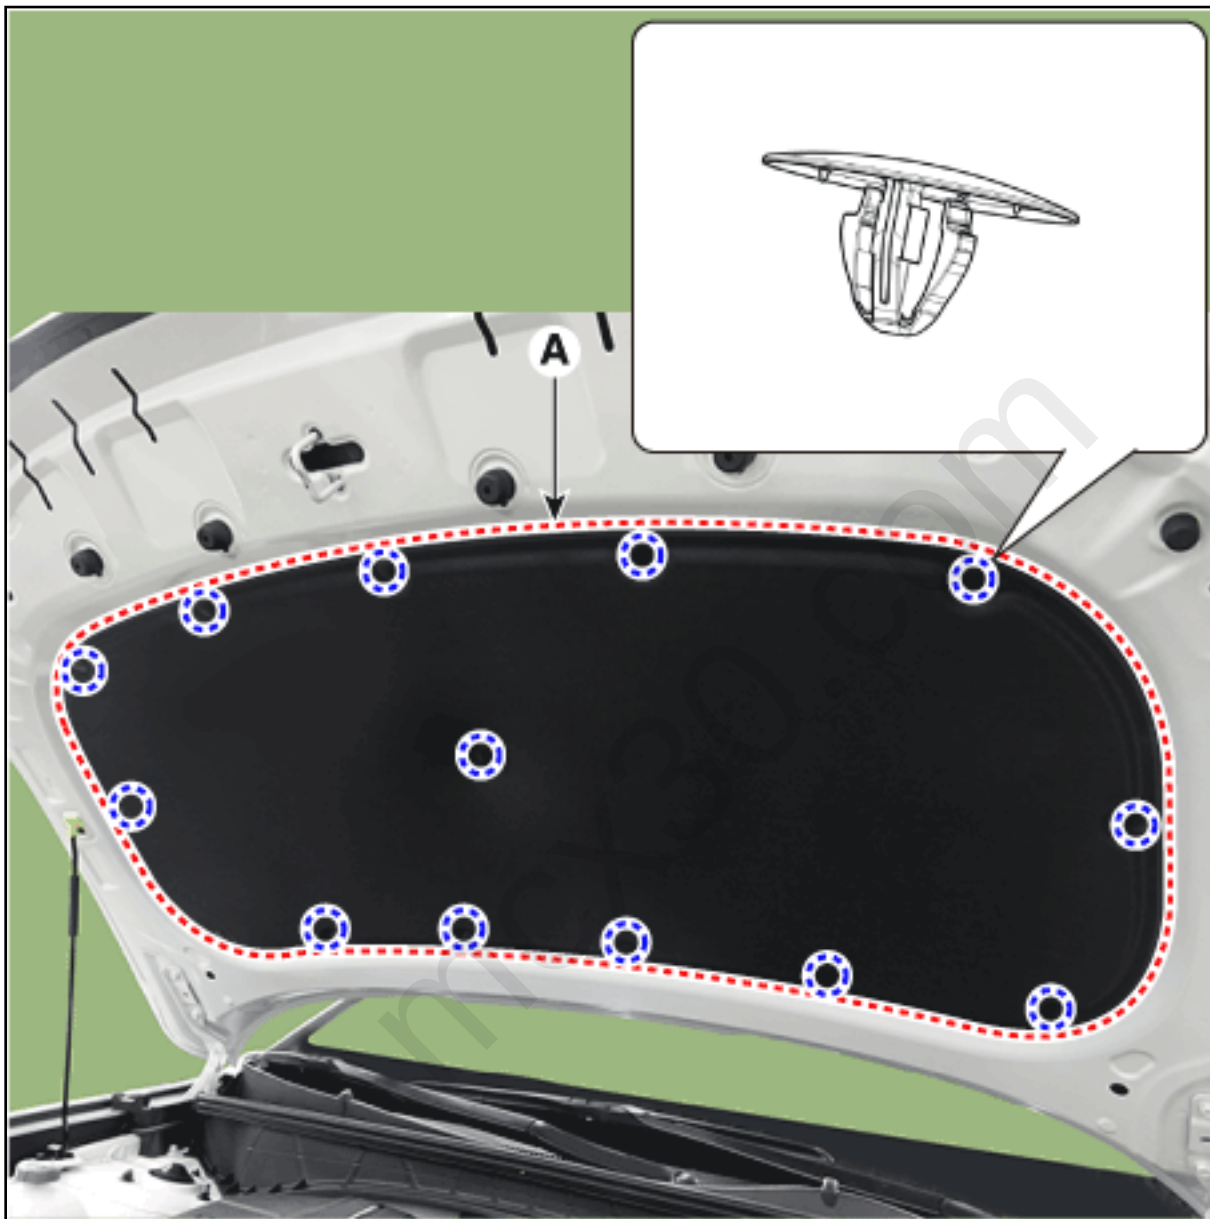

2. To install, reverse removal procedure.




- Replace any damaged clips (or pin-type retainers).

Replacement



- Be careful not to damage the hood seal weahterstrip.

1. Loosen the mounting clips, remove the hood seal weatherstrip (A).

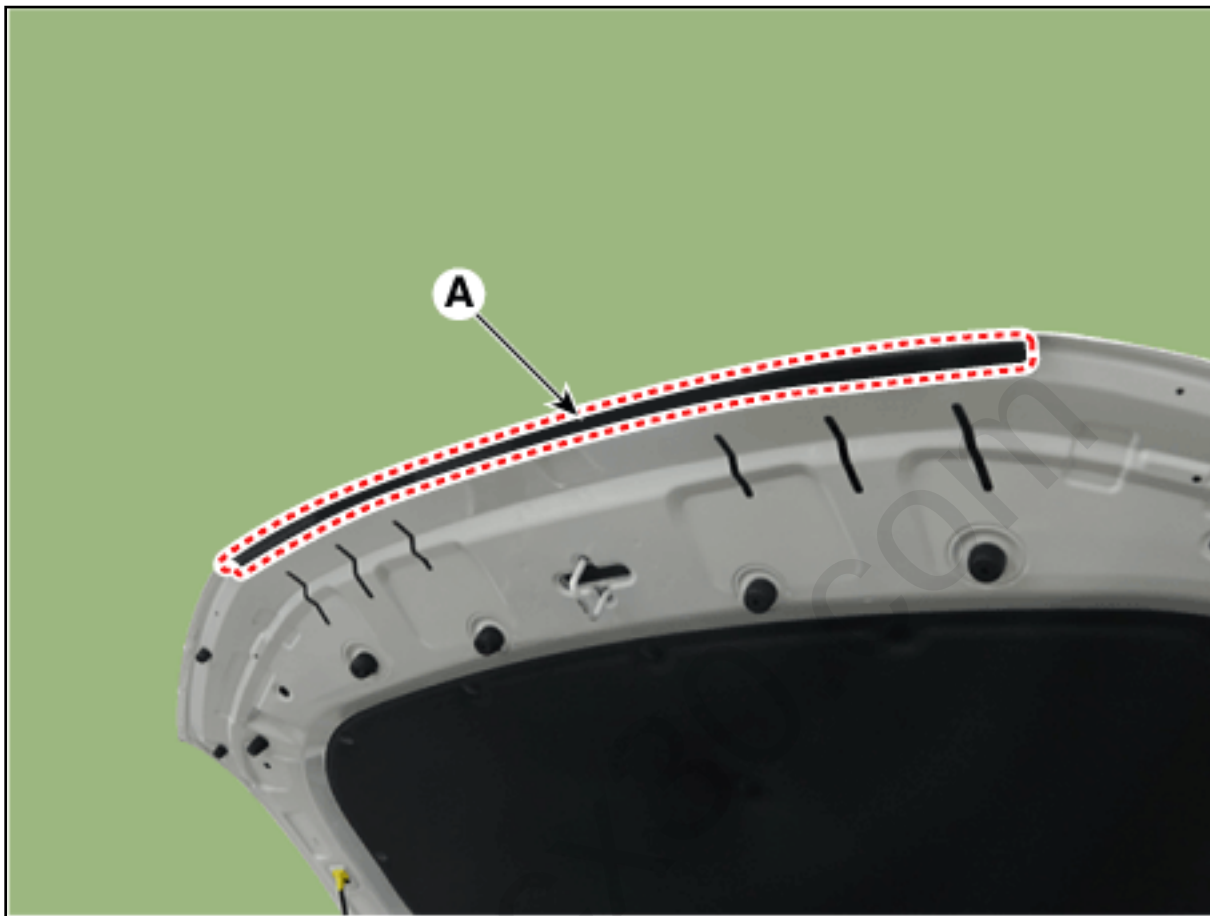

2. To install, reverse removal procedure.




- Replace any damaged clips (or pin-type retainers).

Replacement



- Be careful not to scratch the hood weatherstrip.



1. Remove the hood weatherstrip (A).

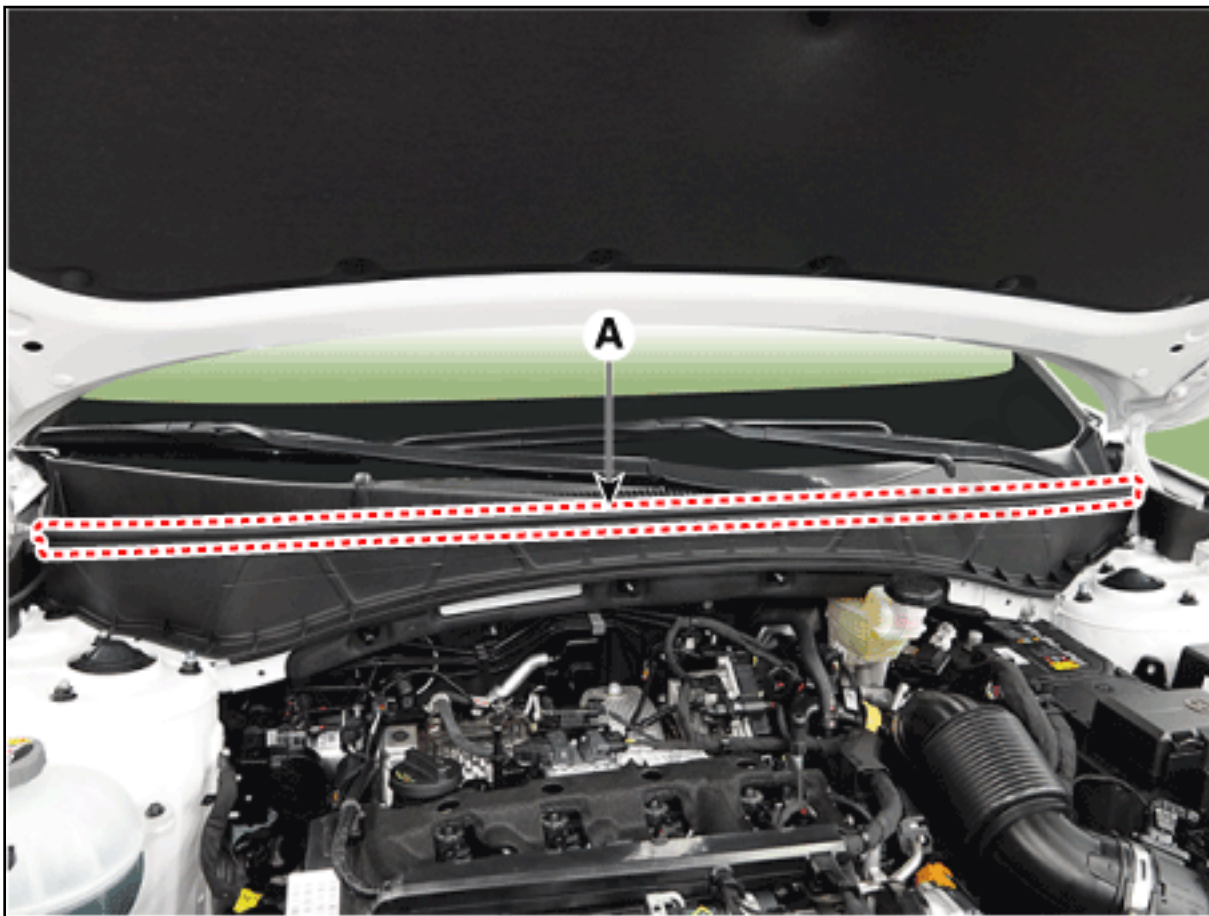

2. To install, reverse removal procedure.



- Replace any damaged clips (or pin-type retainers).

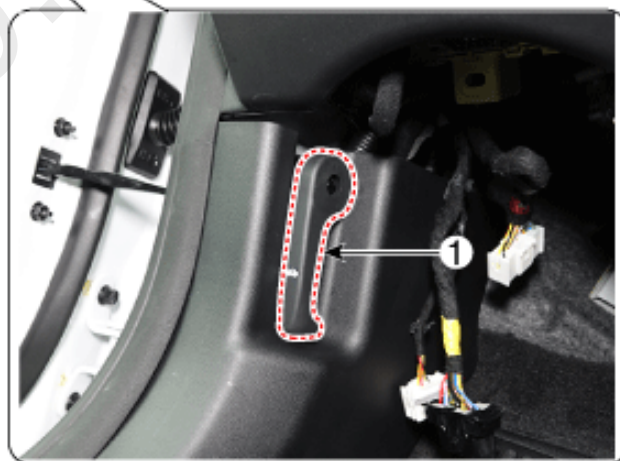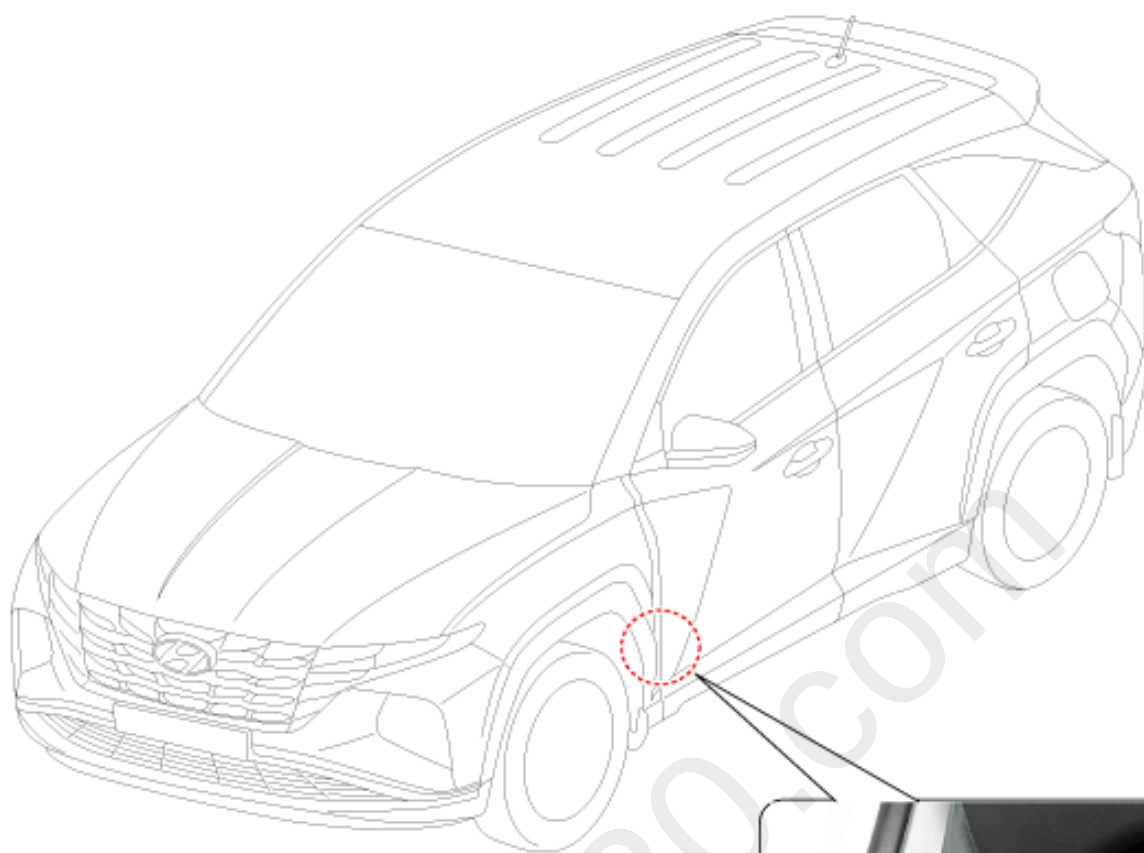

1. Hood latch release handle

Replacement

1. Using a socket, remove the hood release handle (A).




2. To install, reverse removal procedure.



- Make sure the hood latch cable is connected properly.
- Make sure the hood locks / unlocks and opens / closes properly.

Component
Location

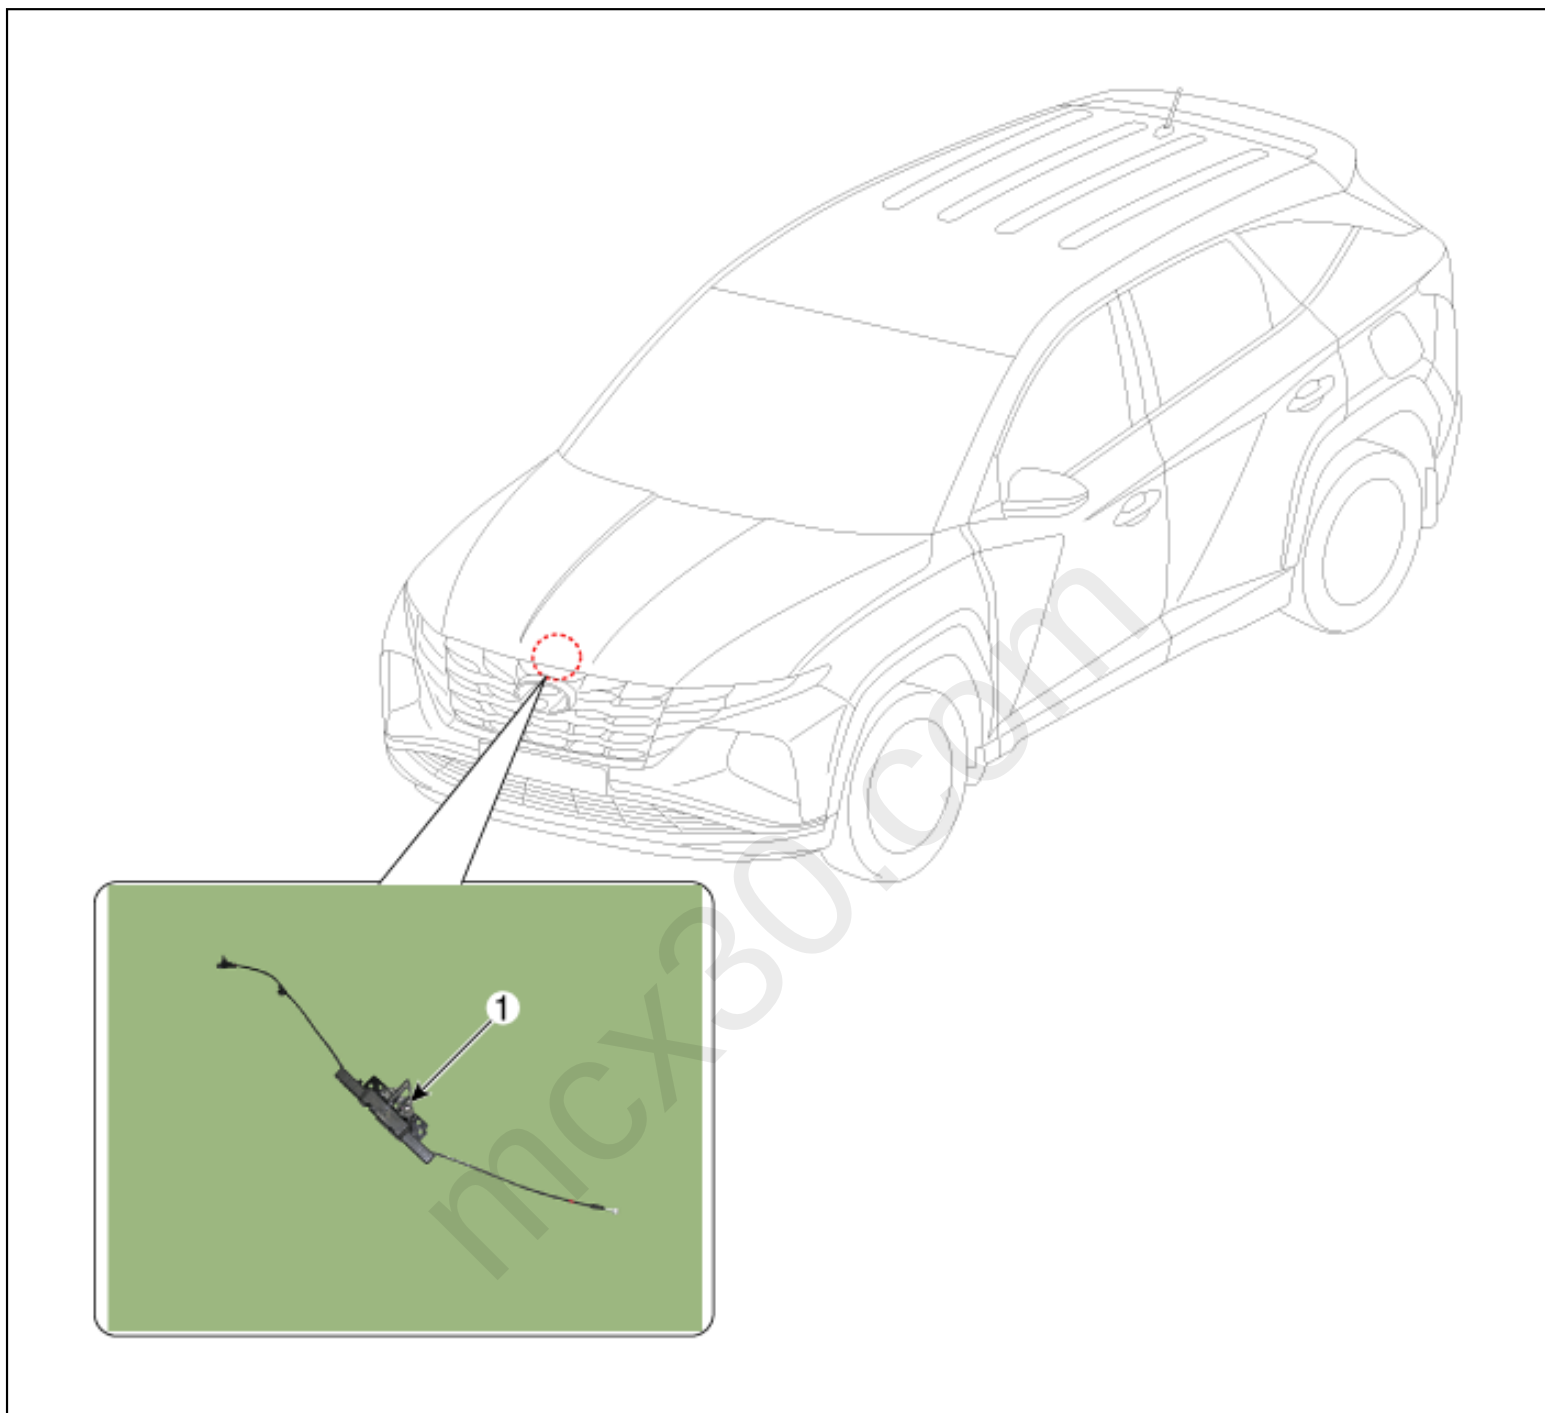

1. Hood Latch Assembly

Replacement




- Put on gloves to prevent hand injuries


1. Disconnect the negative (-) battery terminal.
2. Remove the front bumper assembly.
(Refer to Front Bumper - "Front Bumper Assembly")
3. Disconnect the hood latch cable (A).



4. Press the rock pin to separate the hood latch connector (A) and disconnect wiring clip.

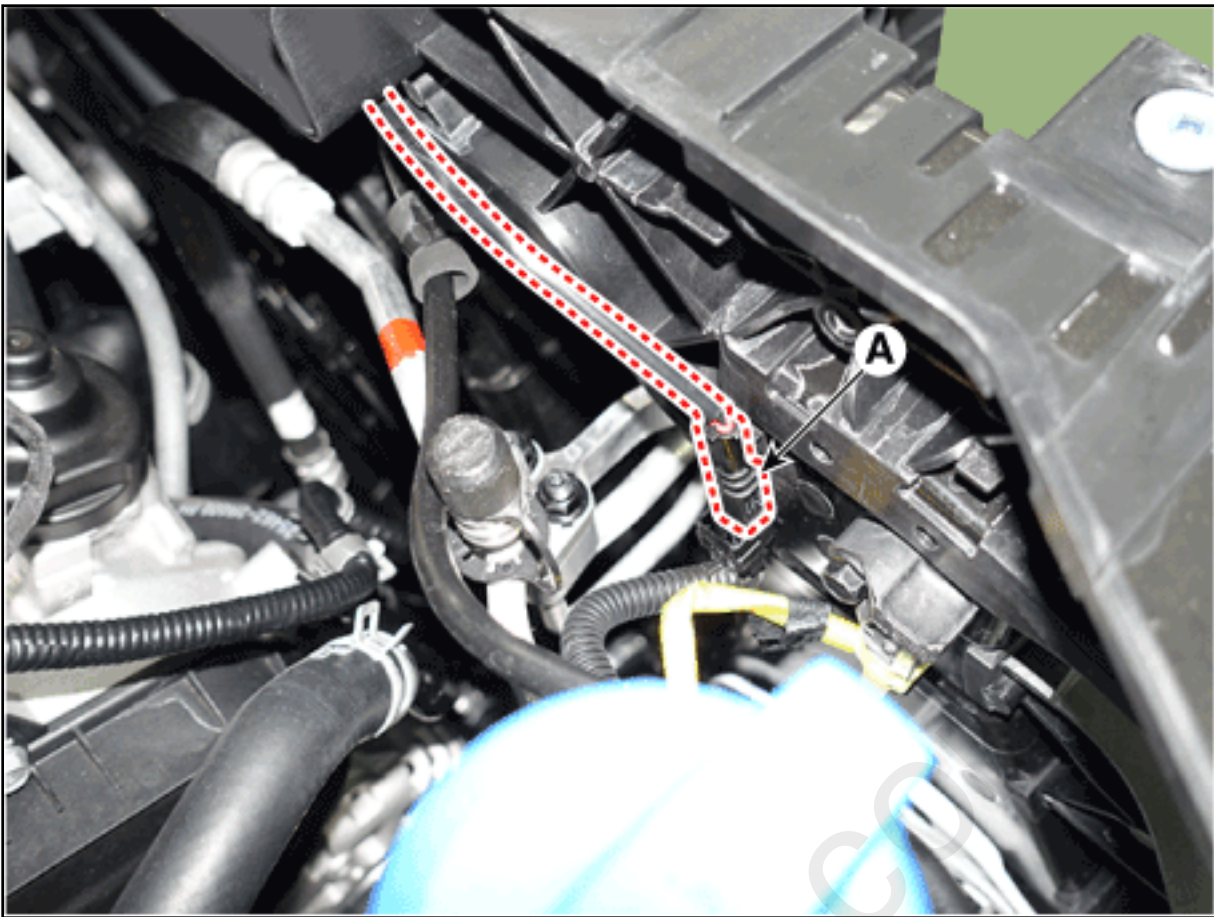

5. Loosen the mounting bolts, remove the hood latch assembly (A).

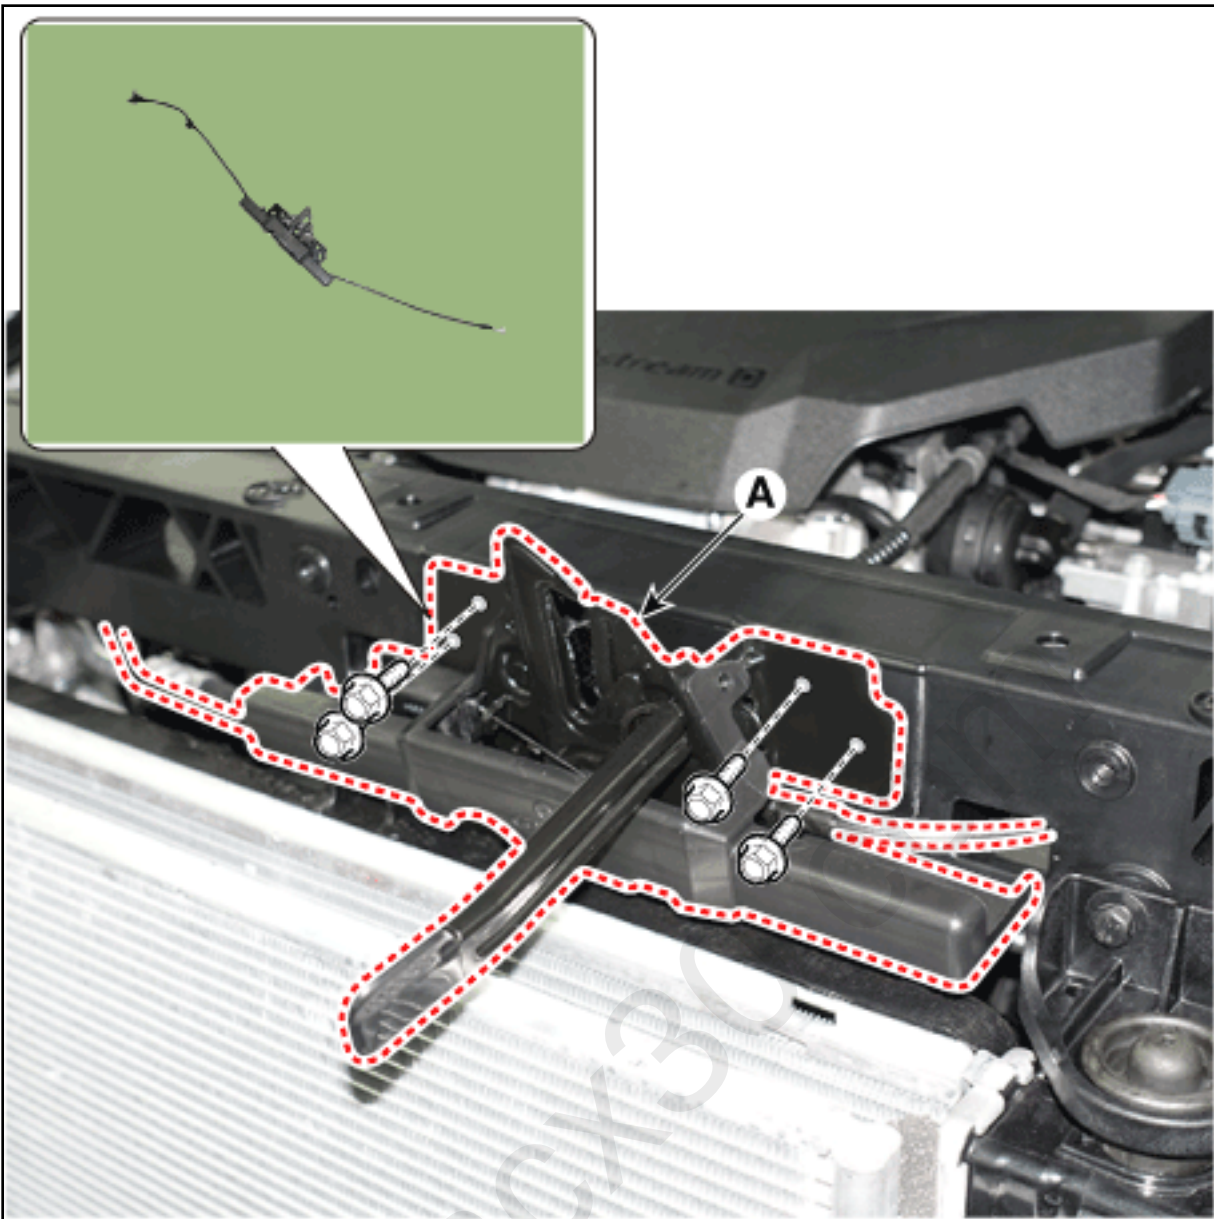

6. To install, reverse removal procedure.



- Make sure the hood latch release cable is connected properly.
- Make sure the hood locks / unlocks and opens / closes properly.
- Adjust the latch alignment.
(Refer yo Hood - Repair procedures")