

Replacement




- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.


1. Remove the roof trim.
(Refer to Roof Trim - "Roof Trim Assembly")
2. Loosen the nuts and remove the roof rack assembly (A).

Tightening torque :

9.8 - 15.3 N.m (1.0 - 1.56 kgf.m, 7.2 - 11.3 lb-ft)

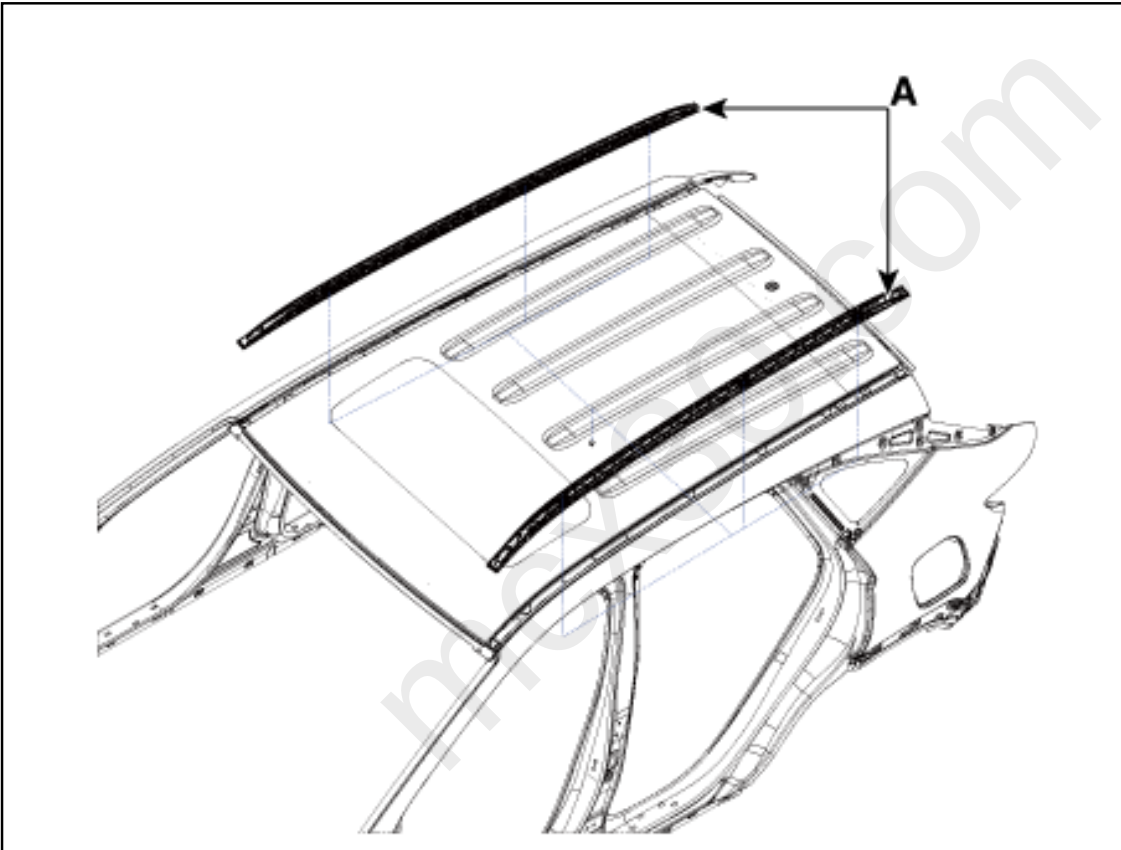

3. To install, reverse the removal procedure.

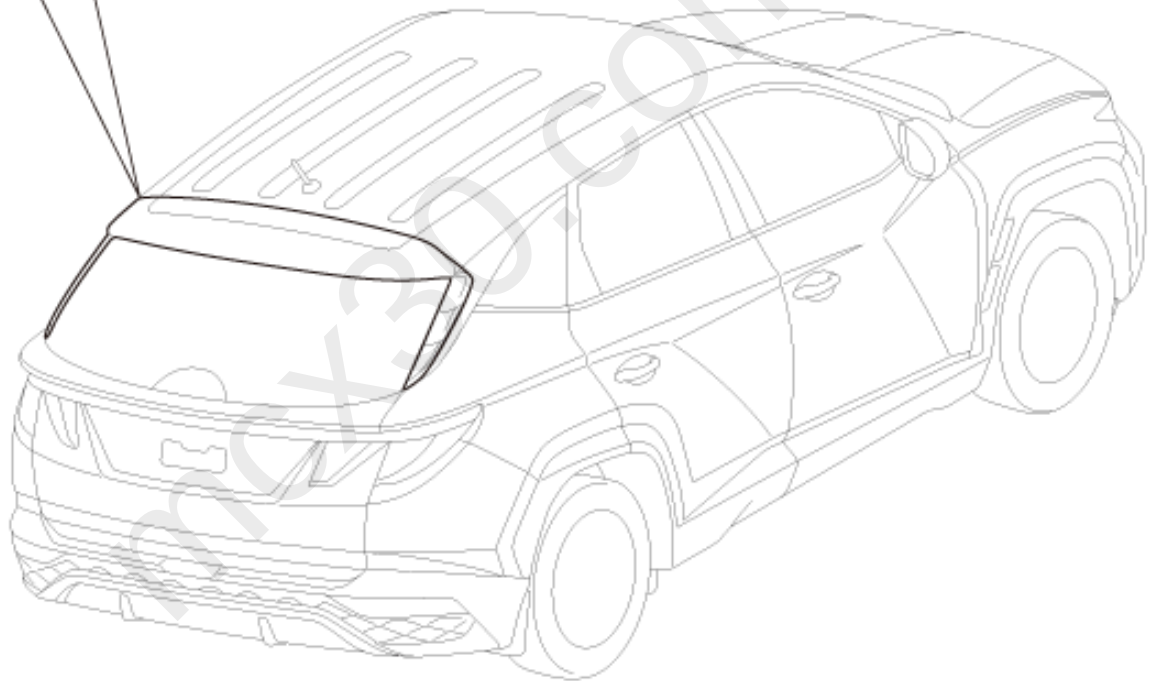

1. Rear Spoiler

Replacement



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.

1. Remove the tailgate upper trim.
(Refer to Tail Gate - "Tail Gate Trim")
2. Disconnect the rear stop lamp connector (A).



3. Remove the tailgate plug hole (A).

[LH]



[RH]



4. Loosen the mounting nuts, remove the rear spoiler (A).

Tightening torque :

3.3 - 4.4 N.m (0.34 - 0.46 kgf.m, 2.5 - 3.3 lb-ft)





5. To install, reverse the removal procedure.




- Make sure the connector is connected properly.
- Replace any damaged clips (or pin-type retainers).

Replacement



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.

1. Using a screwdriver or remover, remove the fender garnish (A).

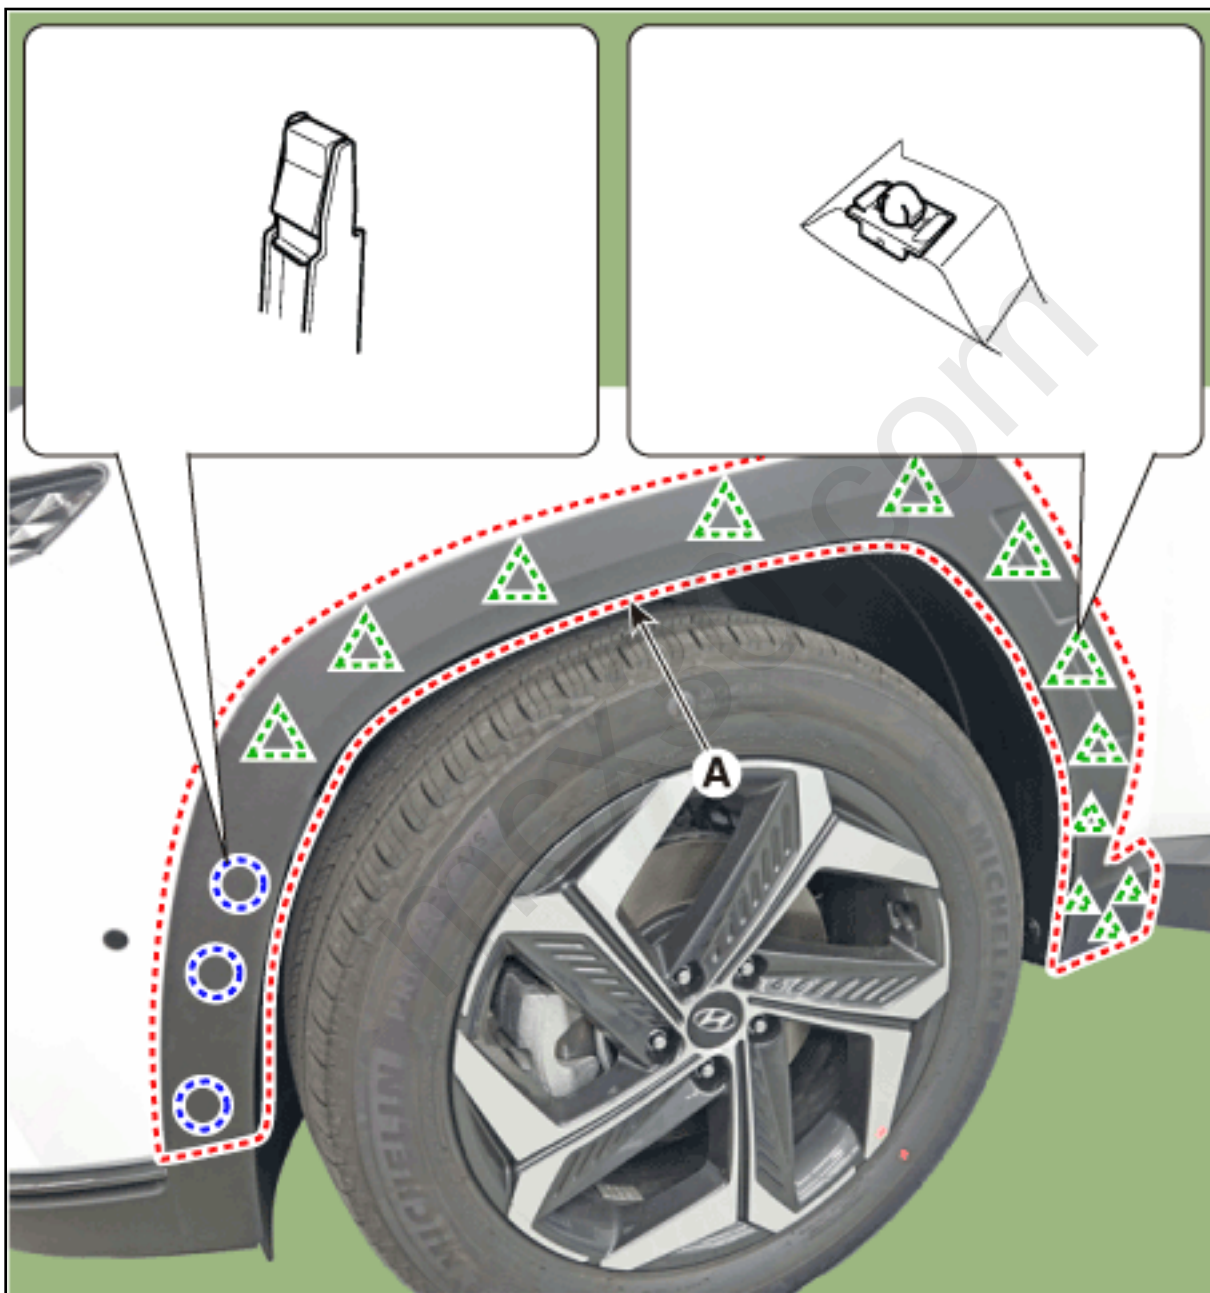

2. To install, reverse removal procedure.




- Replace any damaged clips (or pin-type retainers).

Replacement



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.

1. Using a screwdriver or remover, remove the quarter garnish (A).

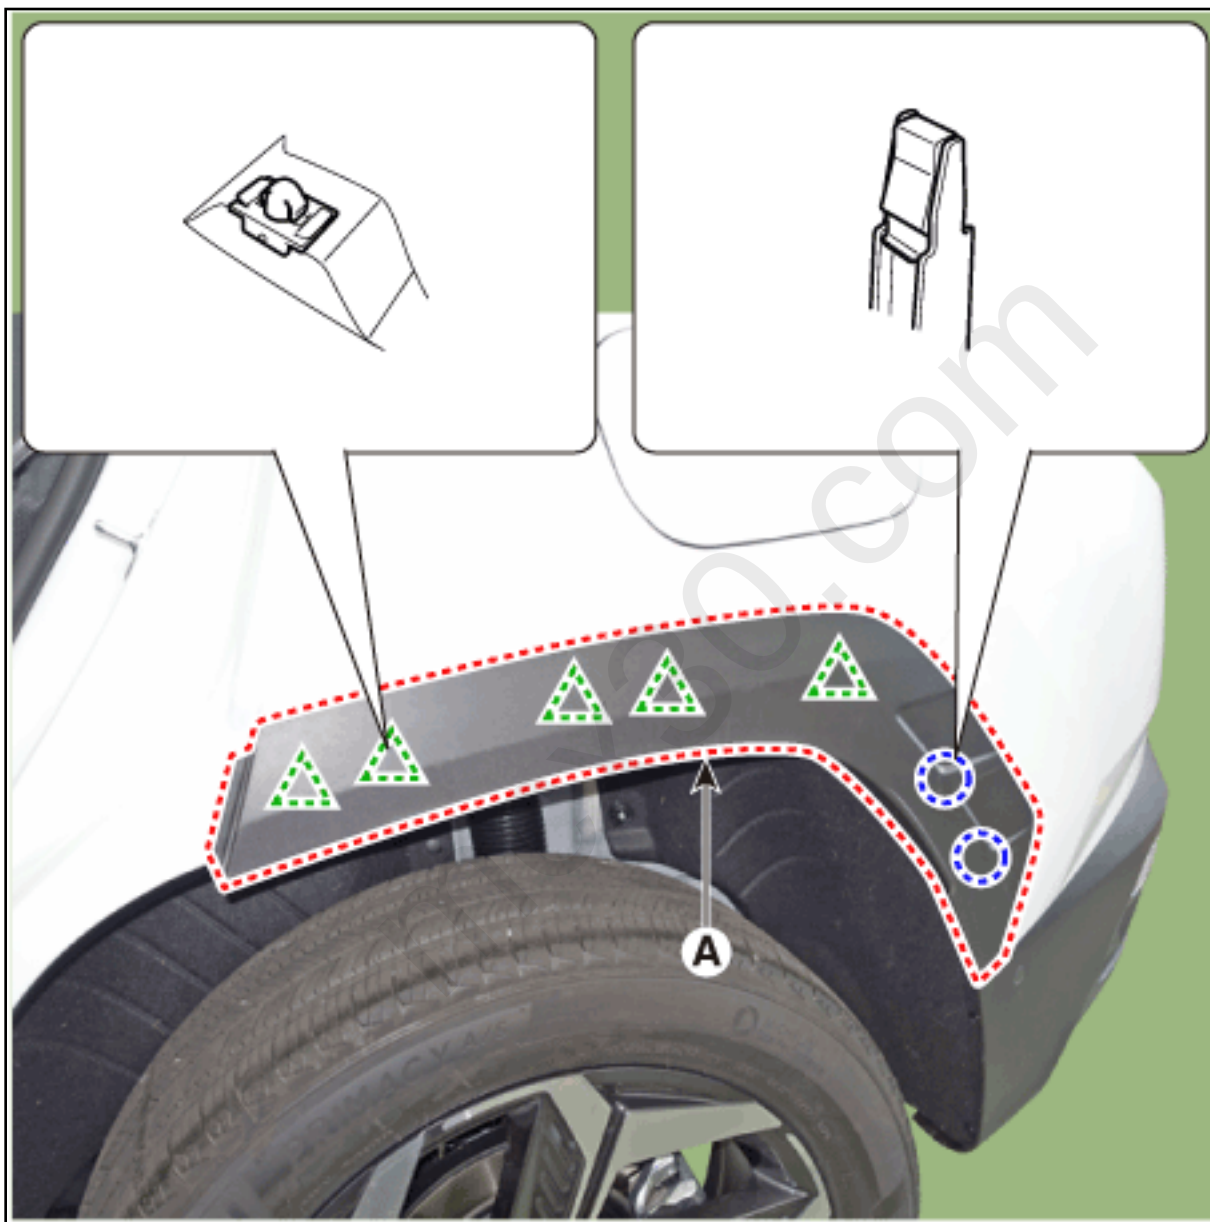

2. To install, reverse removal procedure.




- Replace any damaged clips (or pin-type retainers).

Replacement



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.

1. Loosen the mounting nuts, remove the front door garnish (A) and rear door garnish (B).

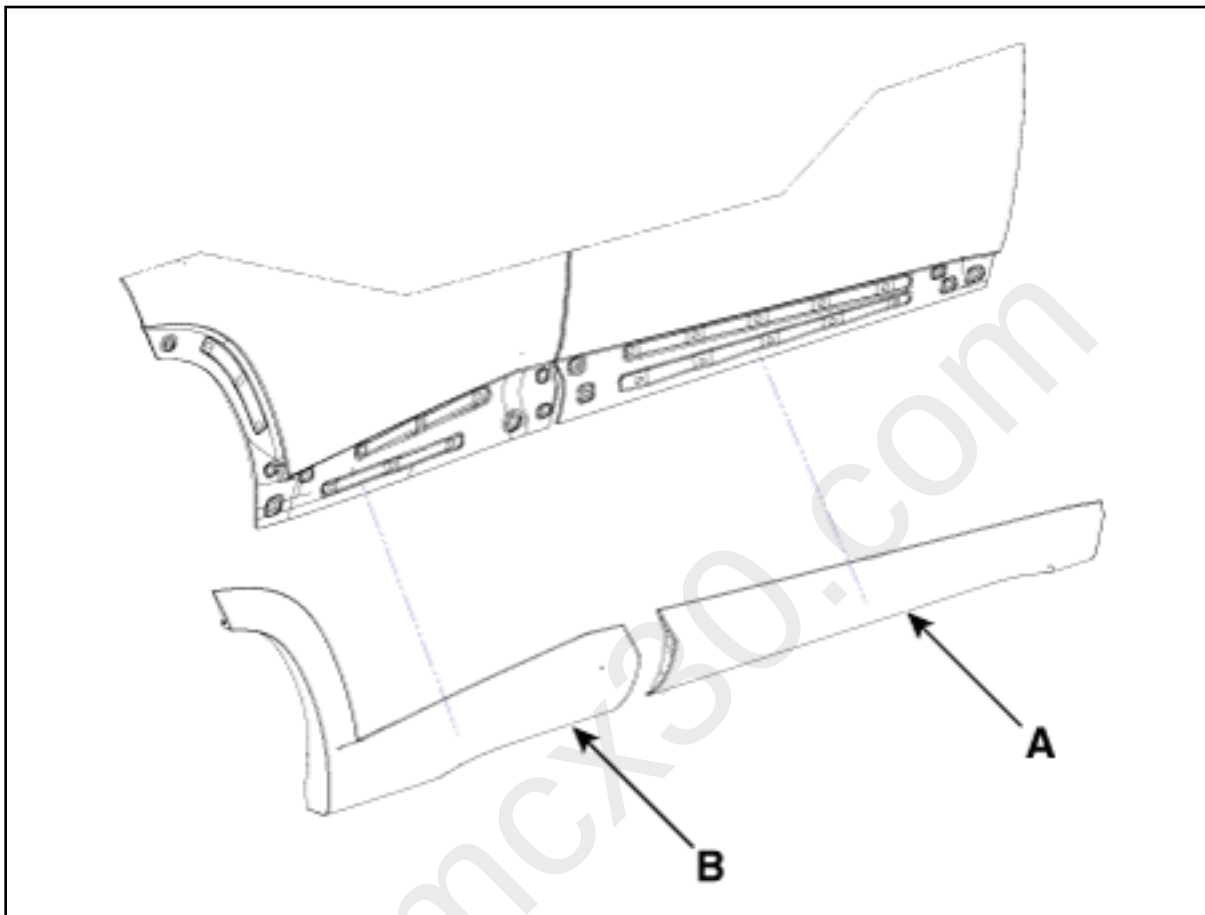

2. To install, reverse the removal procedure.




- Replace any damaged clips (or pin-type retainers).

Replacement



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.

1. Using a screwdriver or remover, remove the C pillar garnish (A).

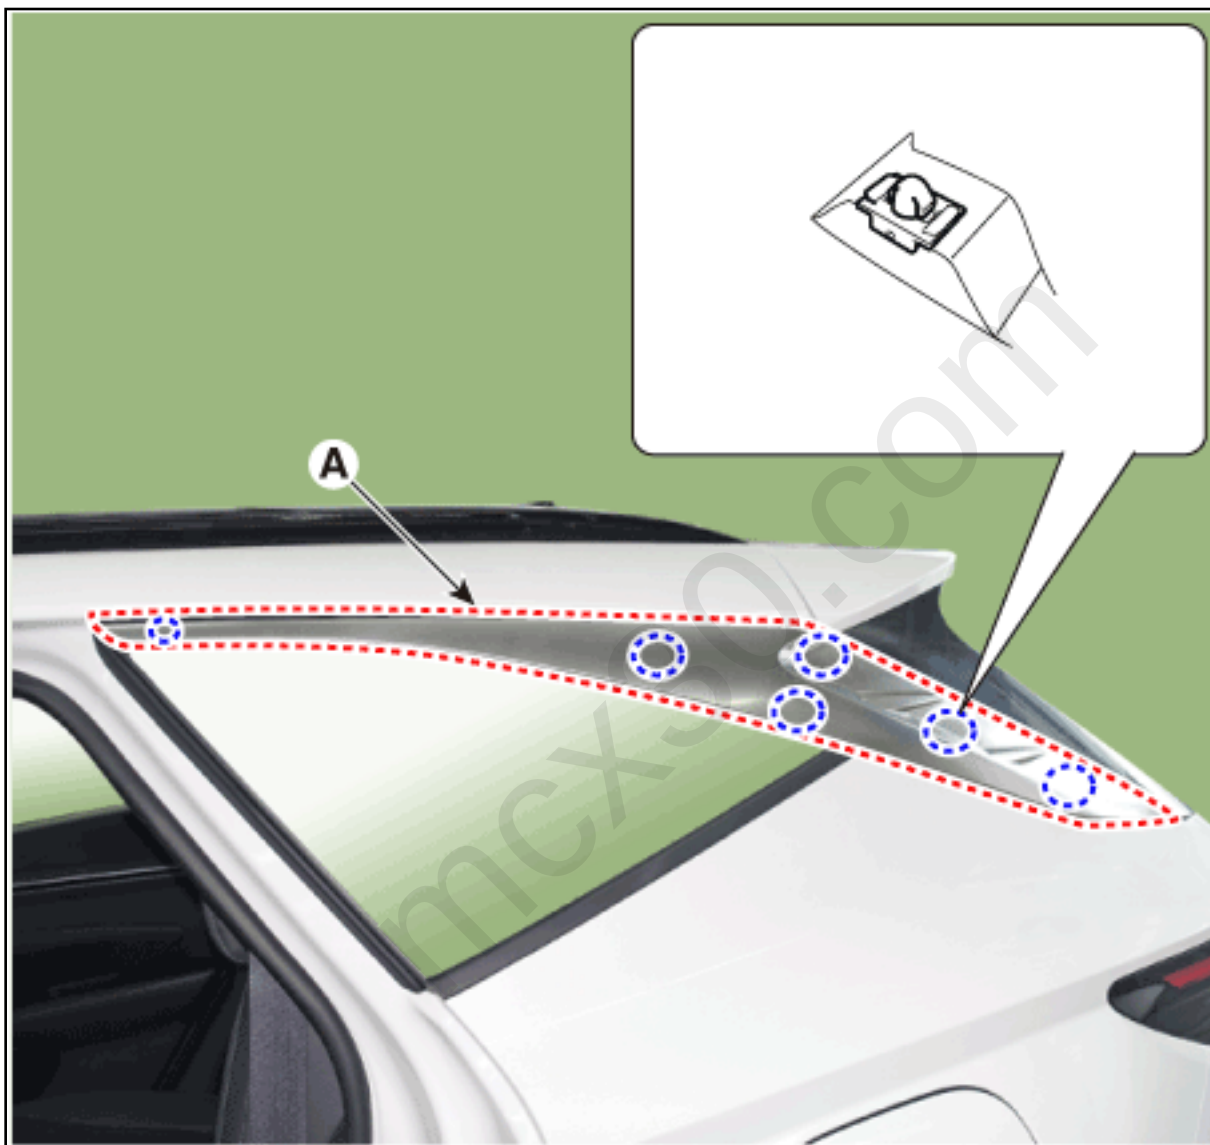

2. To install, reverse the removal procedure.




- Replace any damaged clips (or pin-type retainers).

Replacement



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.

1. Remove the engine room under cover.
(Refer to Engine Mechanical System - "Engine Room Under Cover")
2. Remove the front tire.
(Refer to Suspension System - "Wheel")
3. Loosen the mounting nuts, bolts and screws, remove the front wheel guard (A).

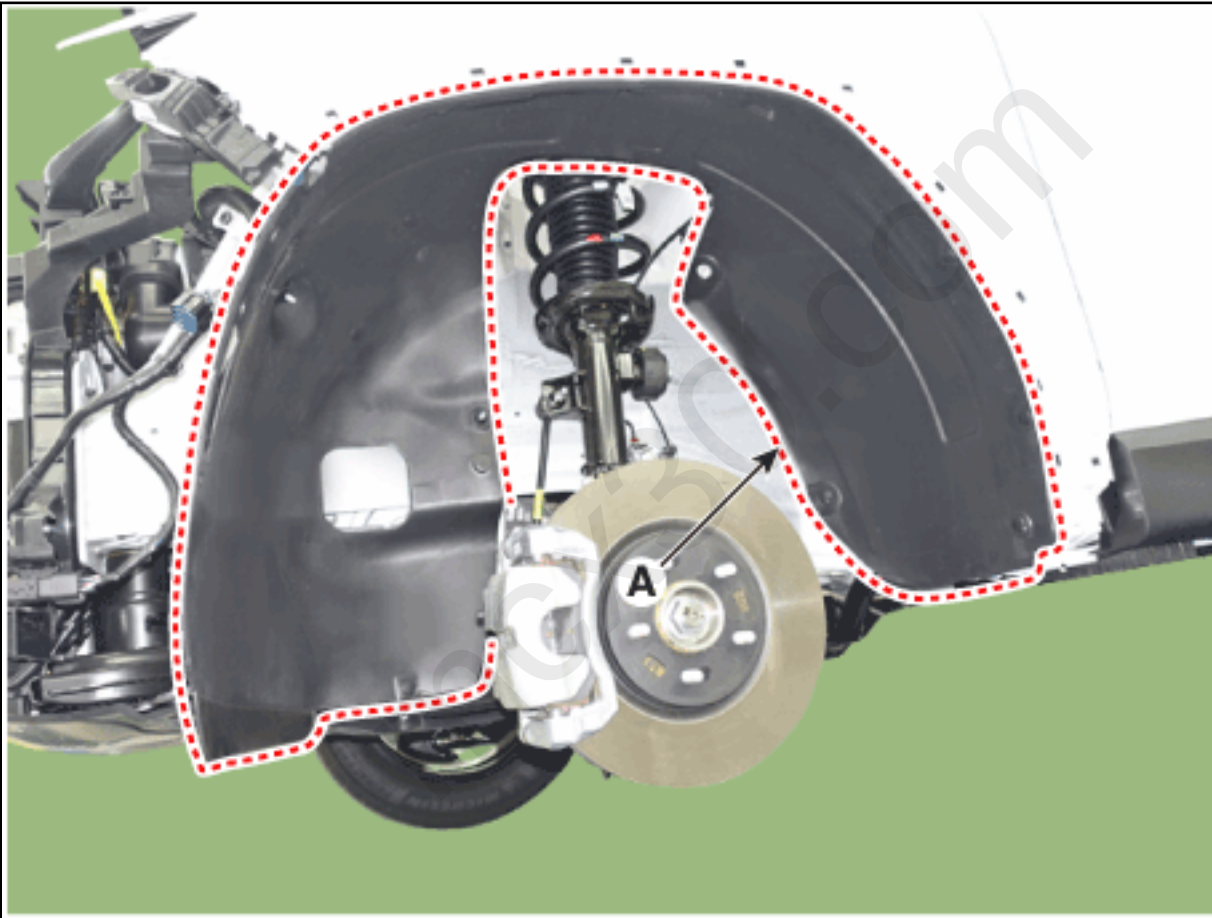

4. To install, reverse the removal procedure.



- Replace any damaged clips (or pin-type retainers).

Replacement




- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.

1. Remove the rear tire.

(Refer to Suspension System - "Wheel")

2. Loosen the mounting nuts and screws, remove the rear wheel guard (A).

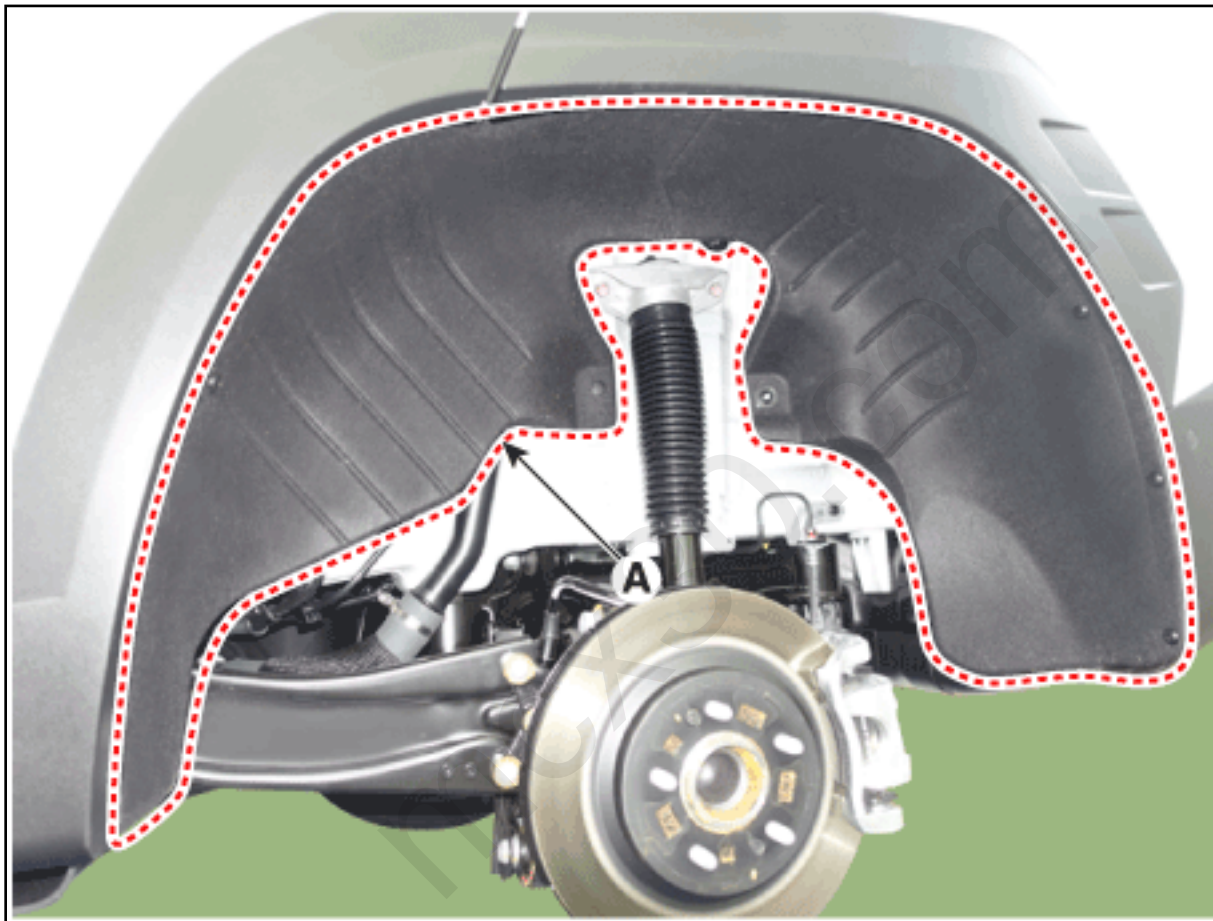

3. To install, reverse the removal procedure.




- Replace any damaged clips (or pin-type retainers).

Replacement



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.

1. Using a screwdriver or remover, remove the roof side molding (A).

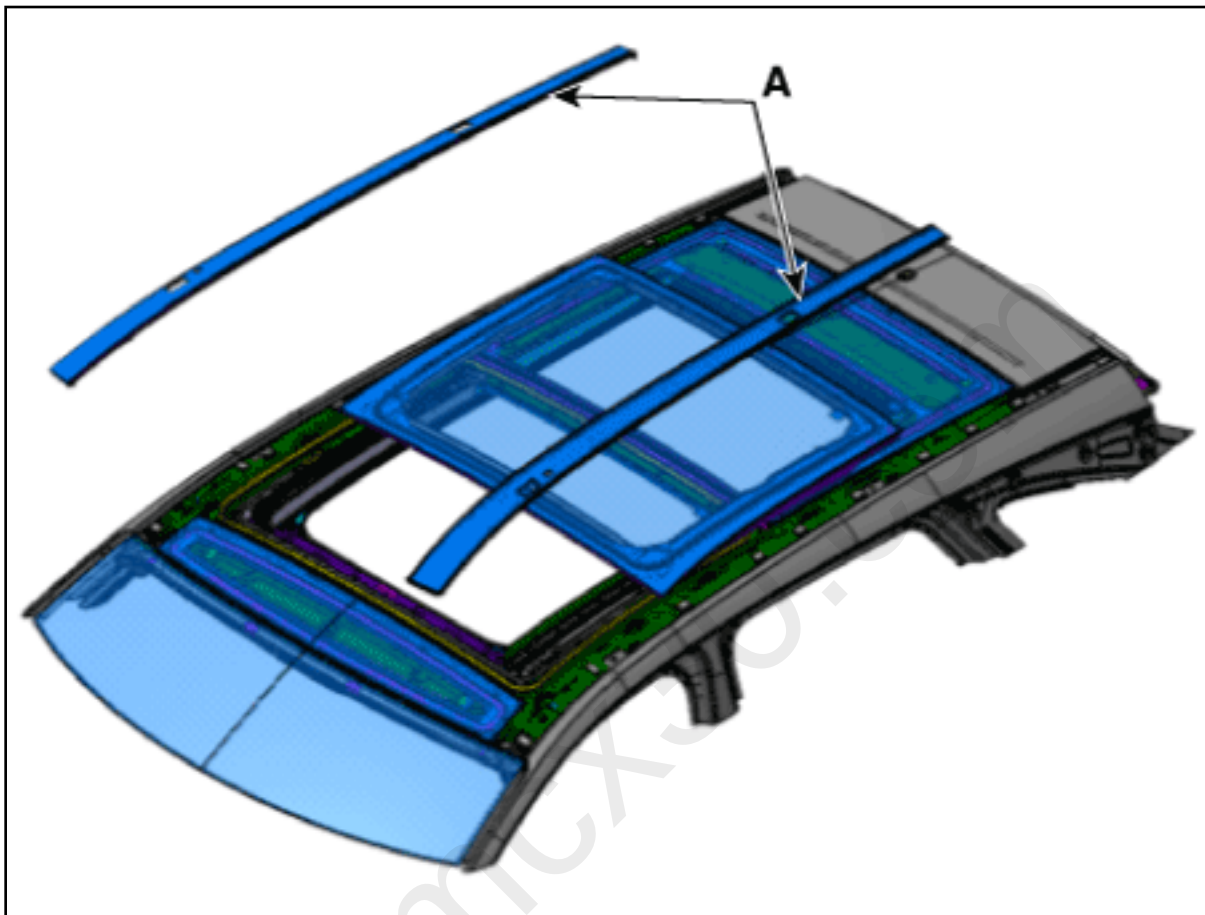

2. To install, reverse the removal procedure.




- Replace any damaged clips (or pin-type retainers).

Replacement



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.

1. Loosen the mounting screws, remove the side seal molding (A).

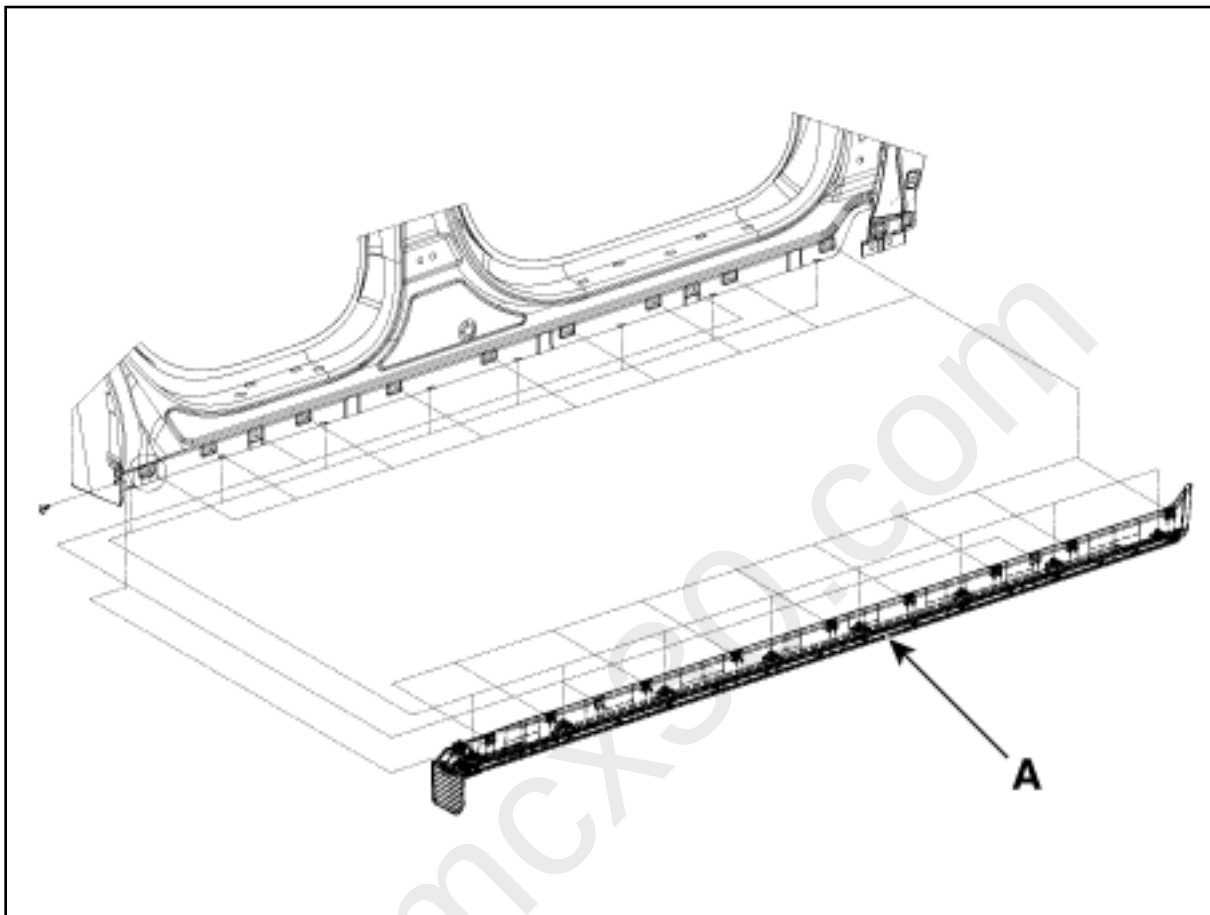


2. To install, reverse the removal procedure.



- Replace any damaged clips (or pin-type retainers).

Component
Location

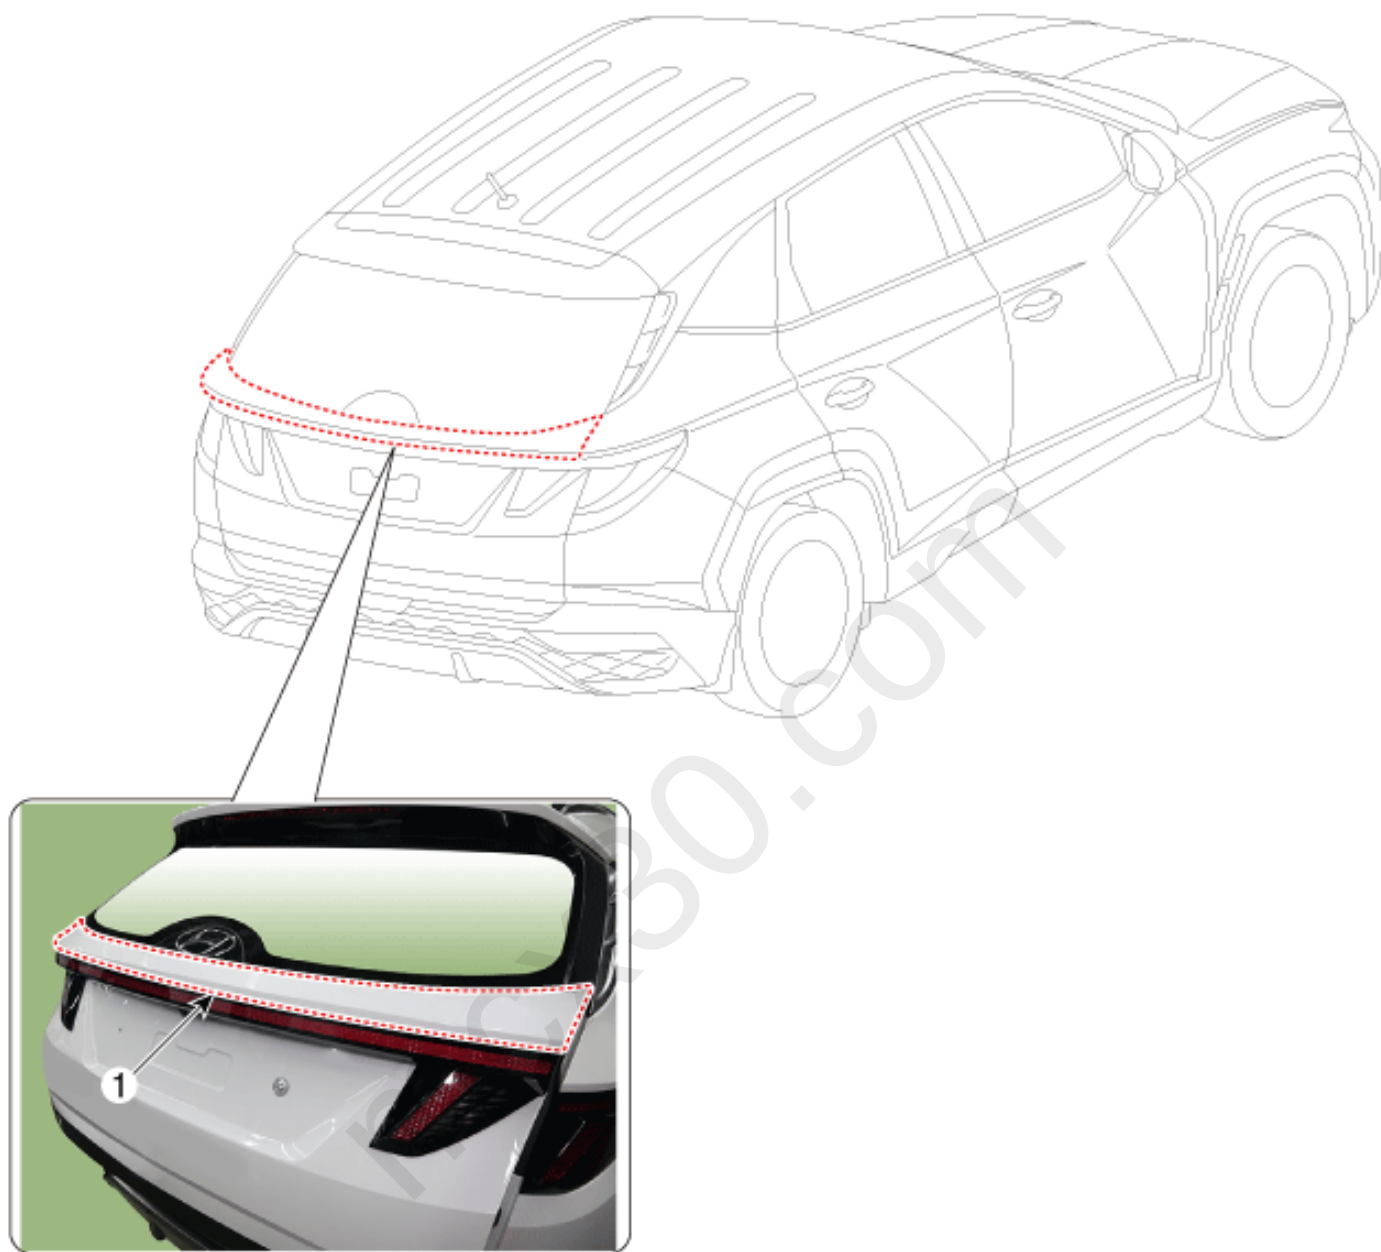

1. Tailgate back panel

Replacement



- Put on gloves to prevent hand injuries.



- Take care not to scratch the tailgate and body surface.

1. Remove the tailgate lower trim.

(Refer to Tail Gate - "Tail Gate Trim")

2. Using a screwdriver or remover, remove the tailgate back panel (A).



3. To install, reverse removal procedure.



- Replace any damaged clips (or pin-type retainers).

