


Component
Location

[SBW type]

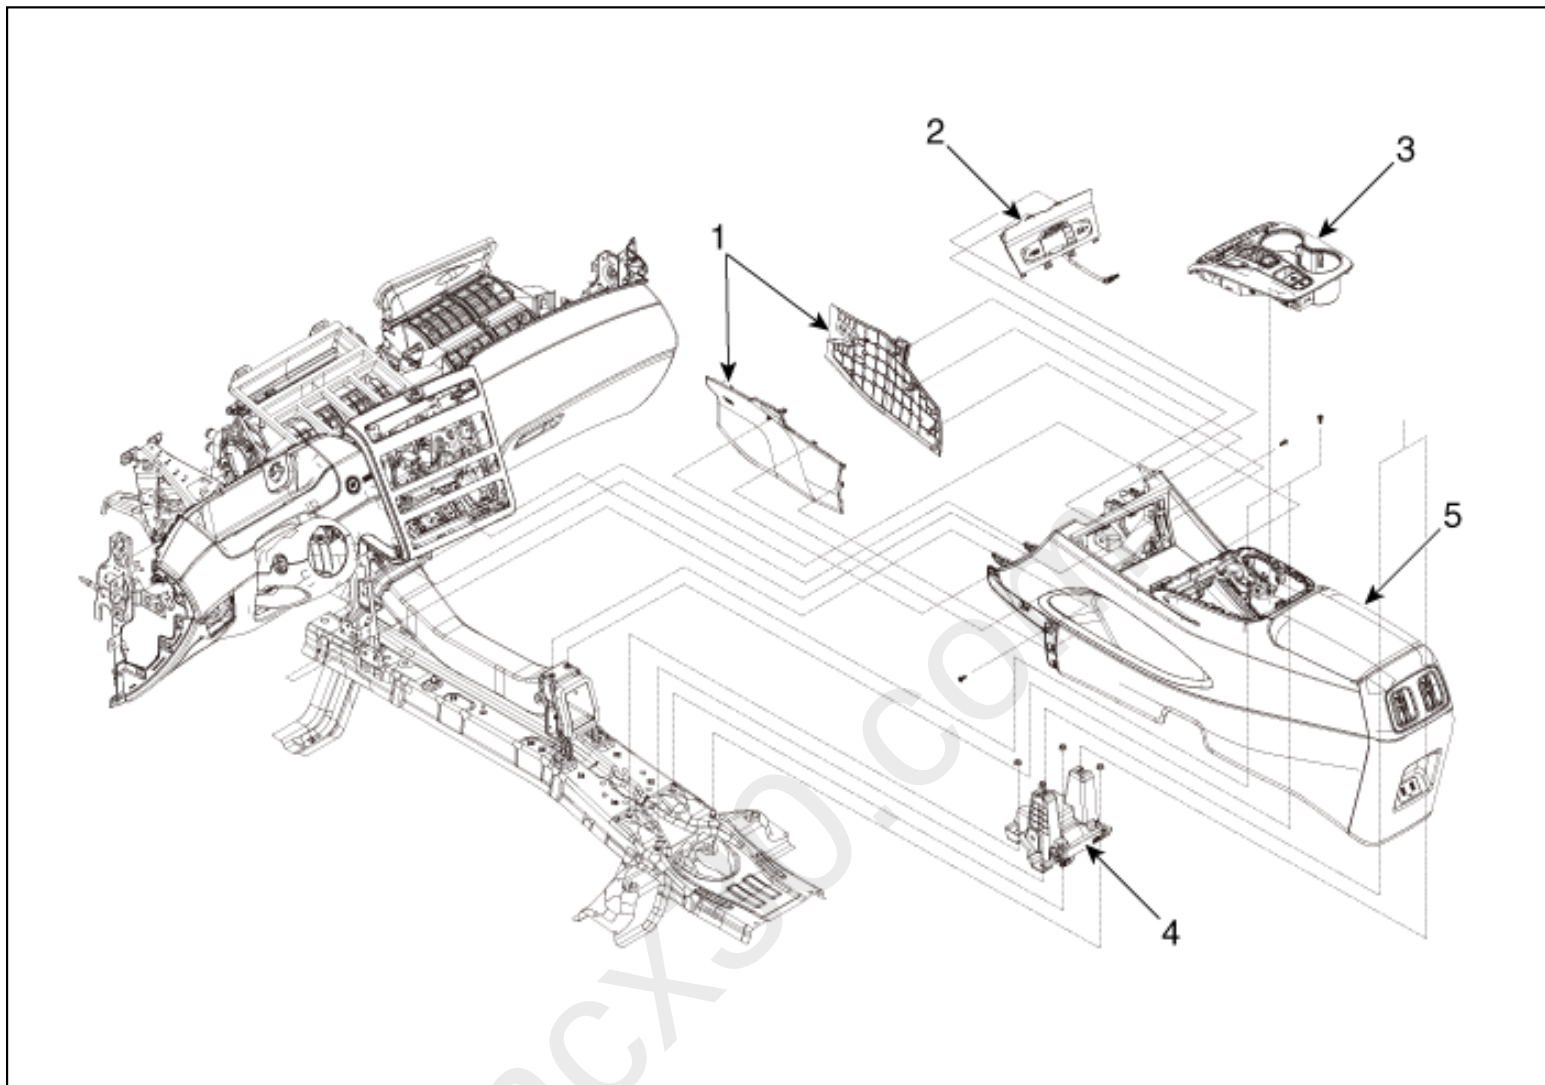

- 1. Floor console side cover
- 2. Floor console tray assembly
- 3. Floor console upper cover assembly

- 4. Floor console rear mounting bracket
- 5. Floor console assembly

Component
Location

[SBW type]



1 . Floor console assembly

[SBC type]



1. Floor console assembly

Replacement

[SBW type]




- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.




- Take care not to bend or scratch the trim and panels.

1. Disconnect the negative (-) battery terminal.
2. Remove the console upper cover (A).

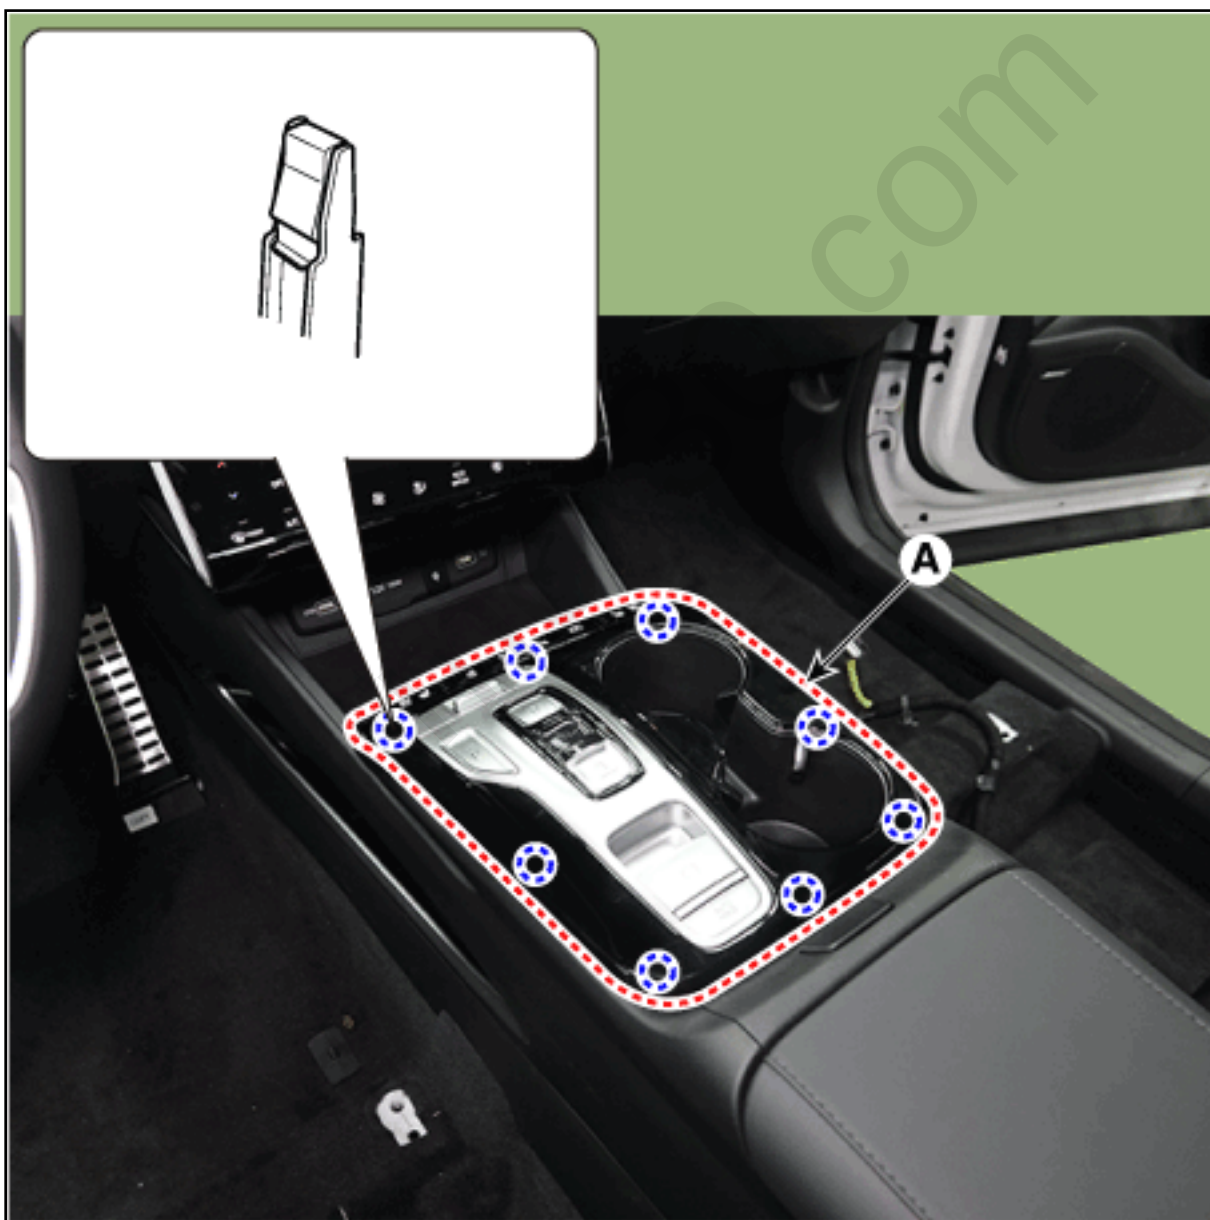


3. Disconnect the console upper cover connectors (A).

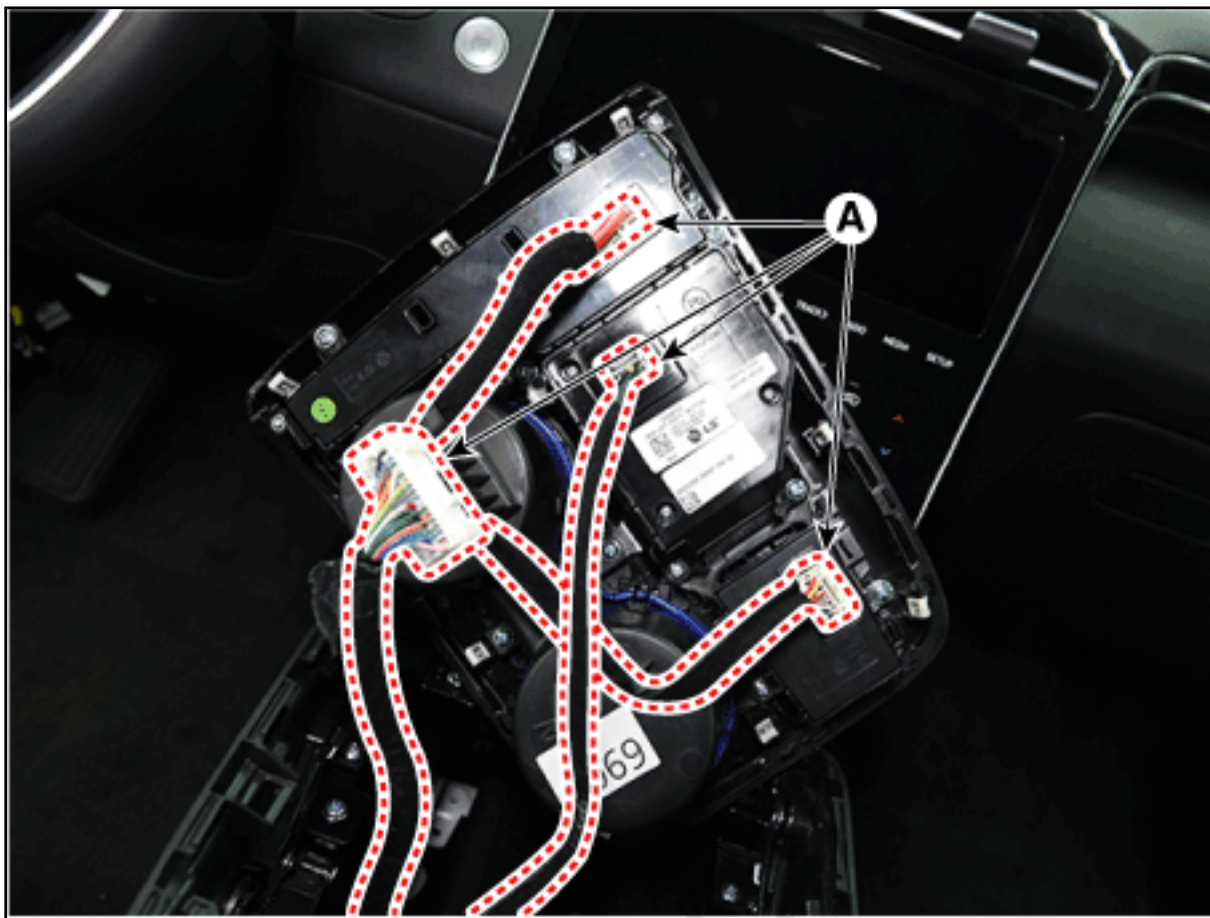


4. Remove the console side cover (A).


[LH]

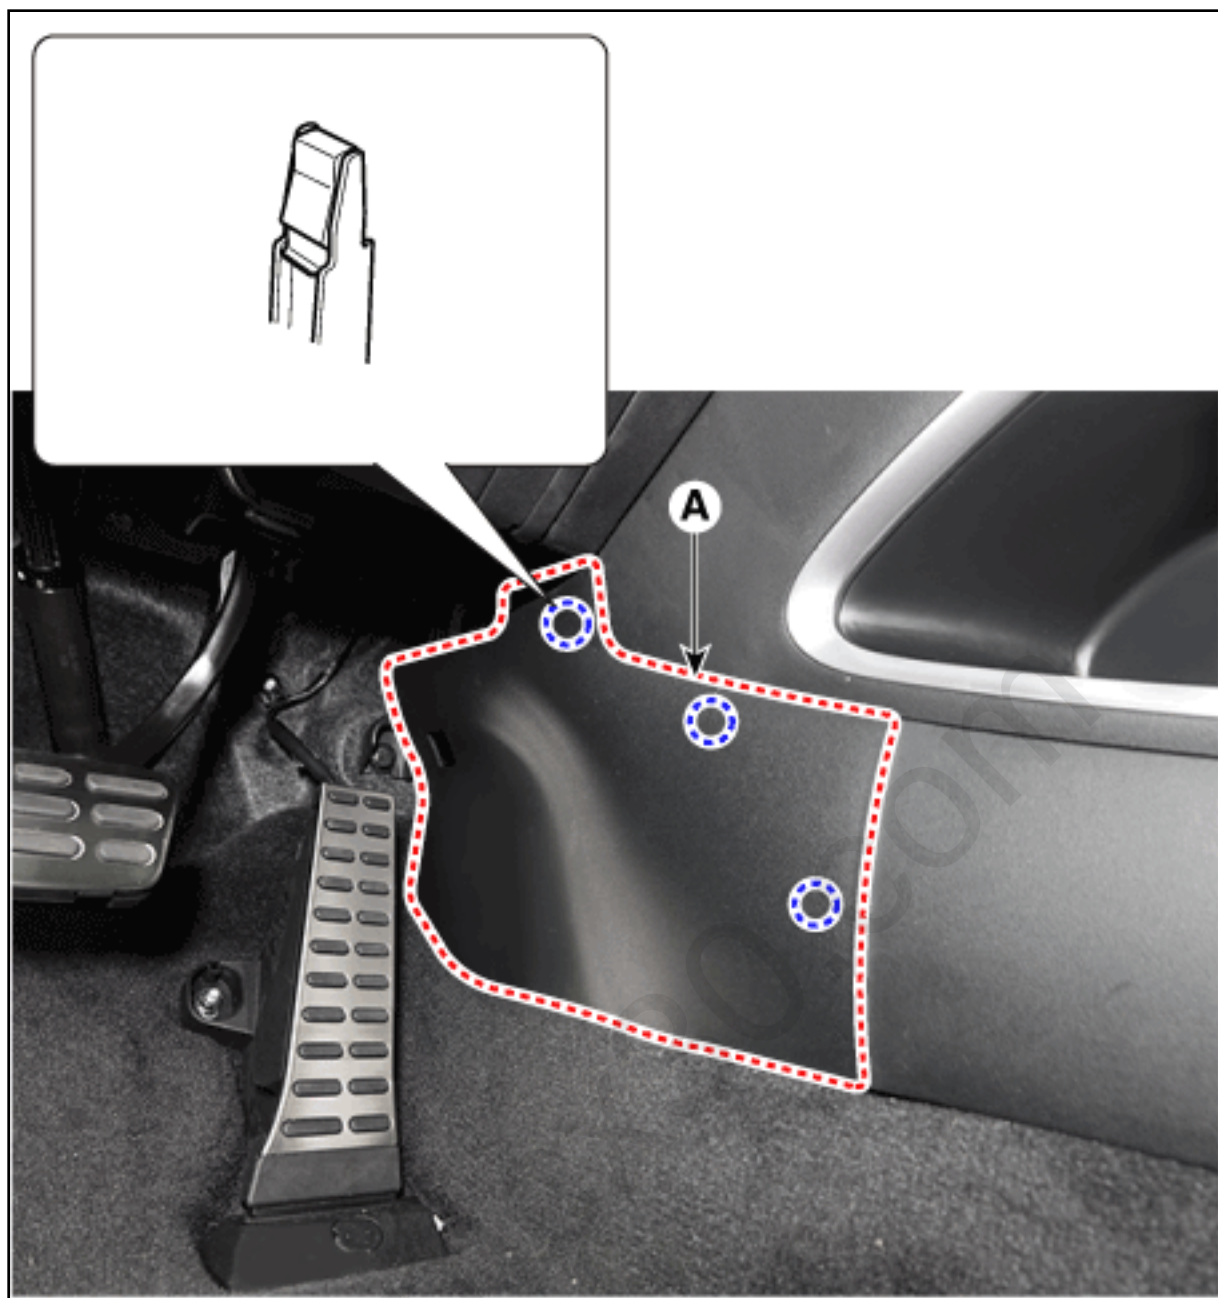


[RH]

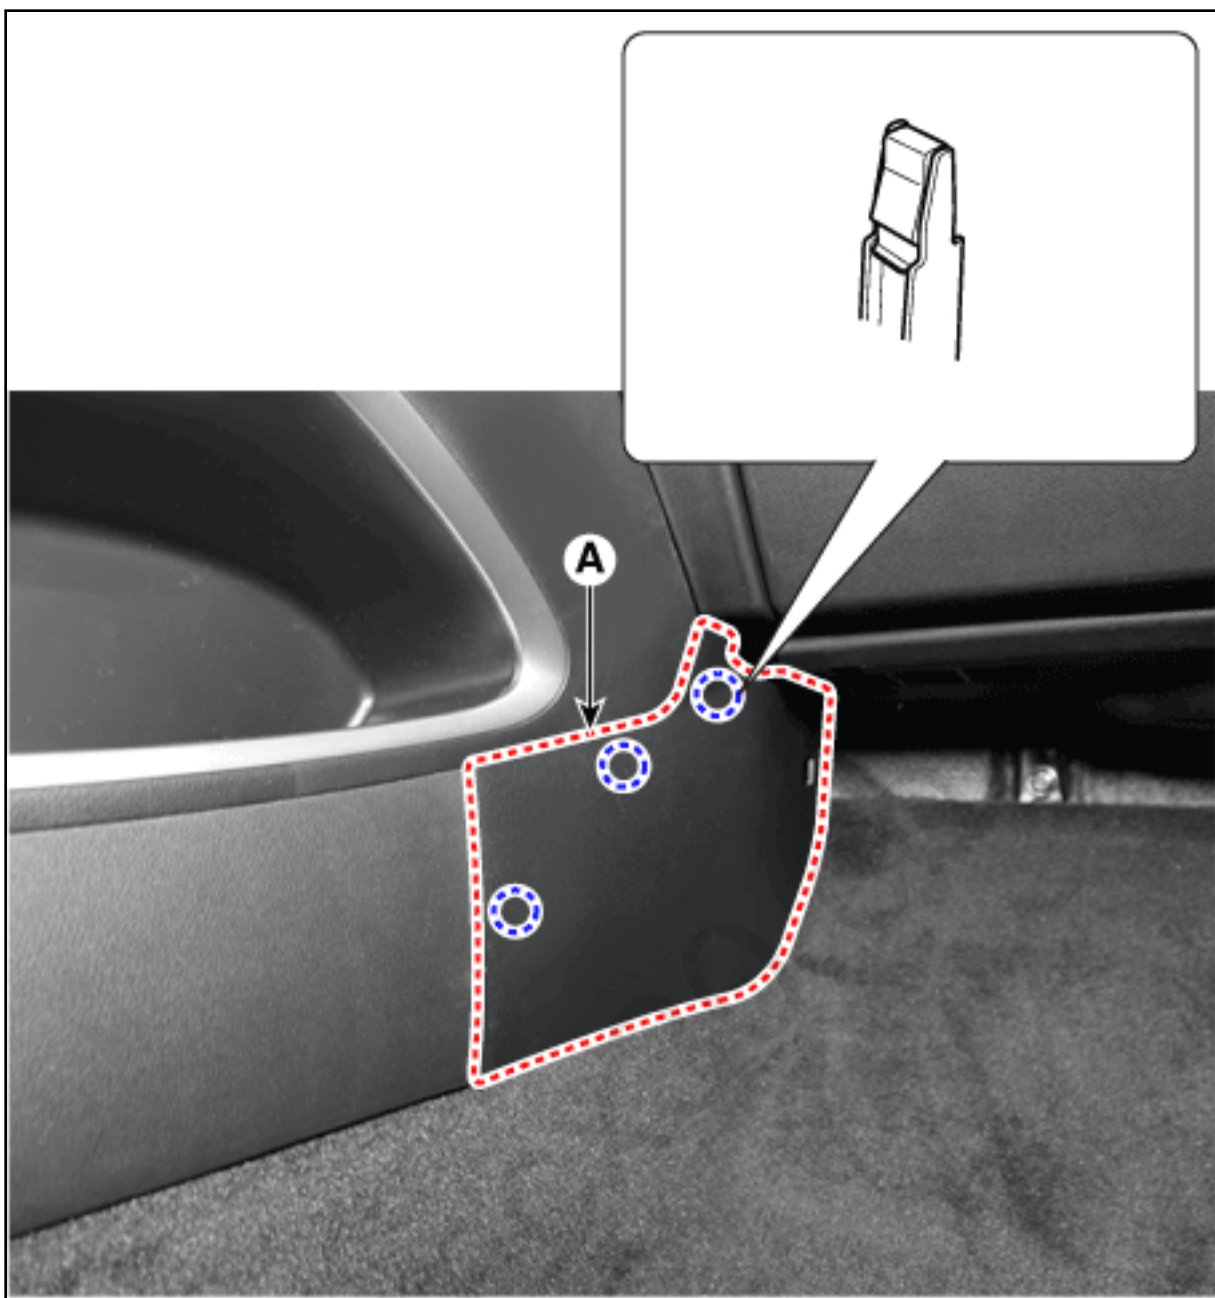


5. Remove the storage box mat (A).

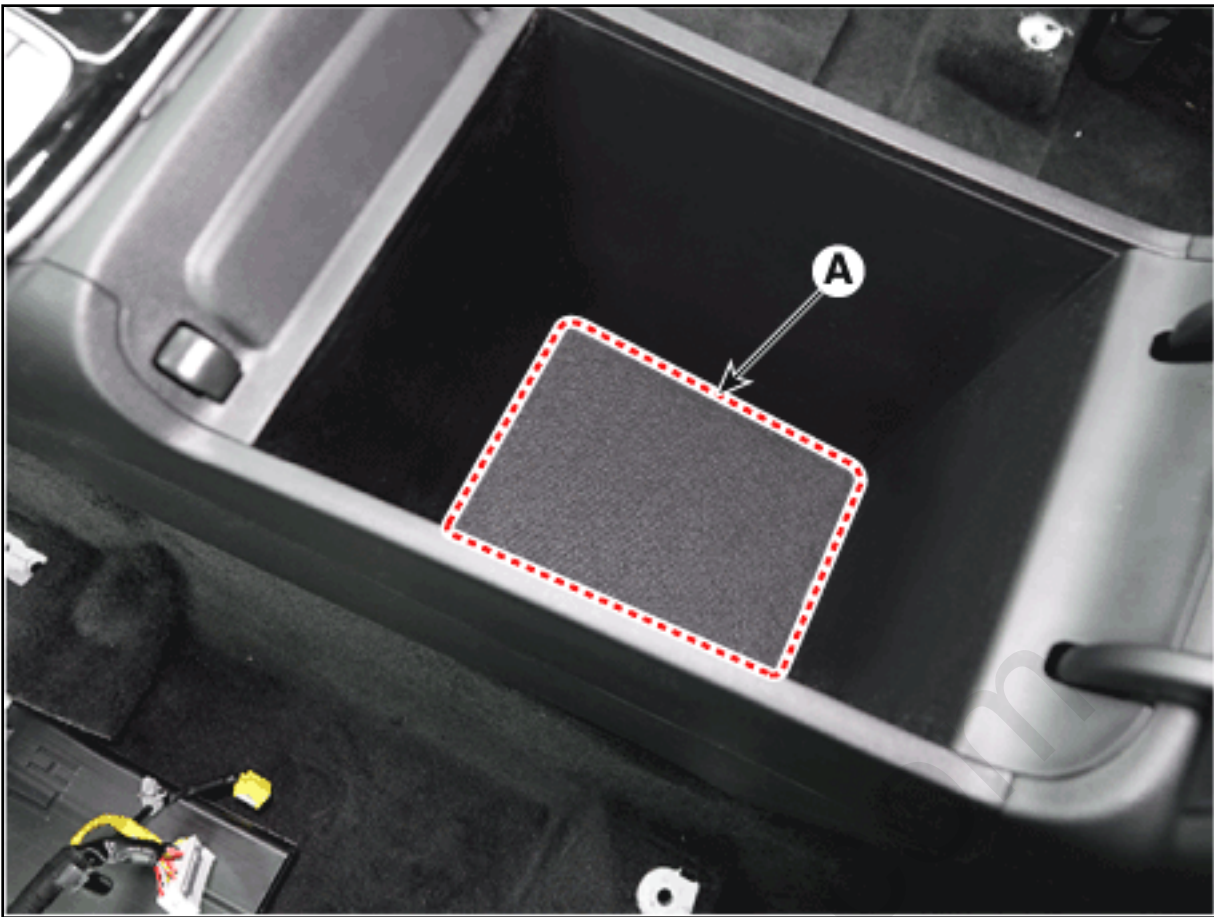

6. Loosen the mounting bolts and screws, remove the floor console assembly (A).

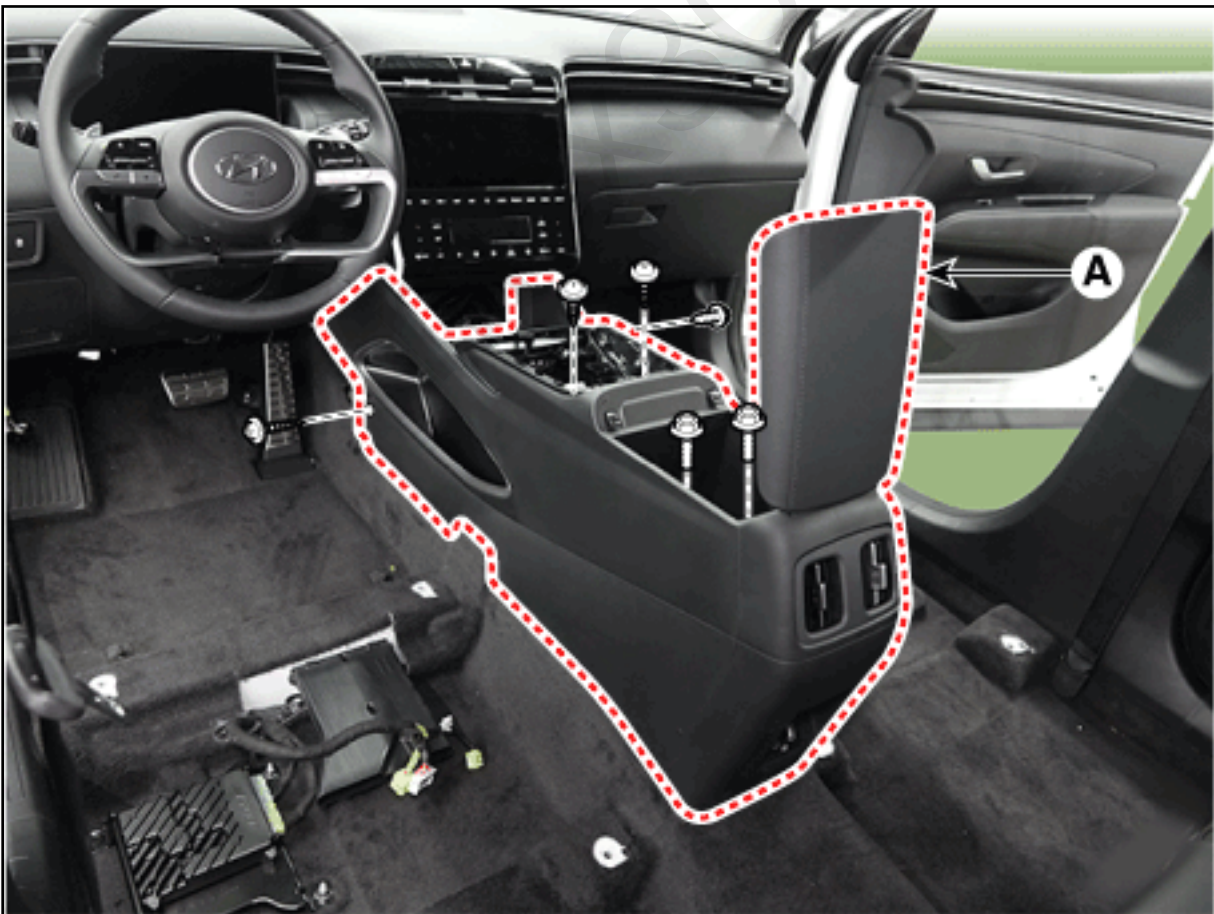

7. Disconnect the floor console connector (A).

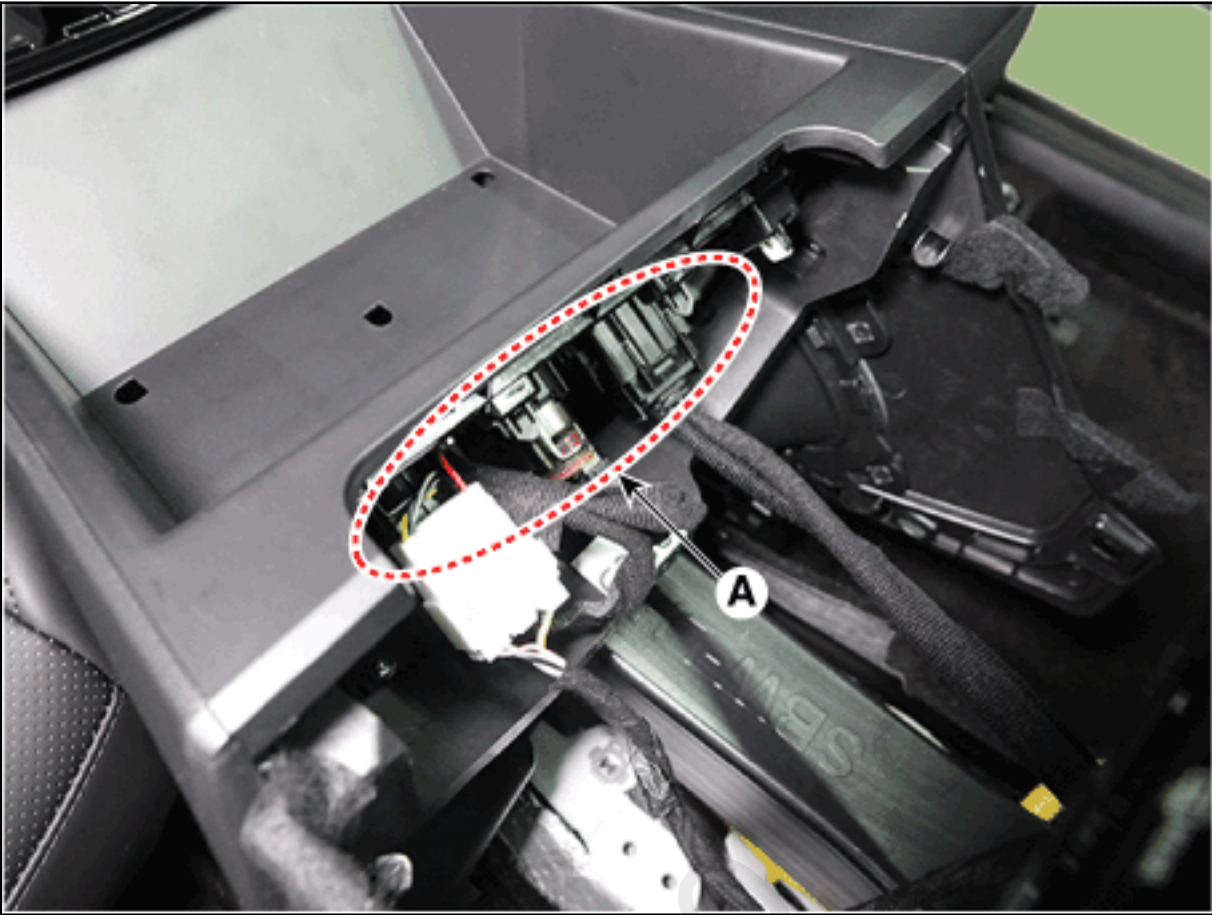

8. To install, reverse removal procedure.



- Make sure the connector is connected properly.
- Replace any damaged clips (or pin-type retainers).

[SBC type]



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.



- Take care not to bend or scratch the trim and panels.

1. Disconnect the negative (-) battery terminal.


2. Remove the console upper cover.

[AT]

(1) To remove the gear knob & gear boots (A) pull both of it up.



(2) Remove the console upper cover (A).

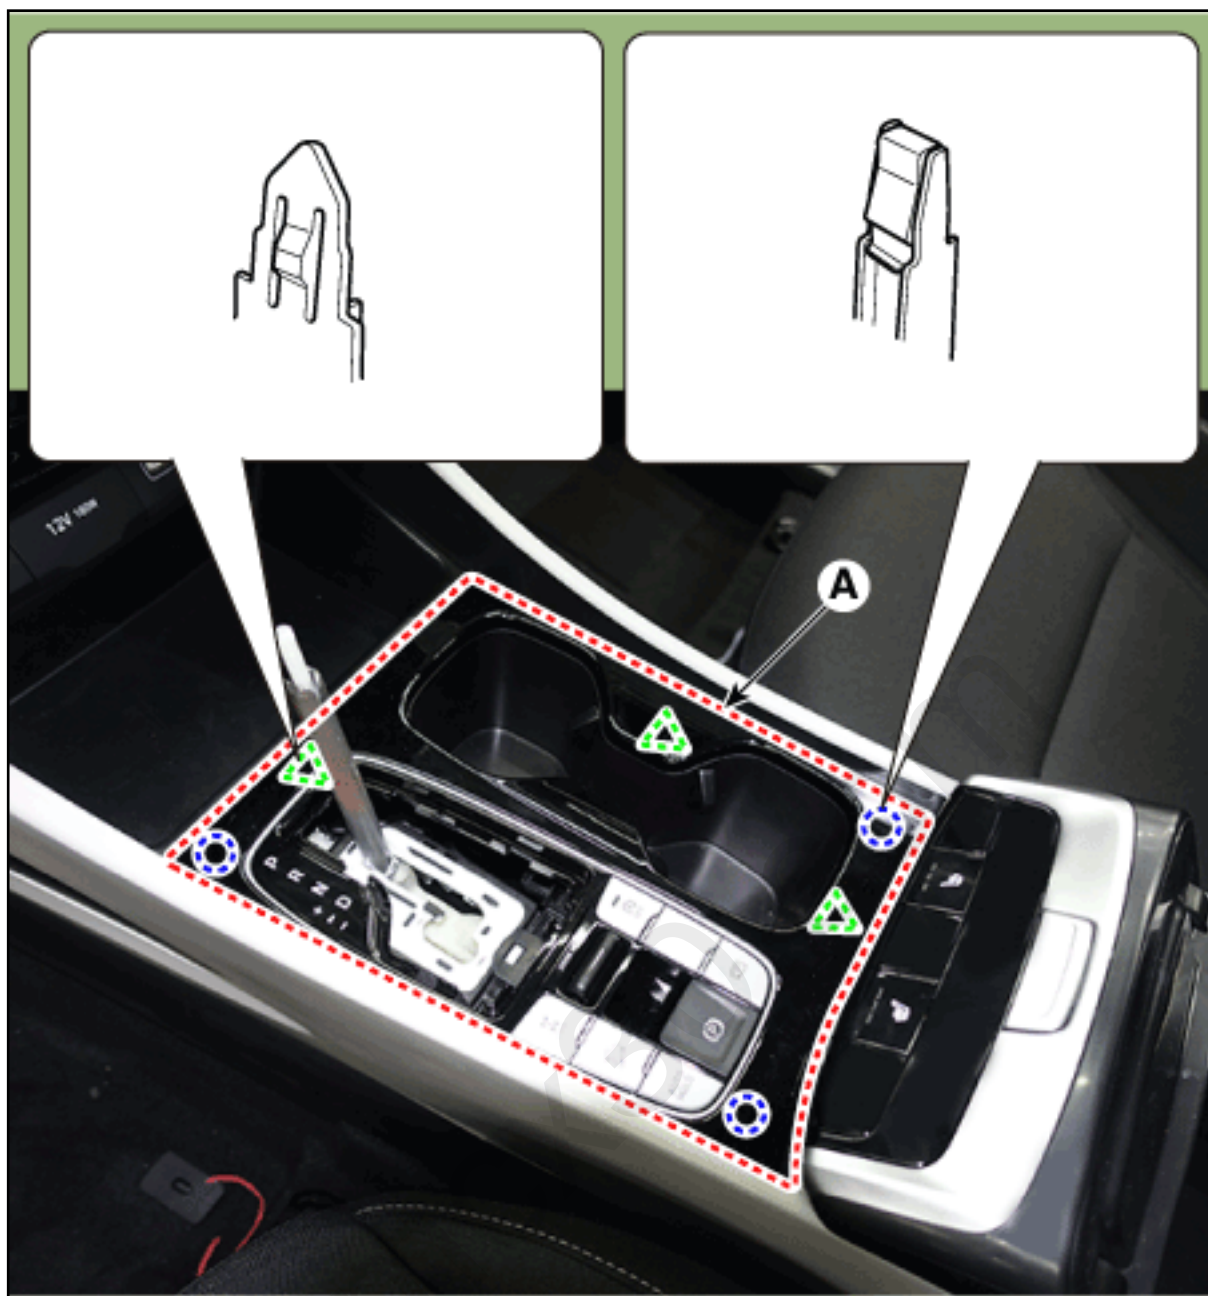

(3) Disconnect the console upper cover connector (A).



[MT]

(4) Separate the gear boots (A).




- Do not remove the gear knob (A).




(5) Remove the console upper cover (A).



(6) Disconnect the console upper cover connector (A).

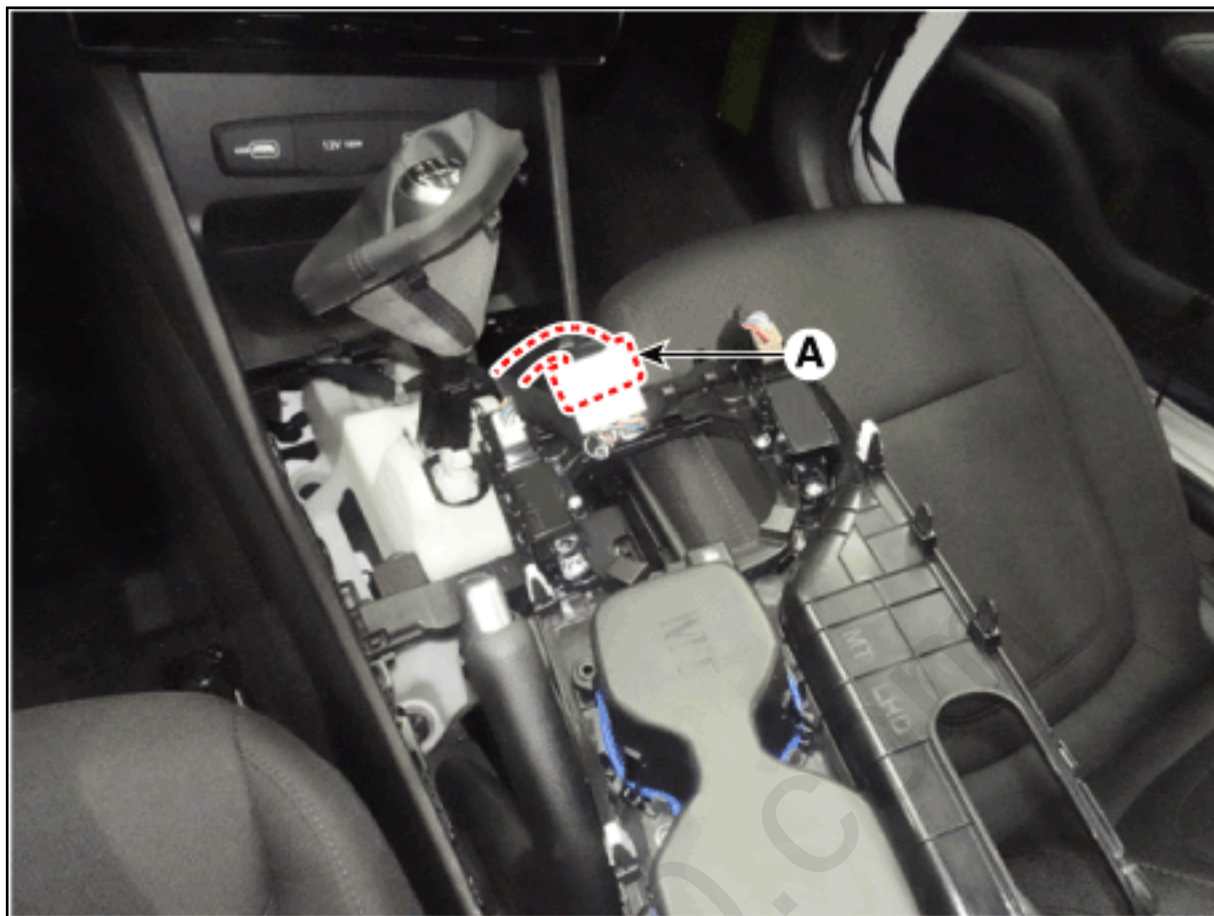

3. Remove the console tray (A).

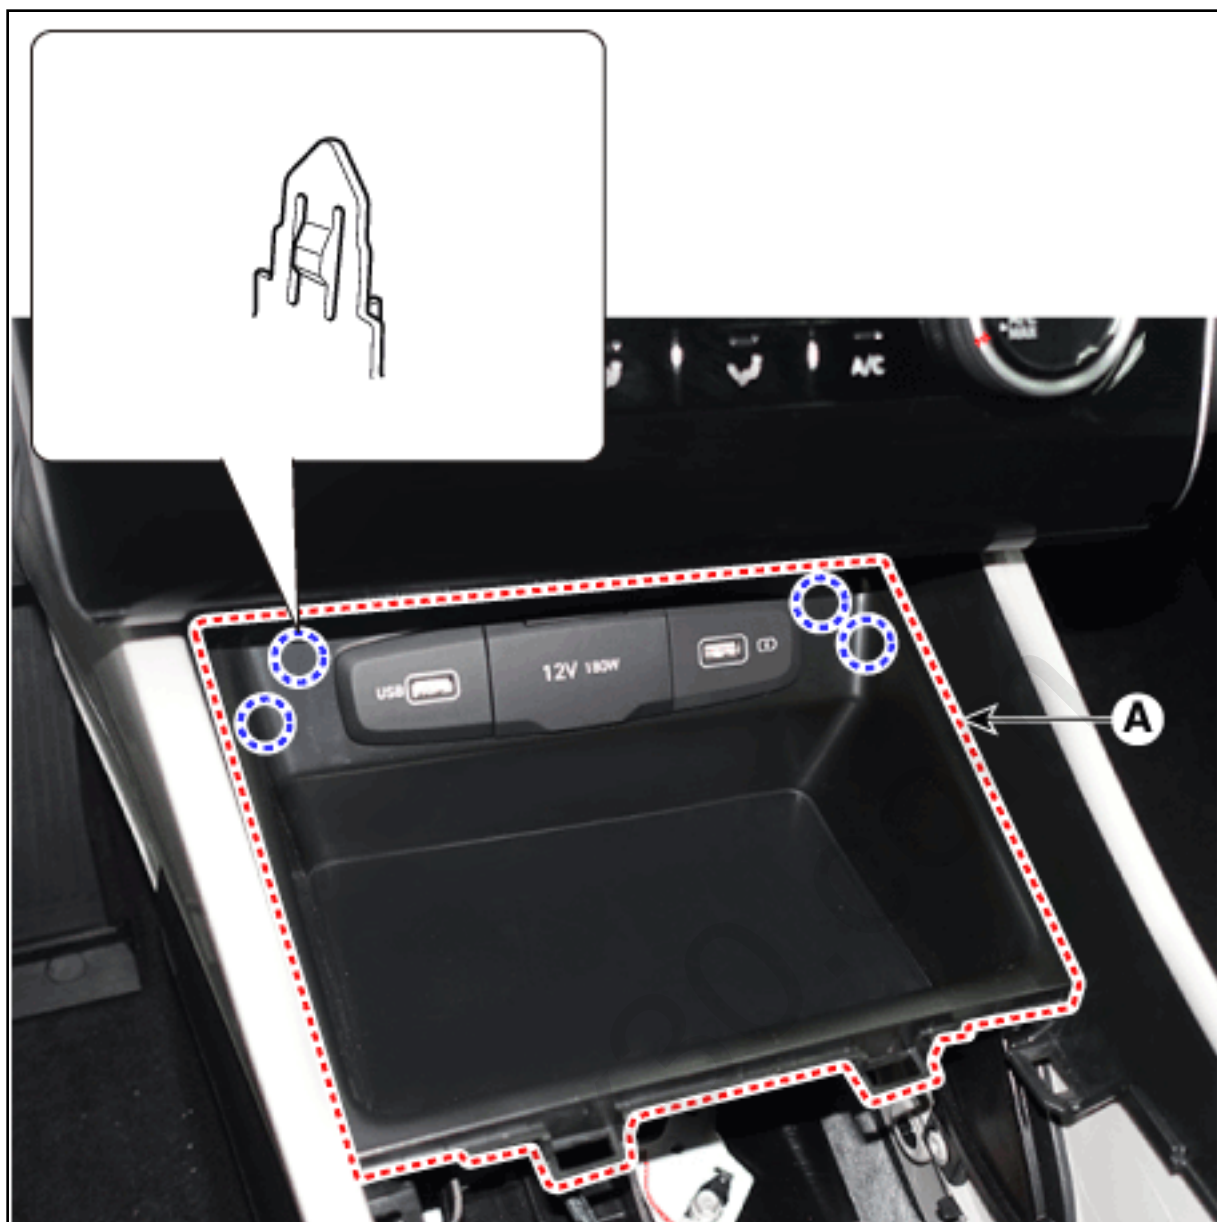


4. Disconnect the connectors (A).




5. Remove the console side cover (A).


[LH]

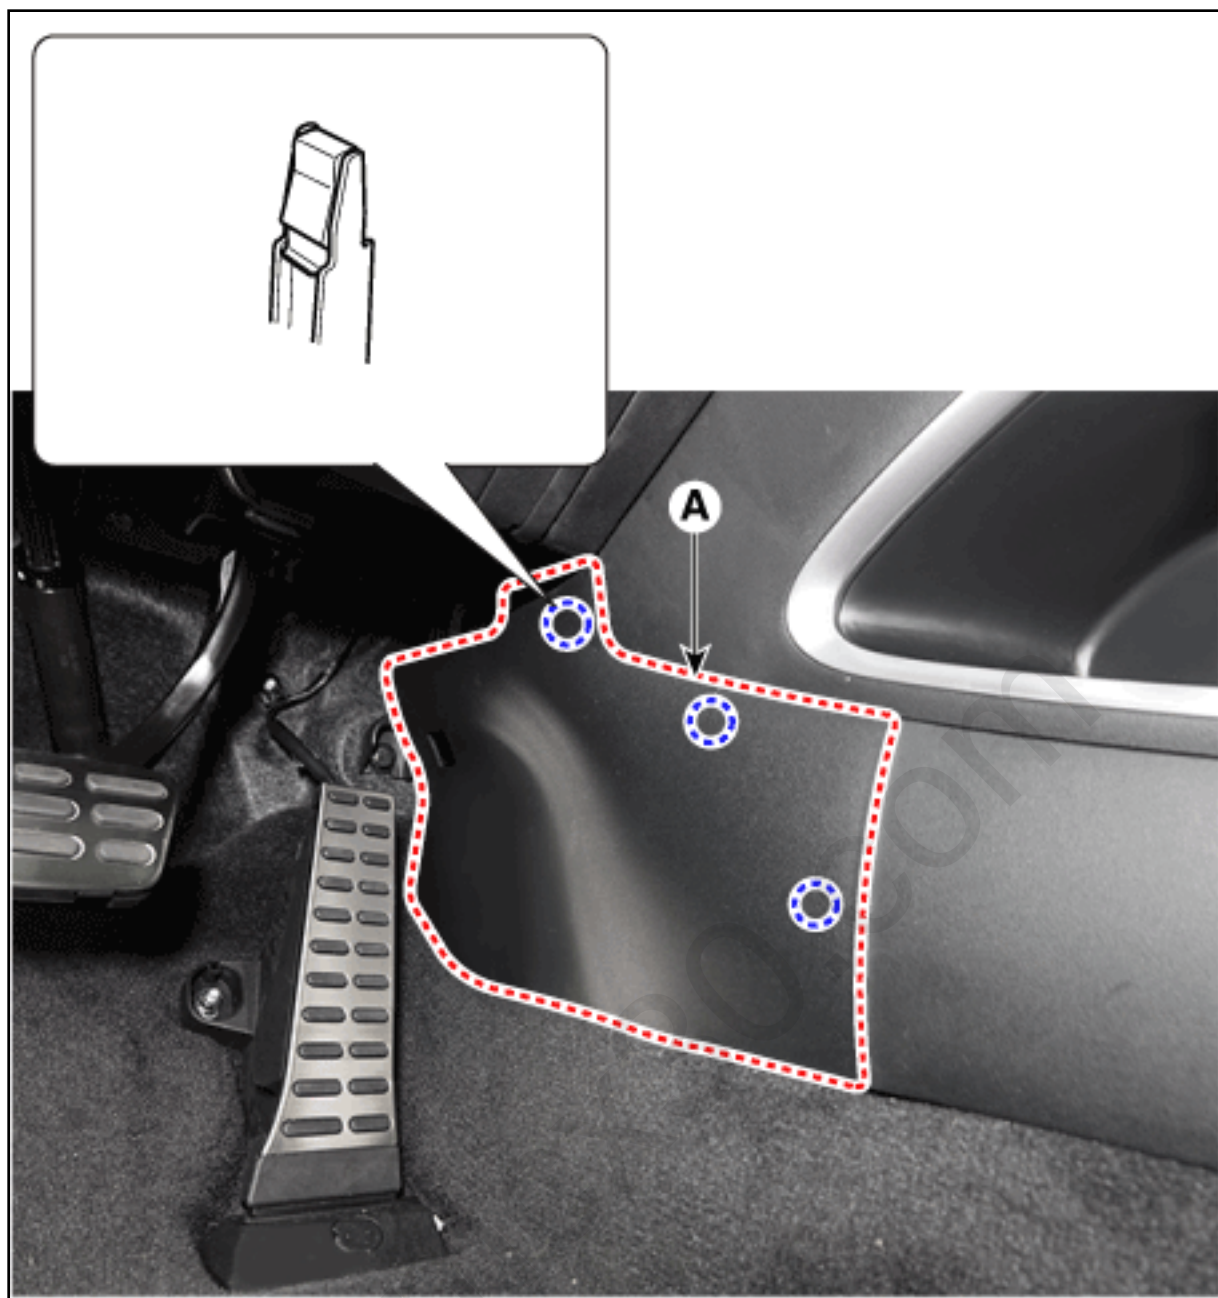


[RH}

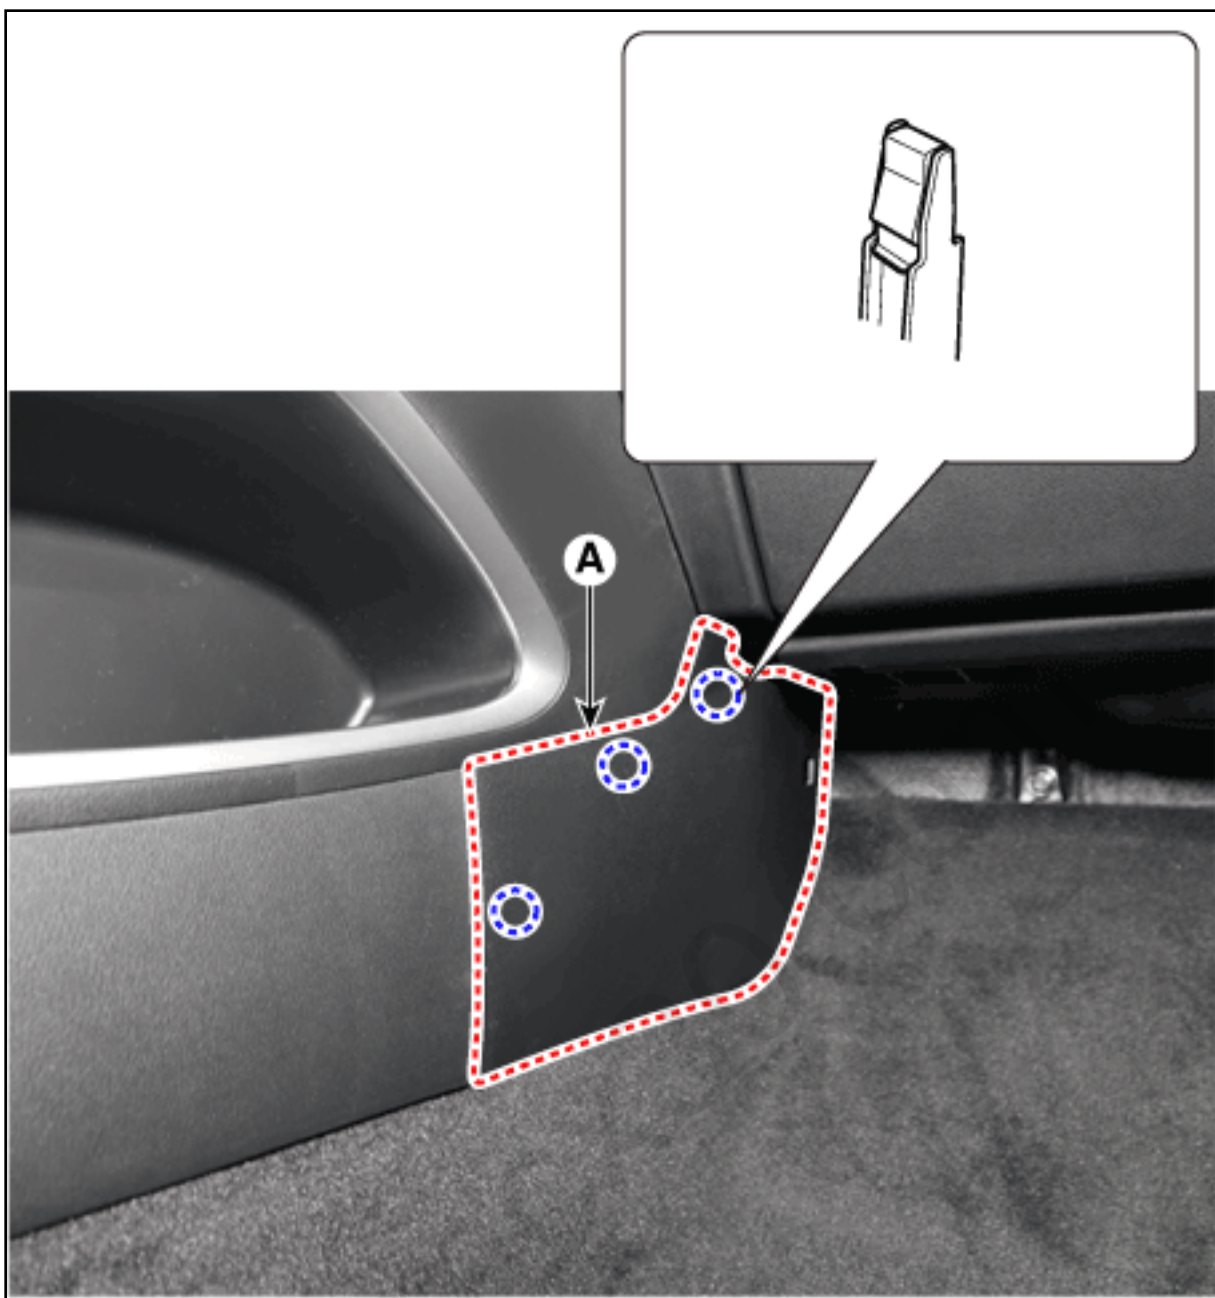


6. Remove the storage box mat (A).

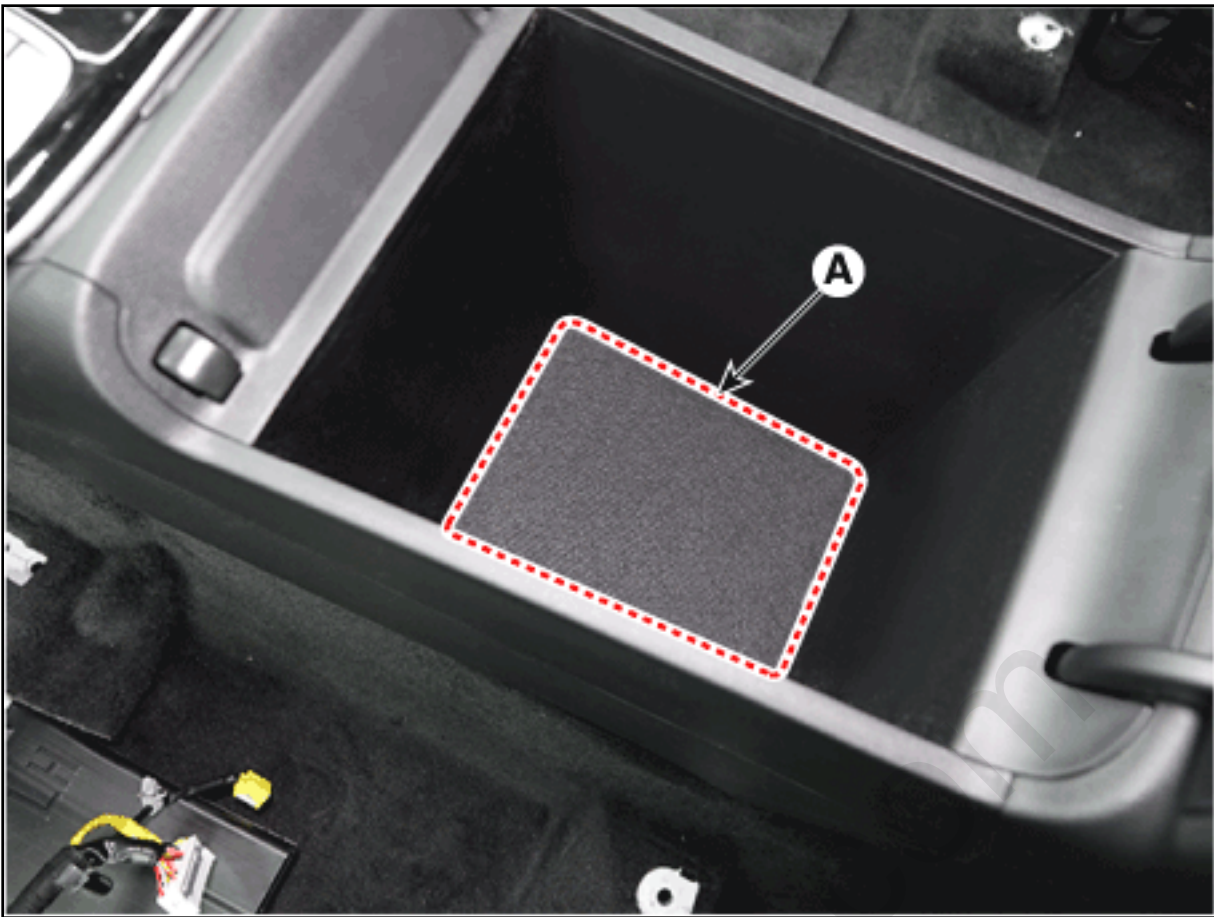

7. Disconnect the connector (A).

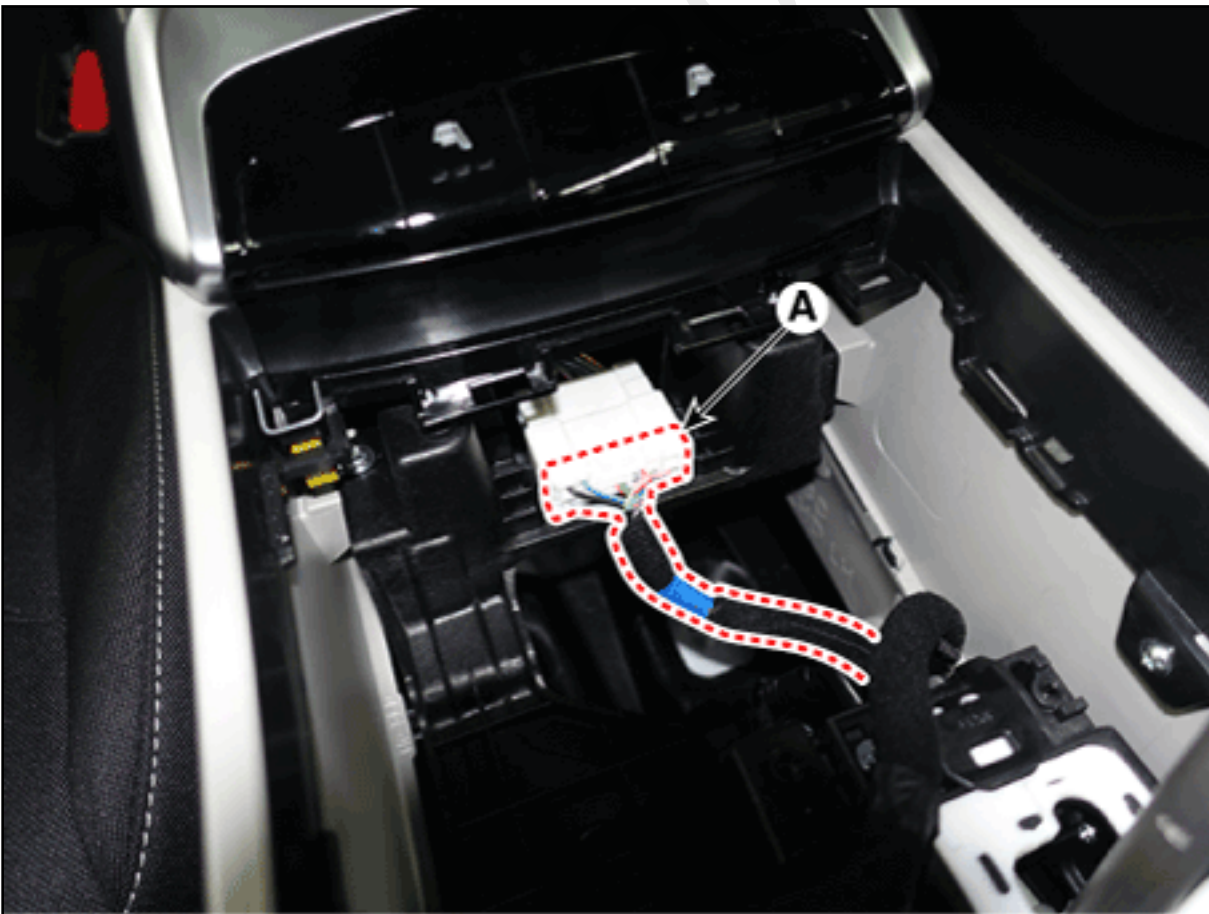

8. Loosen the mounting bolts and screws, remove the floor console assembly (A)

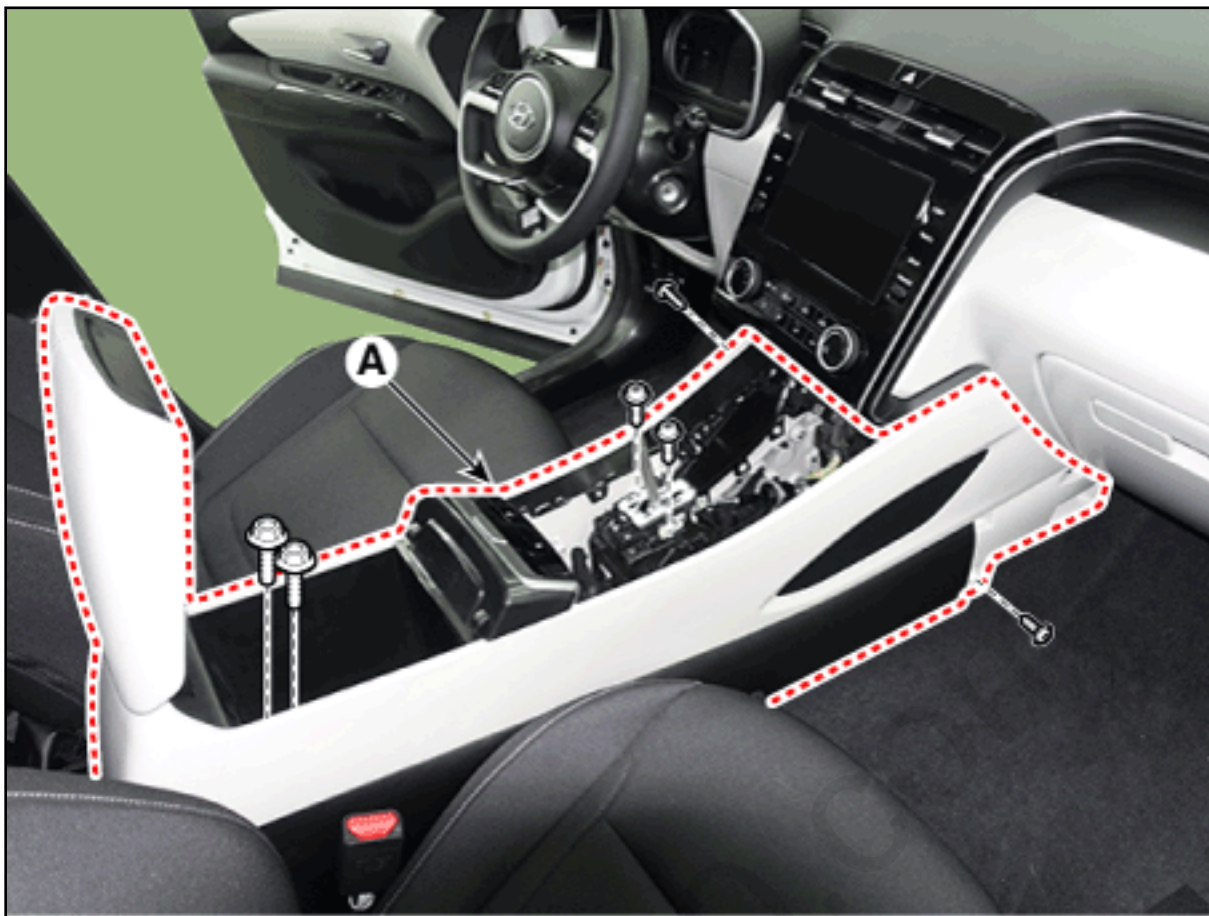


9. To install, reverse removal procedure.



- Make sure the connector is connected properly.
- Replace any damaged clips (or pin-type retainers).

Component
Location

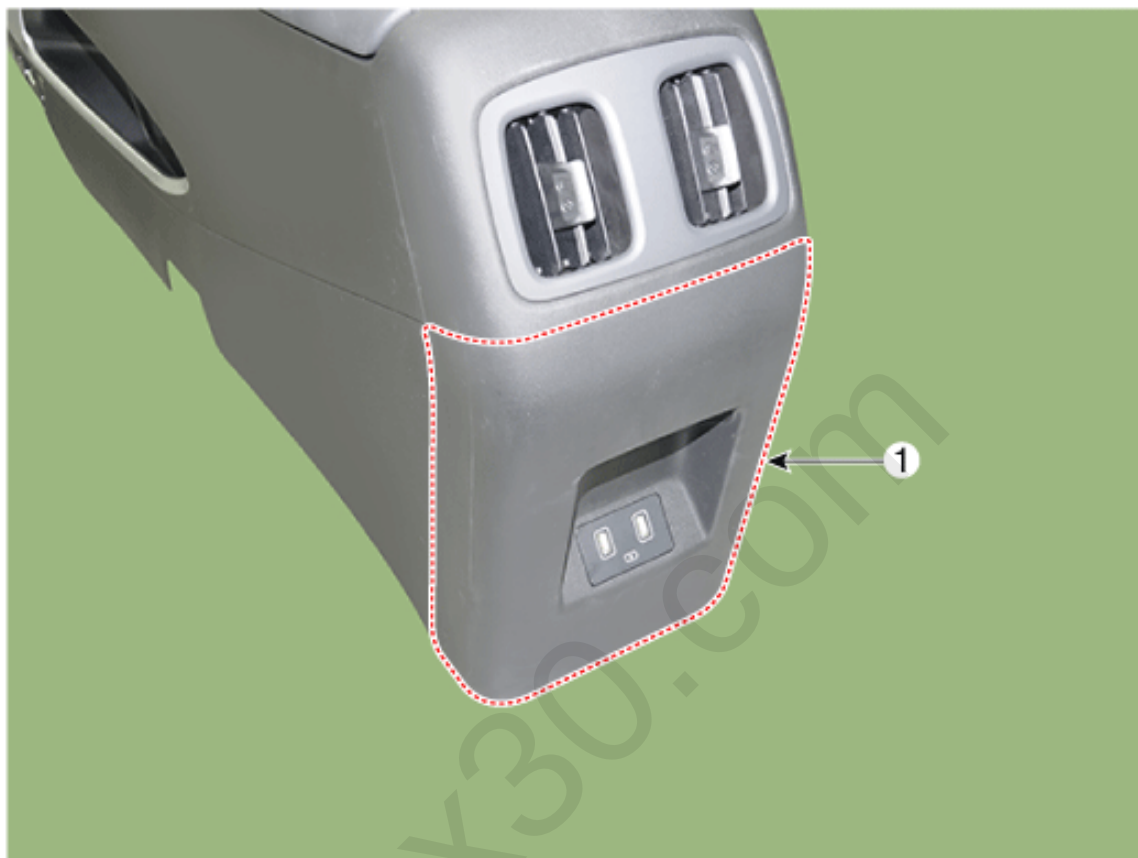

1. Rear console cover

Replacement




- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.




- Take care not to bend or scratch the trim and panels.

1. Remove the floor console assembly.
(Refer to Floor Console - "Floor Console Assembly")
2. Loosen the mounting screws, disconnect the rear console cover connector (A).

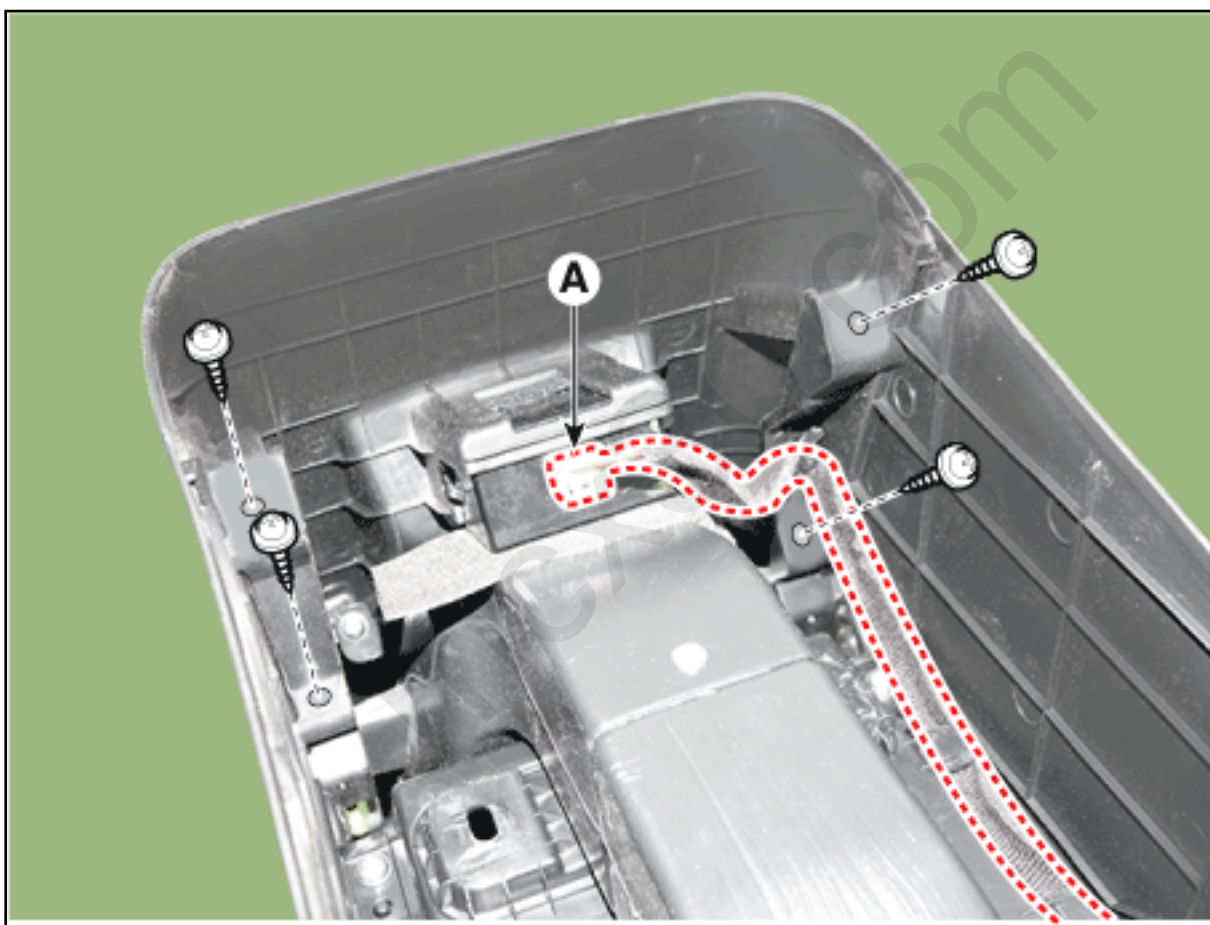

3. Remove the rear console cover (A).

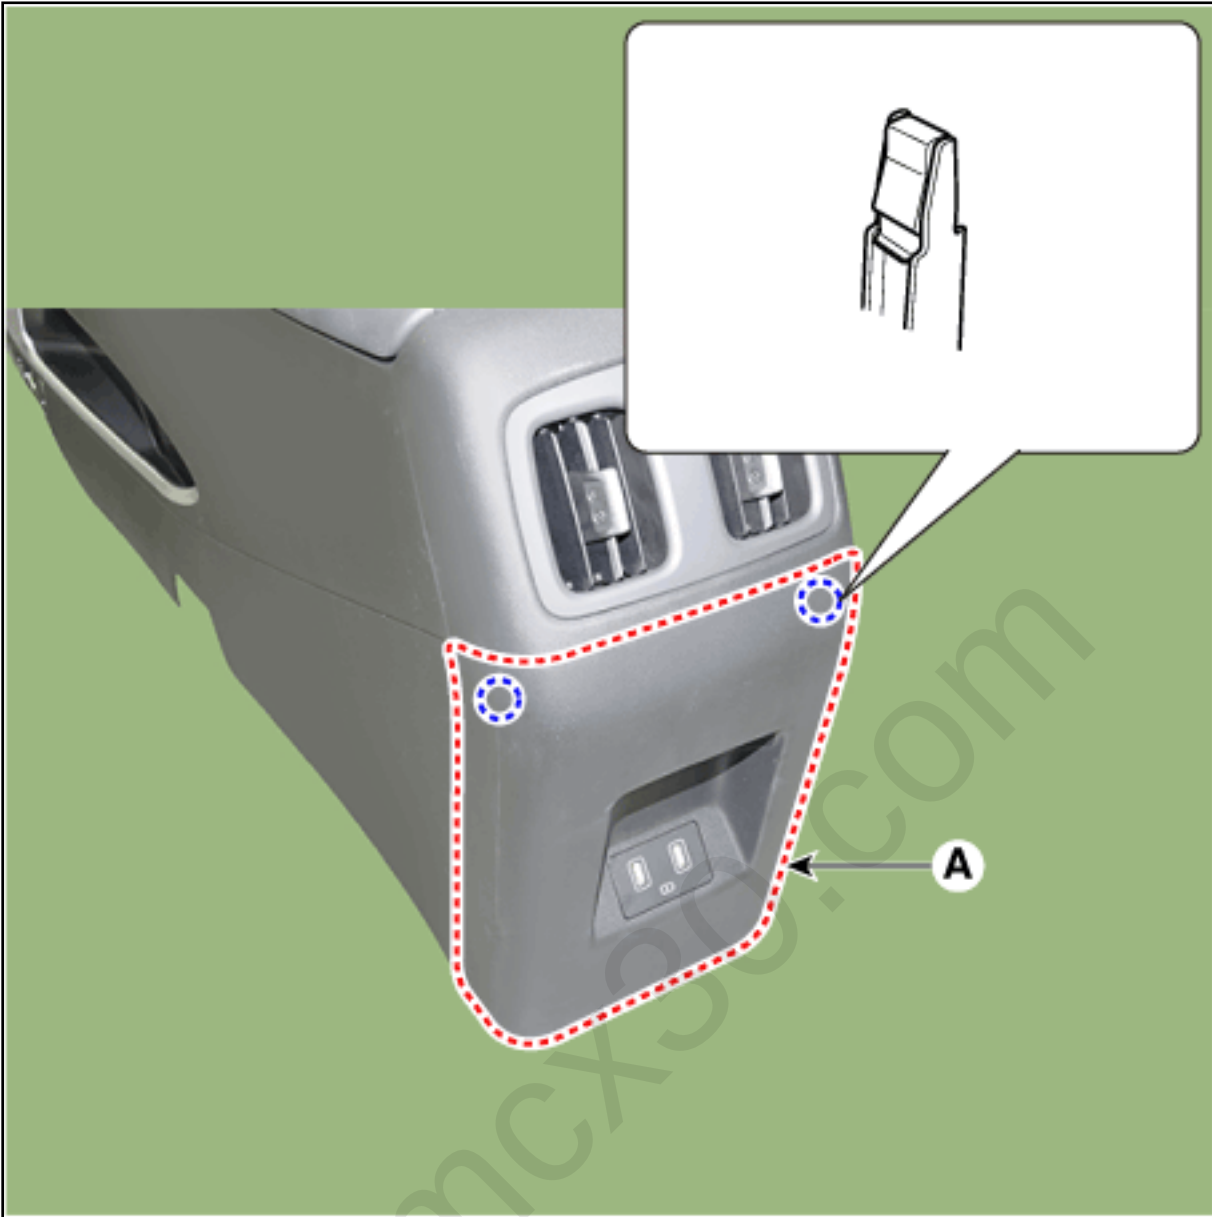


4. To install, reverse removal procedure.



- Make sure the connector is connected properly.
- Replace any damaged clips (or pin-type retainers).

Component
Location

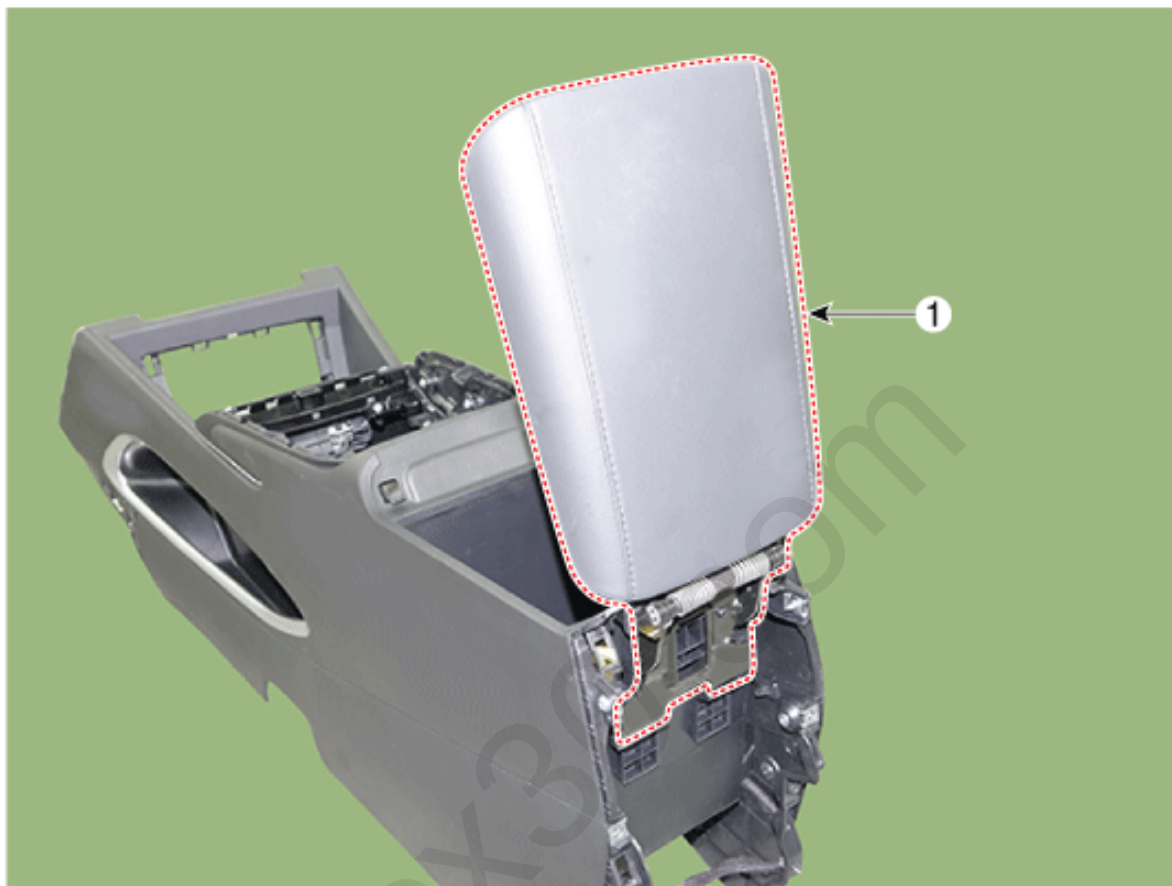

1. Console armrest

Replacement



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.




- Take care not to bend or scratch the trim and panels.


1. Remove the rear console cover.

(Refer to Floor Console - "Rear Console Cover")


2. Loosen the mounting screws, remove the rear console duct (A).

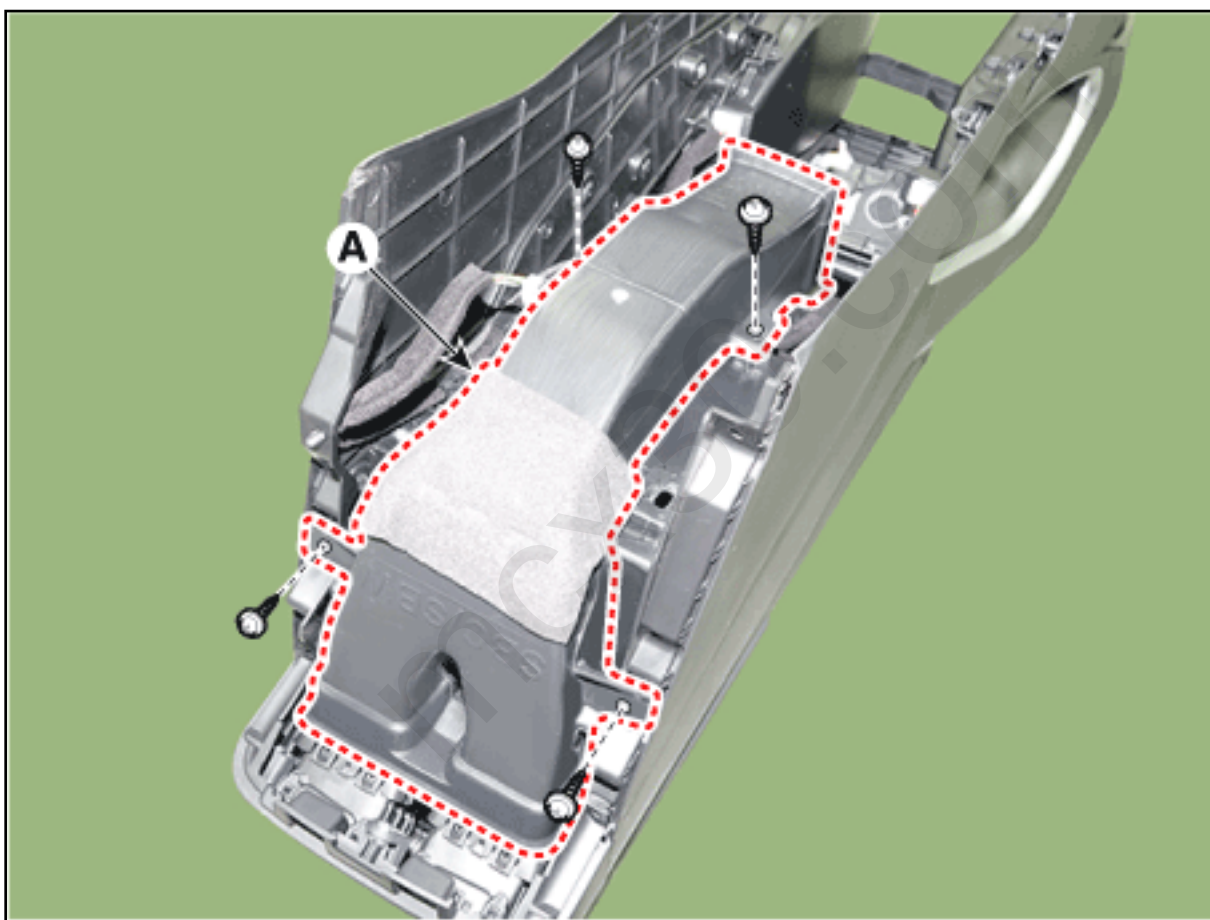

3. Loosen the mounting screws, remove the rear console duct (A).

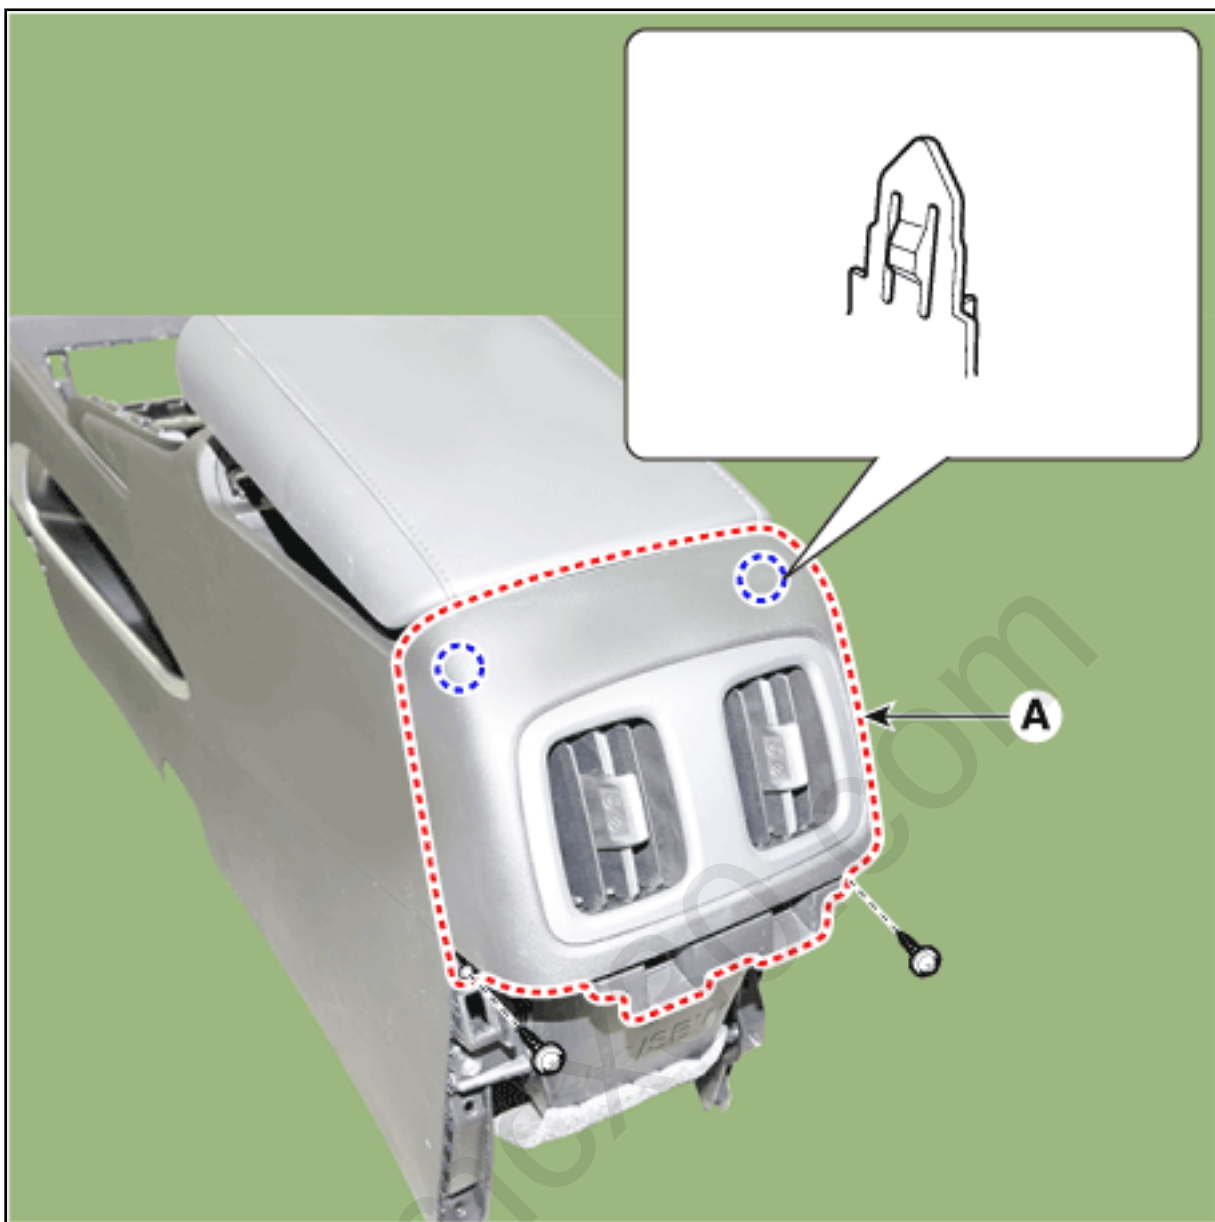

4. Loosen the mounting screws, remove the console armrest (A).

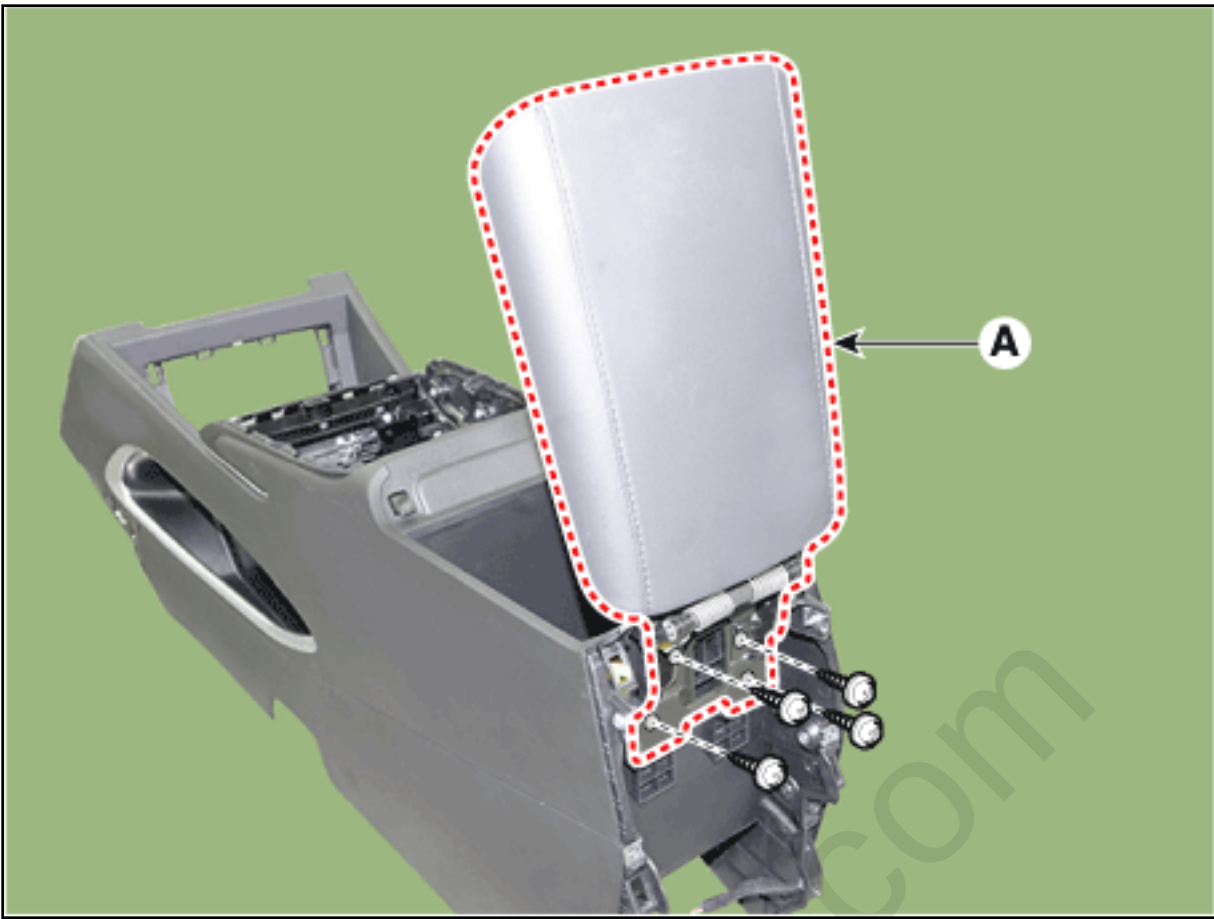

5. To install, reverse removal procedure.



- Replace any damaged clips (or pin-type retainers).