



Components

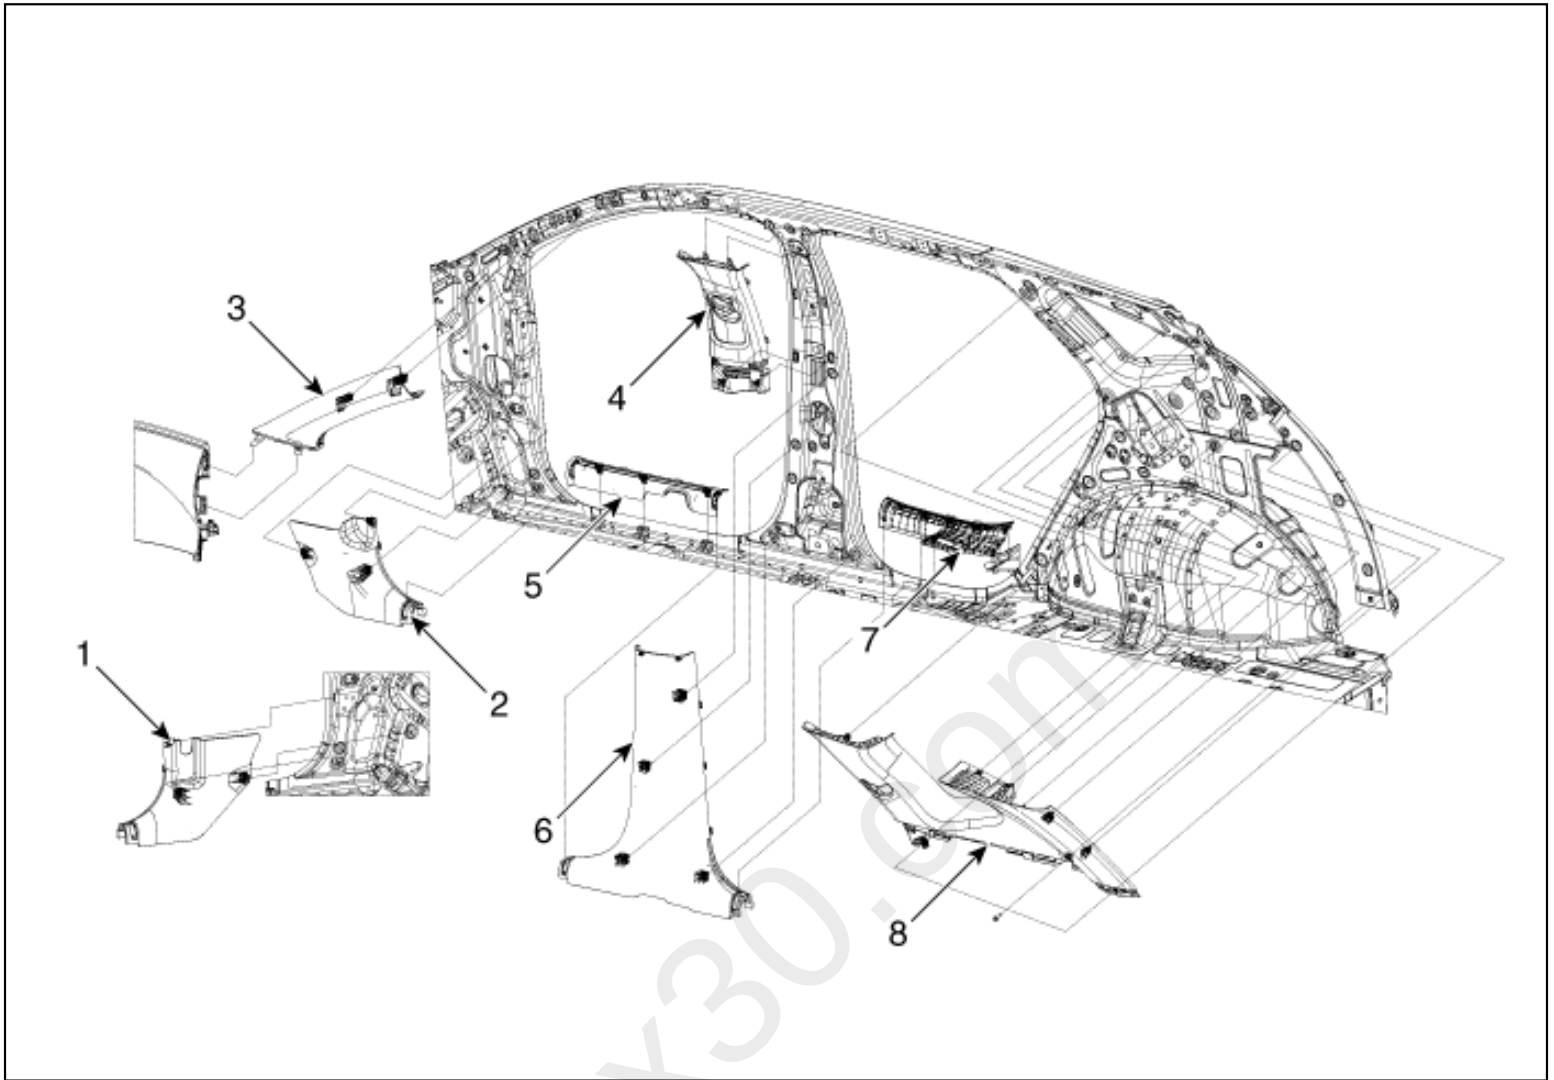

- 1. Cowl side trim [LH]
- 2. Cowl side trim [RH]
- 3. Front pillar trim
- 4. Center pillar upper trim

- 5. Front door scuff trim
- 6. Center pillar lower trim
- 7. Rear door scuff trim
- 8. Rear pillar trim

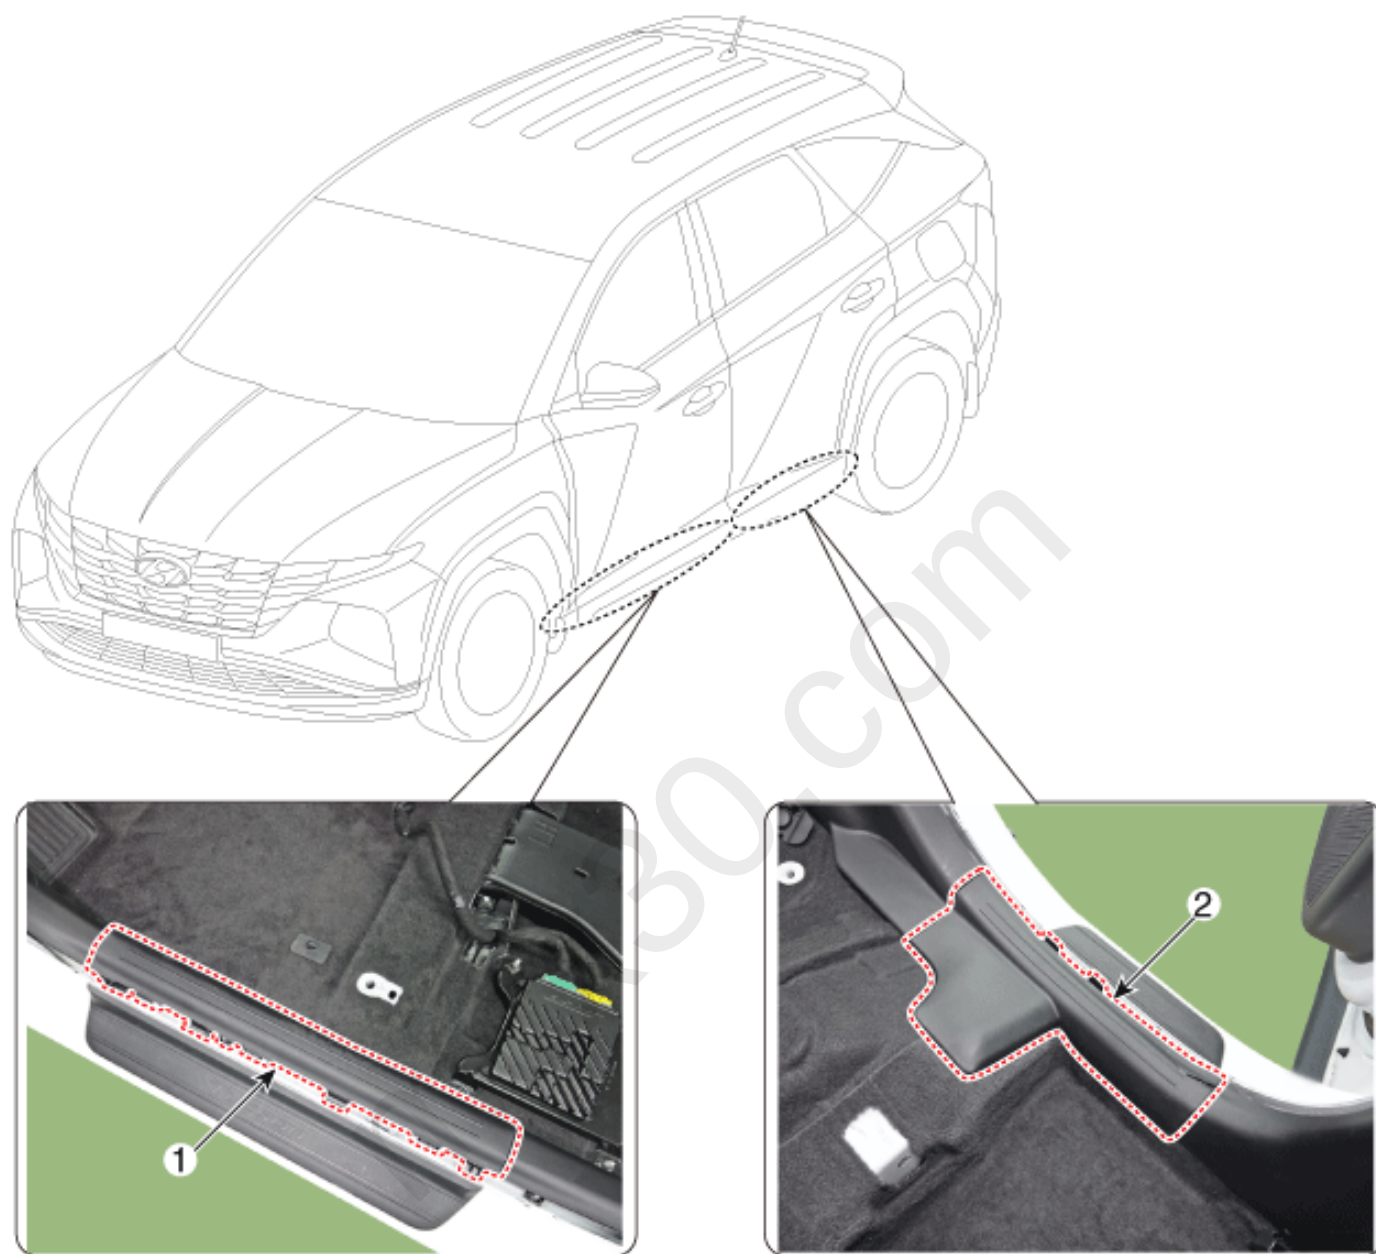

1. Front door scuff trim

2. Rear door scuff trim

Replacement

[Front door scuff trim]




- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.



- Take care not to bend or scratch the trim and panels.

1. Remove the front door body side weatherstrip.
(Refer to Front Door - "Front Door Side Weatherstrip")
2. Using a screwdriver or remover and remove the front door scuff trim (A).

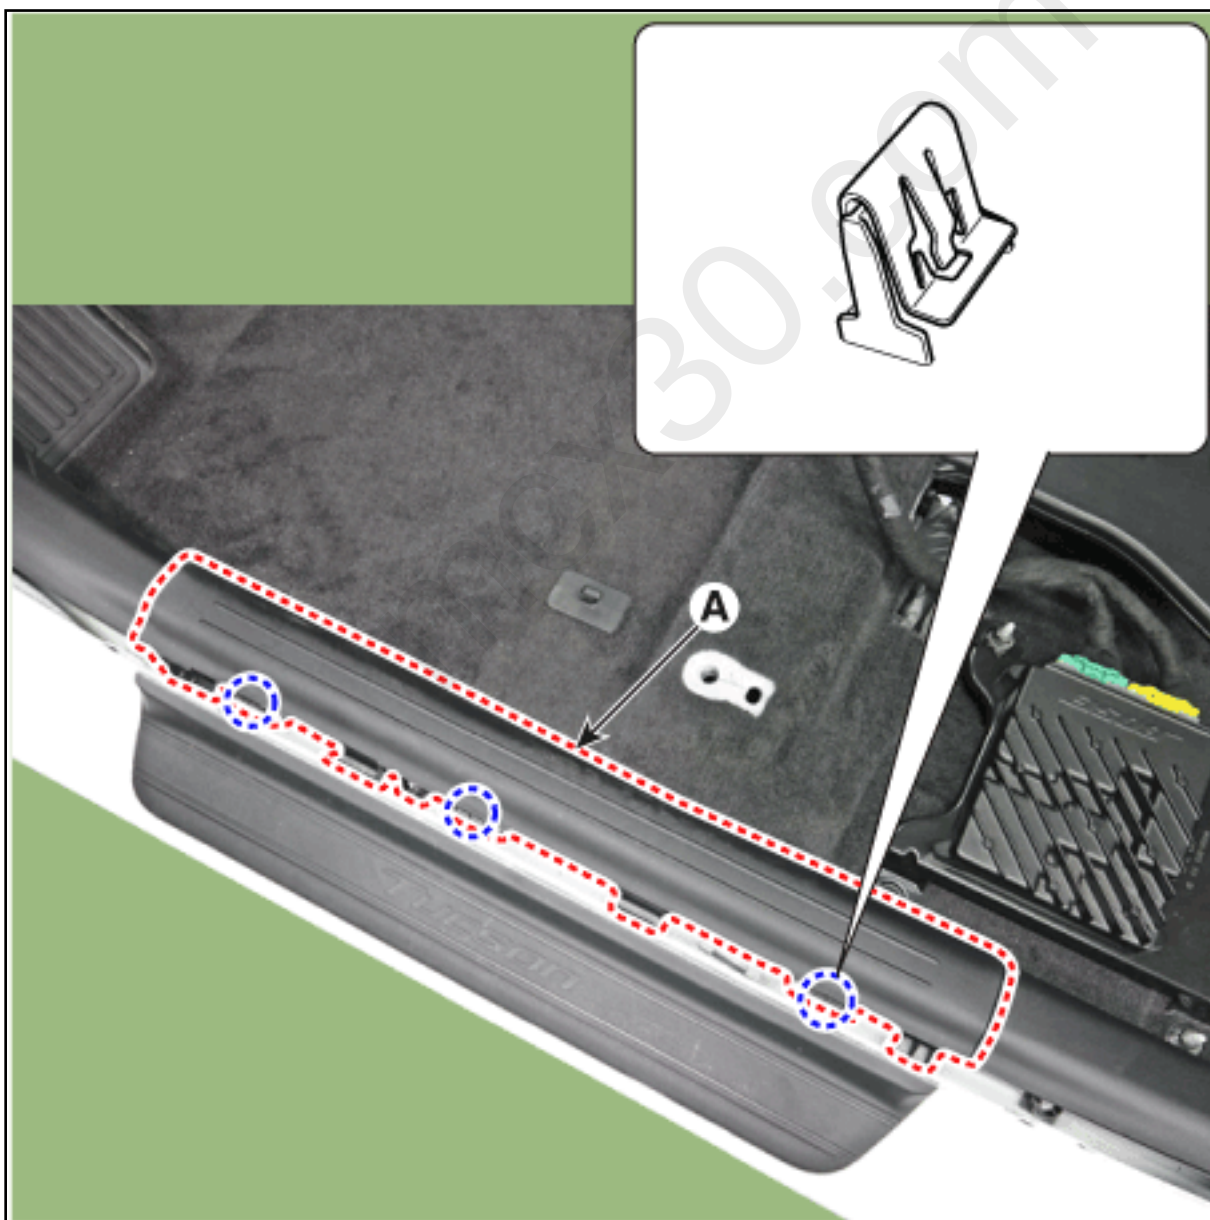

3. To install, reverse removal procedure.



- Replace any damaged clips (or pin-type retainers).

[Rear door scuff trim]




- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.



- Take care not to bend or scratch the trim and panels.

1. Remove the rear door body side weatherstrip.
(Refer to Rear Door - "Rear Door Side Weatherstrip")
2. Remove the rear seat assembly.
(Refer to Rear Seat - "Rear Seat Assembly")
3. Using a screwdriver and remove the rear door scuff trim (A).

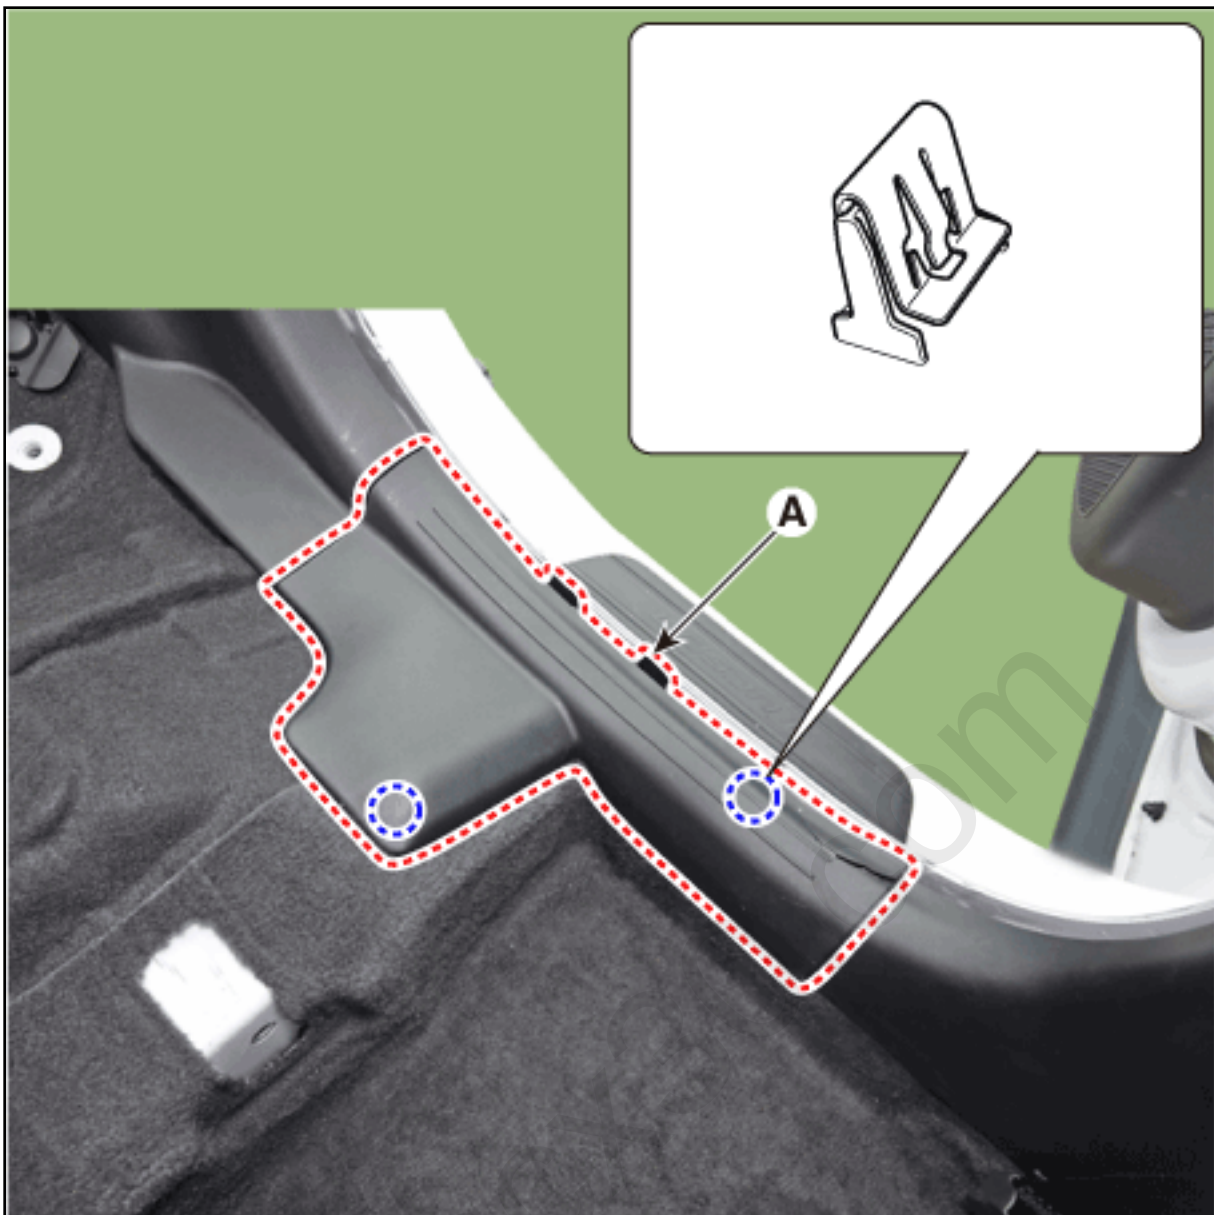


4. To install, reverse removal procedure.



- Replace any damaged clips (or pin-type retainers).

Component
Location

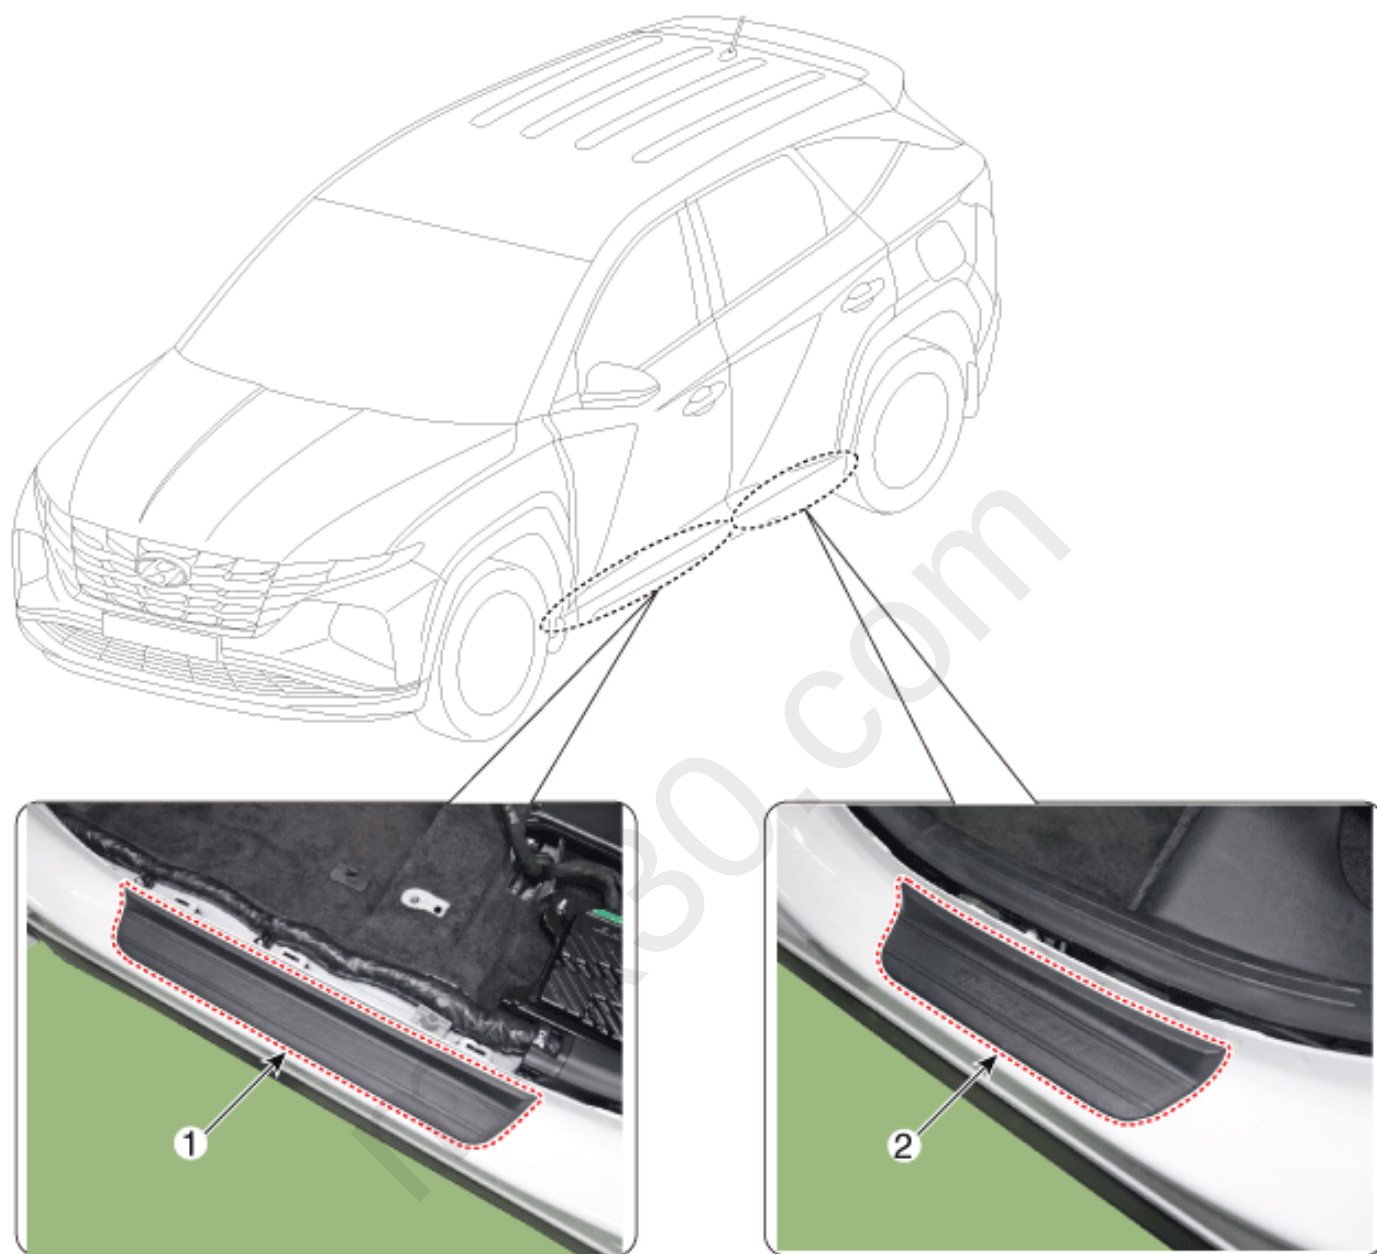

1. Front door step trim

2. Rear door step trim

Replacement




- When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Put on gloves to protect your hands.




- Take care not to bend or scratch the trim and panels.

1. Using a screwdriver or remover and remove the front door step trim (A).

[Front]

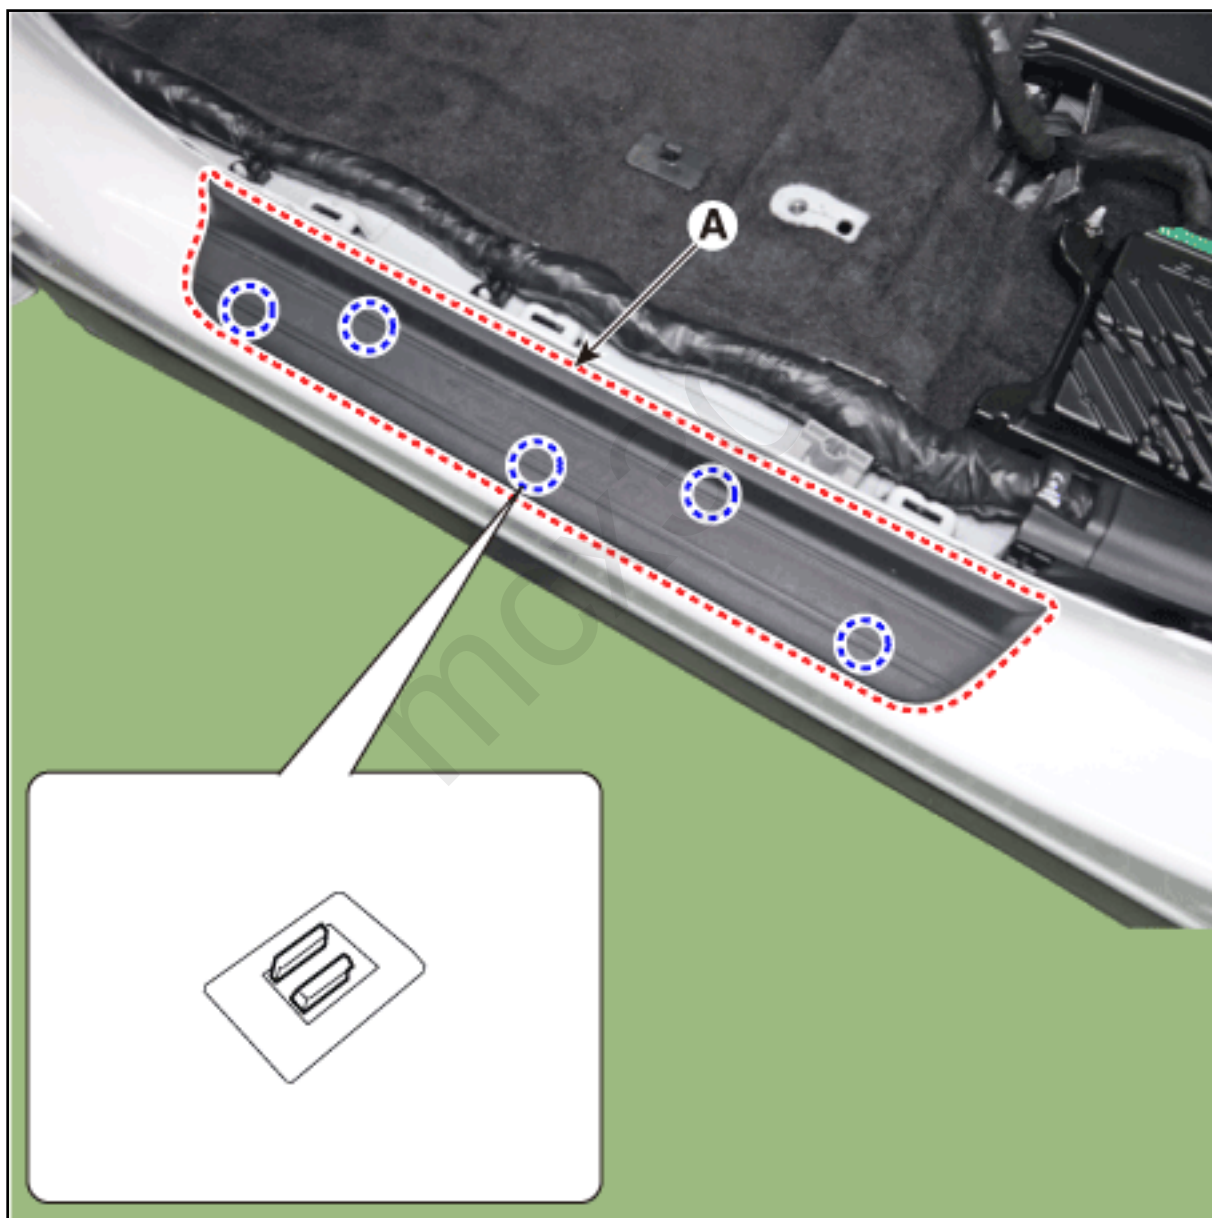

[Rear]


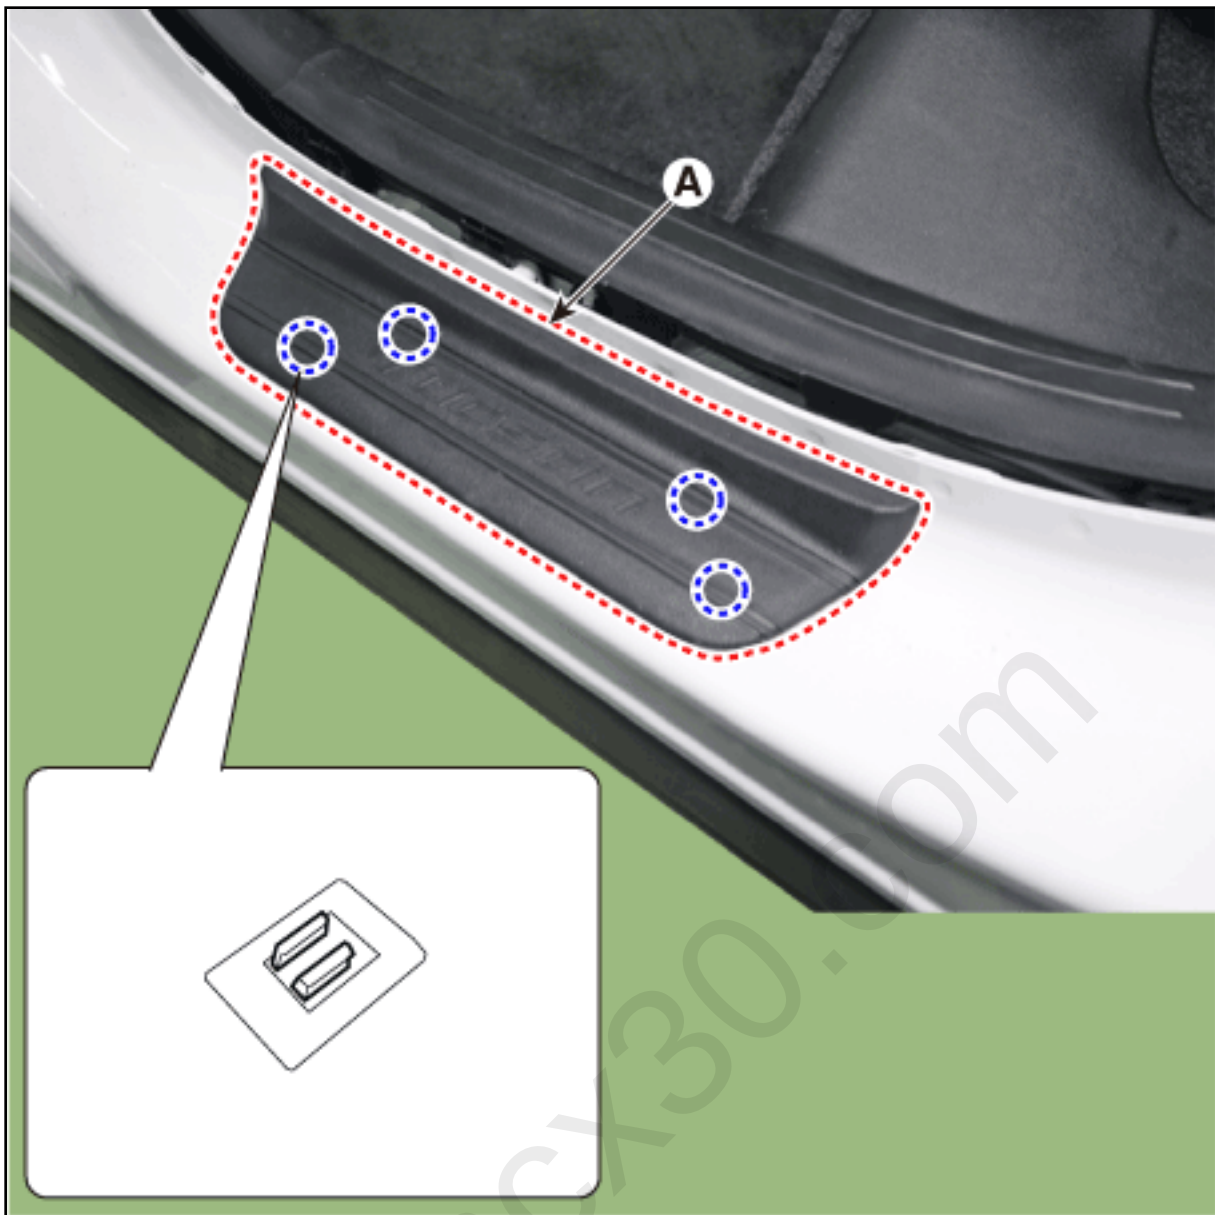


2. To install, reverse removal procedure.



•If the clip is damaged, install a new door step trim.

Component
Location

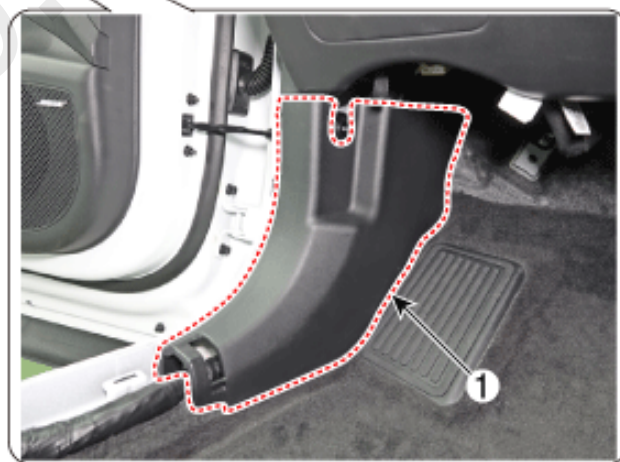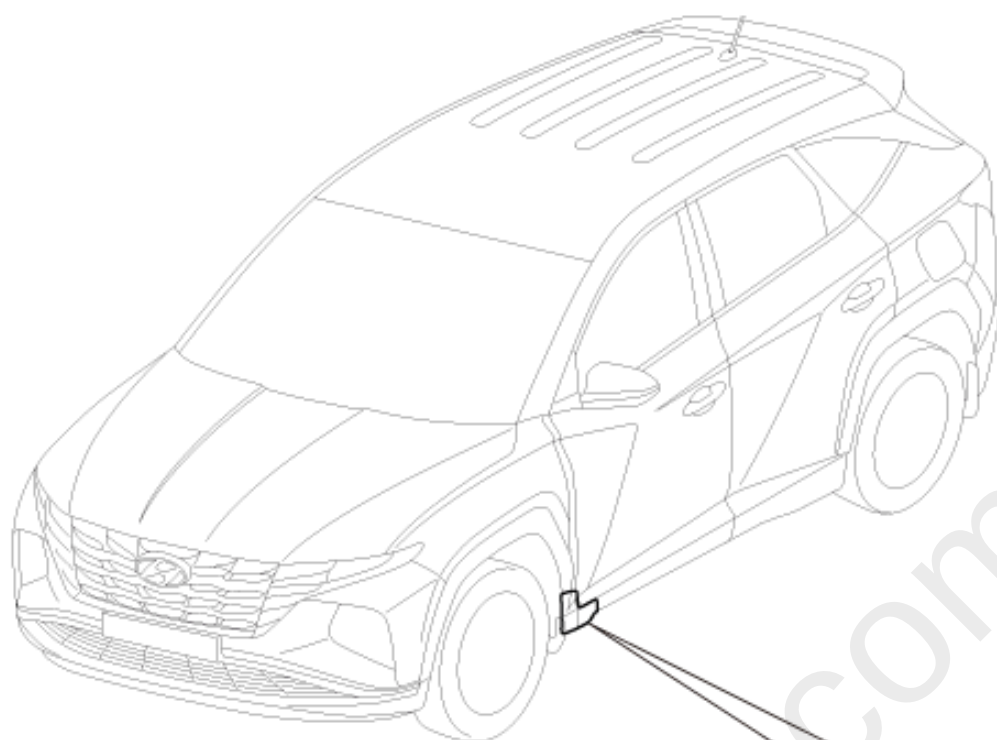

1. Cwol side trim

Replacement




- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.



- Take care not to bend or scratch the trim and panels.

1. Remove the front door scuff trim.
(Refer to Interior Trim - "Door Scuff Trim")
2. Remove the hood latch release handle.
(Refer to Hood - "Hood Latch Release Handle")
3. Remove the front door body side weatherstrip.
(Refer to Front Door - "Front Door Side Weatherstrip")
4. Using a screwdriver or remover, remove the cowl side trim (A).


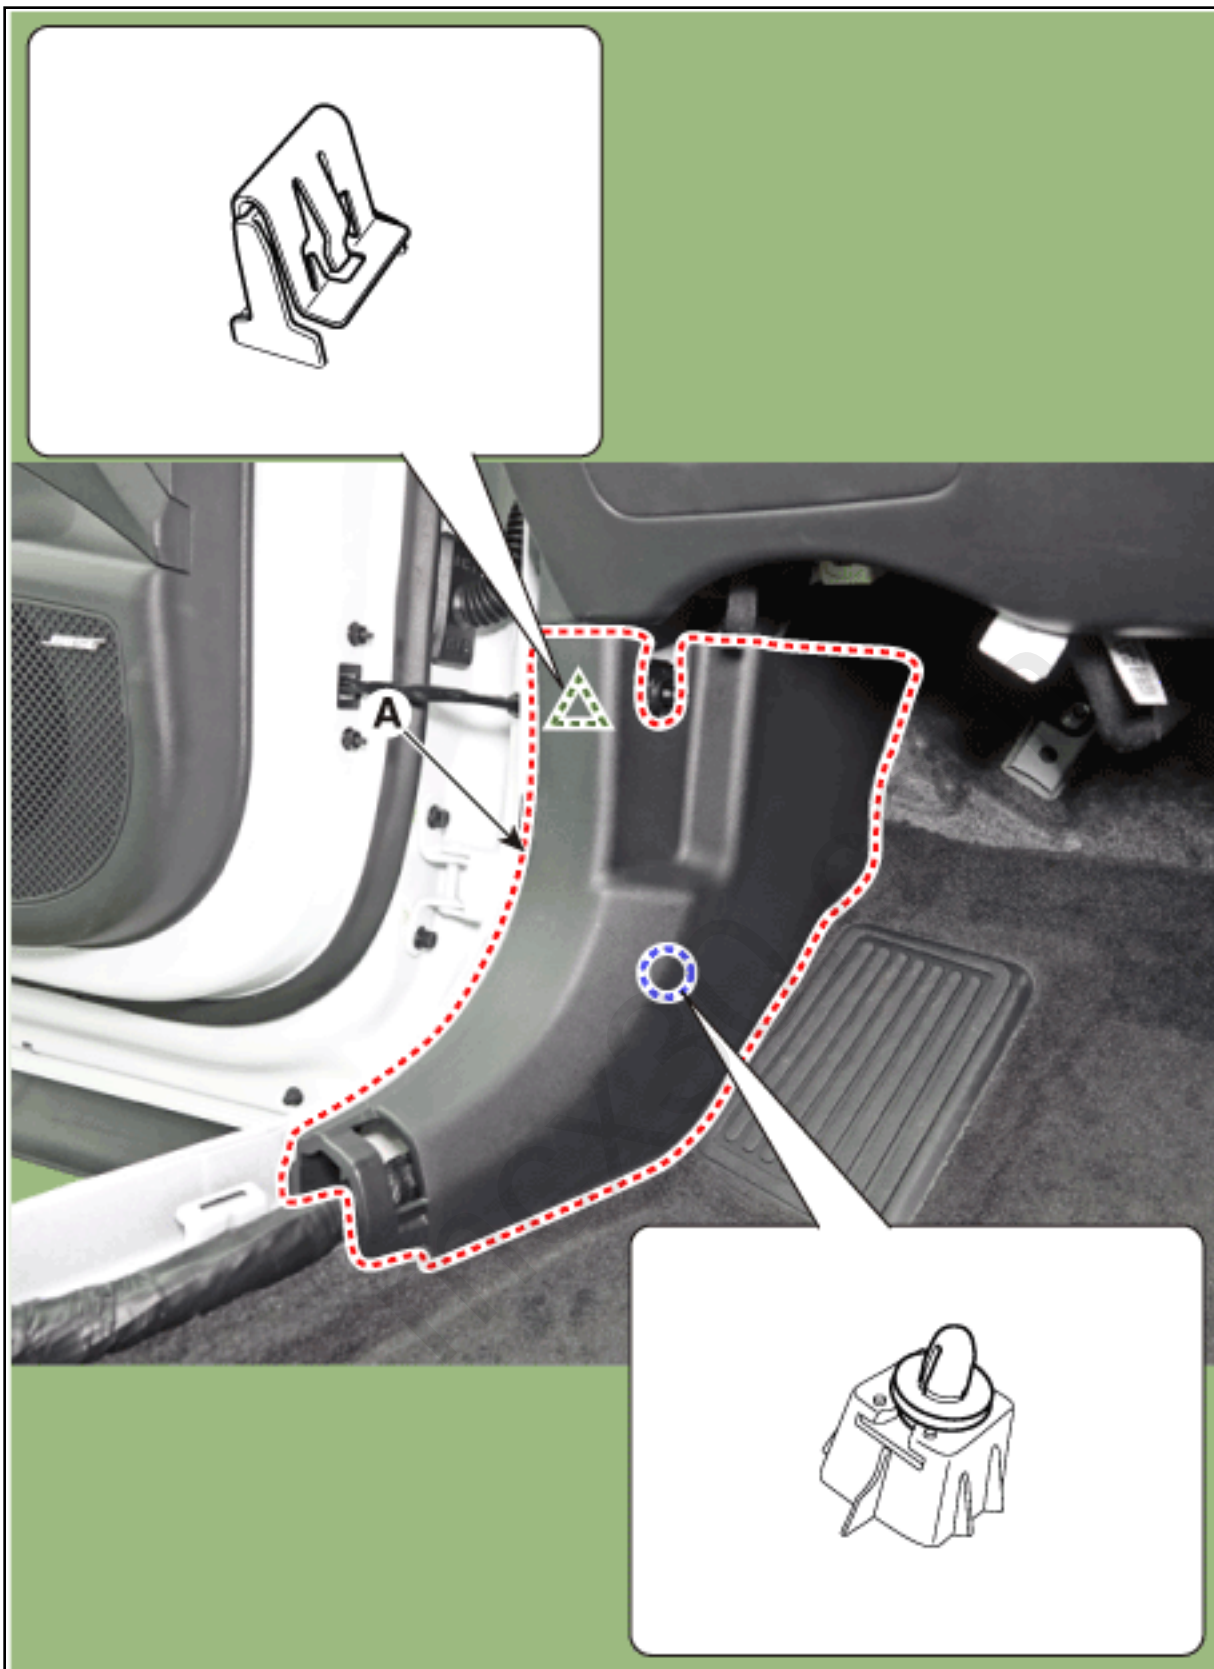


5. To install, reverse removal procedure.



- Replace any damaged clips (or pin-type retainers).

Component
Location

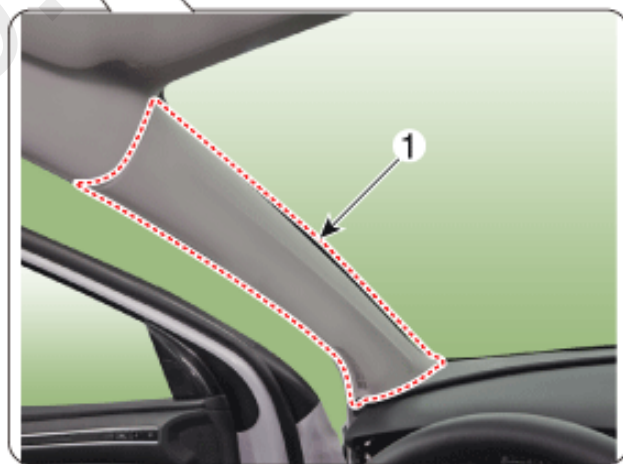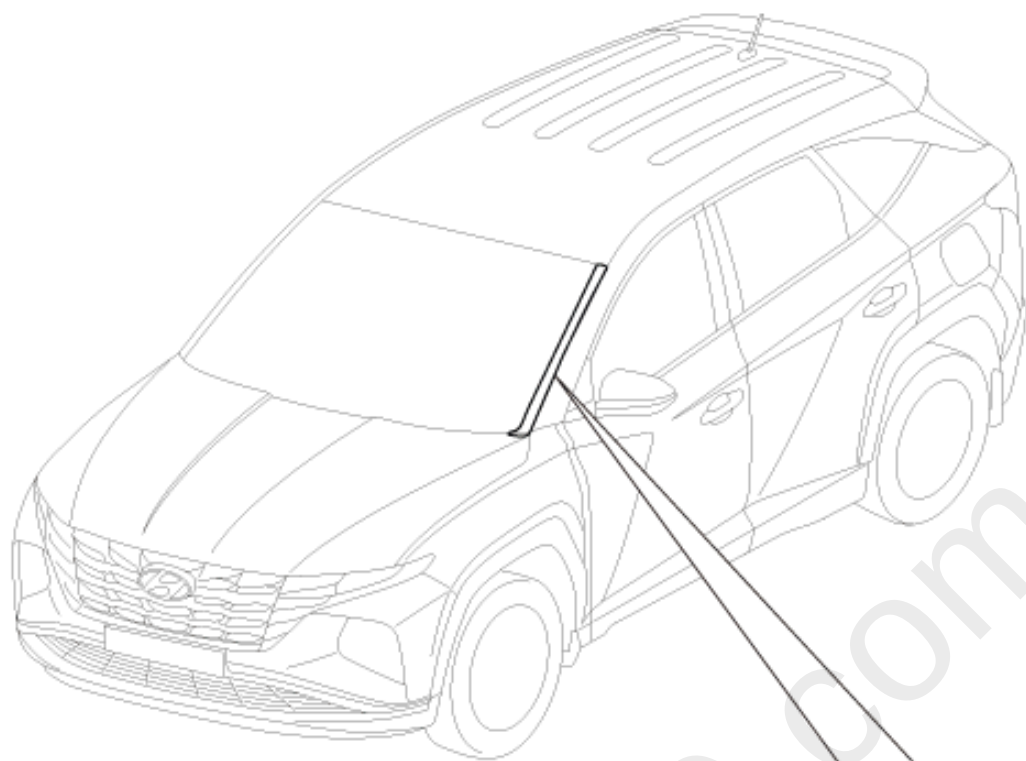

1. Front pillar trim

Replacement



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.



- Take care not to bend or scratch the trim and panels.

1. Remove the front pillar trim.


(1) To remove the front pillar trim, the fastener remover (A) below must be used.




(2) After slightly lifting up the front pillar trim and putting the tool in, remove the mounting clip (A) by pulling it.



- Once the front pillar trim is removed, be sure to replace the clips with new ones.

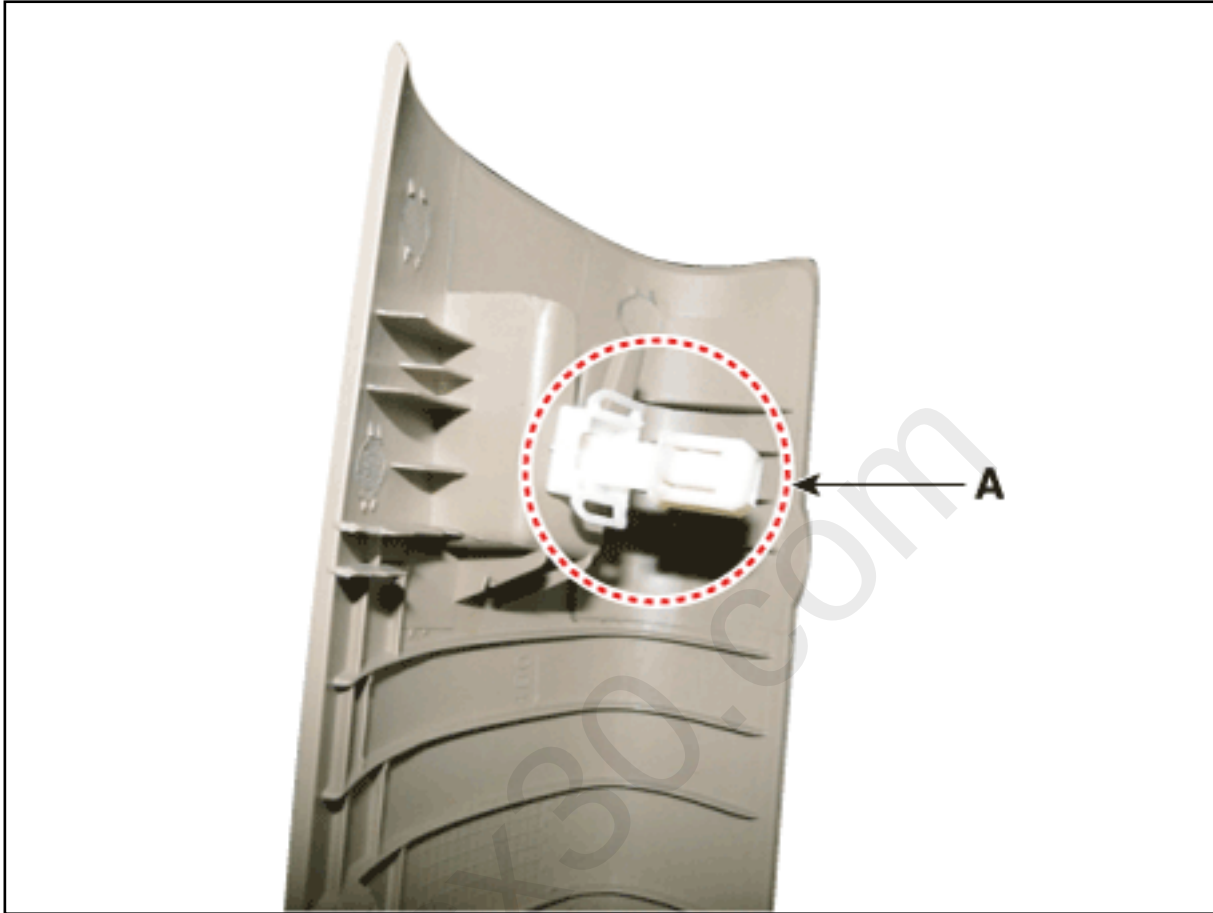

(3) Remove the front pillar trim (A).

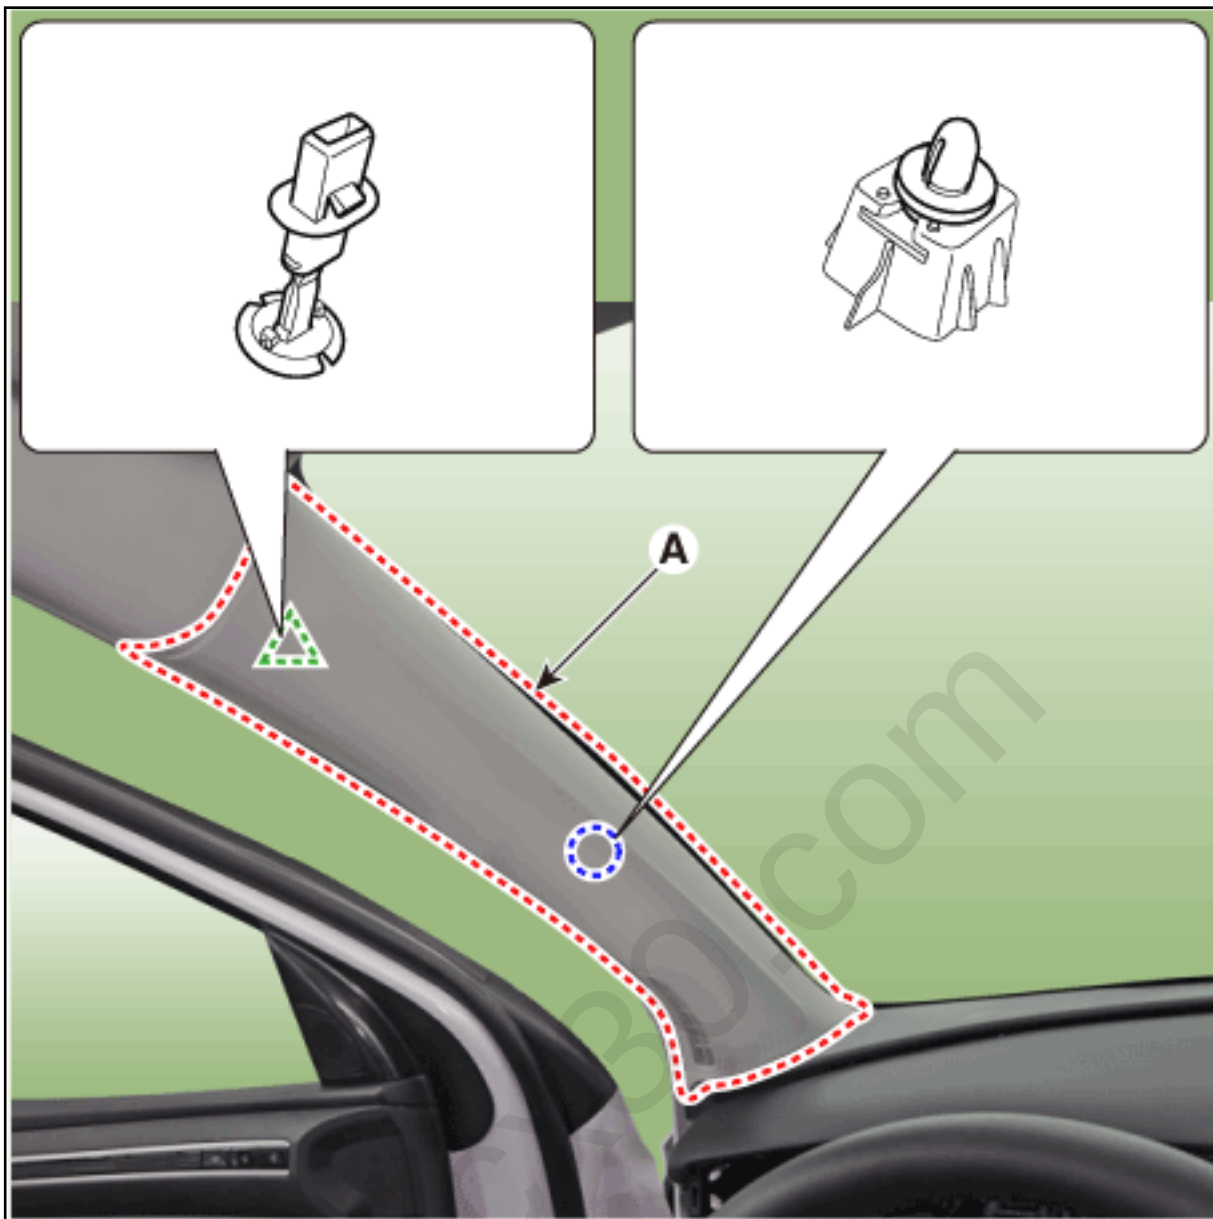


2. To install, reverse removal procedure.



- Replace any damaged clips (or pin-type retainers).

Component
Location

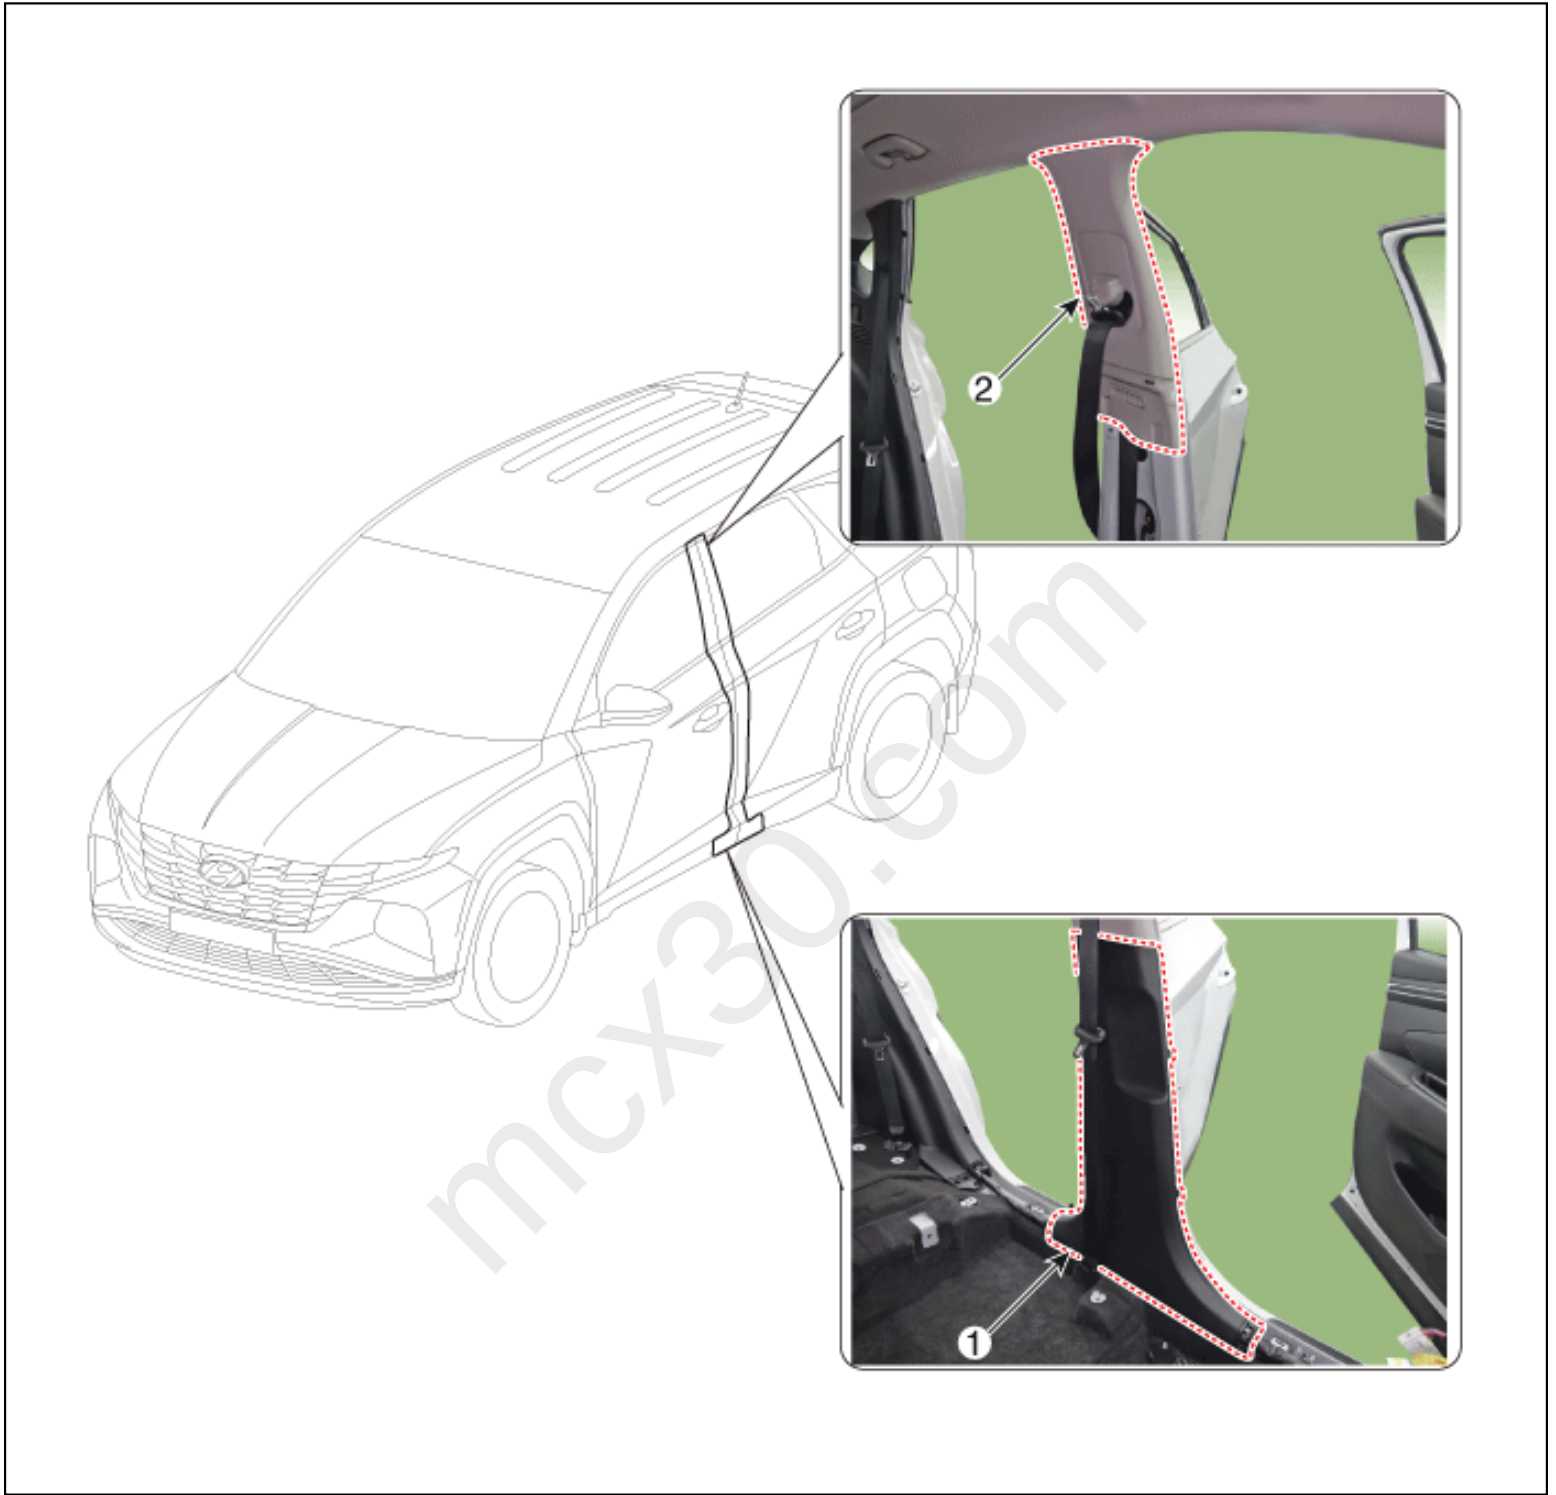

1. Center pillar lower trim

2.Center pillar upper trim

Replacement

[Center pillar lower trim]



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.



- Take care not to bend or scratch the trim and panels.

1. Remove the front and rear door scuff trim.
(Refer to Interior Trim - "Door Scuff Trim")
2. Using a remover and remove the center pillar lower trim (A)



3. To install, reverse removal procedure.



- Replace any damaged clips (or pin-type retainers).

[Center pillar upper trim]



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.



- Take care not to bend or scratch the trim and panels.

1. Remove the center pillar lower trim.

(Refer to Interior Trim - "Center Pillar Lower Trim")

2. Loosen the mounting bolt, remove the front seat belt lower anchor (A).

Tightening torque :

39.2 - 53.9 N.m (4.0 - 5.5 kgf.m, 28.9 - 39.8 lb-ft)



3. Remove the center pillar upper trim (A).




4. To install, reverse removal procedure.



- Replace any damaged clips (or pin-type retainers).

Component
Location

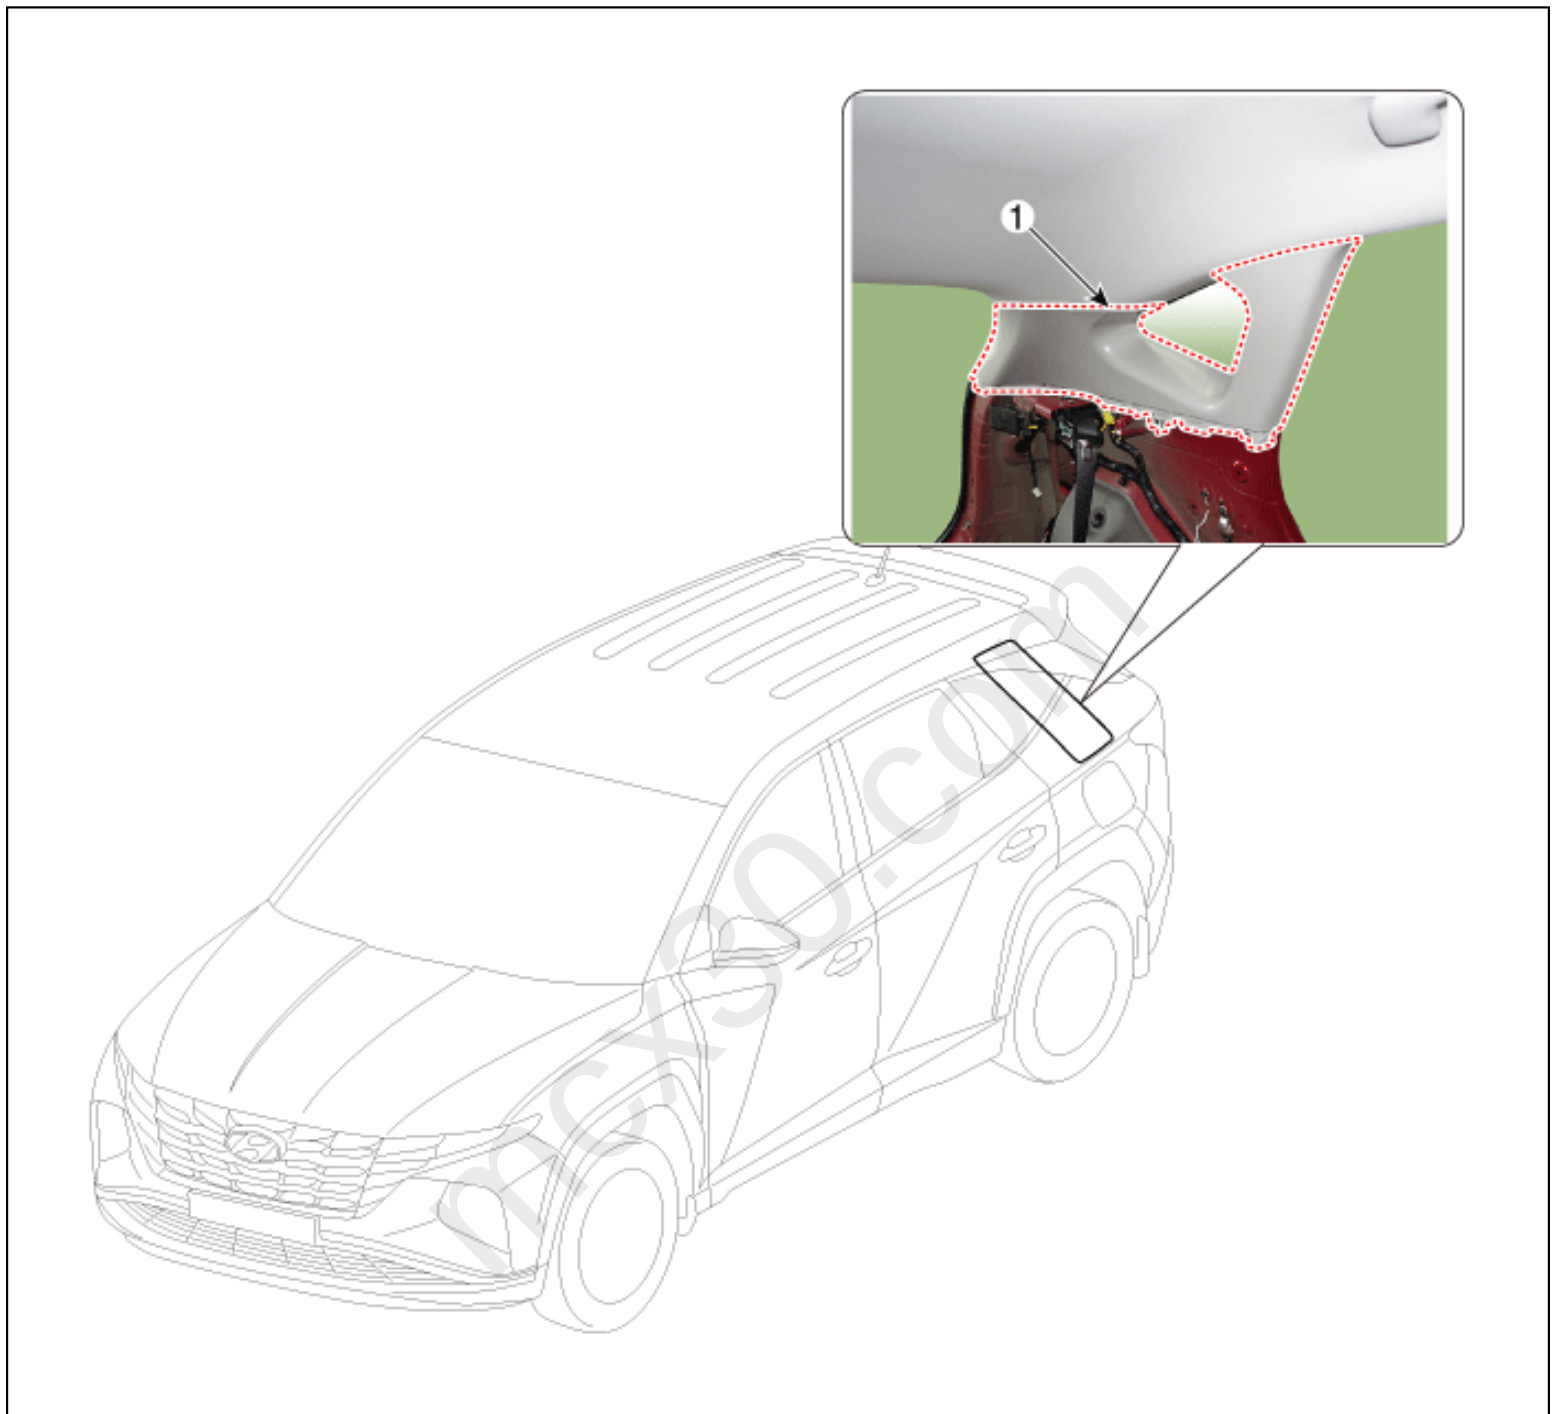

1. Rear pillar trim

Replacement



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.




- Take care not to bend or scratch the trim and panels.

1. Remove the luggage side trim.

(Refer to Trunk Trim - "Luggage Side Trim")

2. Using a screwdriver or remover, remove the rear pillar trim (A).

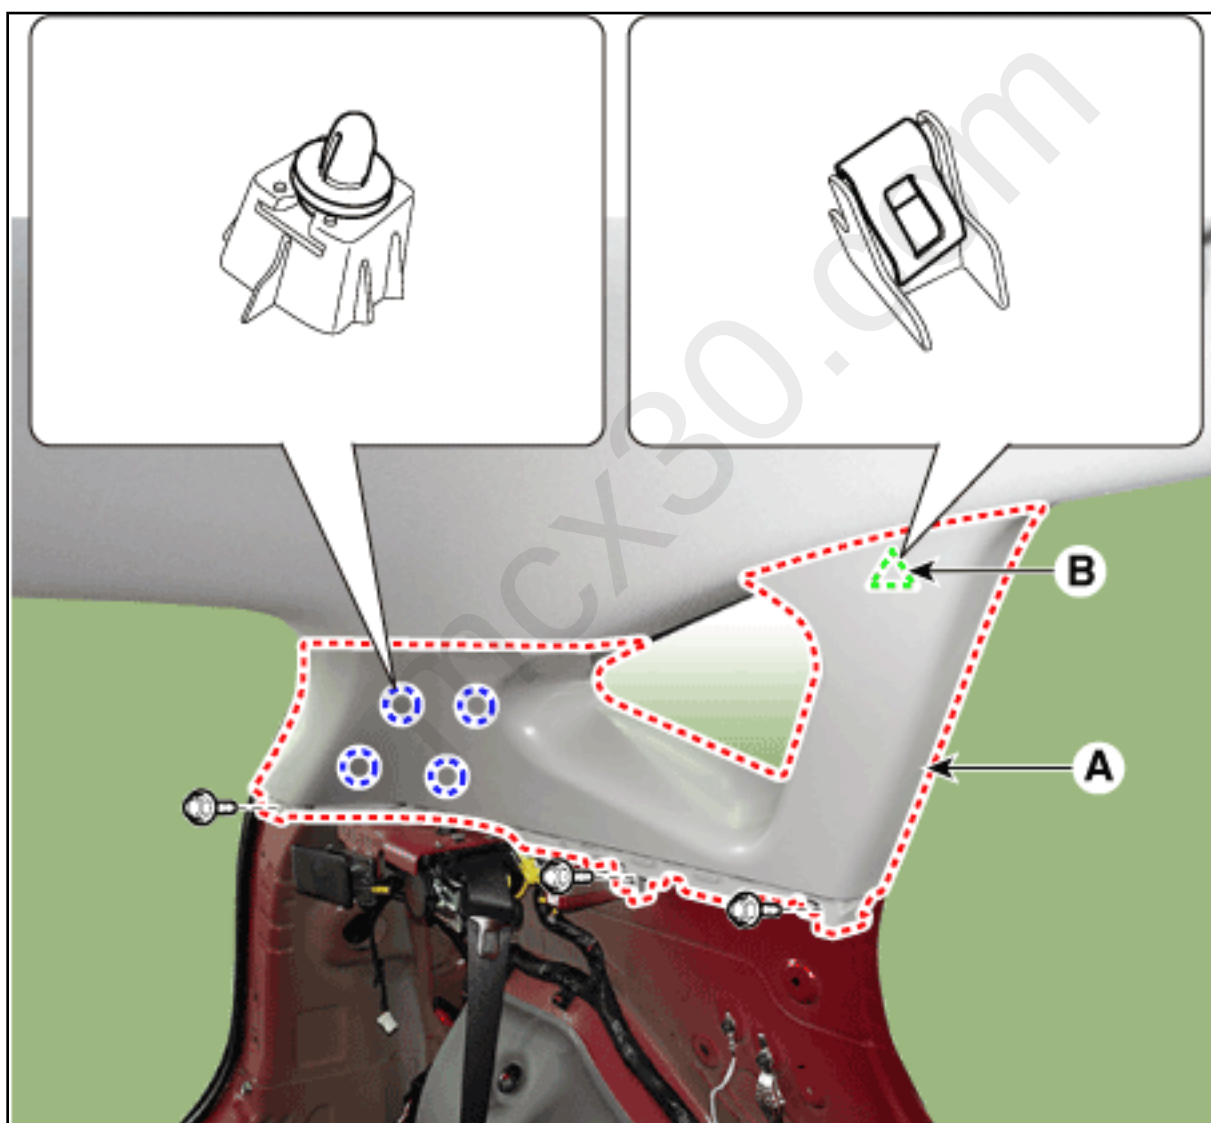

3. To install, reverse removal procedure.



- Replace any damaged clips (or pin-type retainers).
- Once the front pillar trim is removed, be sure to replace the clip (B) with new ones.

mcx30.com