



Components

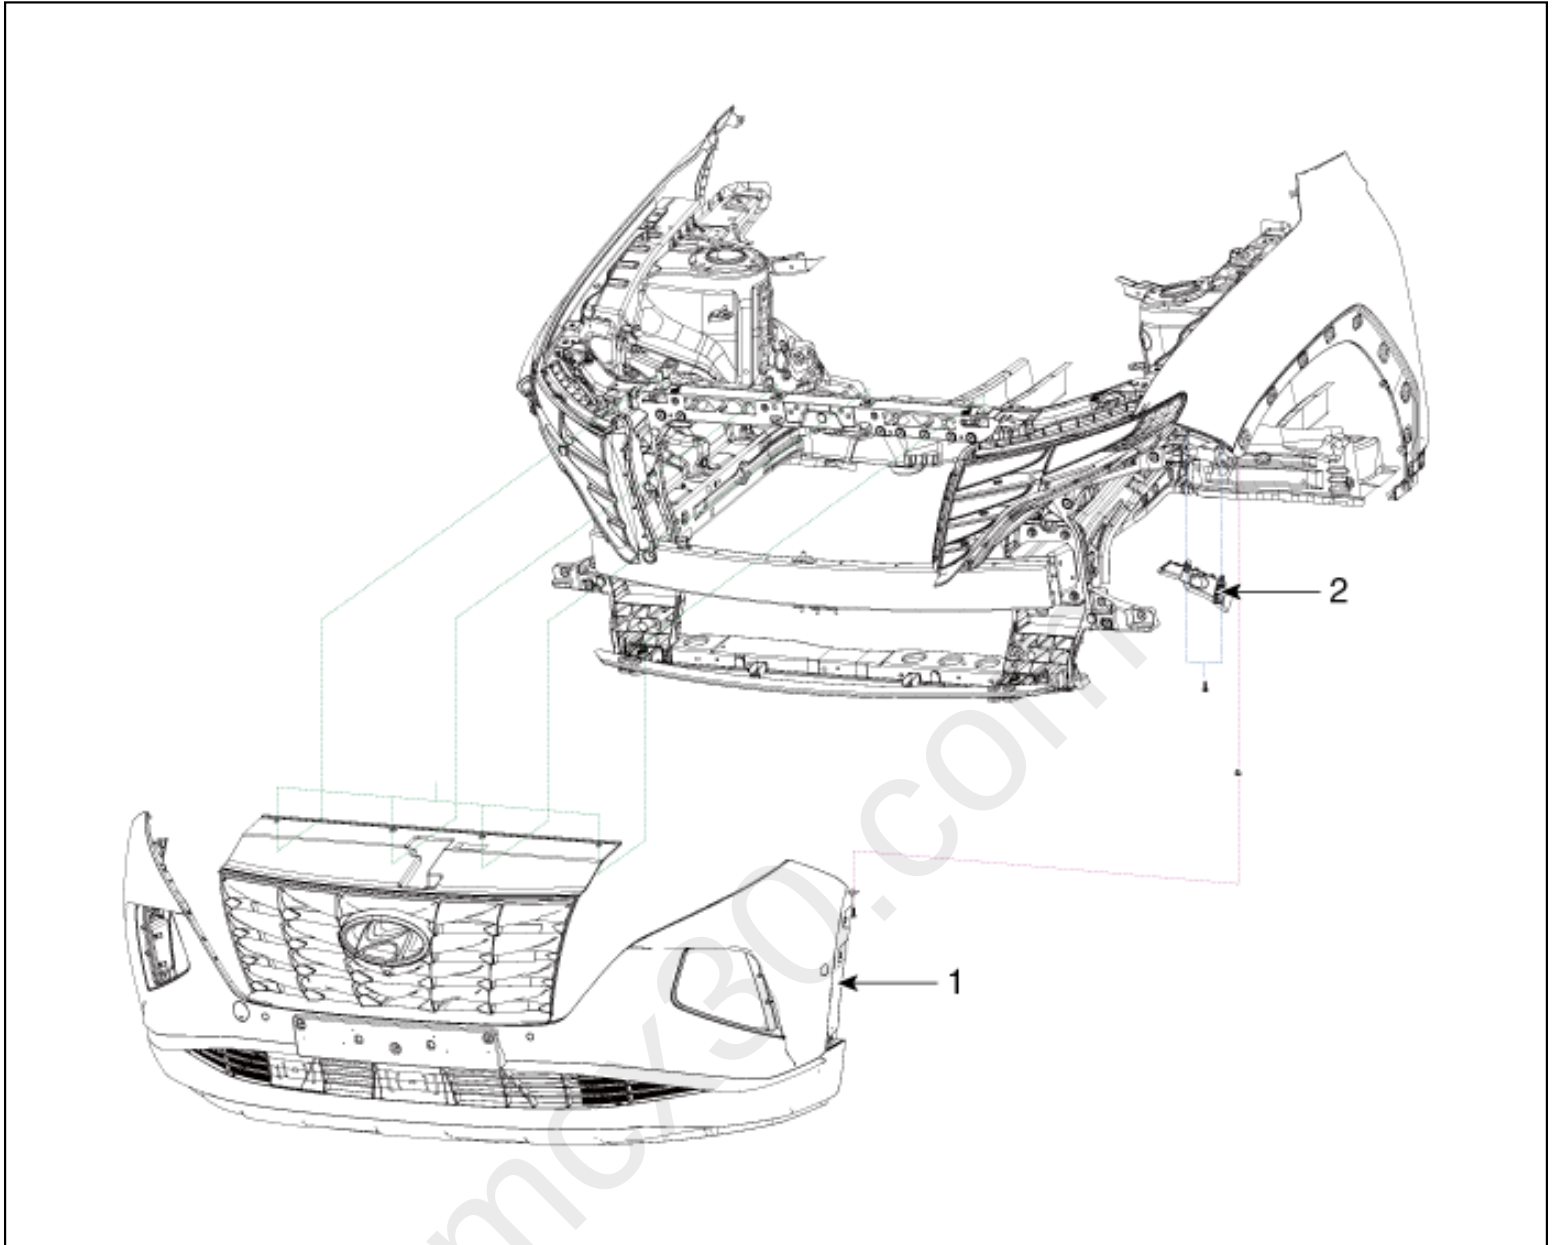

1. Front bumper assembly

2. Front bumper side bracket

Component
Location

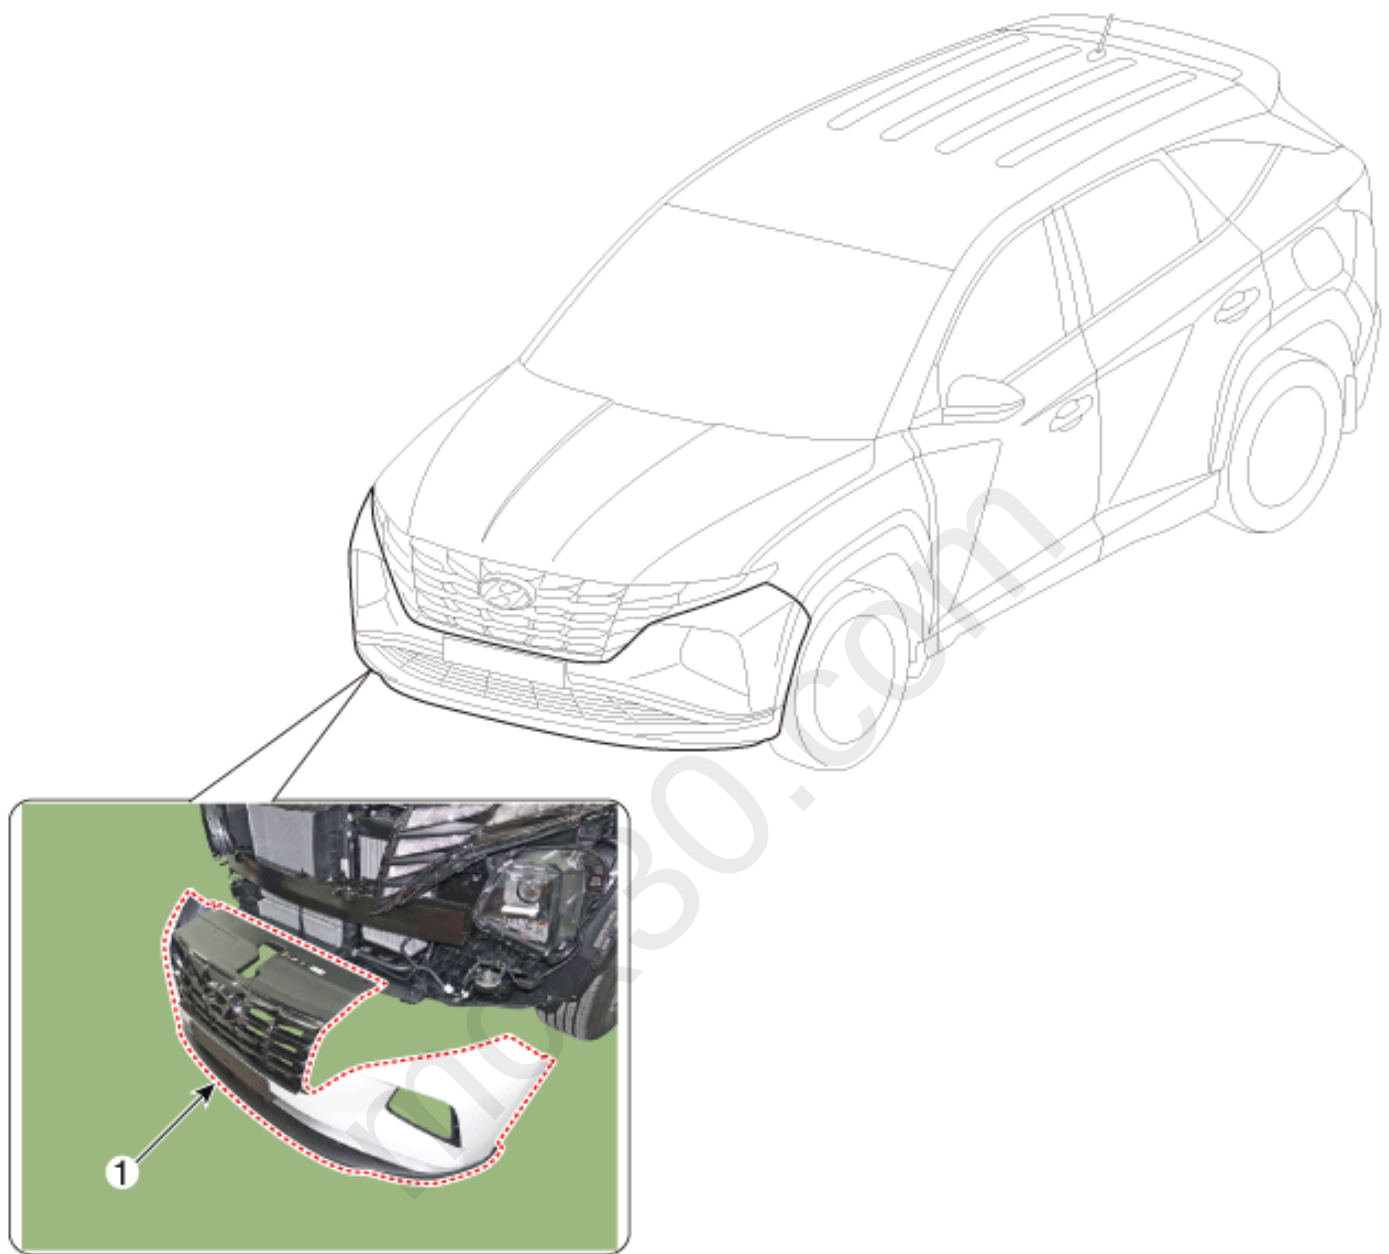

1. Front bumper assembly

Replacement



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.




- Take care not to bend or scratch the bumper cover and panels.

1. Disconnect the negative (-) battery terminal.
2. Remove the engine room under cover.


(Refer to Engine Mechanical System - "Engine Room Under Cover")

3. Remove the fender garnish (A).

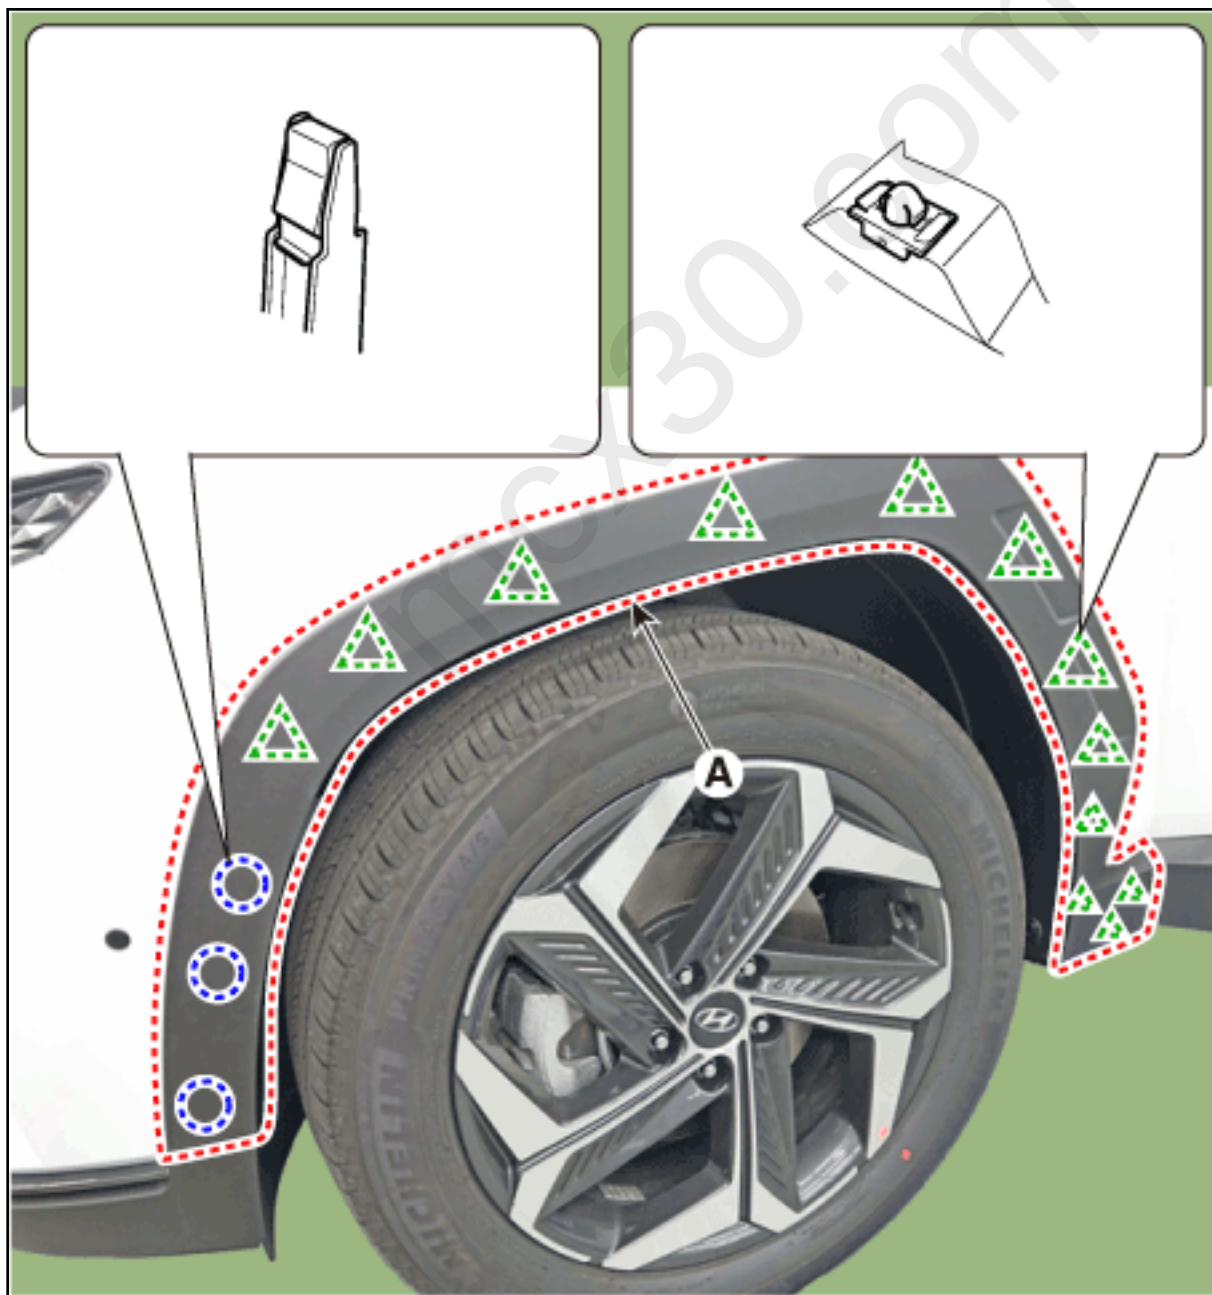





4. Loosen the front bumper upper mounting clips.

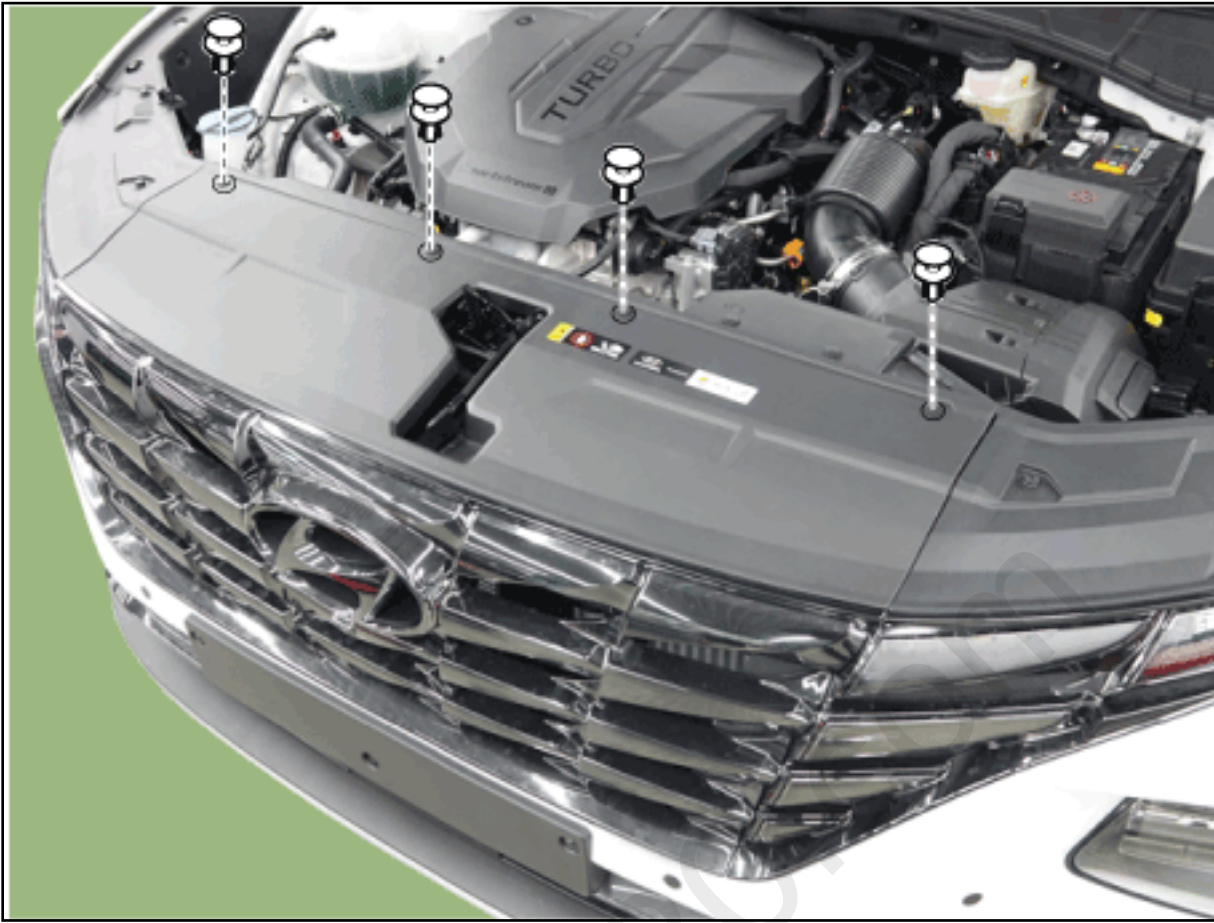


5. Loosen the mounting clips and screws on the side of front bumper (A), detach the side part of front bumper.




- When you pull out the front bumper, the side part of the front bumper could be damaged by the projection.

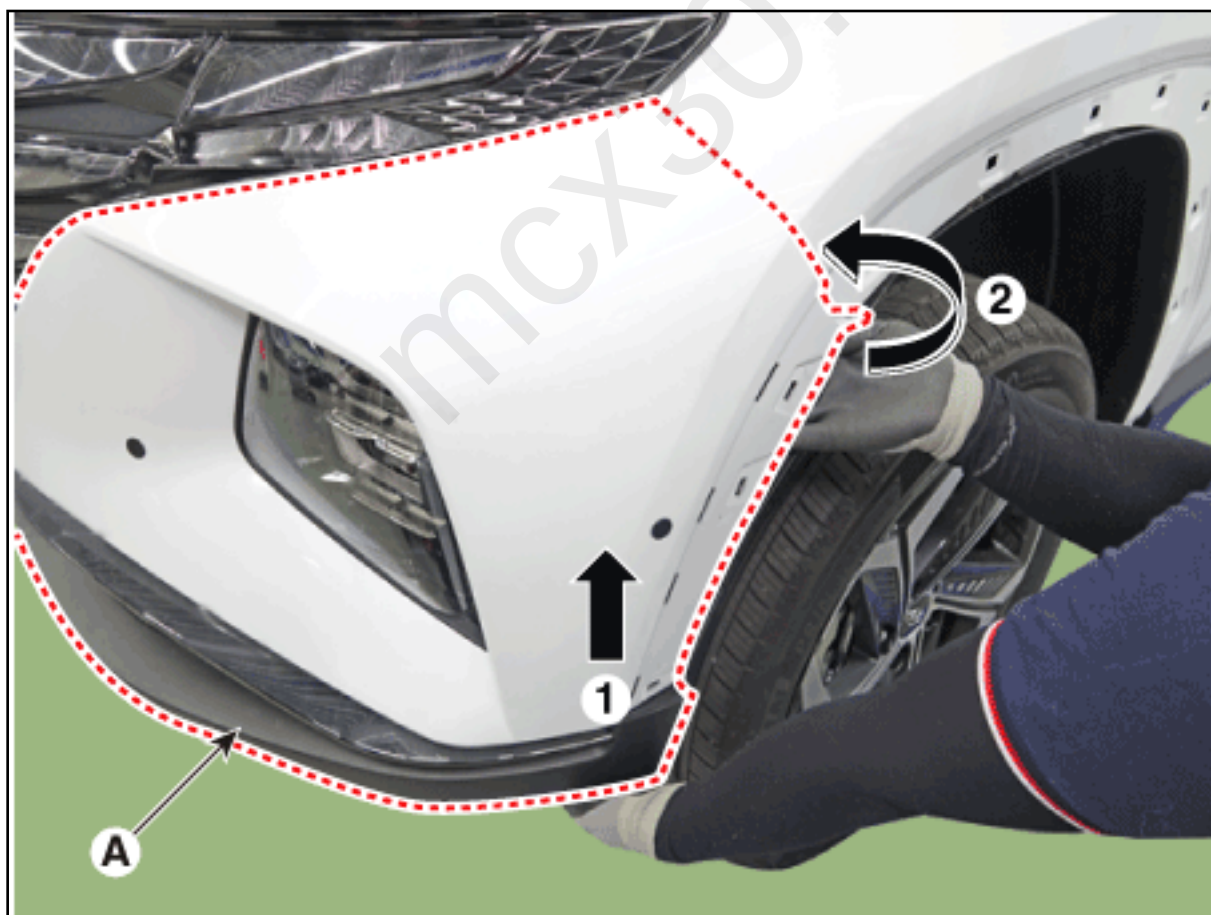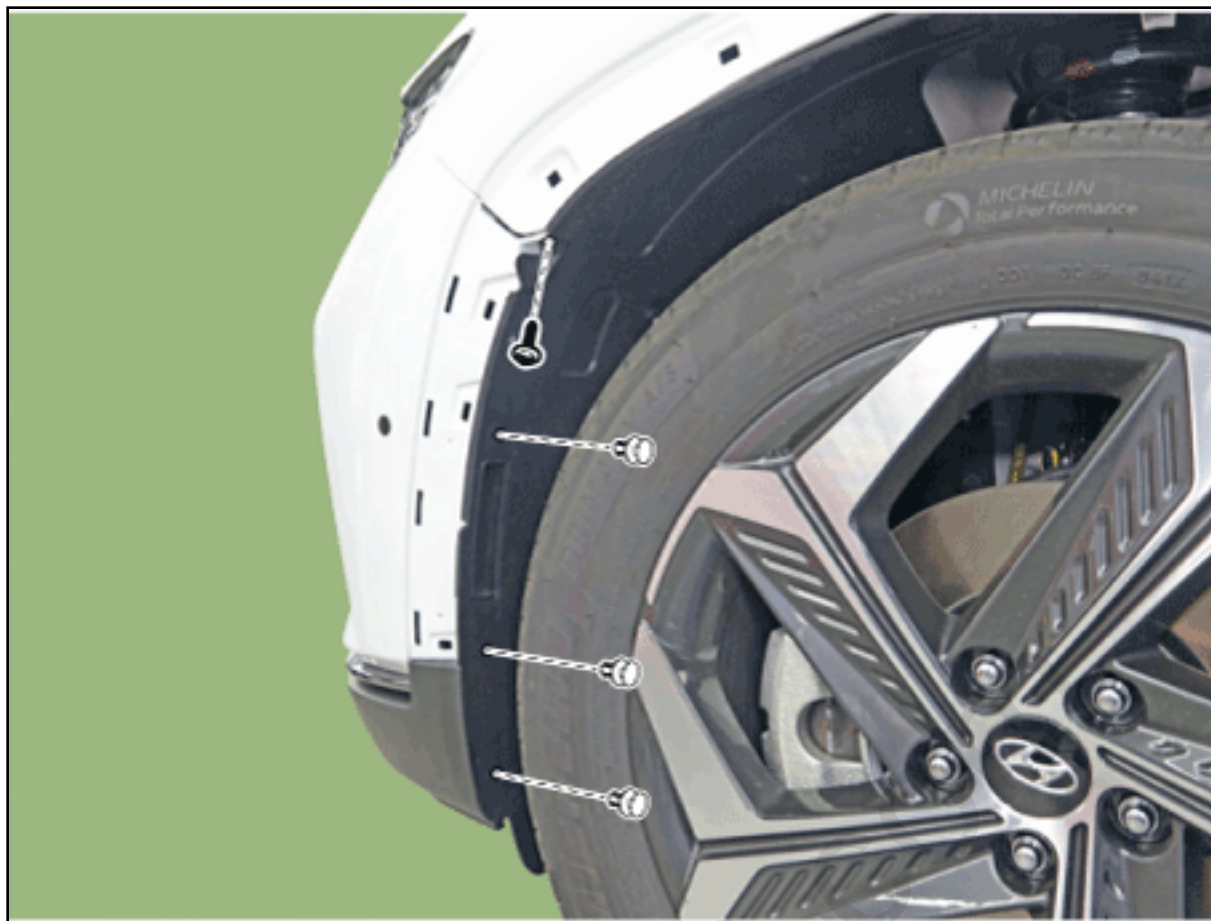

6. Disconnect the front bumper main connector (A).

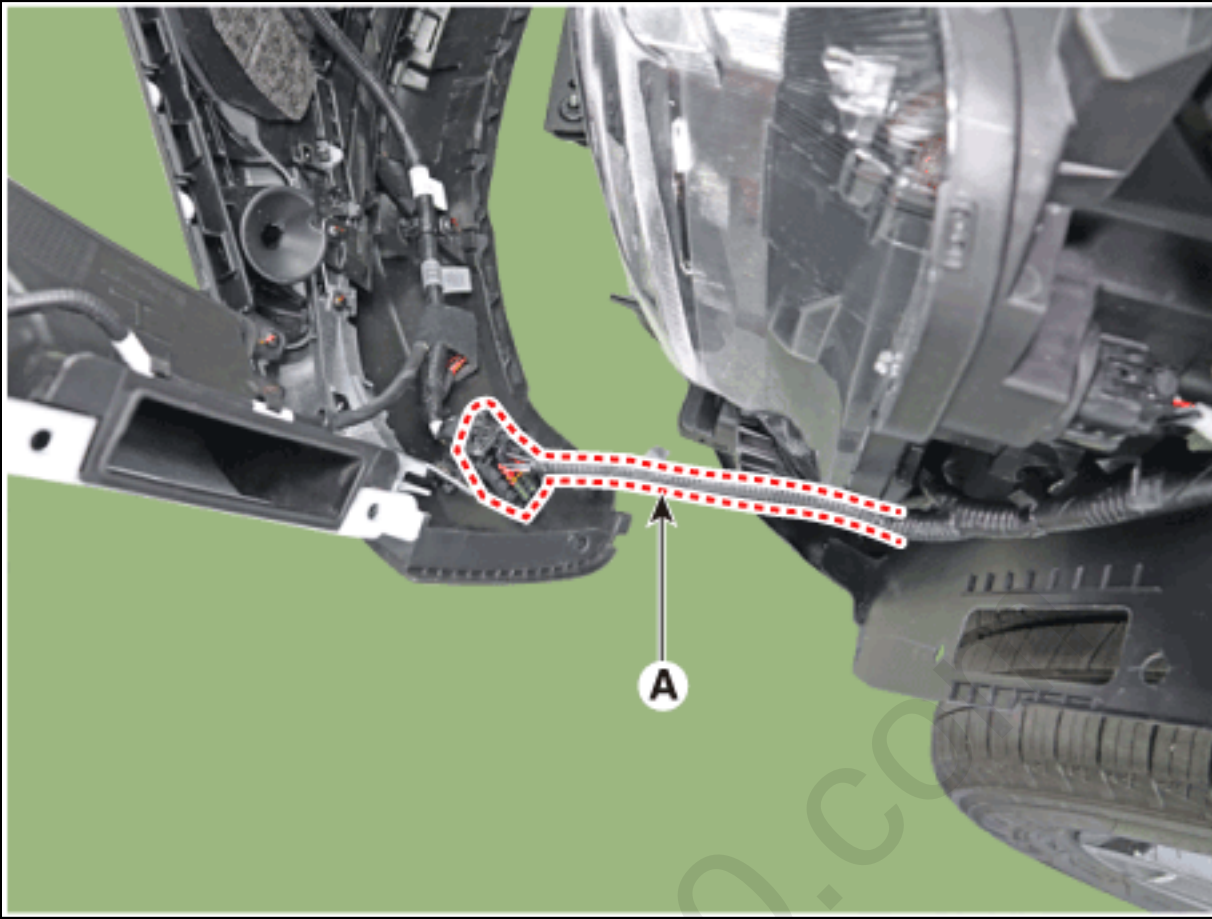

7. Remove the front bumper assembly (A).

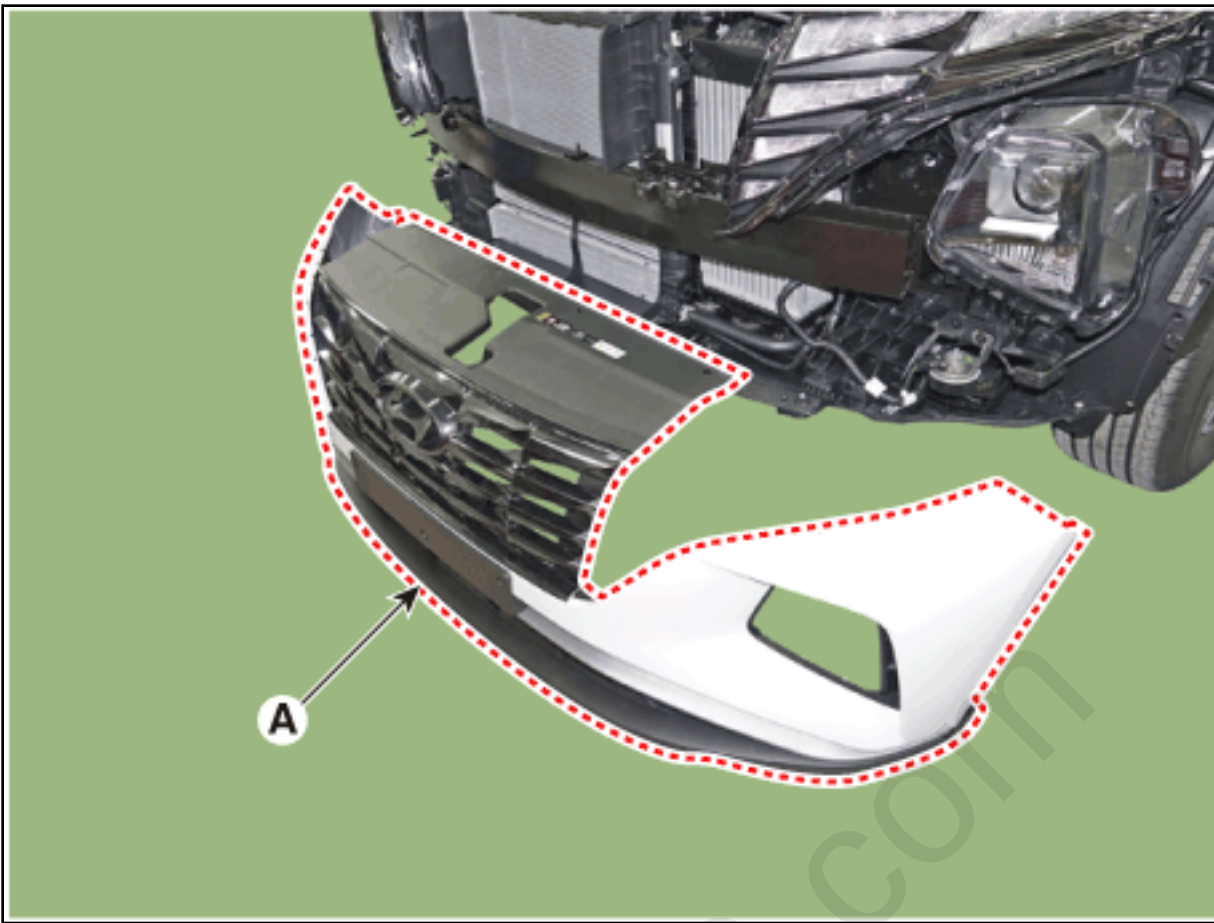


8. To install, reverse removal procedure.



- Make sure the connector is plugged in properly.
- Replace any damaged clips (or pin-type retainers).

Component
Location

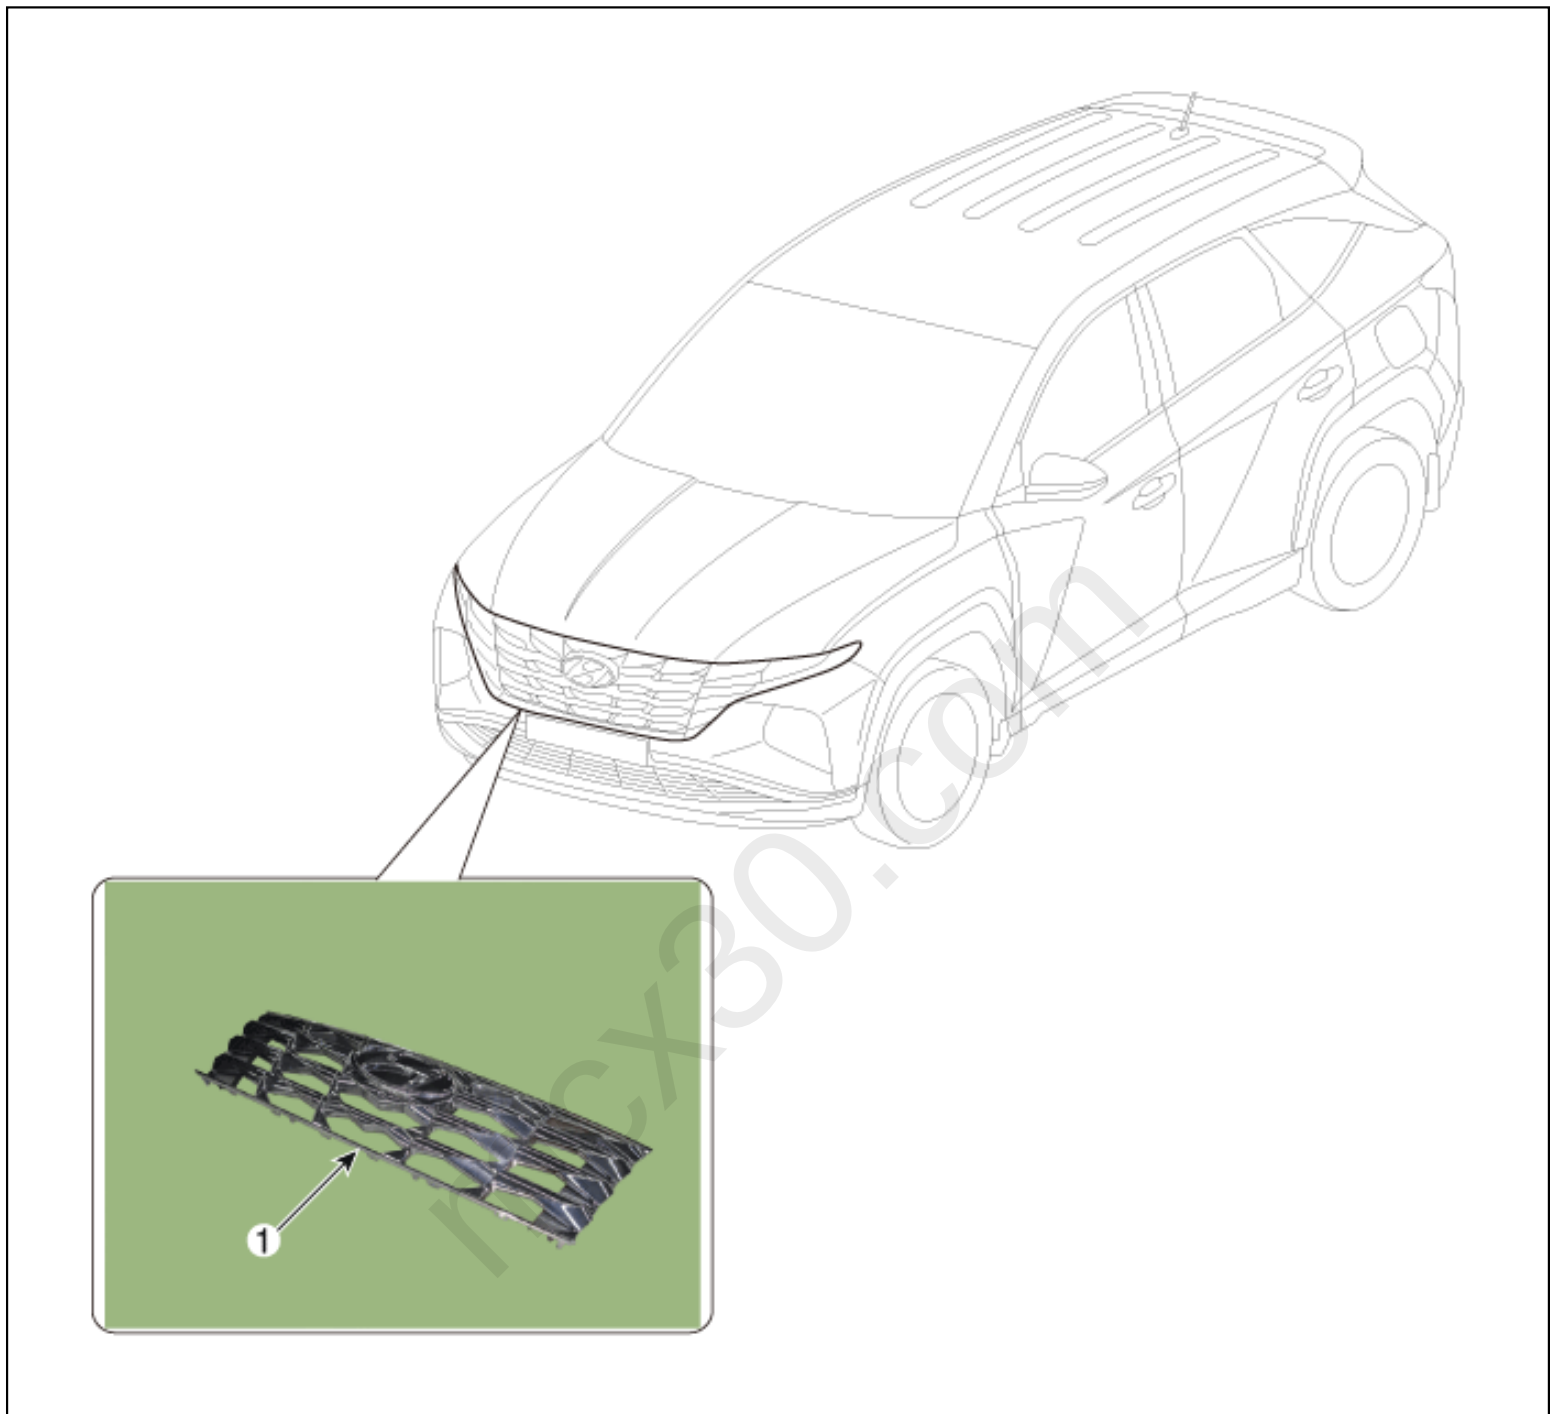

1. Radiator grill

Replacement




- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.




- Take care not to bend or scratch the bumper cover and panels.


1. Remove the front bumper assembly.
(Refer to Front Bumper - "Front Bumper Assembly")
2. Detach the wiring (A) mounted on the front bumper assembly and radiator grill.

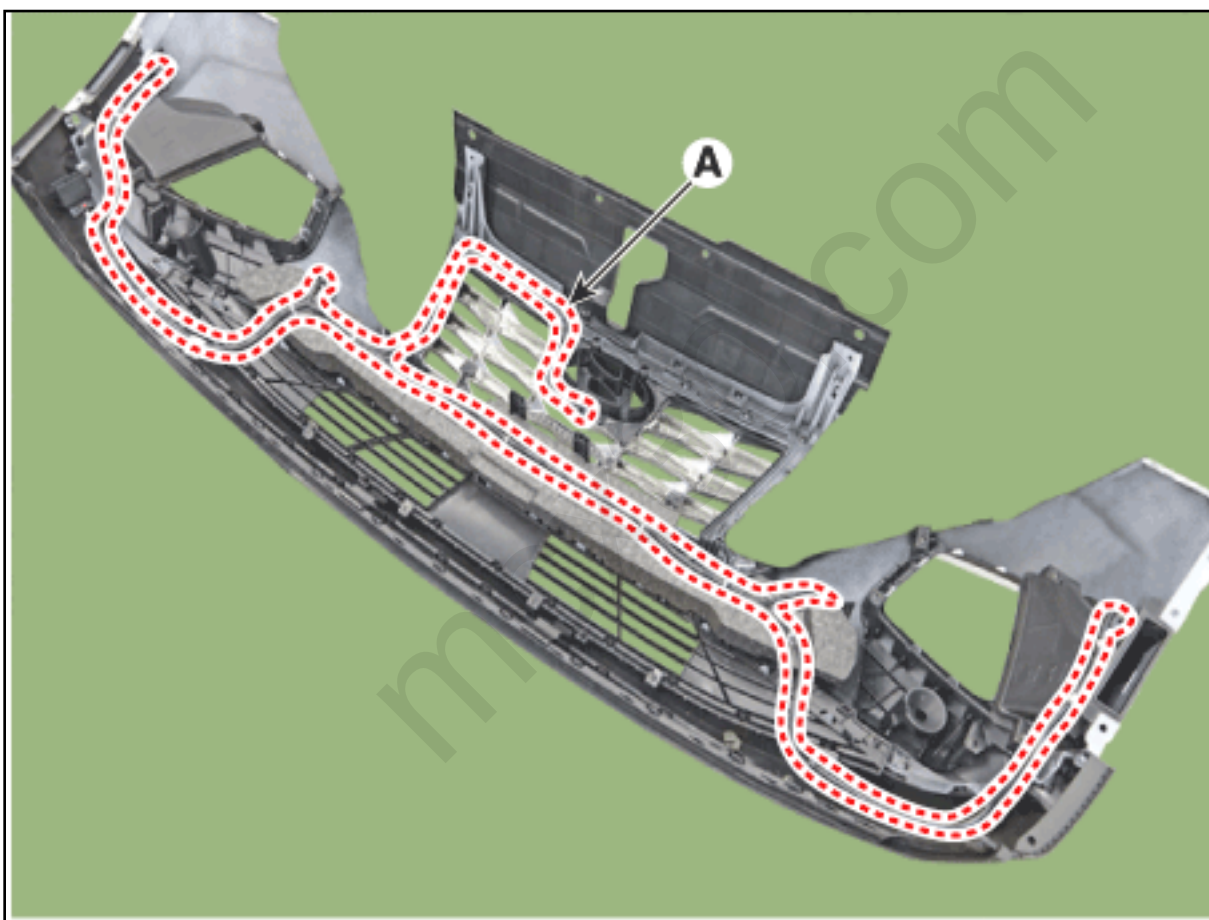


3. Remove the front bumper energy absorber (A).

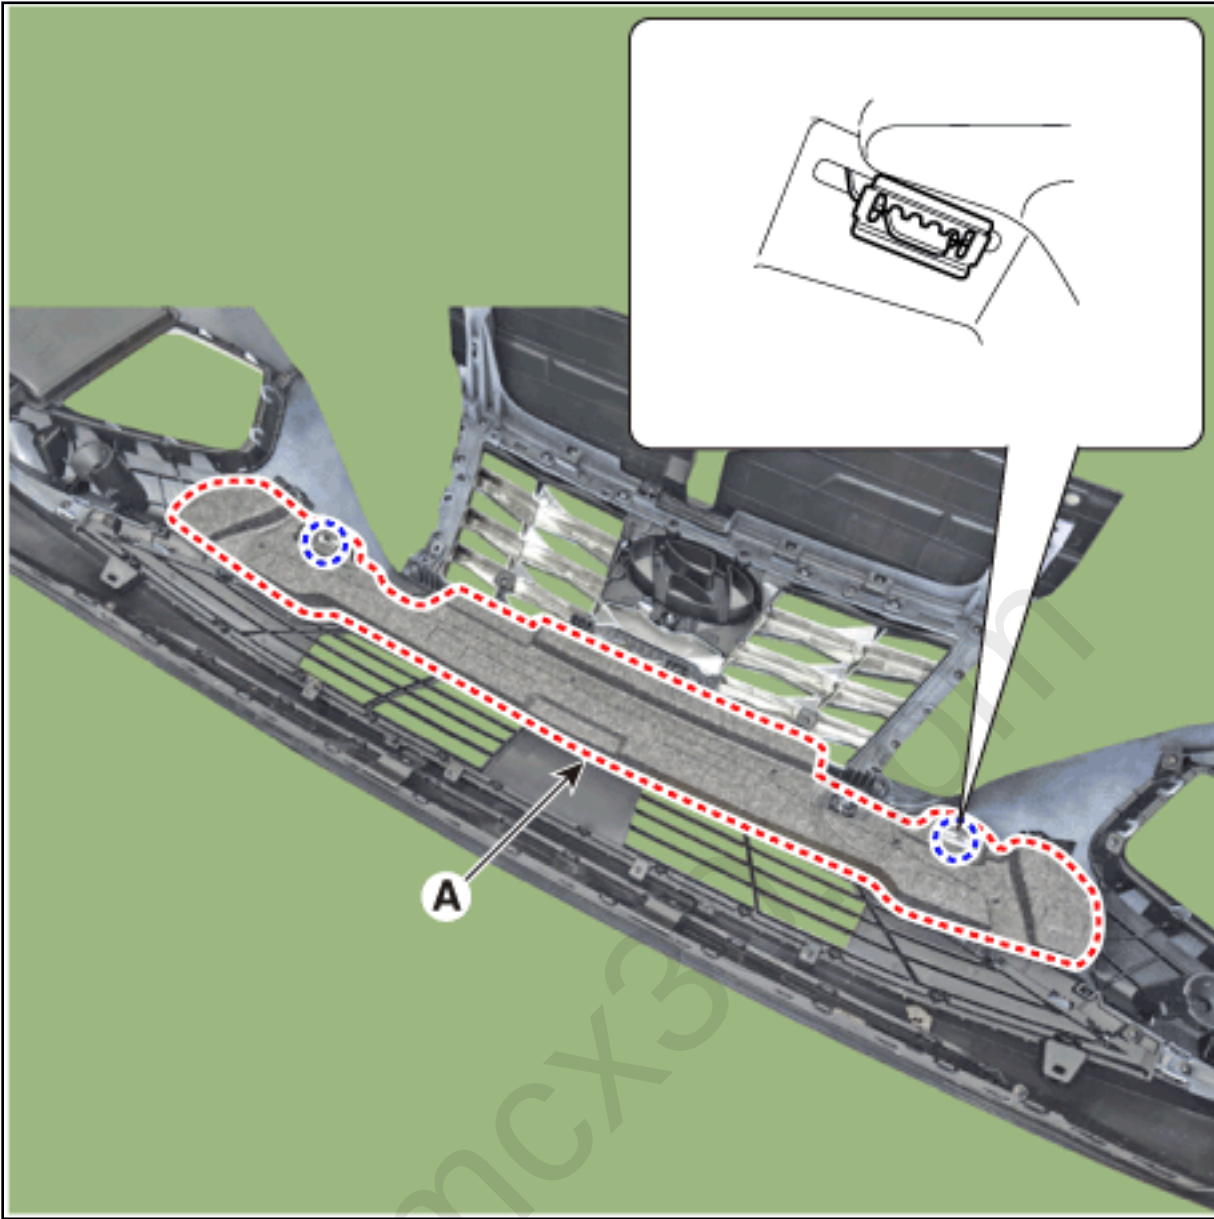


4. Loosen the mounting screws, remove the radiator grill cover assembly (A).

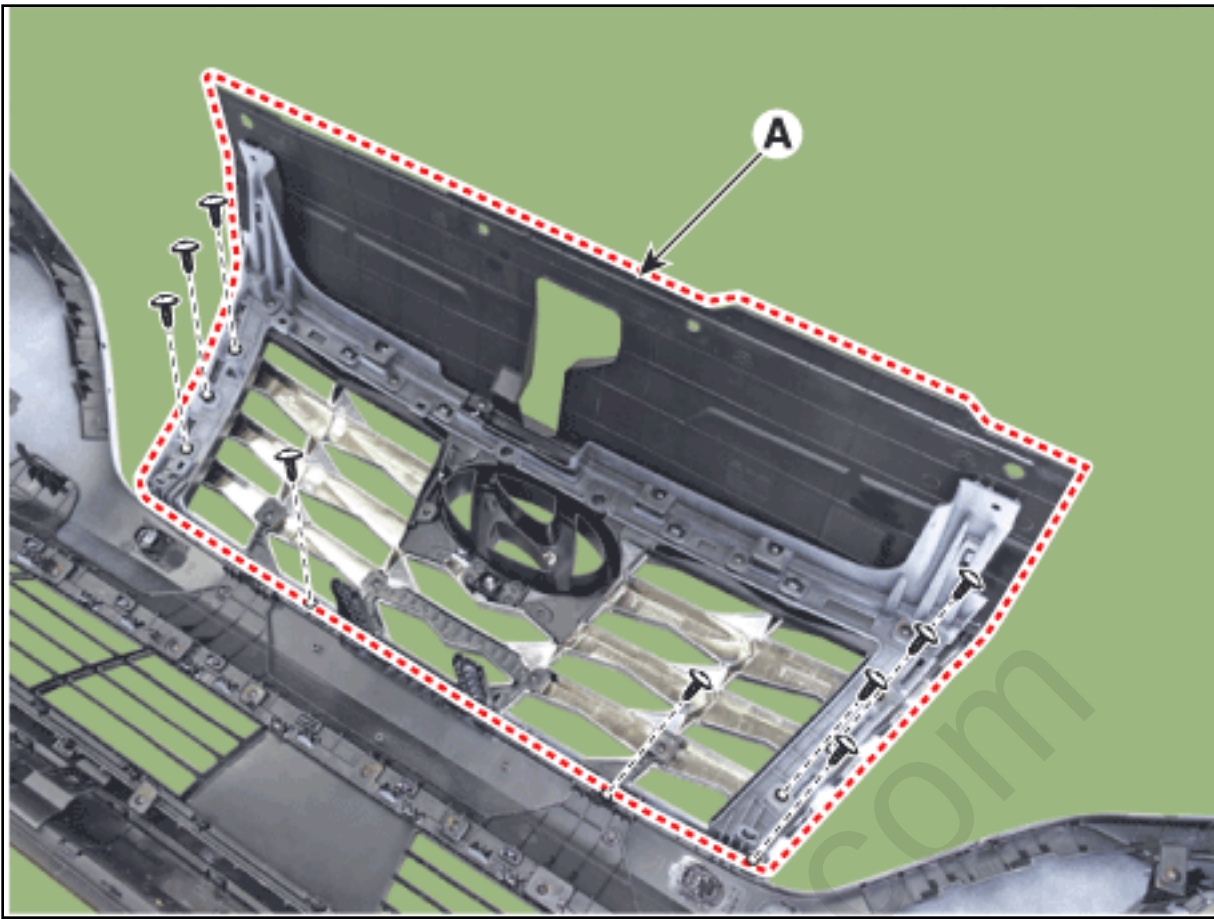

5. Loosen the mounting screws, remove the radiator grill upper cover (A).

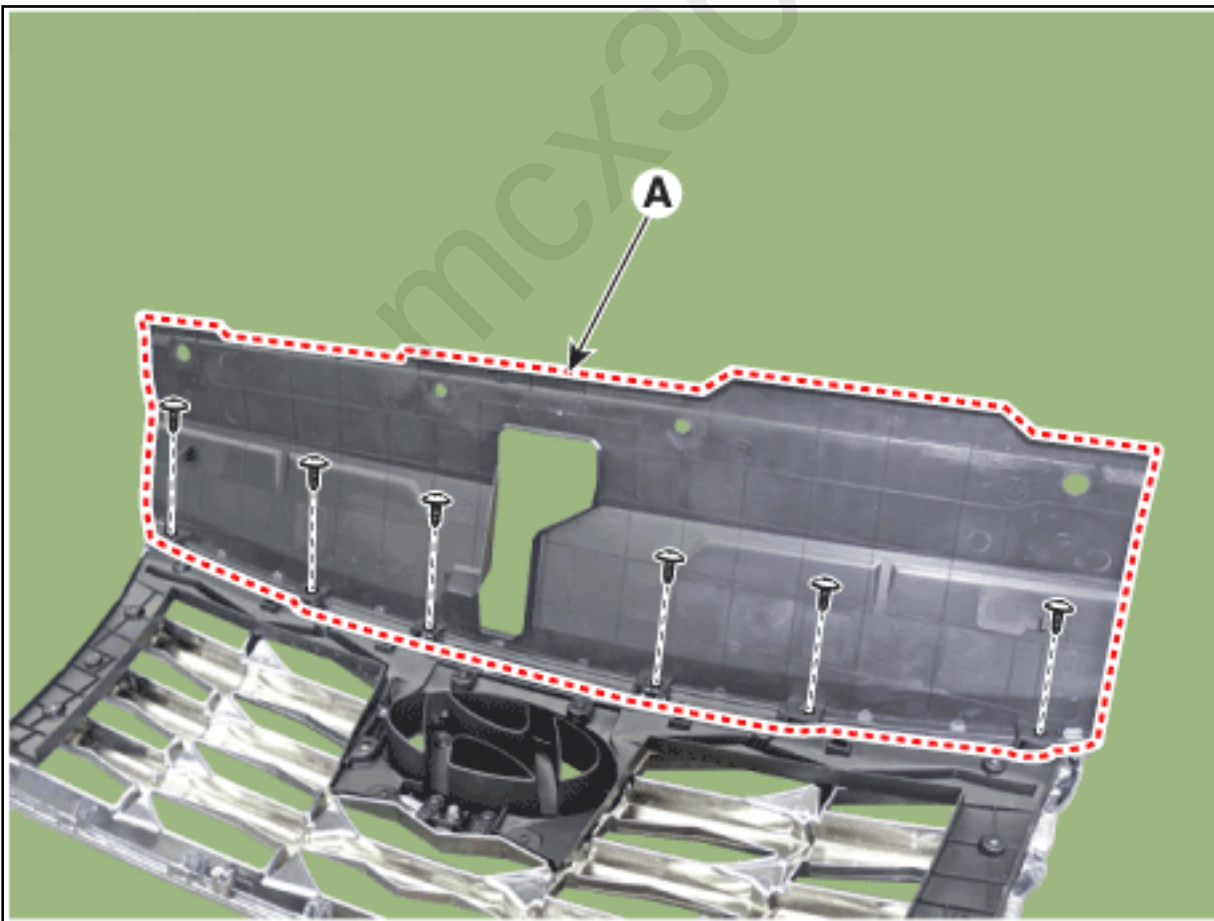

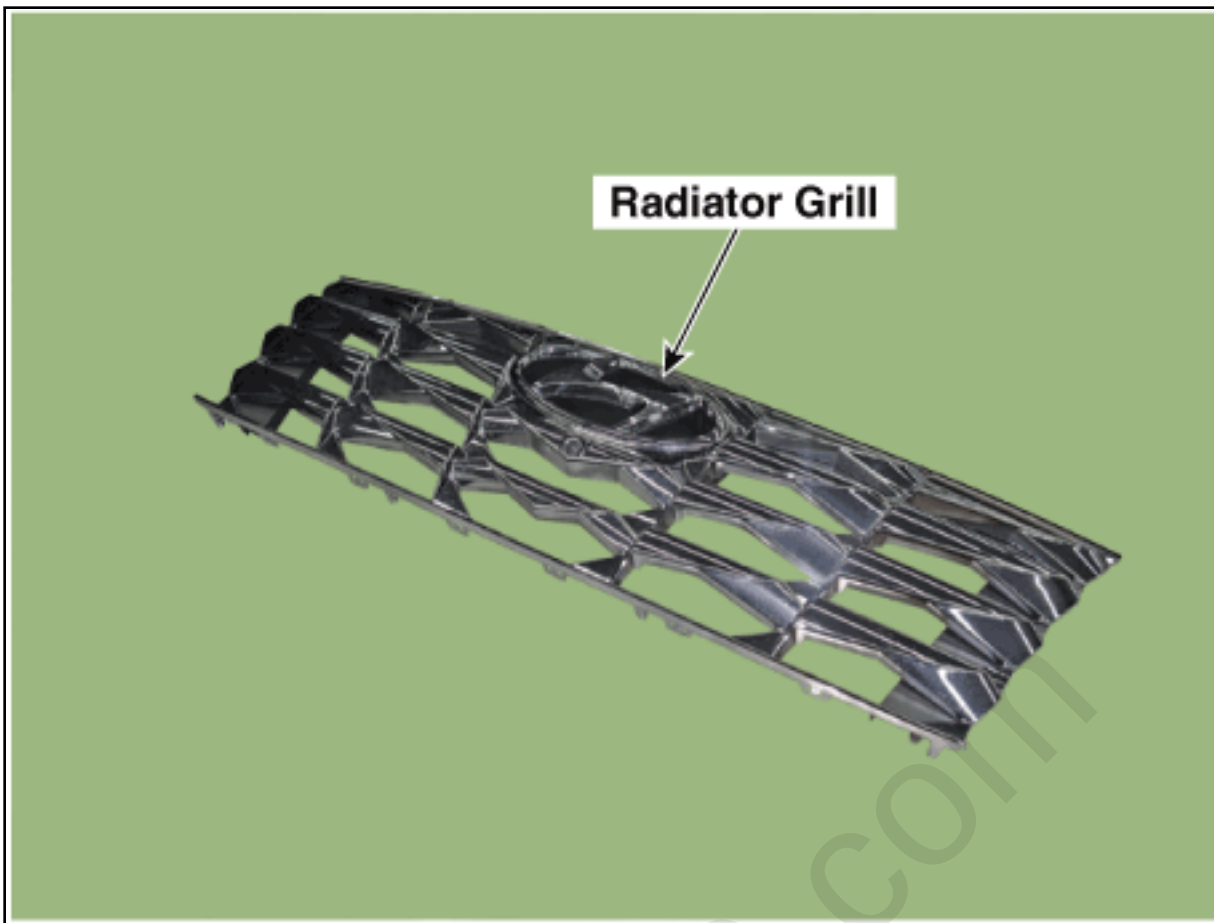


6. To install, reverse removal procedure.



- Make sure the connector is connected properly.
- Replace any damage clips.

Component
Location

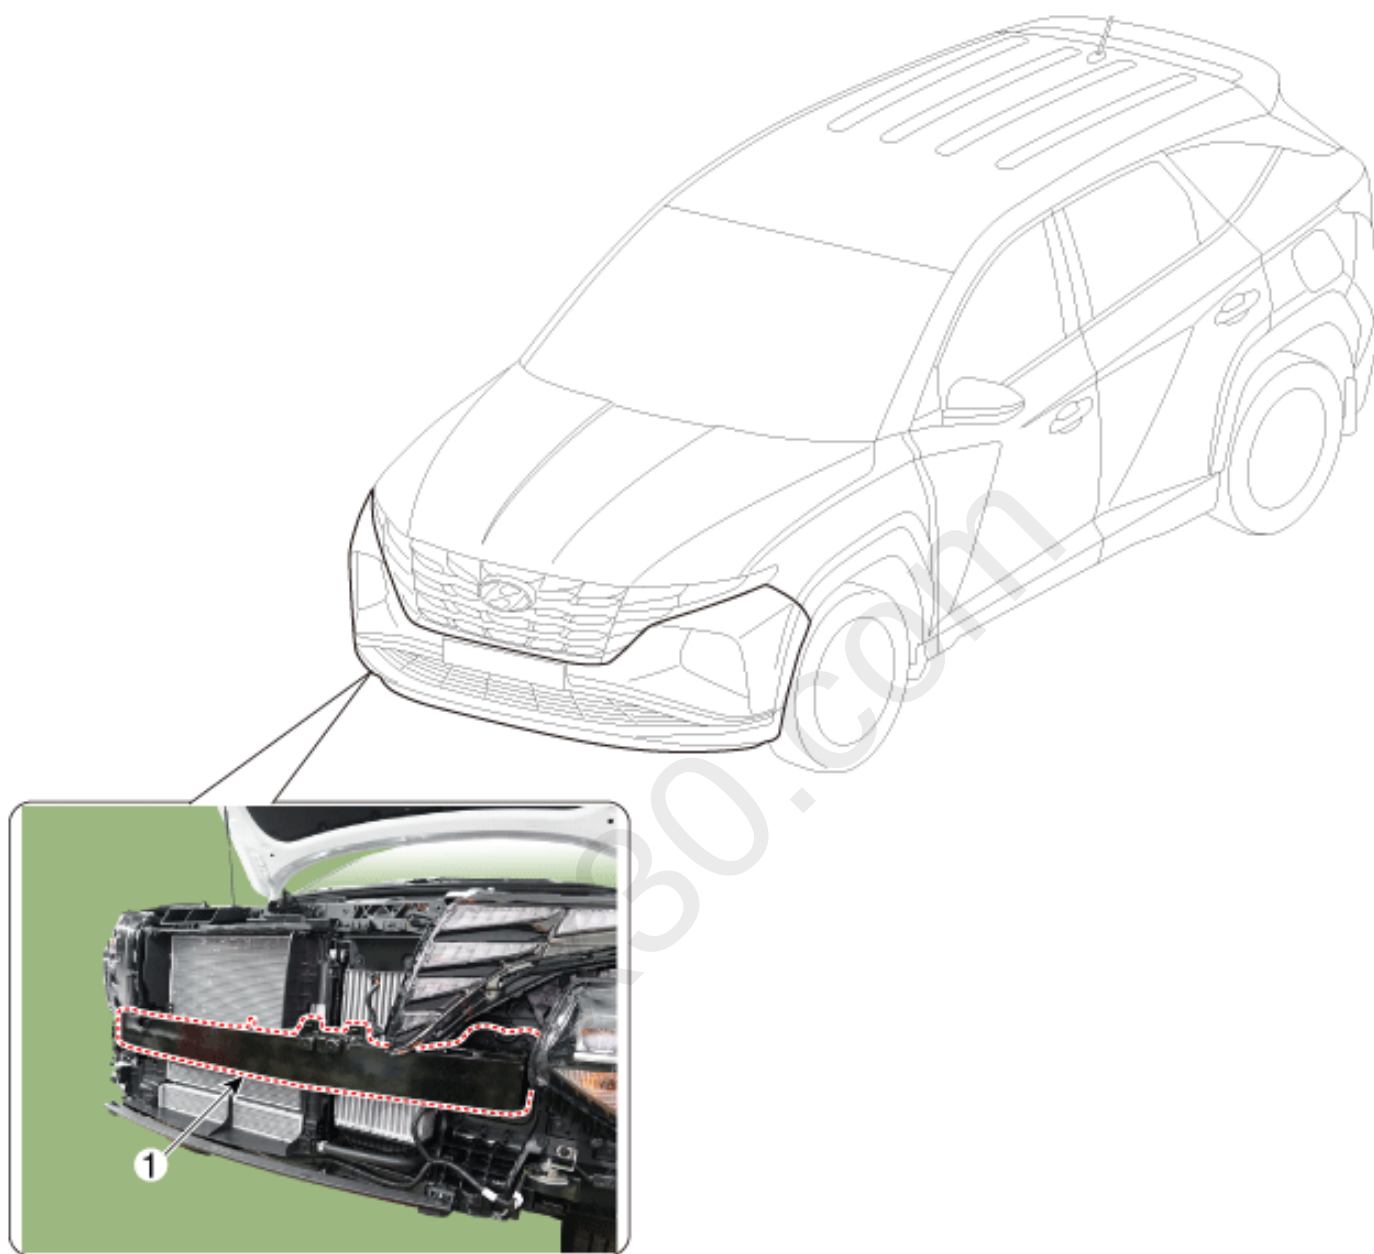


1. Front bumper beam assembly

Replacement



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.

1. Remove the front bumper assembly.
(Refer to Front Bumper - "Front Bumper Assembly")
2. Loosen the mounting nuts and bolts, remove the front bumper beam (A).

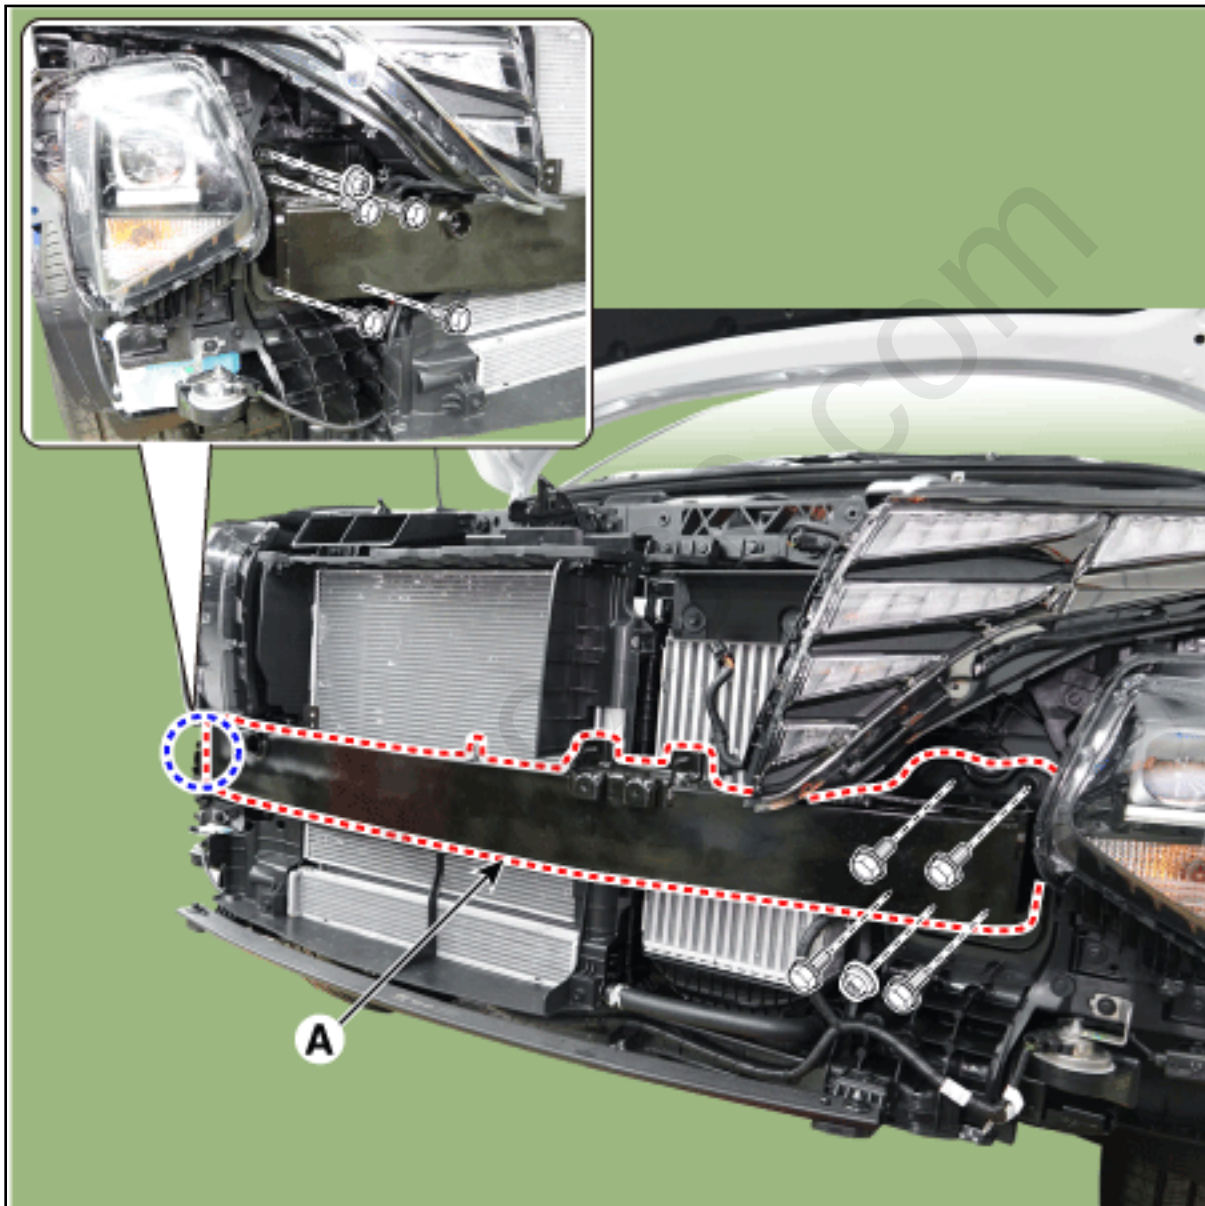

3. To install, reverse removal procedure.