

Component
Location




1. Rear seat cushion assembly

2. Rear seat back assembly

Replacement


[Rear seat cushion assembly]

1. Remove the rear seat cushion assembly (A).

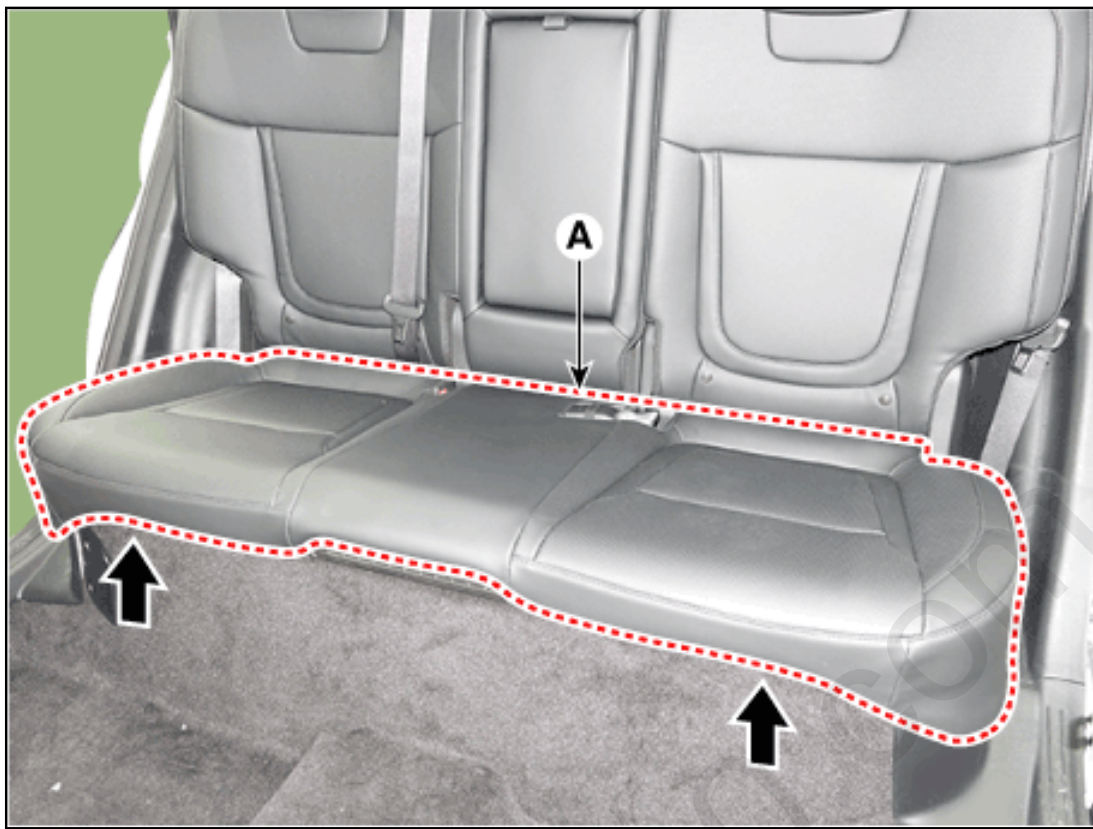

2. Press the lock pin, separate the connectors (A).



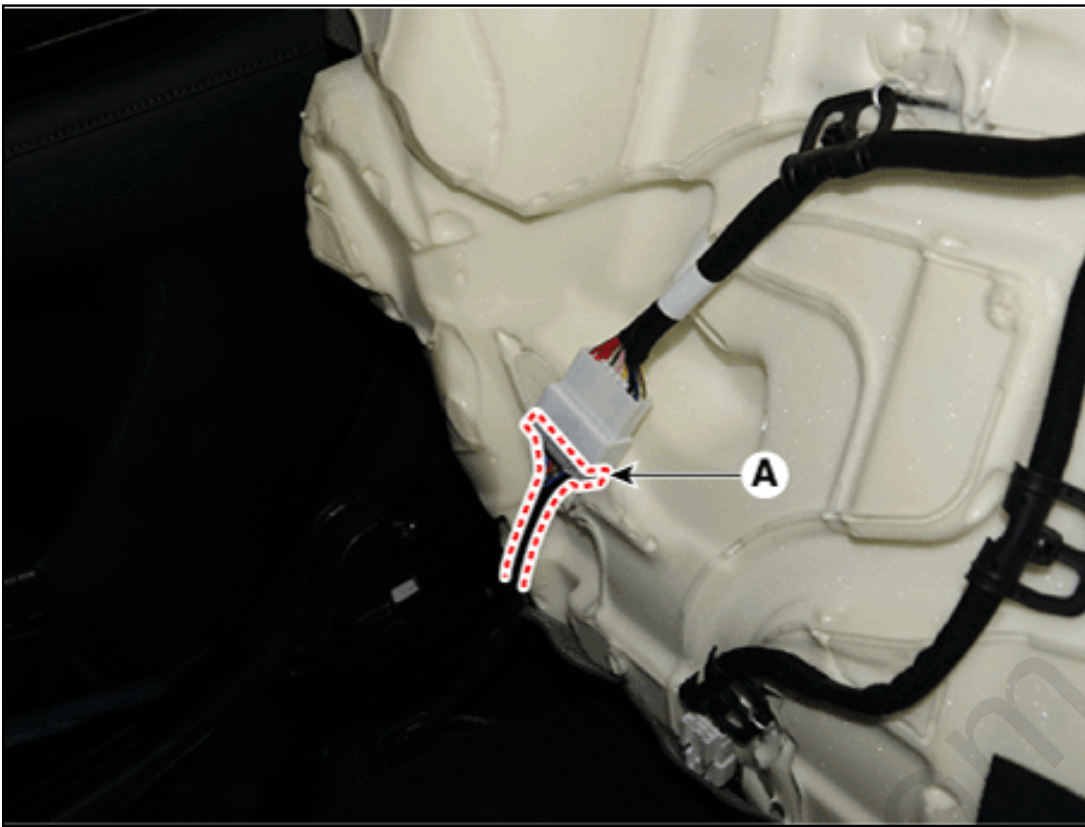


3. To install, reverse the removal procedure.

[Rear seat back assembly]


1. Disconnect the negative (-) battery terminal.
2. Remove the rear seat cushion assembly.
3. Remove the luggage board (A).




4. Remove the luggage tray (A).

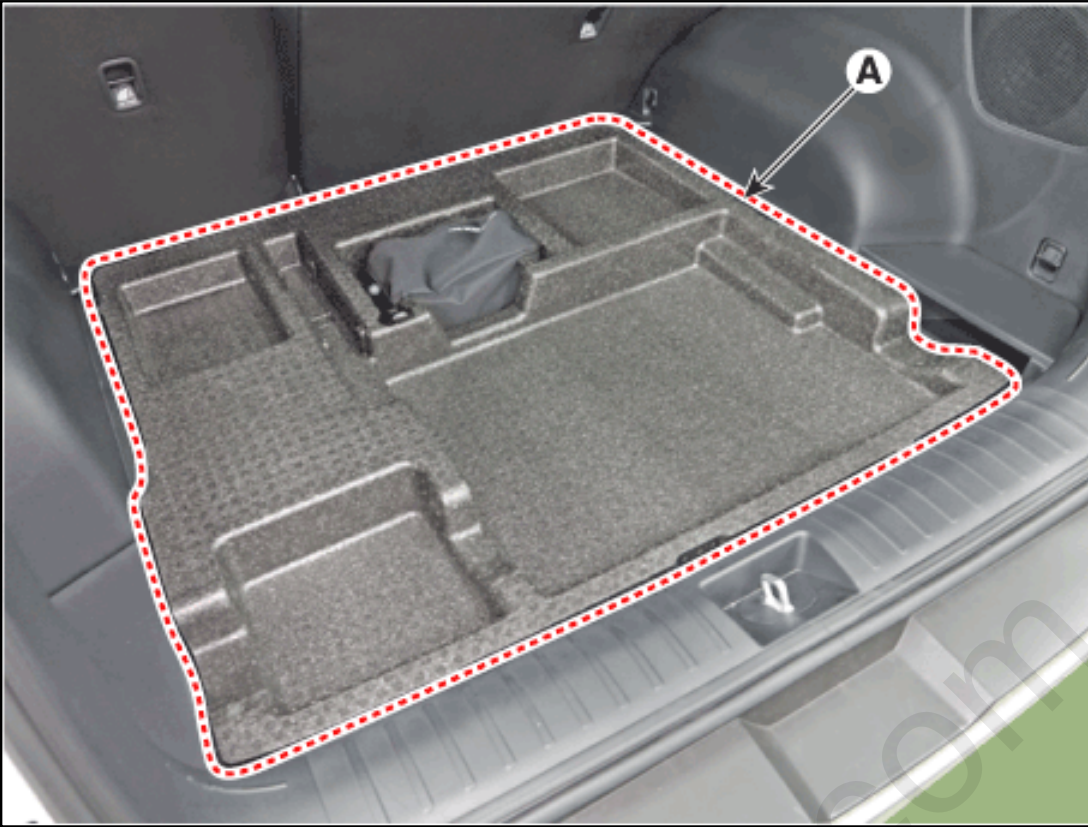


5. Open the folding cable cover (A).

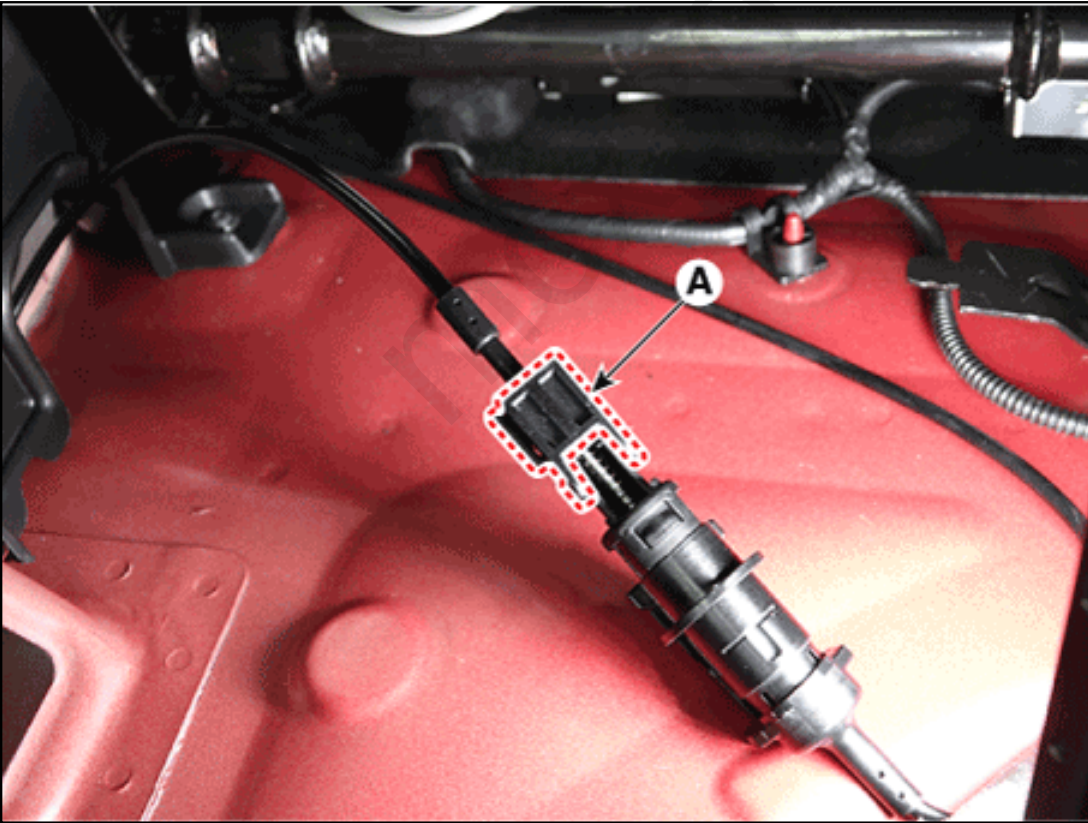

6. Separate the folding cable cover (A).

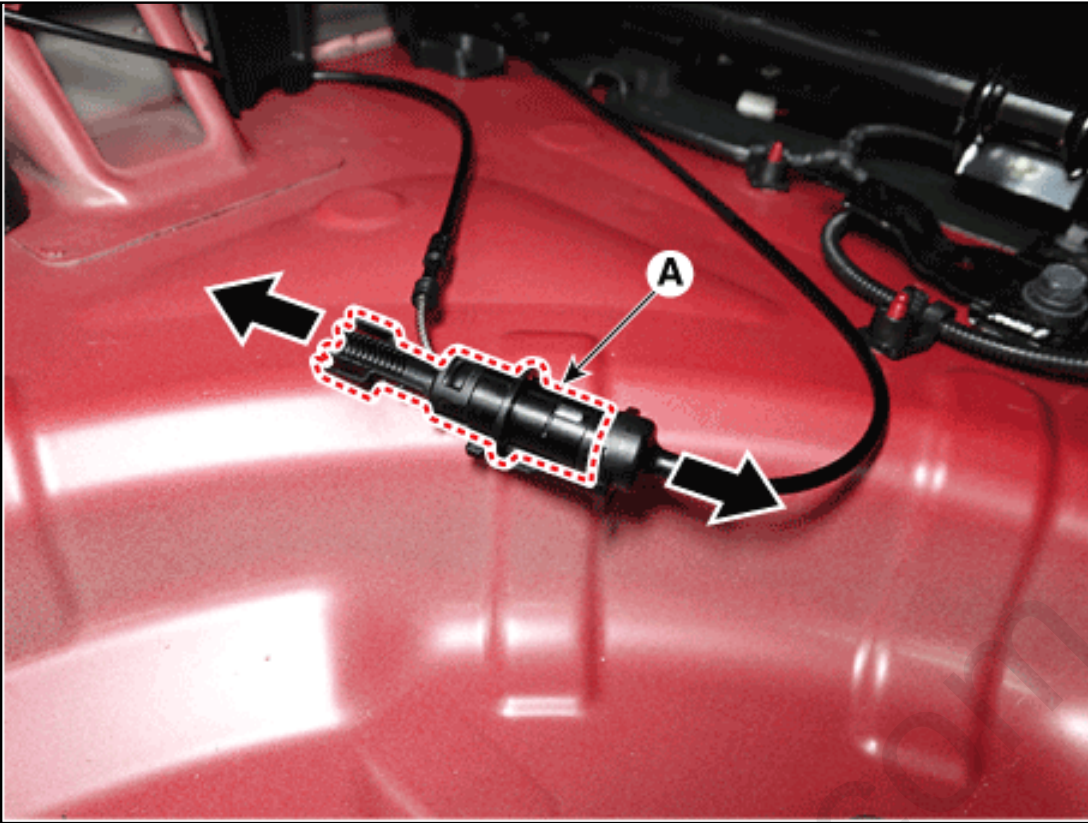

7. Separate the rear seat folding cable (A).

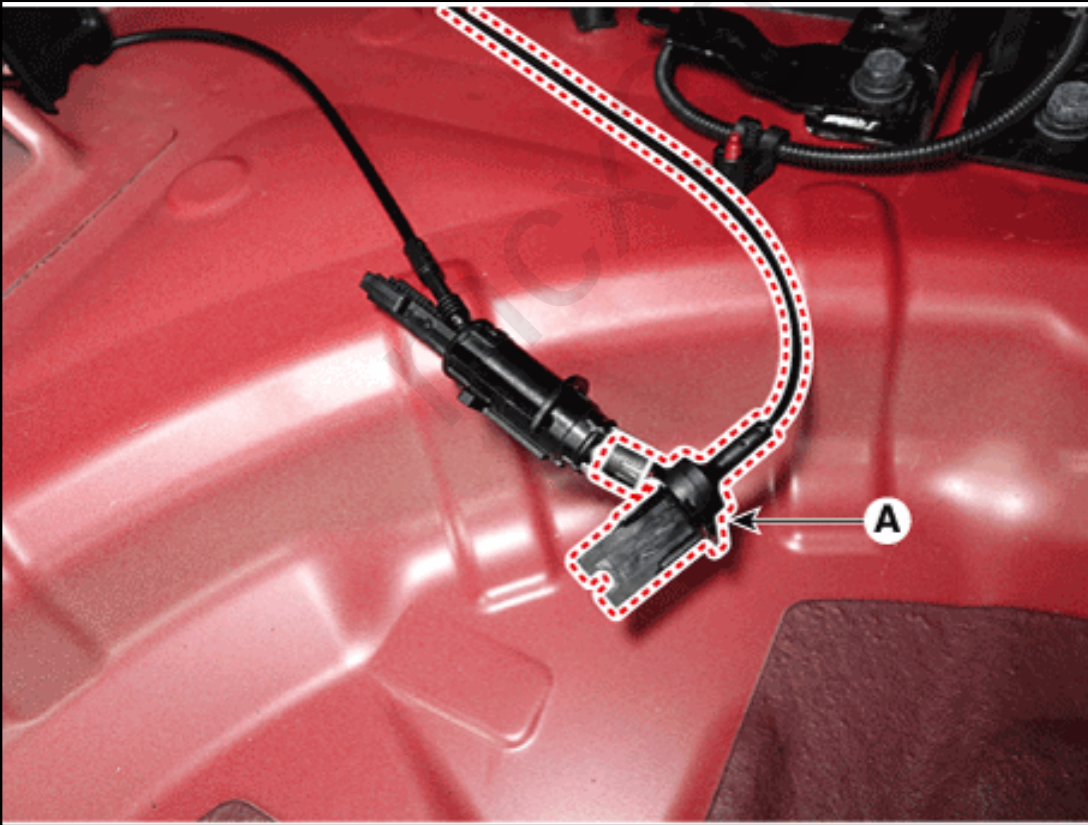

8. Remove the rear seat back assembly.

[LH]

(1) Disconnect the connector (A).



(2) Loosen the mounting bolts, remove the rear seat back assembly (A).

Tightening torque :

49.0 - 63.7 N.m (5.0 - 6.5 kgf.m, 36.2 - 47.0 lb-ft)



[RH]

(3) Disconnect the connector (A).




(4) Loosen the mounting bolts, remove the rear seat back assembly (A).

Tightening torque :

49.0 - 63.7 N.m (5.0 - 6.5 kgf.m, 36.2 - 47.0 lb-ft)



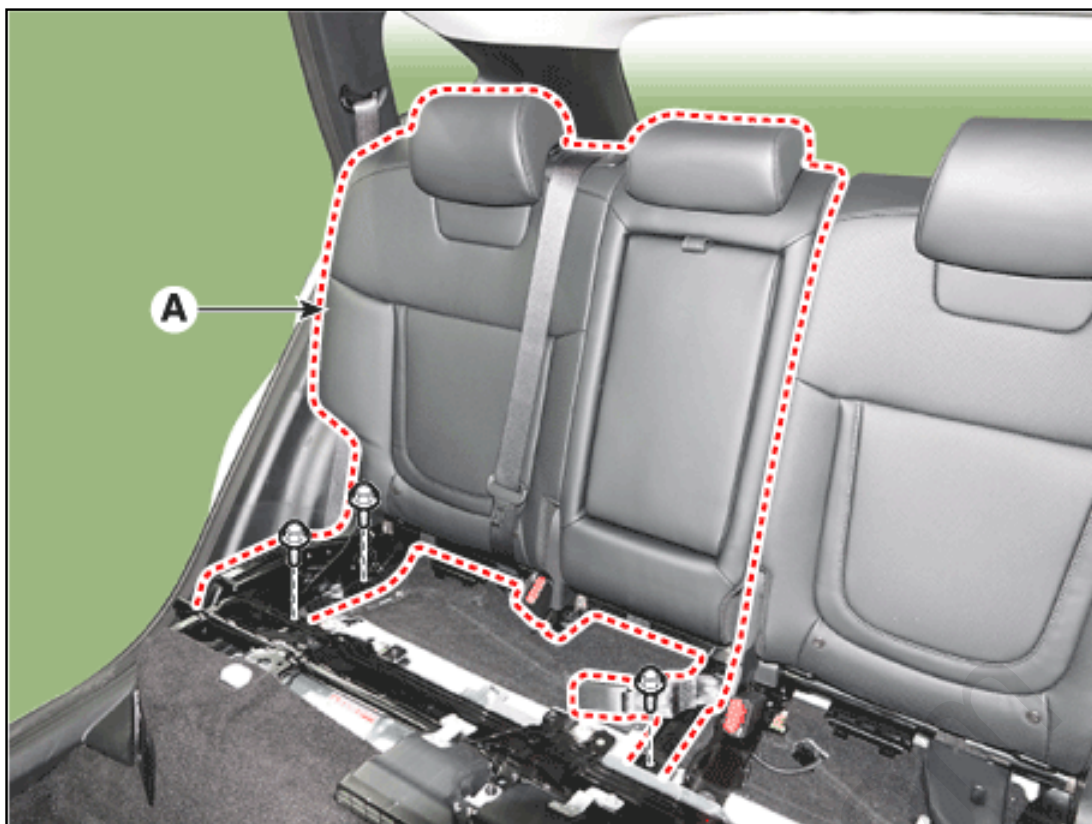

9. To install, reverse the removal procedure.



- Make sure the connector is connected properly.

Component
Location



1. Rear seat back cover [LH]

2. Rear seat back cover [RH]

Replacement



- Put on gloves to protect your hands.



- Take care not to bend or scratch the rear seat assembly.

[LH]


1. Remove the rear seat back assembly [LH].
(Refer to Rear Seat - "Rear Seat Assembly")
2. Loosen the mounting screw, remove the rear seat slide knob (A).




3. Loosen the mounting screws, press the lock pin (B) and remove the rear seat shield outer cover (A).




4. Loosen the mounting screws, remove the rear seat shield inner cover (A).

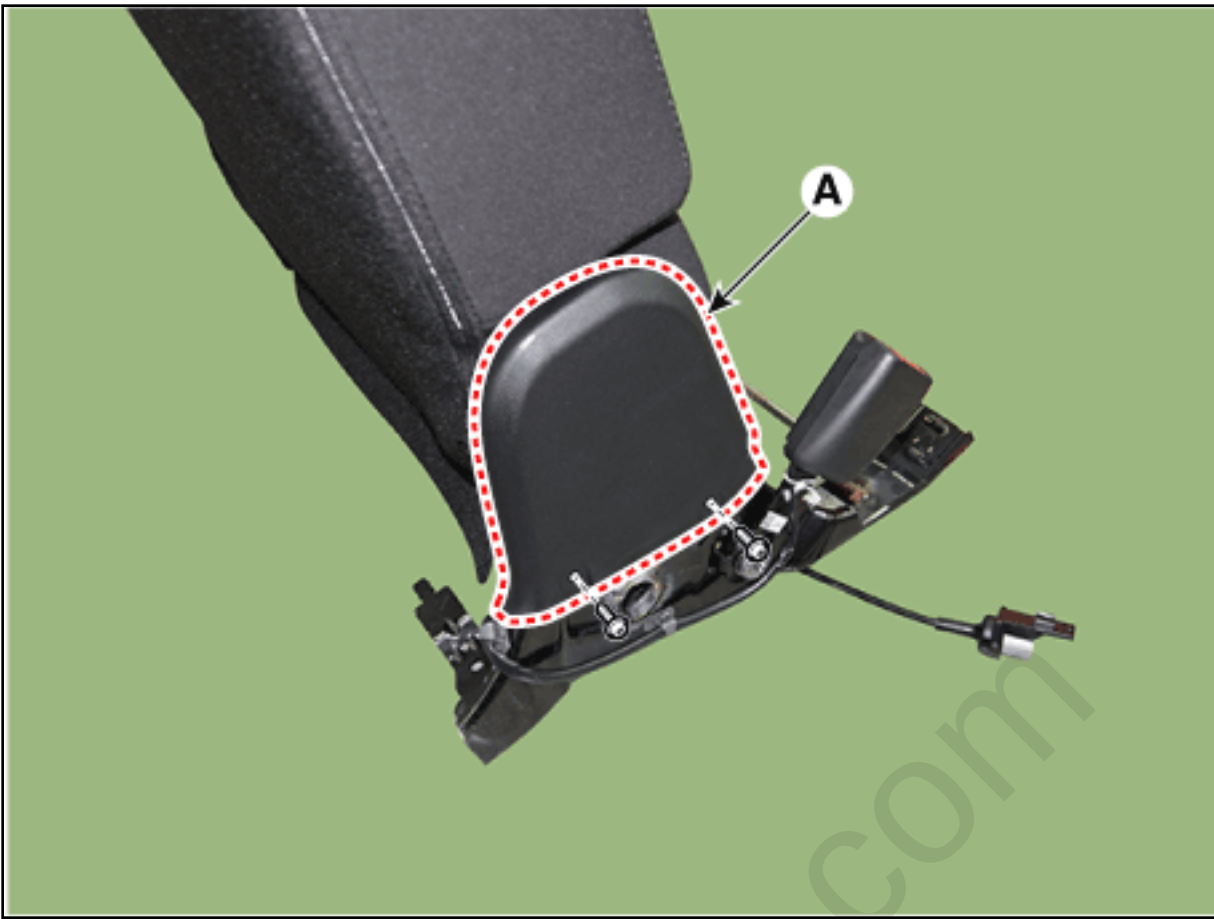

5. Press the lock pin and remove the rear seat headrest (A).

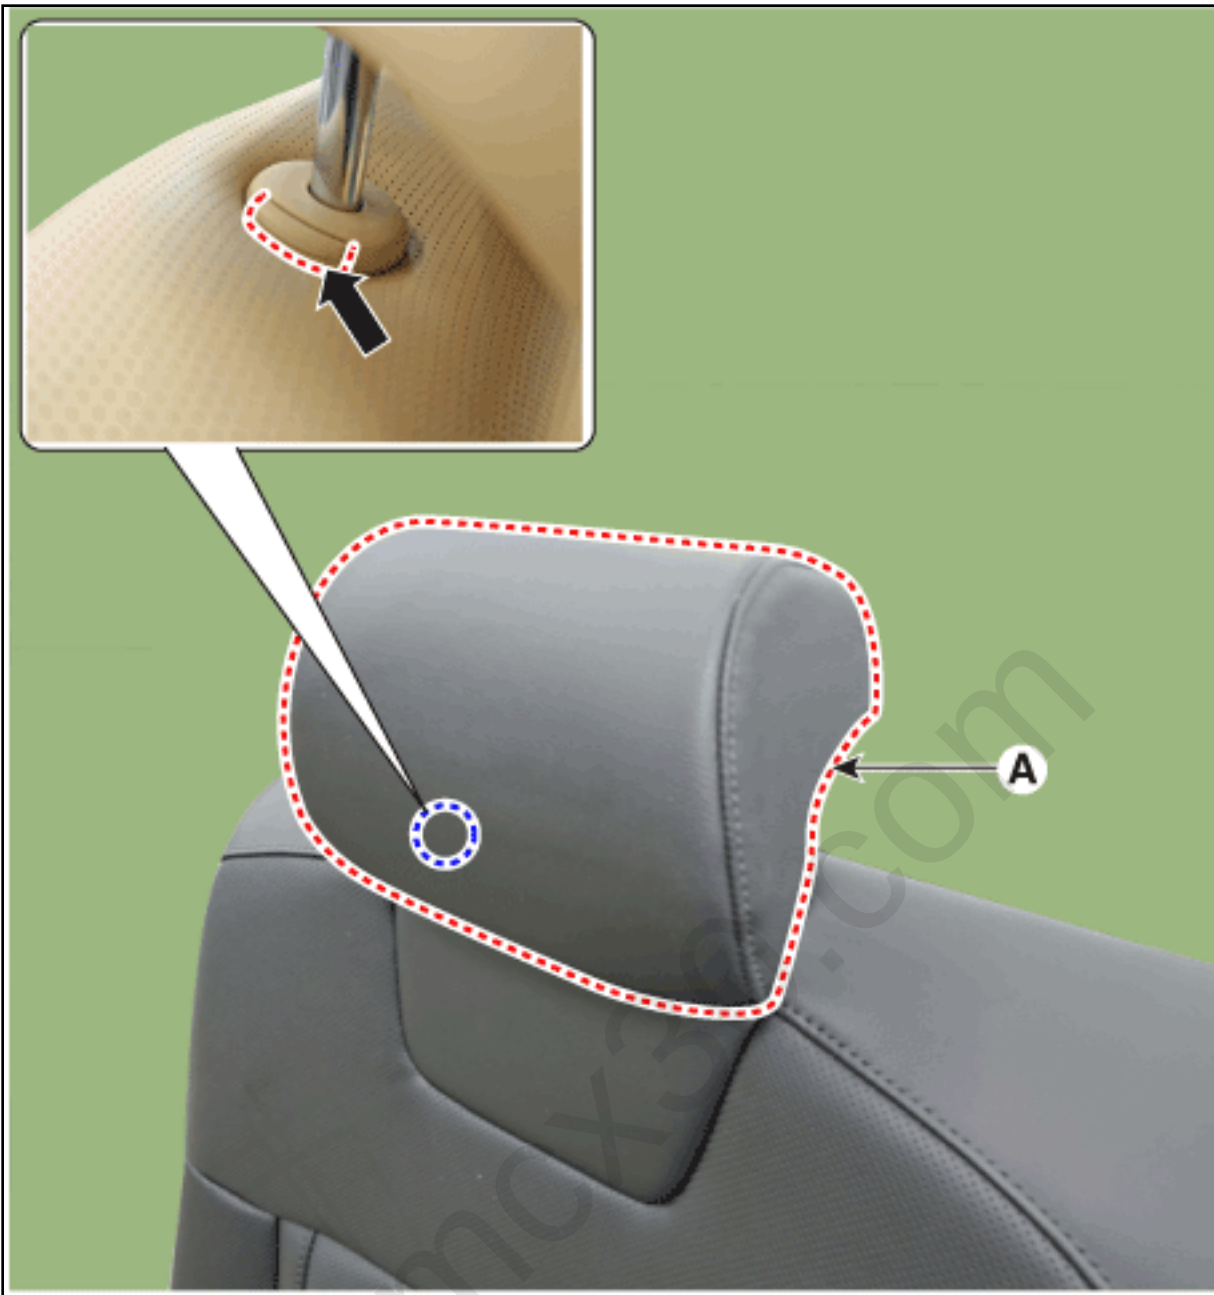


6. Remove the headrest guides (A) by pulling upward.

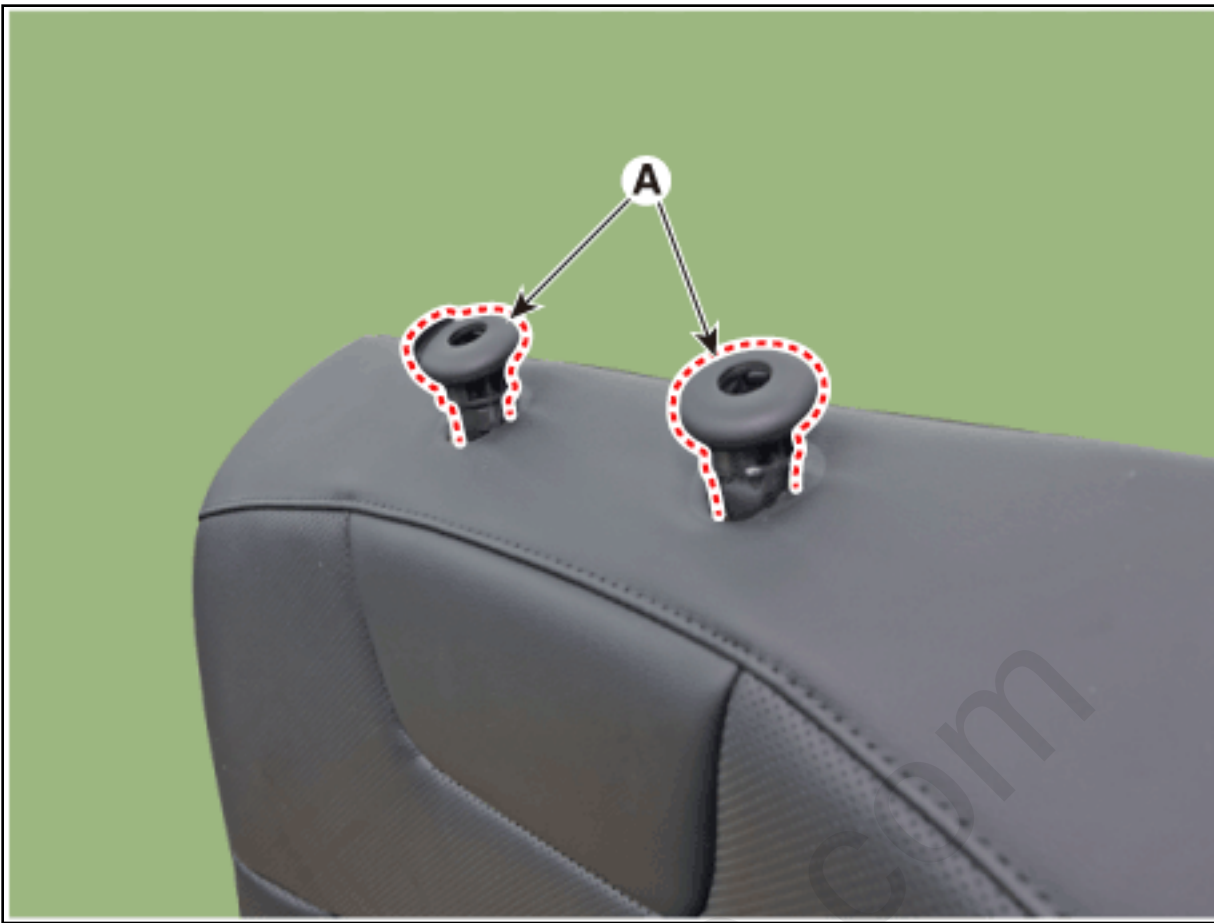

7. Open the cover, loosen the mounting screw and remove the rear seat back webbing guide (A).




8. Remove the child anchor cover (A).

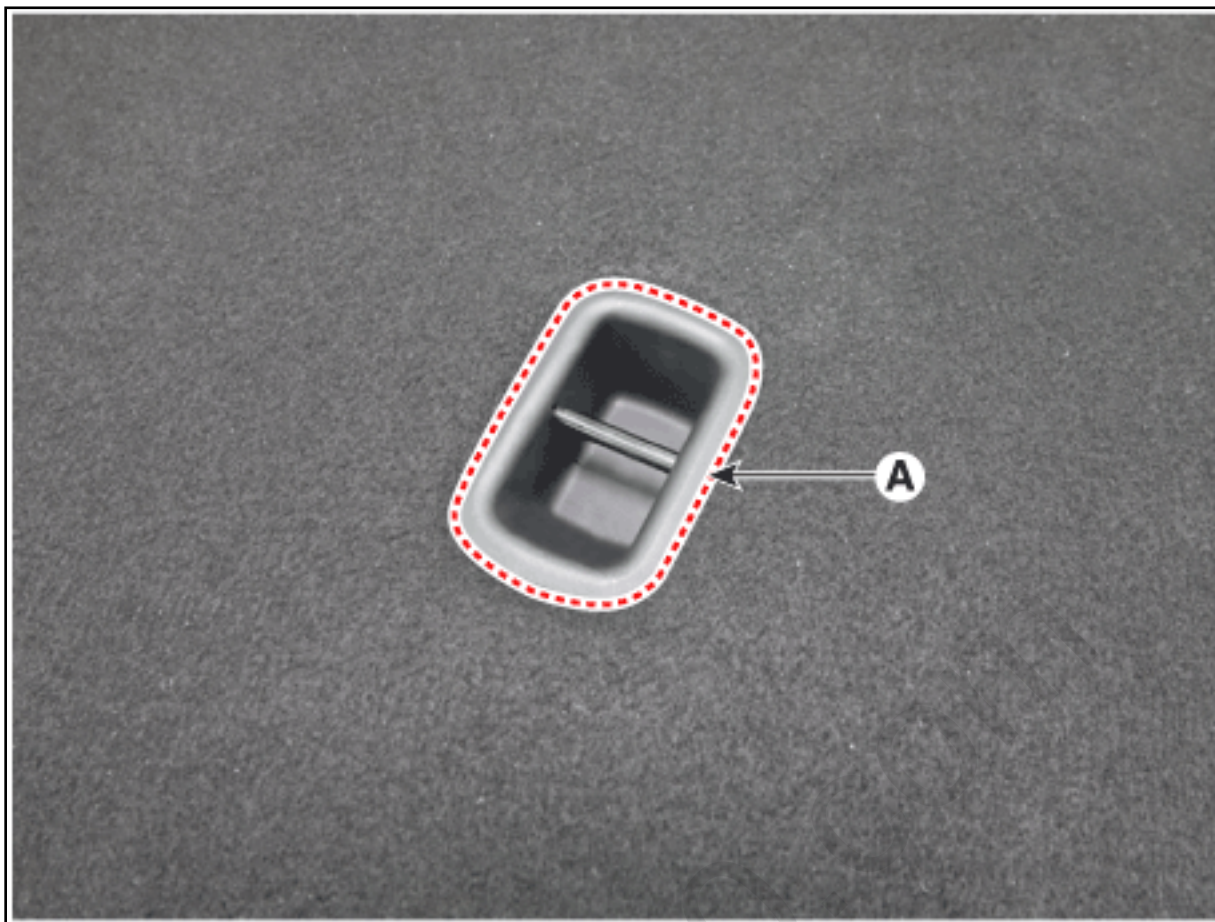

9. Remove the rear seat back protector (A).


mcx30

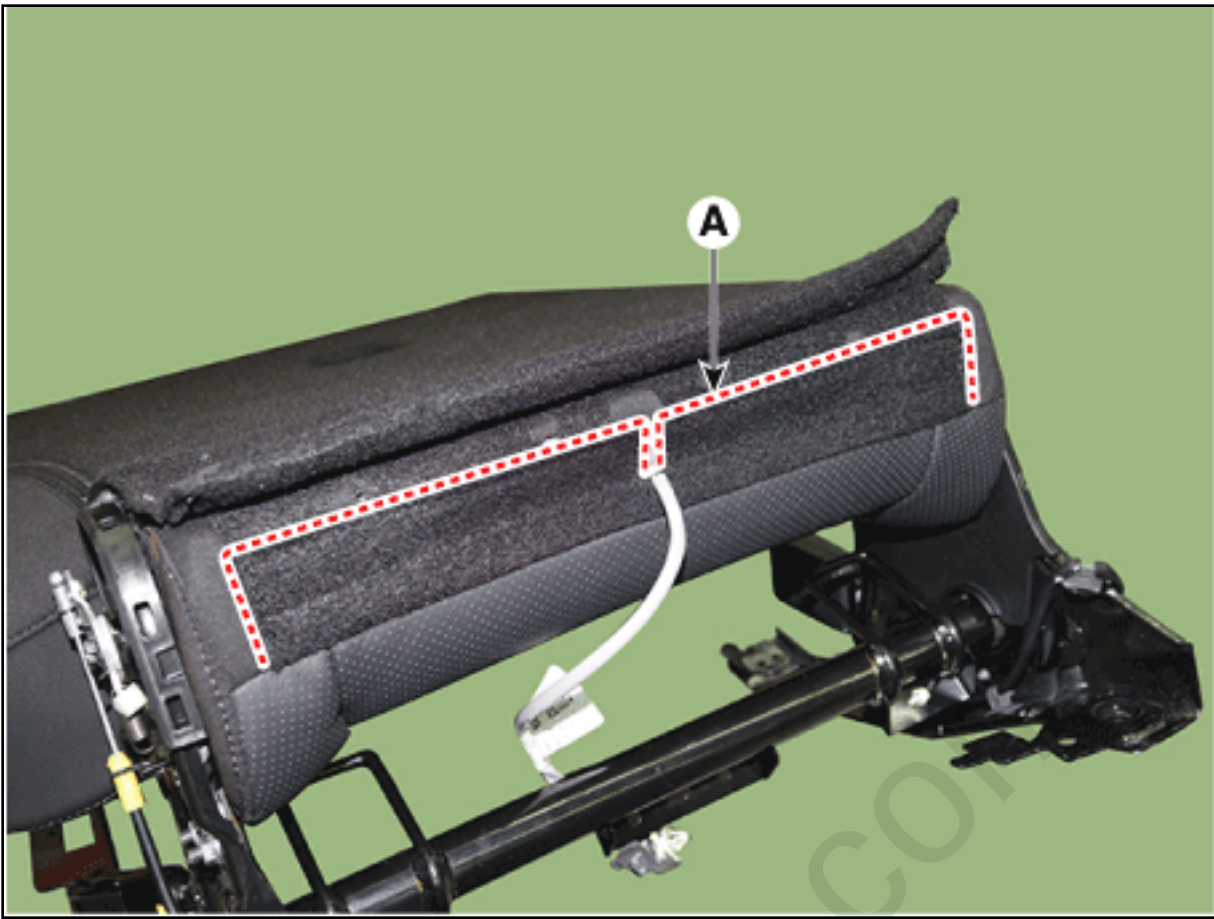


10. Remove the rear seat back cover (A).




11. Remove the hog-ring clips (A).

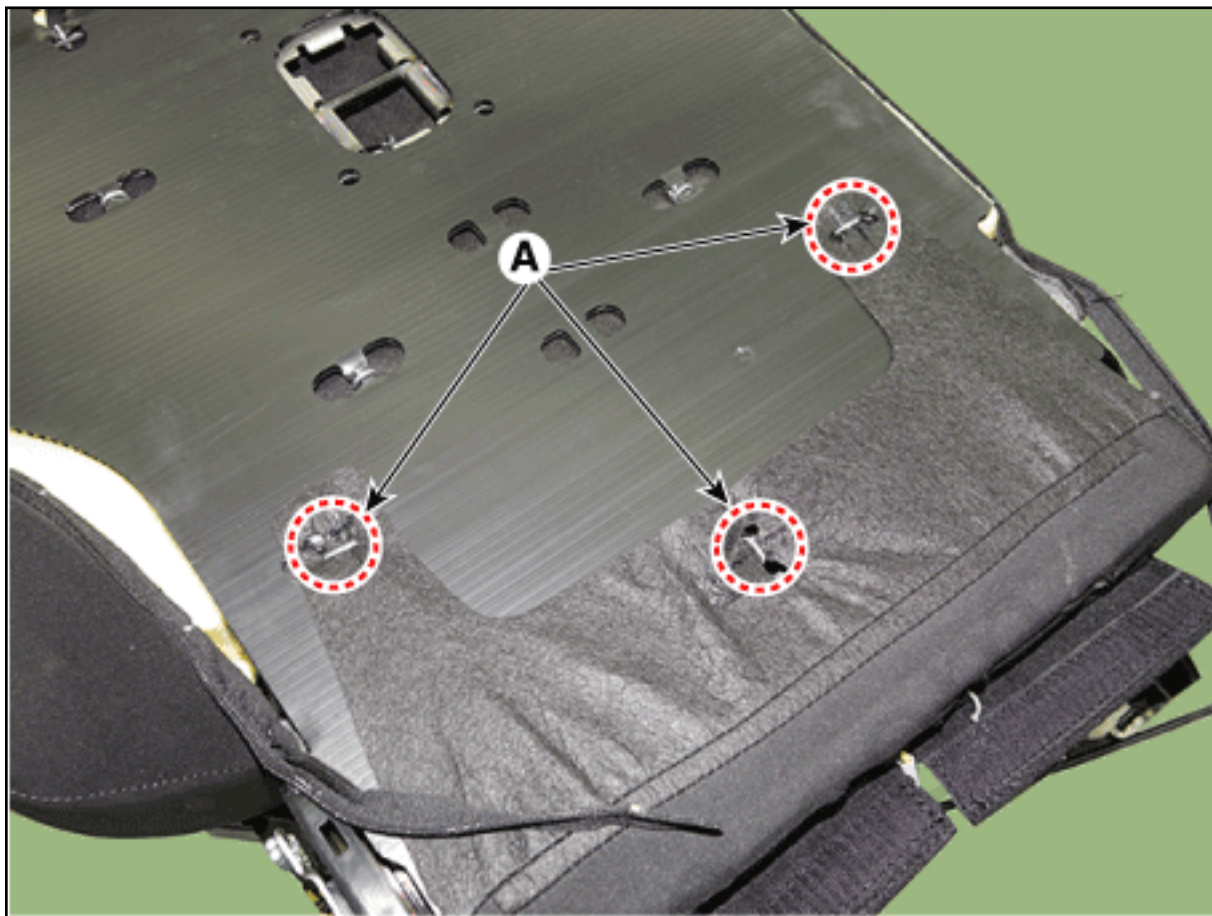

12. Remove the rear seat back cover (A) from the rear seat frame.

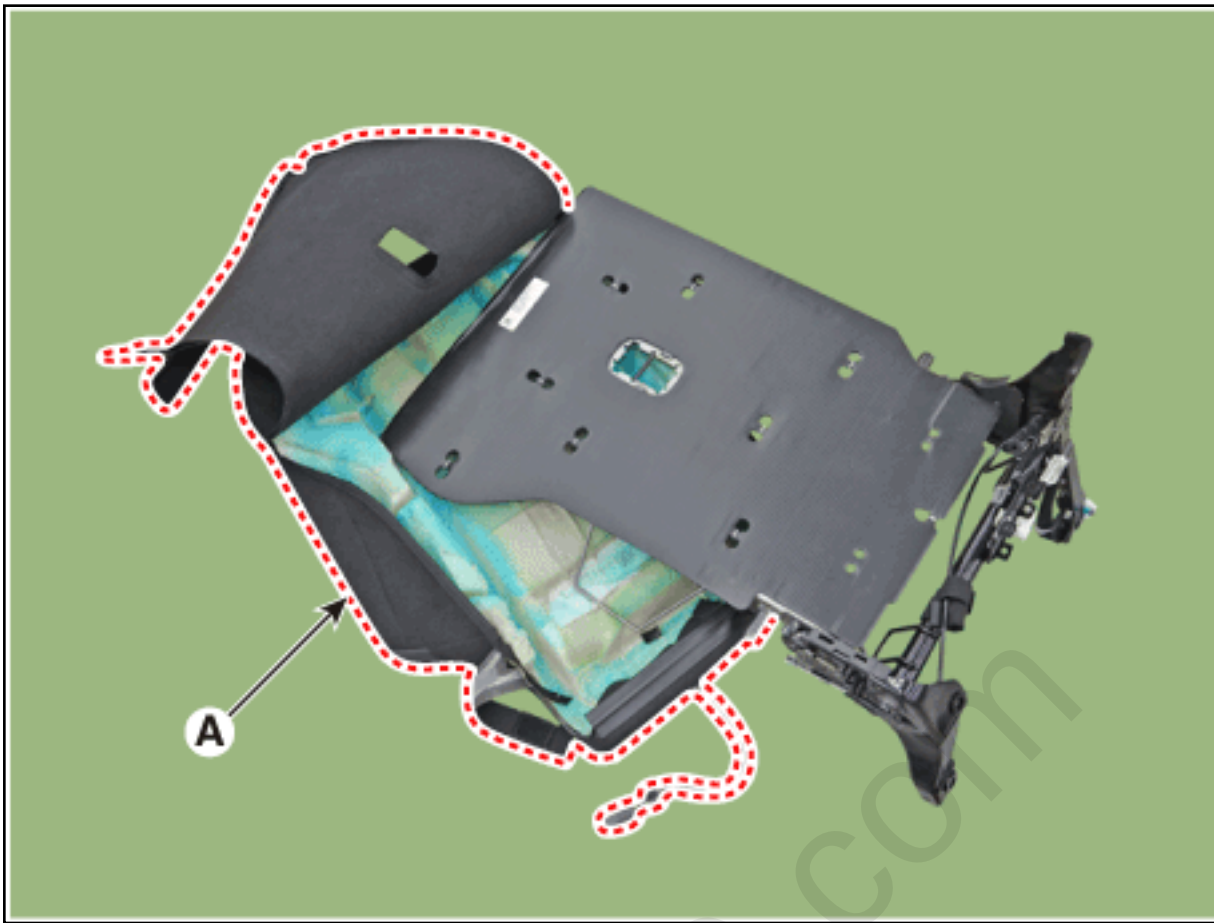

13. After removing the Velcro tape (A) and tie down clips (B) inside the rear seat cushion cover, remove the seat cushion cover (C).

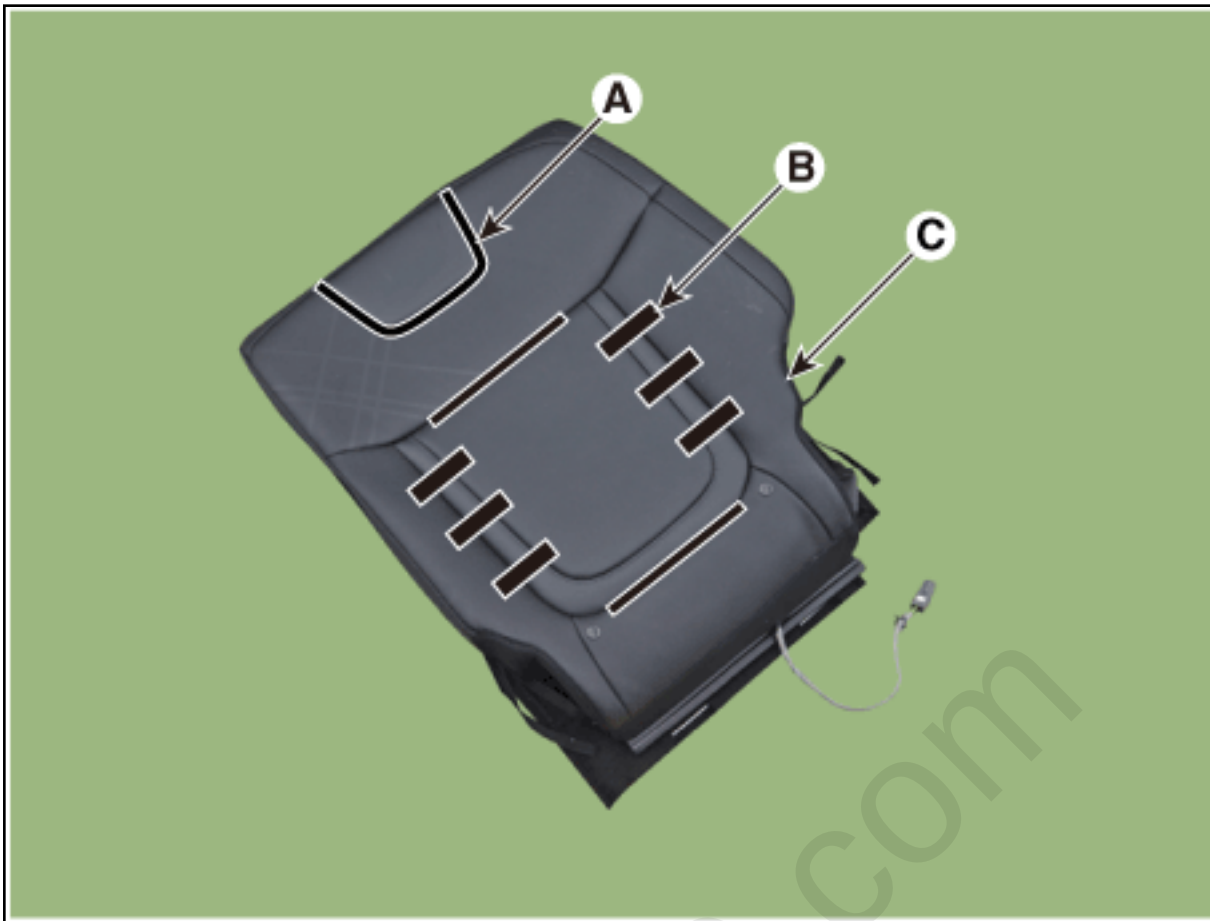


- Be careful not to deviate from the pads, insert wires, and aplix.

14. To install, reverse the removal procedure.



- To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog-ring clips (A).
- Replace the hog-ring clips with new ones using special tool (C) (09880-4F000).

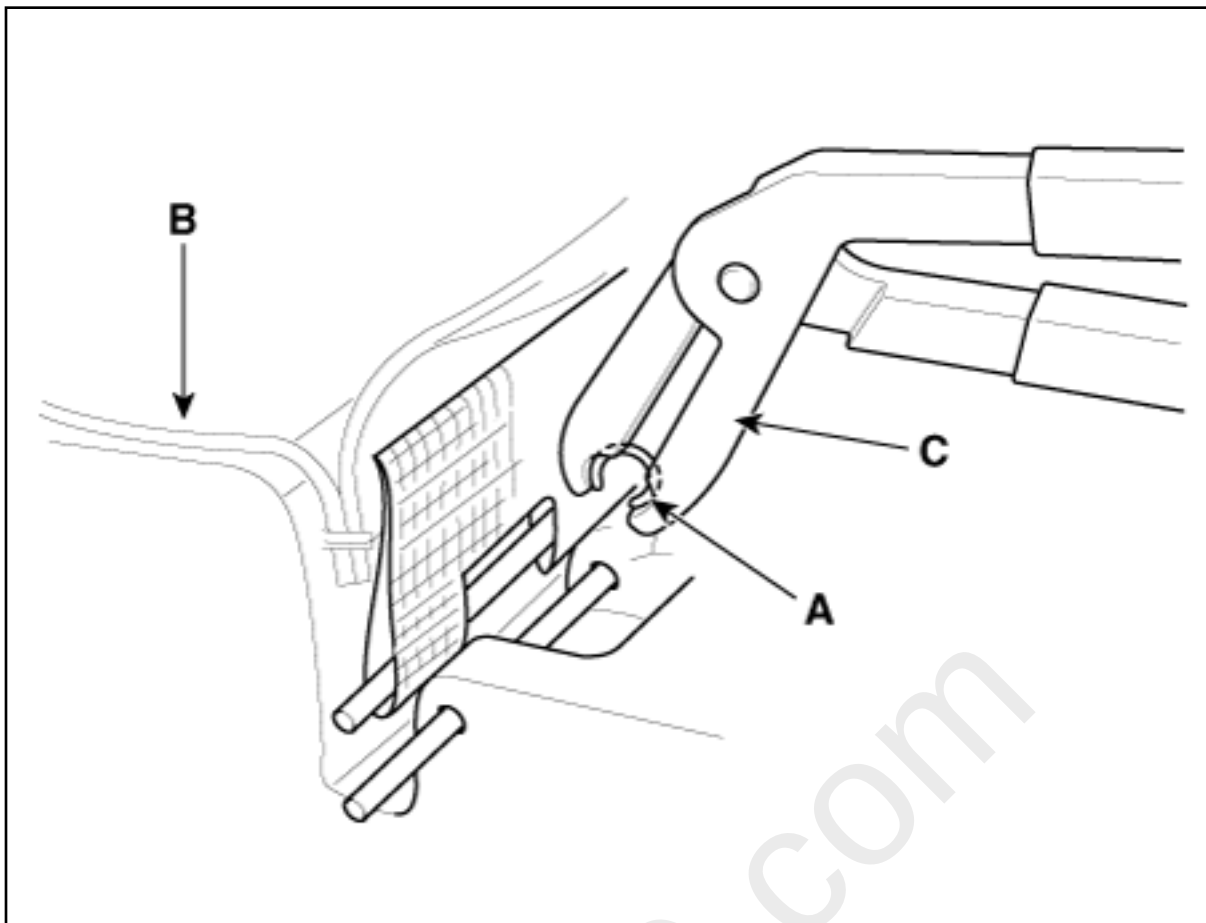

[RH]

1. Remove the rear seat back assembly [RH].

(Refer to Rear Seat - "Rear Seat Assembly")


2. Loosen the mounting screw, remove the rear seat slide knob (A).



3. Loosen the mounting screws, press the lock pin (B) and remove the rear seat shield outer cover (A).




4. Loosen the mounting screws, remove the rear seat shield inner cover (A).

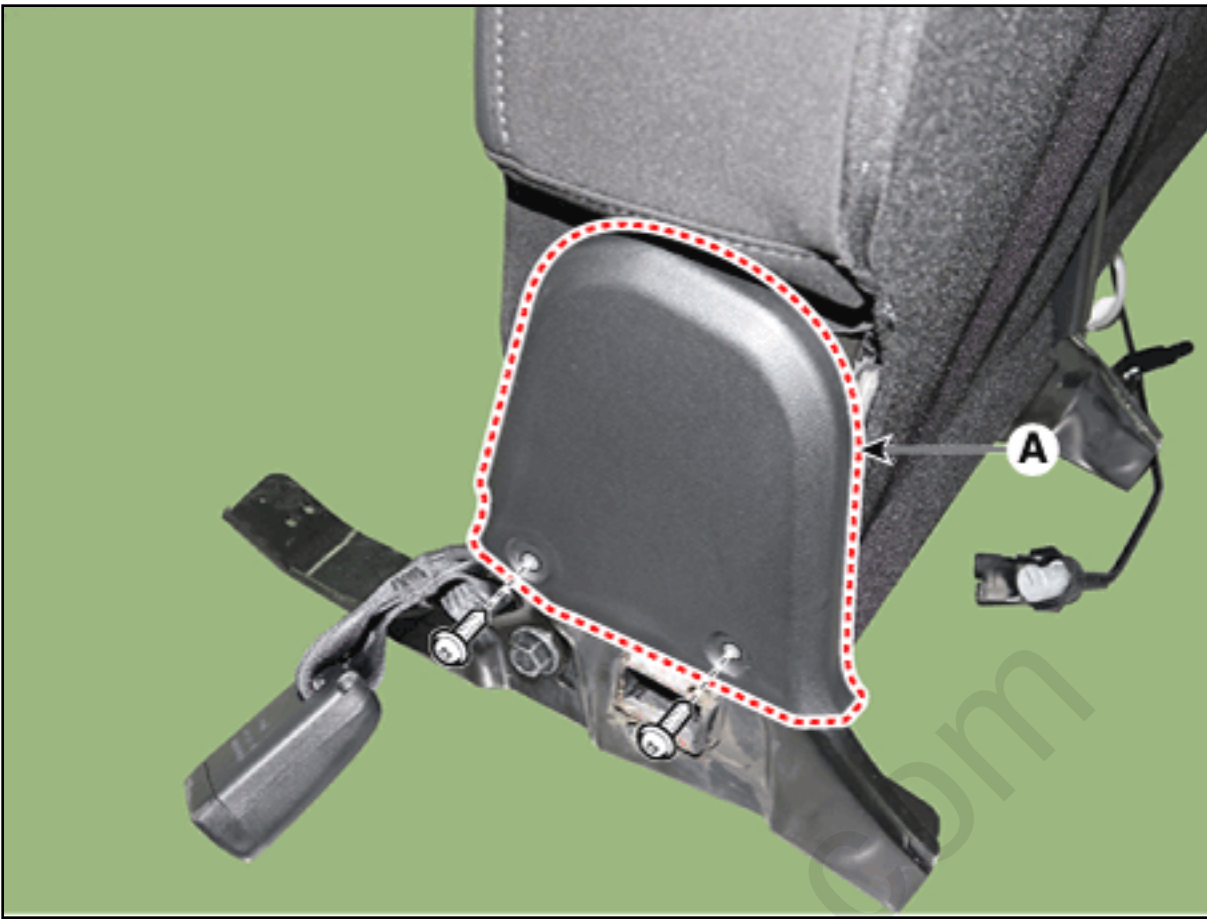


5. Press the lock pin and remove the rear seat headrest (A).




6. Remove the headrest guides (A) by pulling upward.

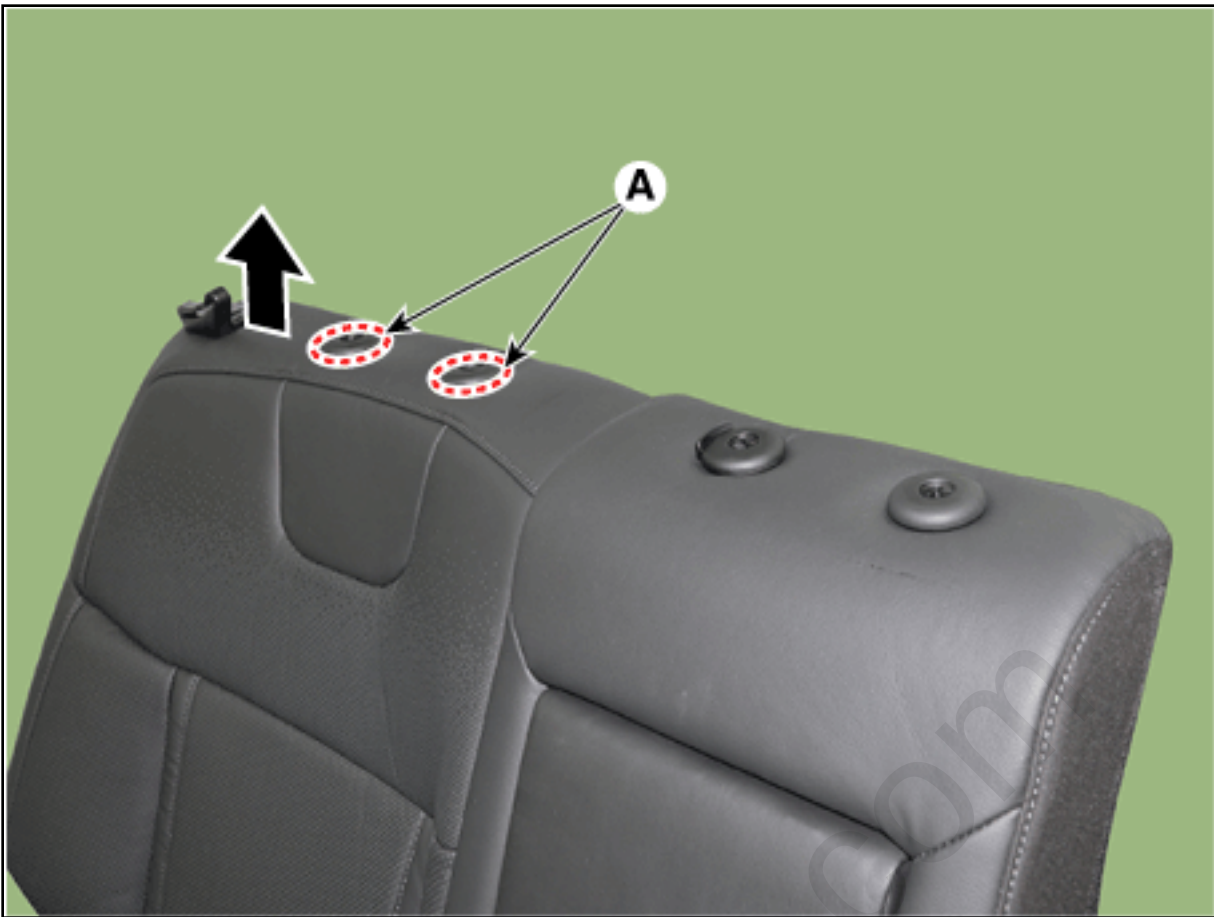

7. Open the cover, loosen the mounting screw and remove the rear seat back webbing guide (A).

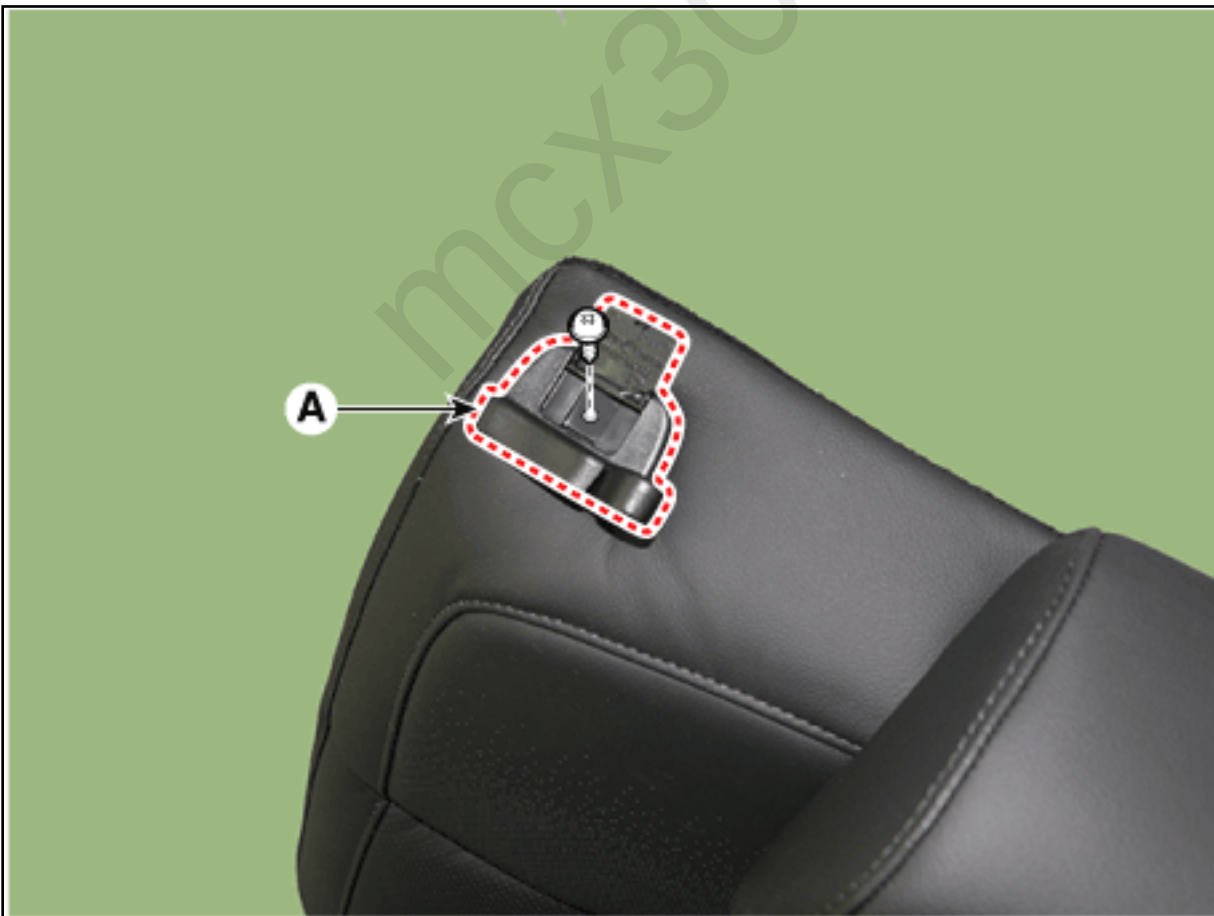


8. Remove the child anchor cover (A).

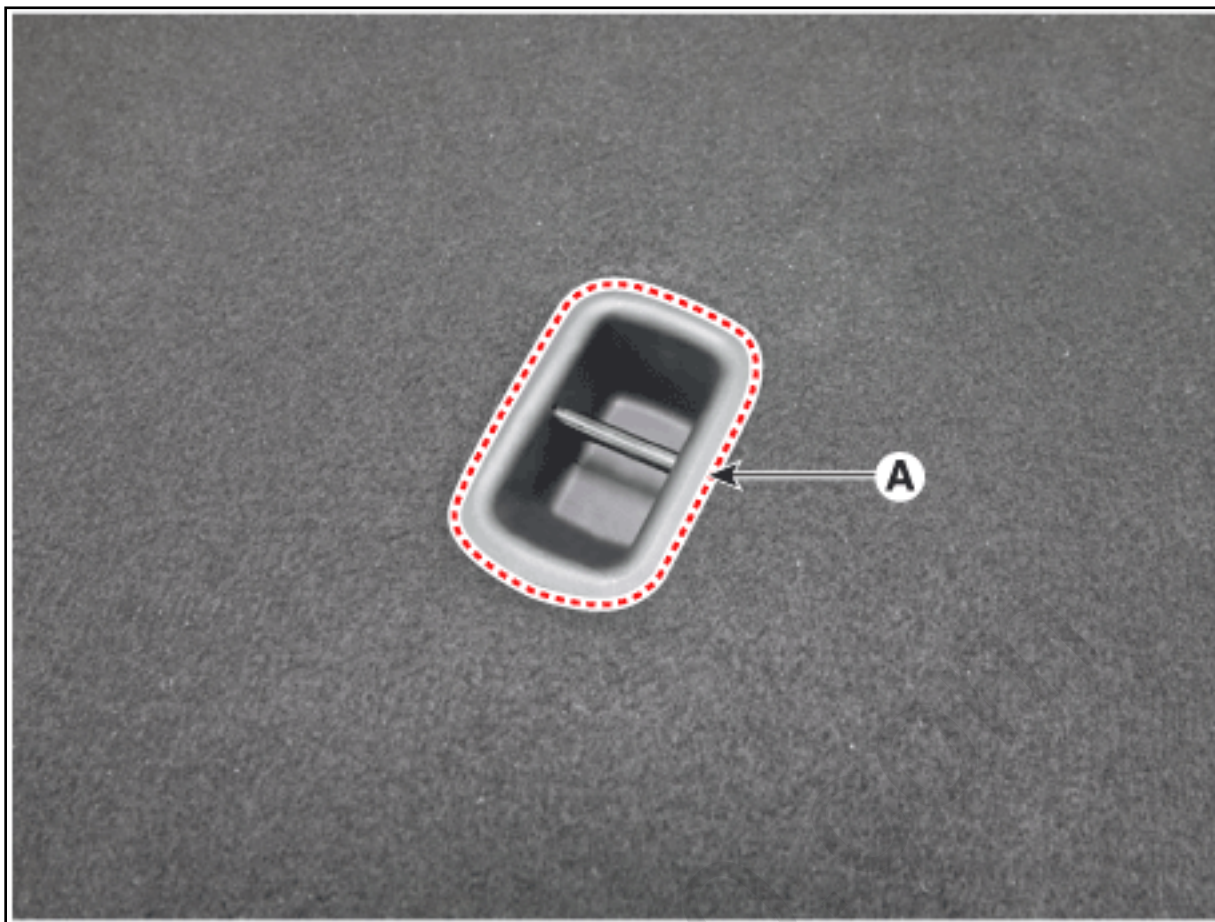

9. Remove the rear seat back protector (A).


mcx30

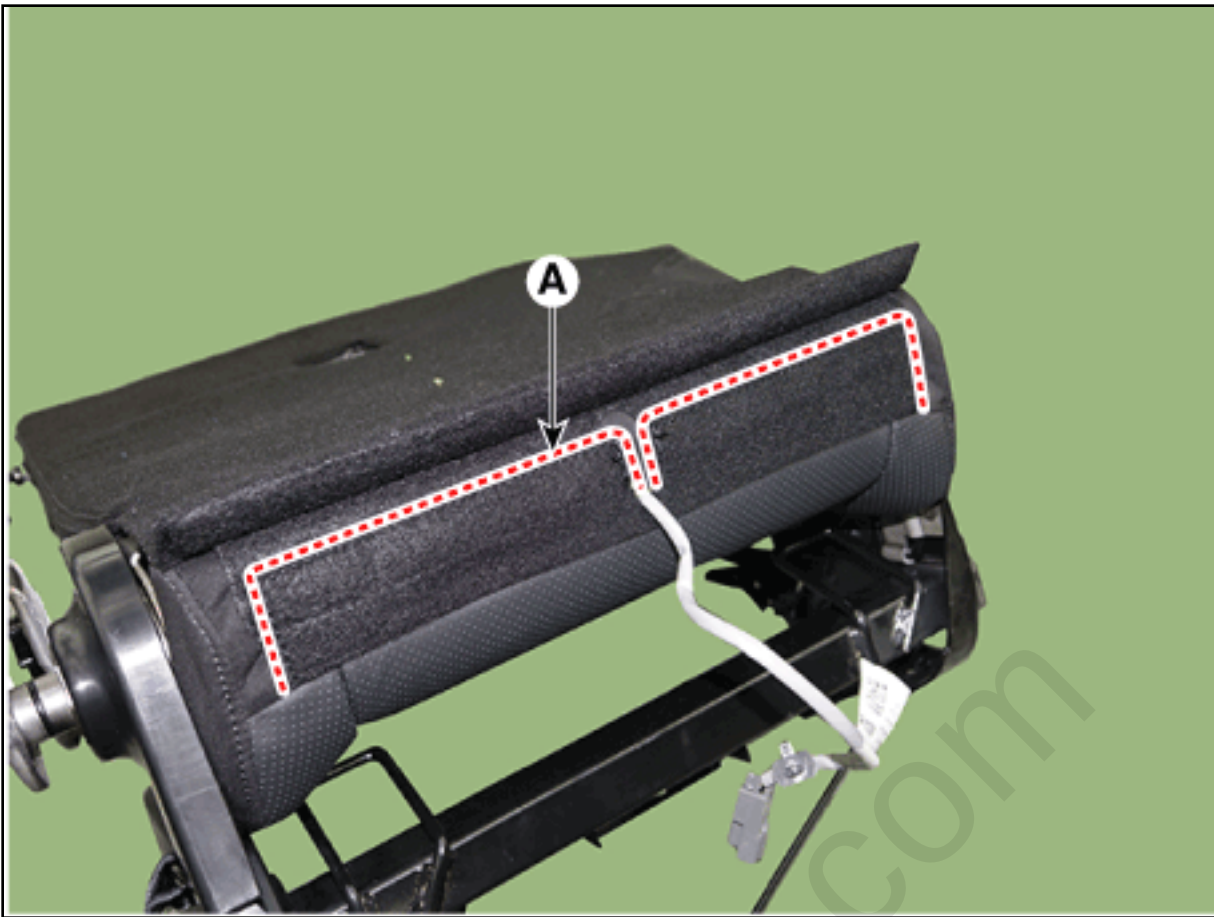


10. Remove the hog-ring clips (A).




11. Remove the rear seat back cover (A).

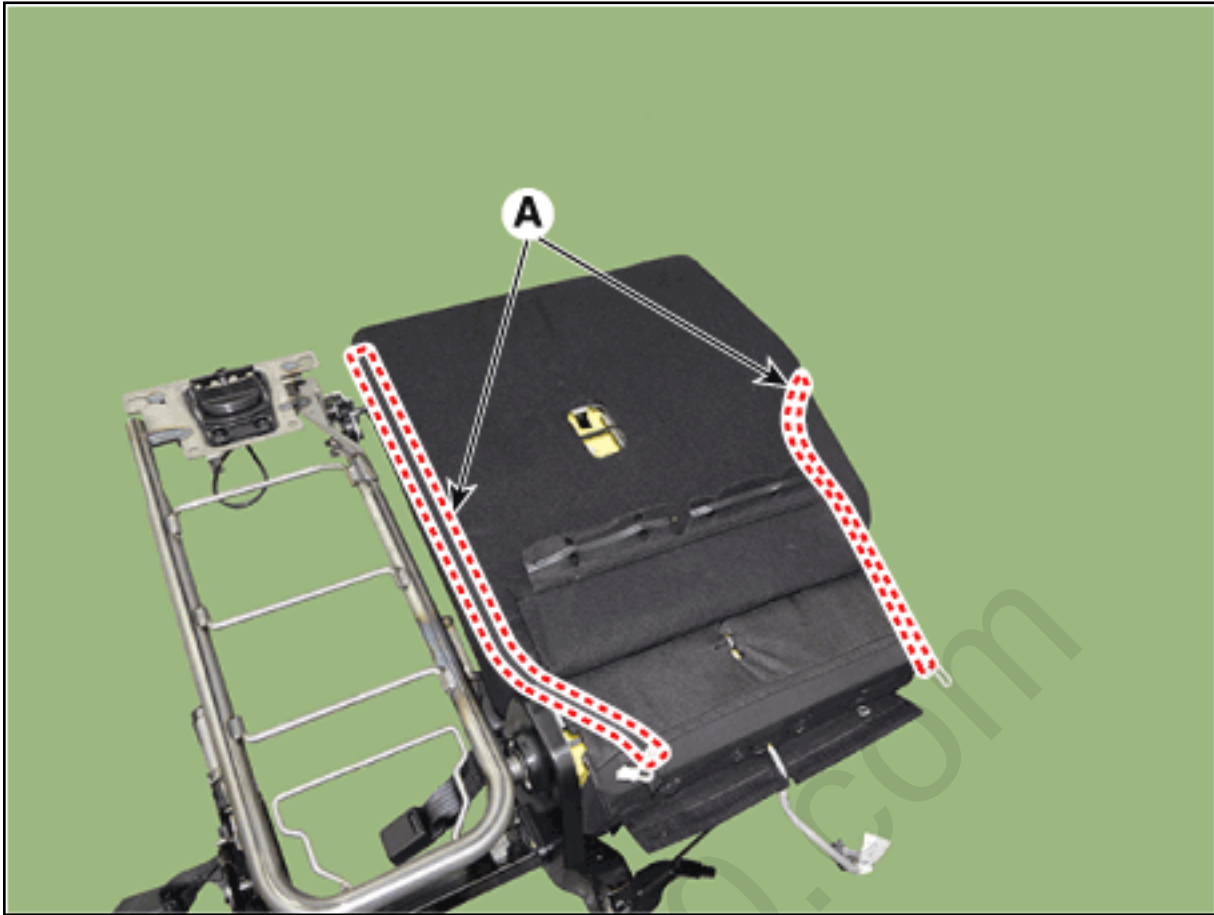

12. Remove the hog-ring clips (A).

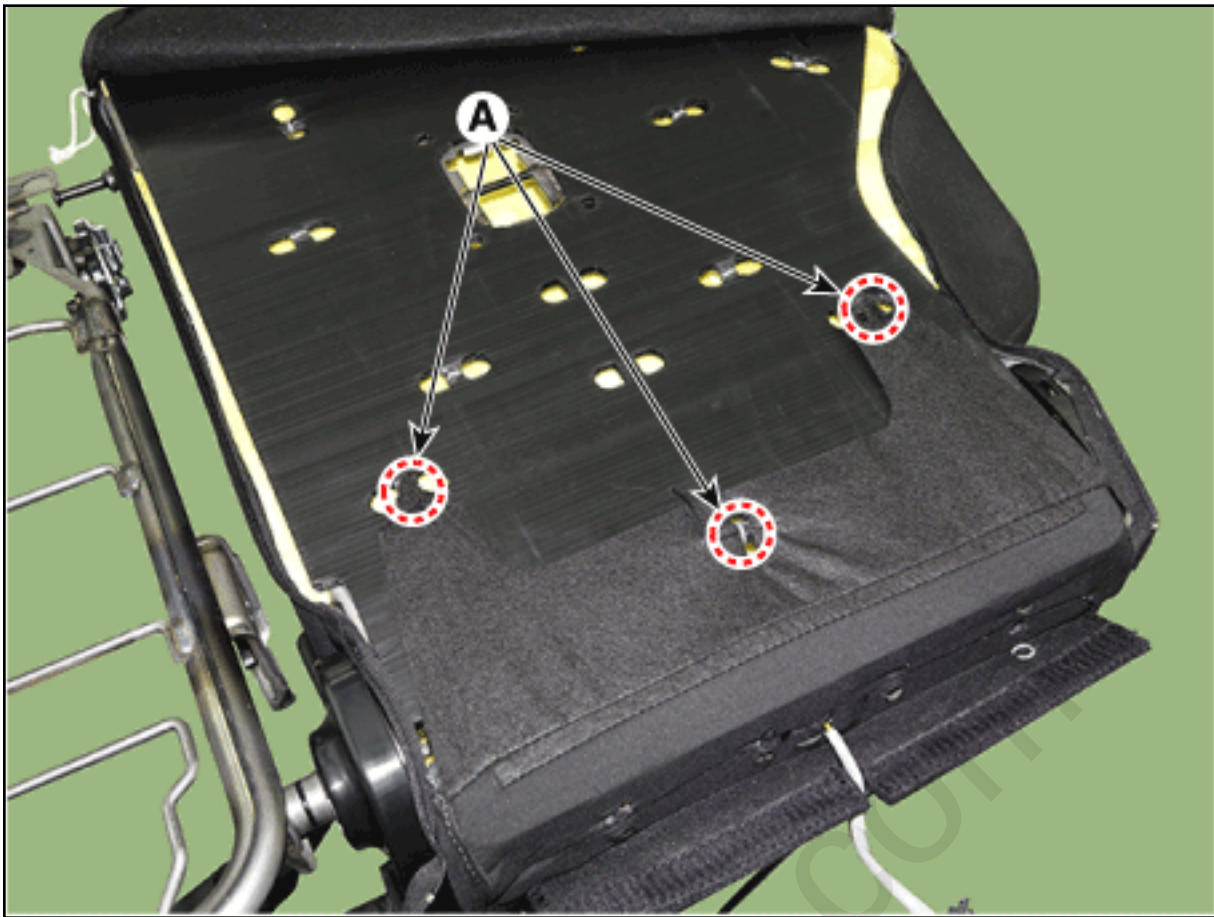

13. After removing the Velcro tape (A) and tie down clips (B) inside the rear seat cushion cover, remove the seat cushion cover (C).

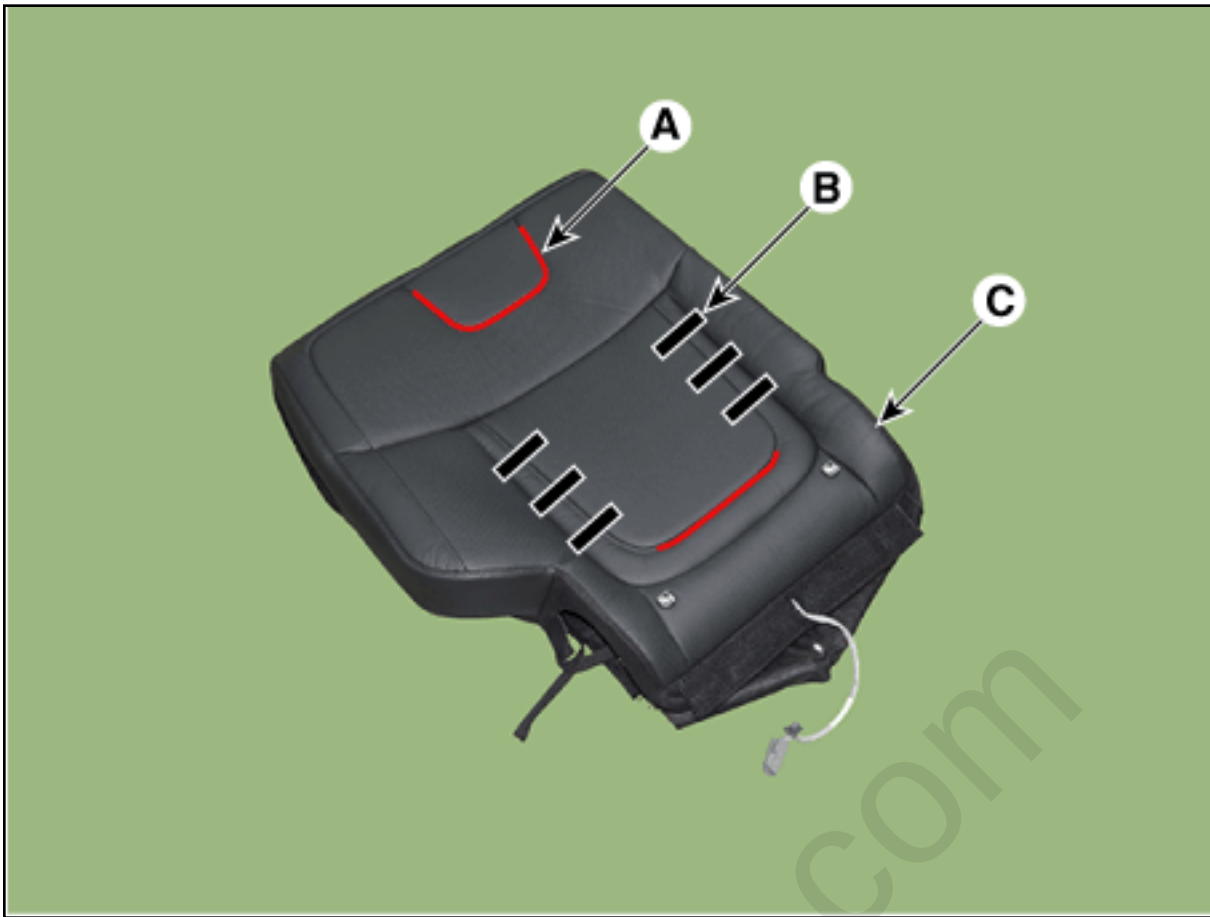


- Be careful not to deviate from the pads, insert wires, and aplix.

14. To install, reverse the removal procedure.



- To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog-ring clips (A).
- Replace the hog-ring clips with new ones using special tool (C) (09880-4F000).

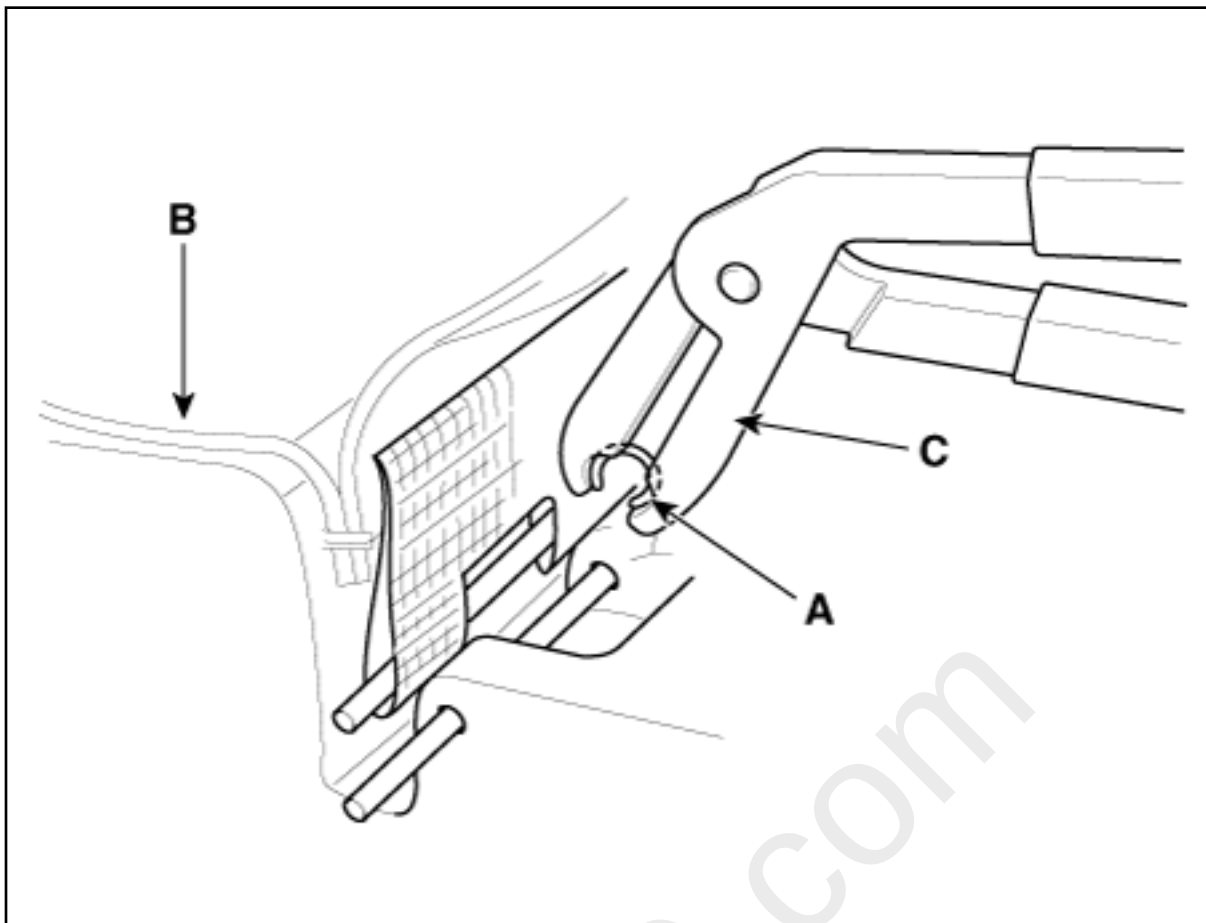


[CTR]

1. Remove the rear seat back assembly [RH].

(Refer to Rear Seat - "Rear Seat Assembly")


2. Loosen the mounting screws, remove the rear seat shield inner cover (A).

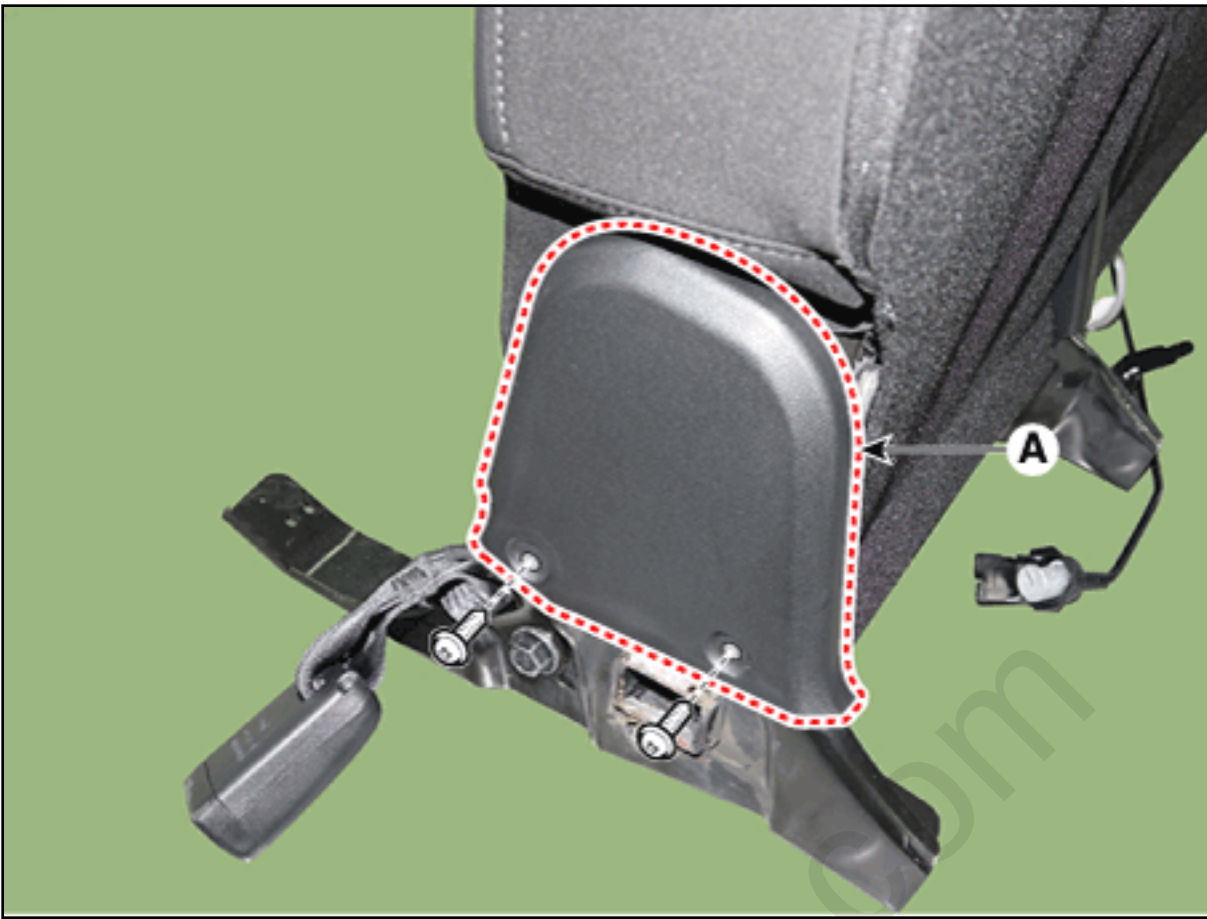


3. Press the lock pin and remove the rear seat headrest (A).





4. Remove the headrest guides (A) by pulling upward.

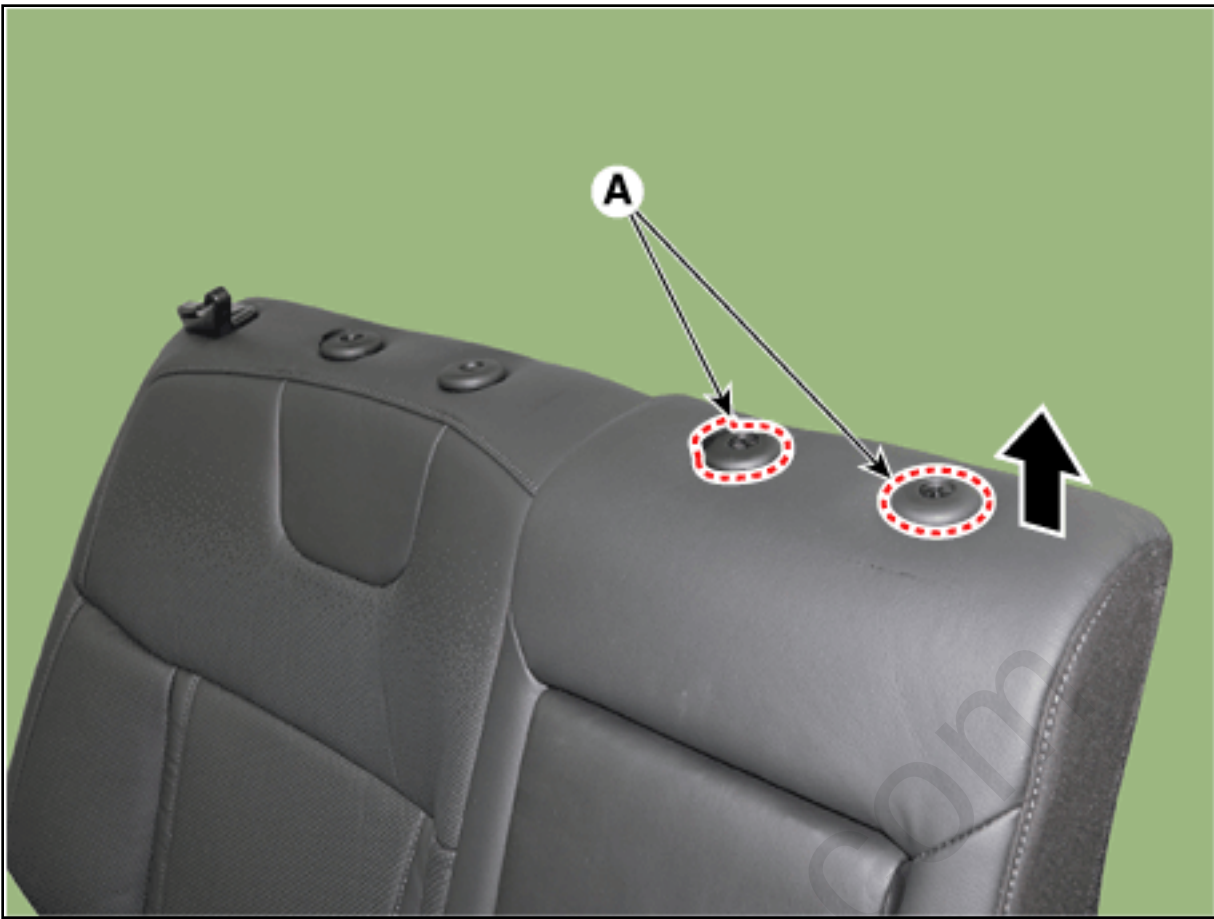


5. Remove the rear seat back protector (A).

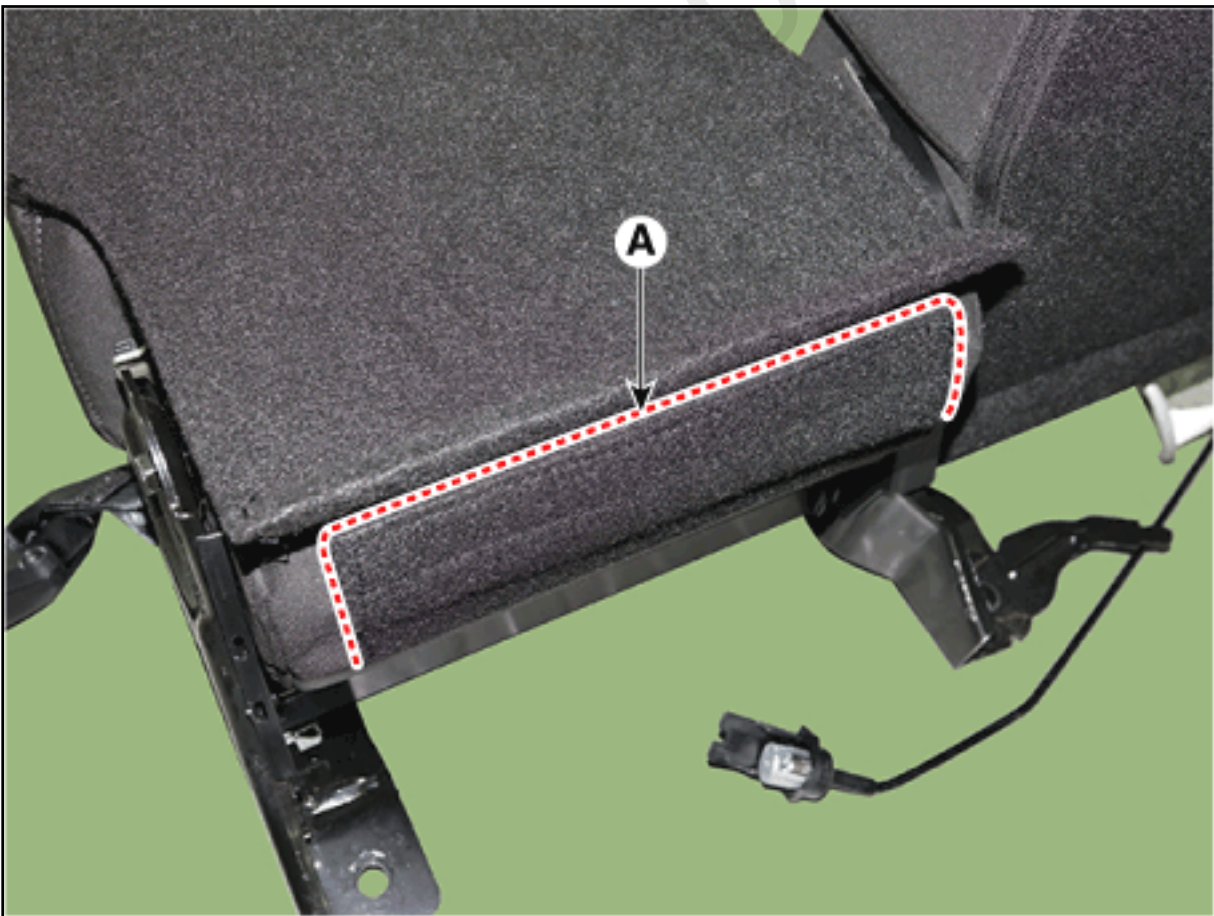

6. Remove the hog-ring clips (A).

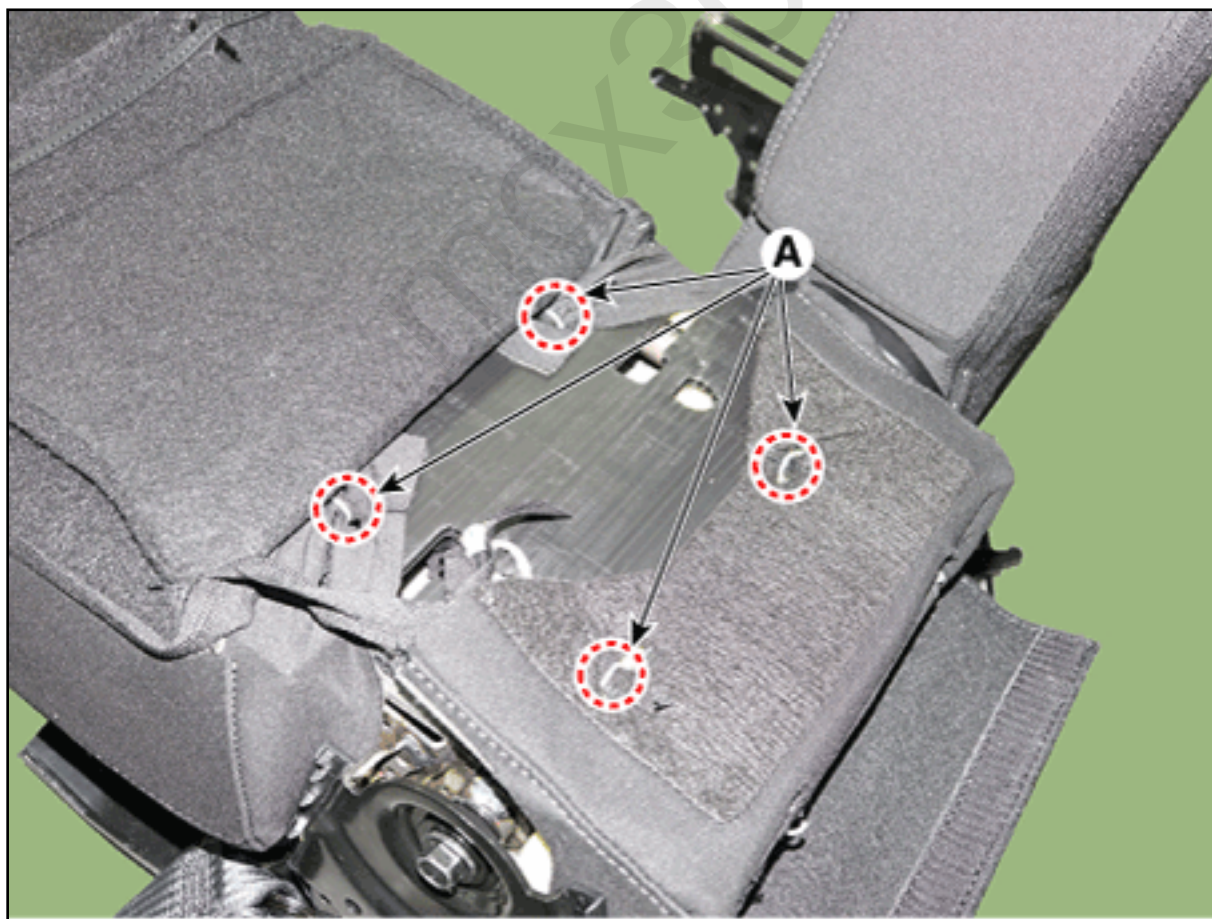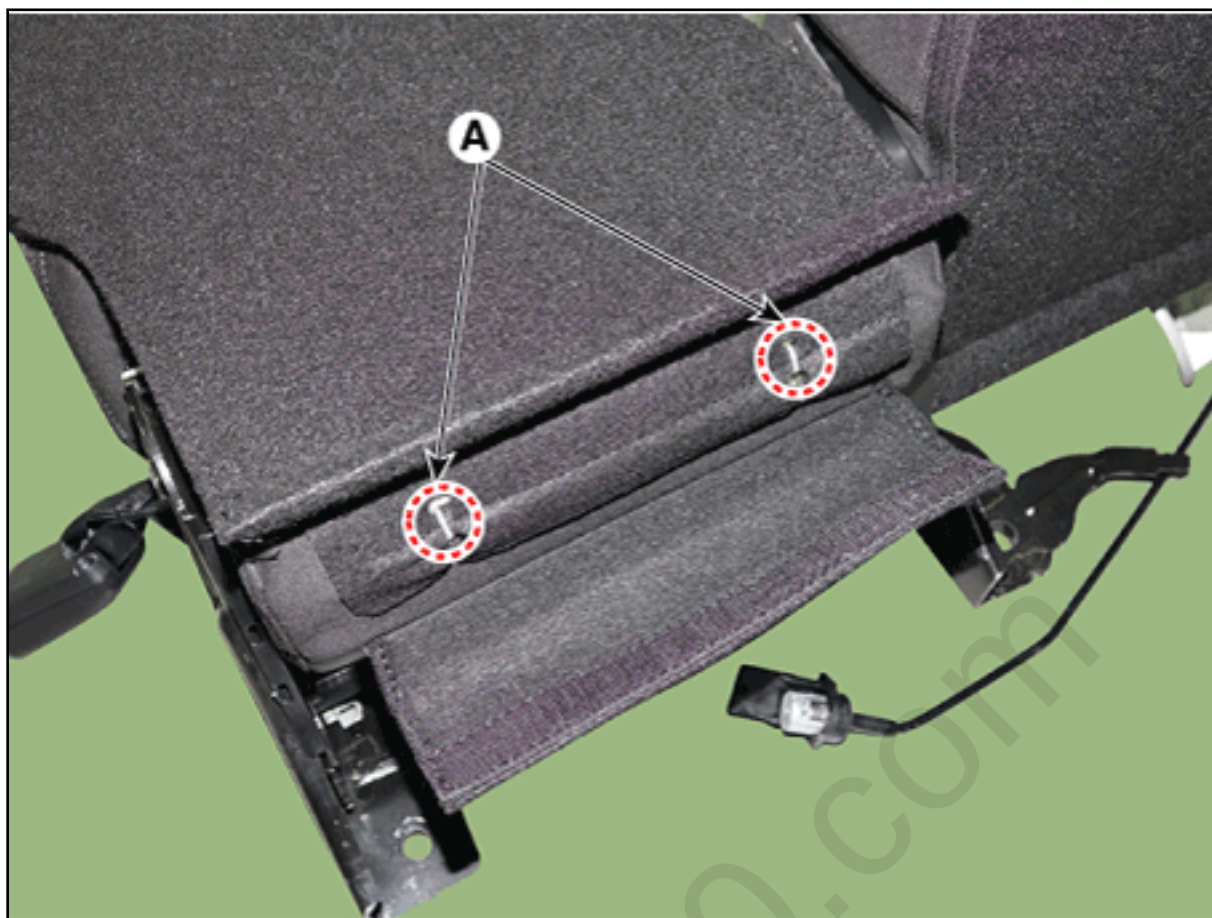


7. Using a screwdriver or remover, remove the folding cover (A).

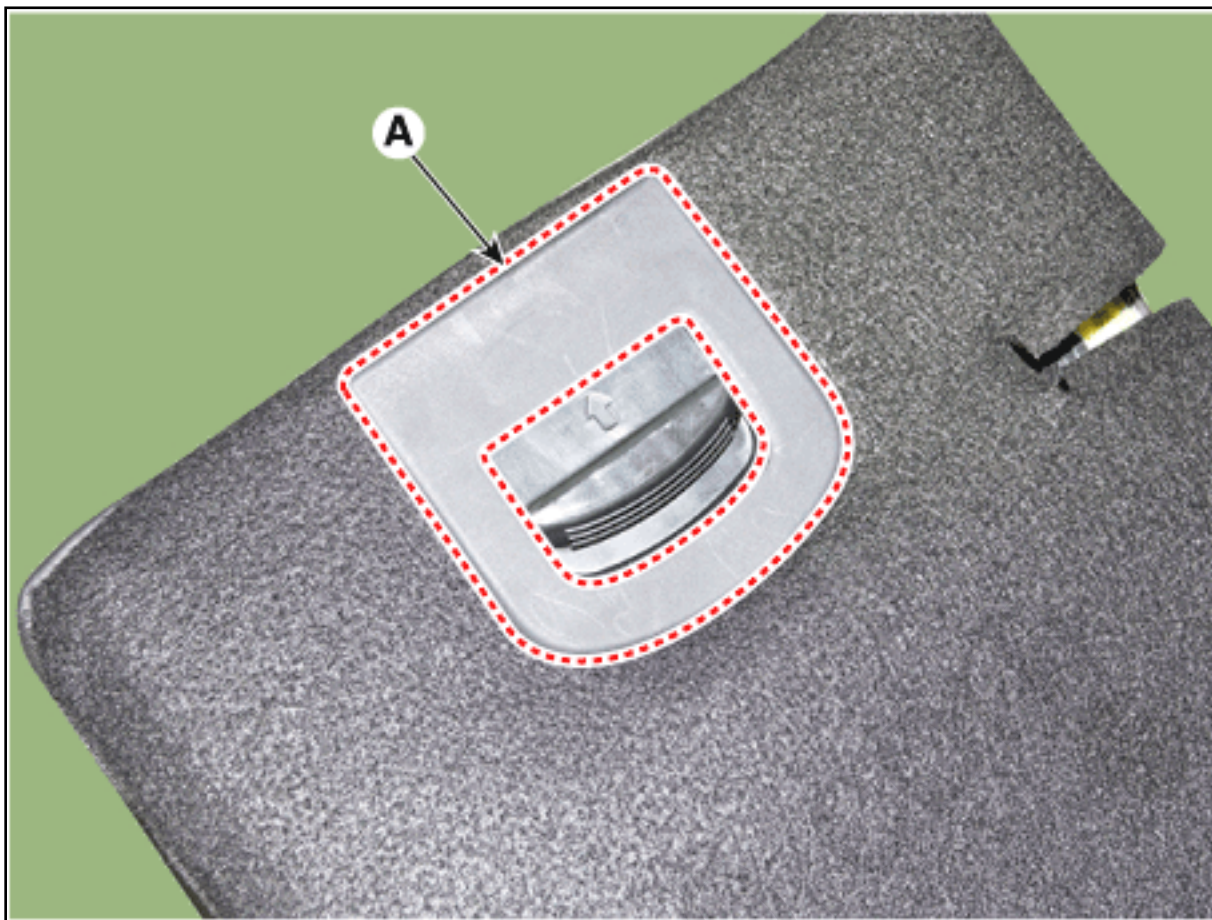


8. Remove the rear seat back cover (A).

mcx30

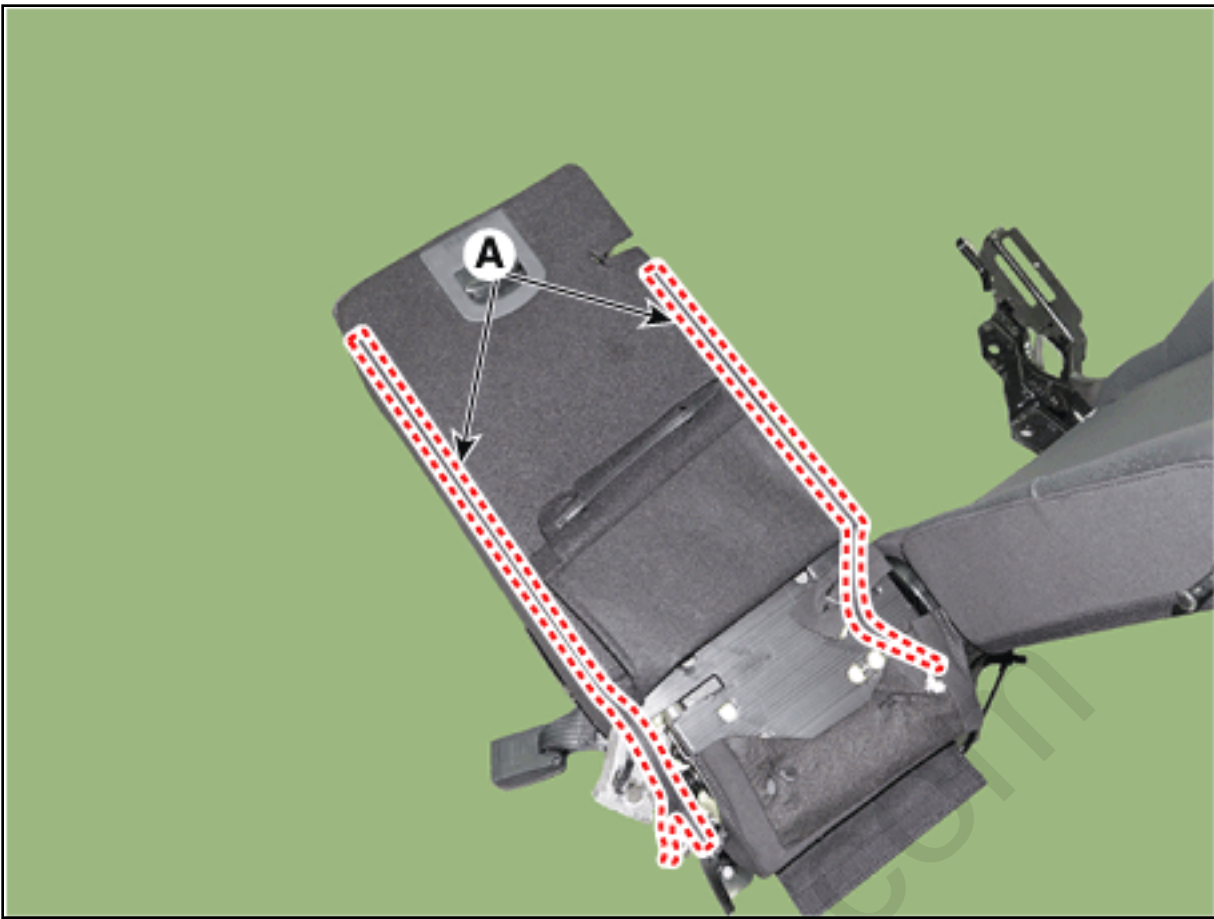


9. Loosen the mounting bolts, remove the rear seat arm rest (A).



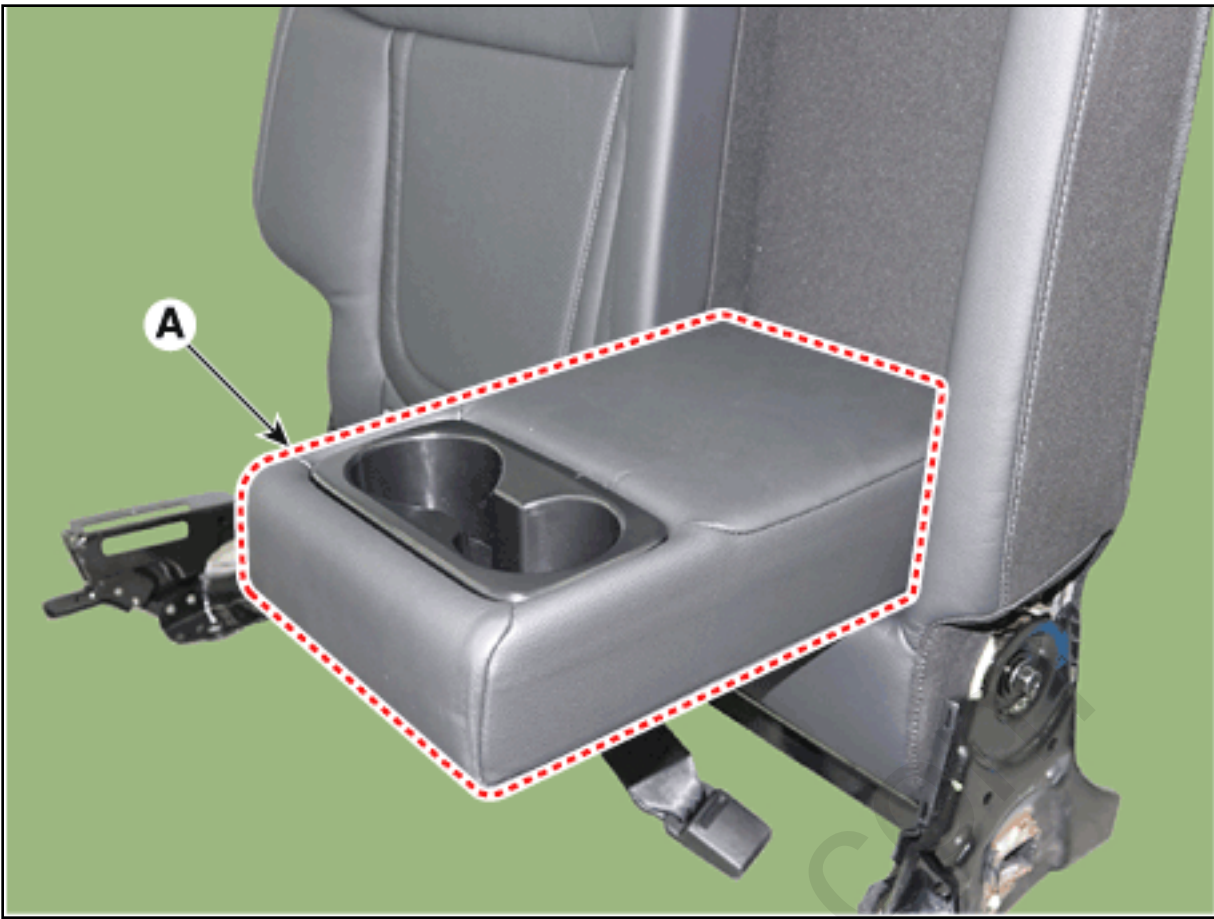

10. Remove the hog-ring clips (A) and remove the rear seat back cover.

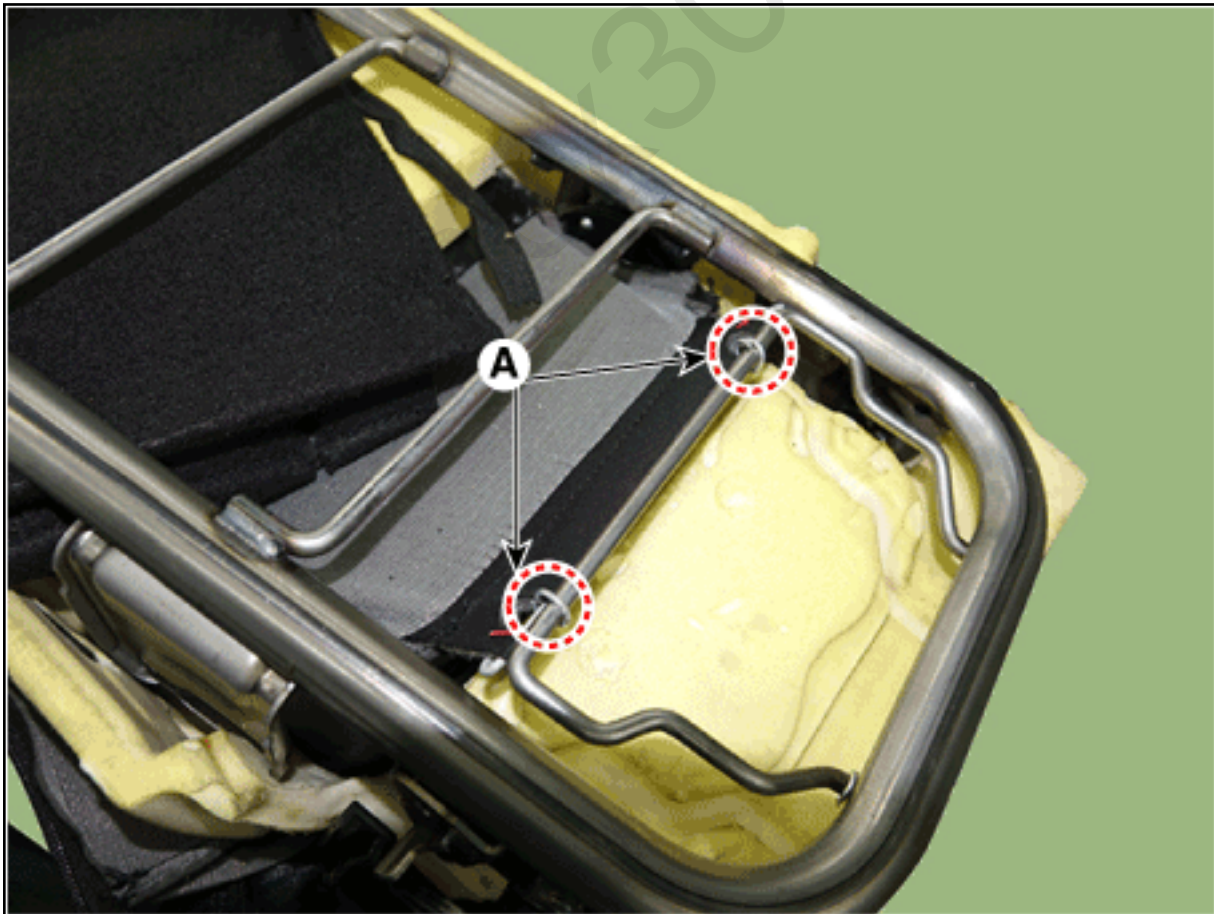

11. Remove the seat cushion cover (A).




- Be careful not to deviate from the pads, insert wires, and aplix.

12. To install, reverse the removal procedure.



- To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog-ring clips (A).
- Replace the hog-ring clips with new ones using special tool (C) (09880-4F000).

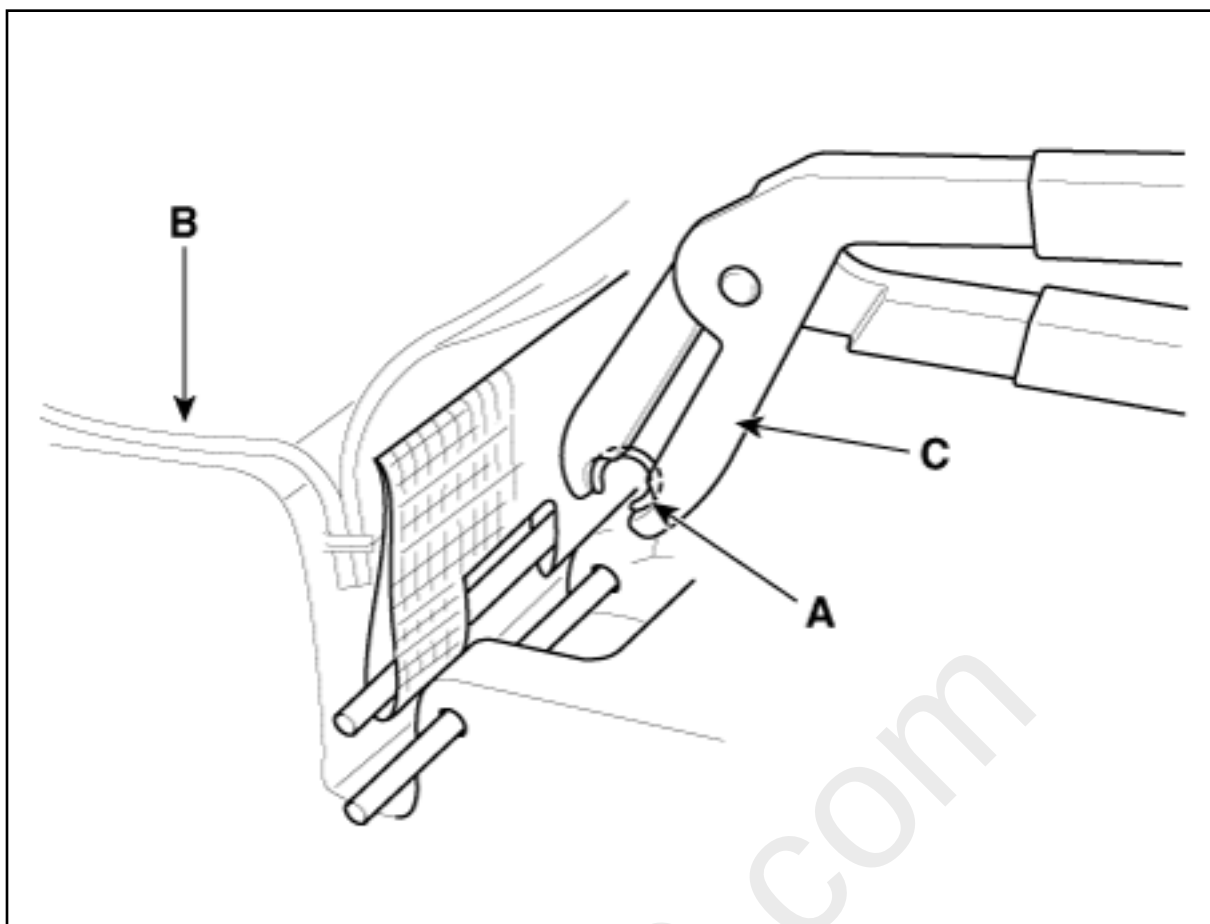

Component
Location



1. Rear seat cushion assembly

Replacement



- Put on gloves to protect your hands.



- Take care not to bend or scratch the rear seat assembly.

1. Remove the rear seat cushion assembly.


(Refer to Rear Seat - "Rear Seat Assembly")

2. After removing the Velcro tape (A) and hog-ring clips (B) inside the rear seat cushion cover, remove the seat cushion cover (C).




- Be careful not to deviate from the pads, insert wires, and aplix.

[Front side]

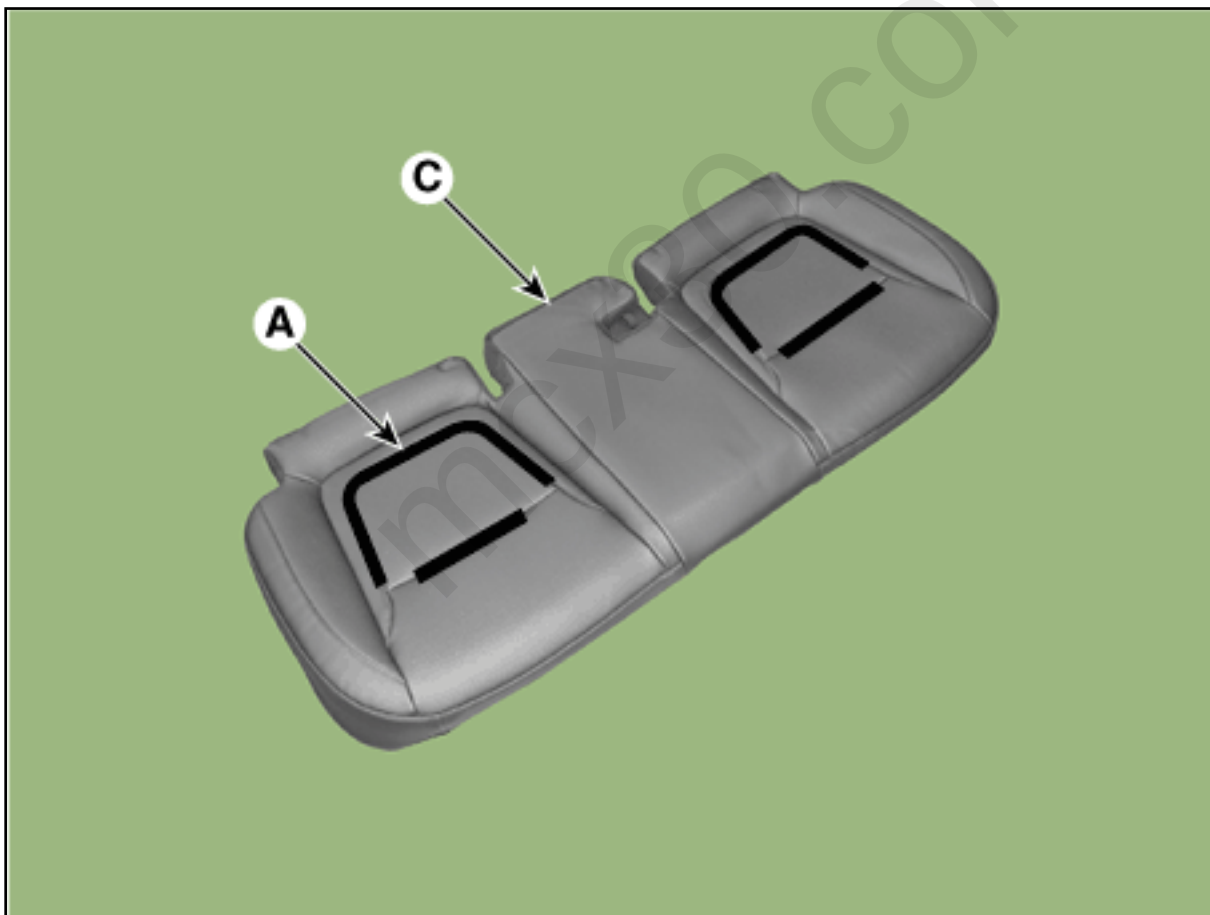

[Rear side]

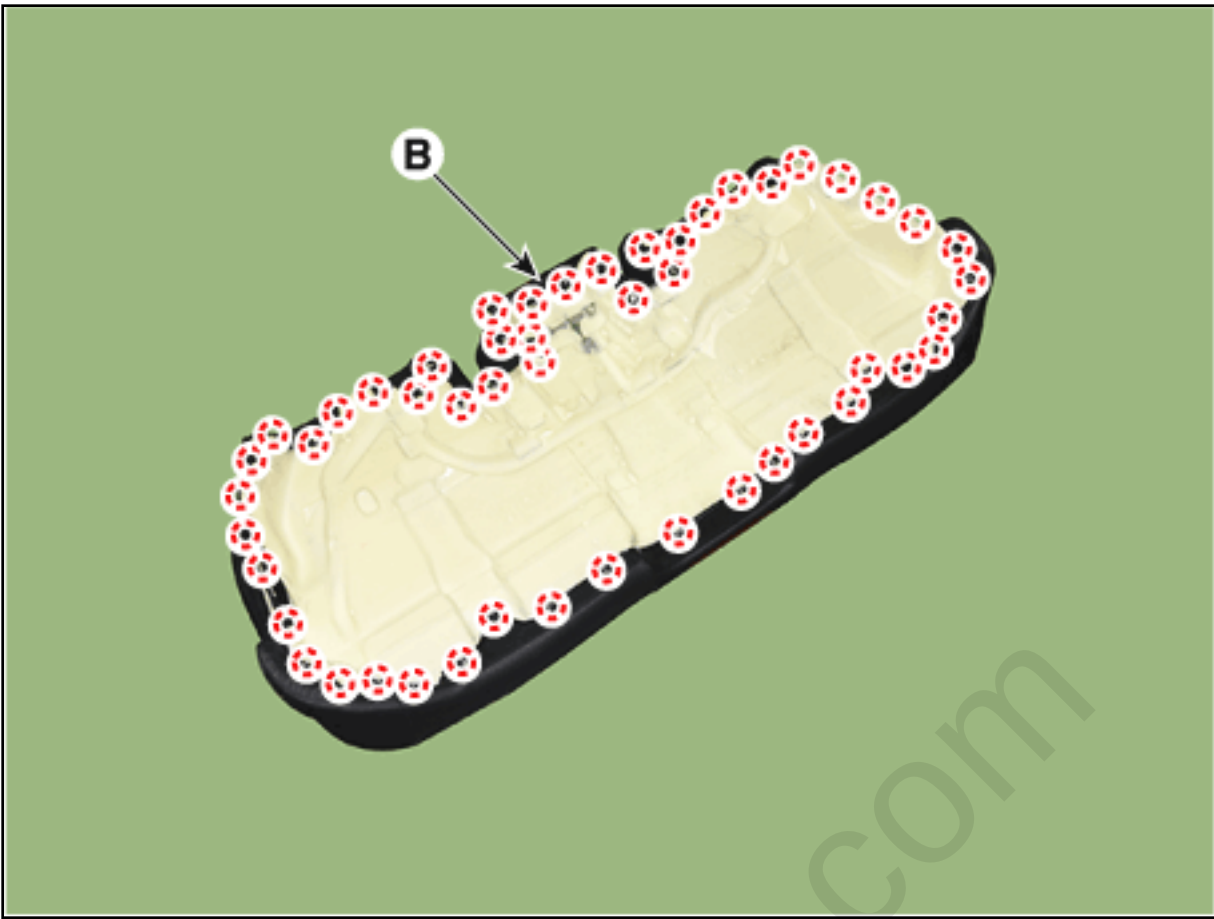

3. To install, reverse the removal procedure.



- To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog - ring clips (A).
- Replace the hog-ring clips with new ones using special tool (C) (09880 - 4F000).

