




## Components

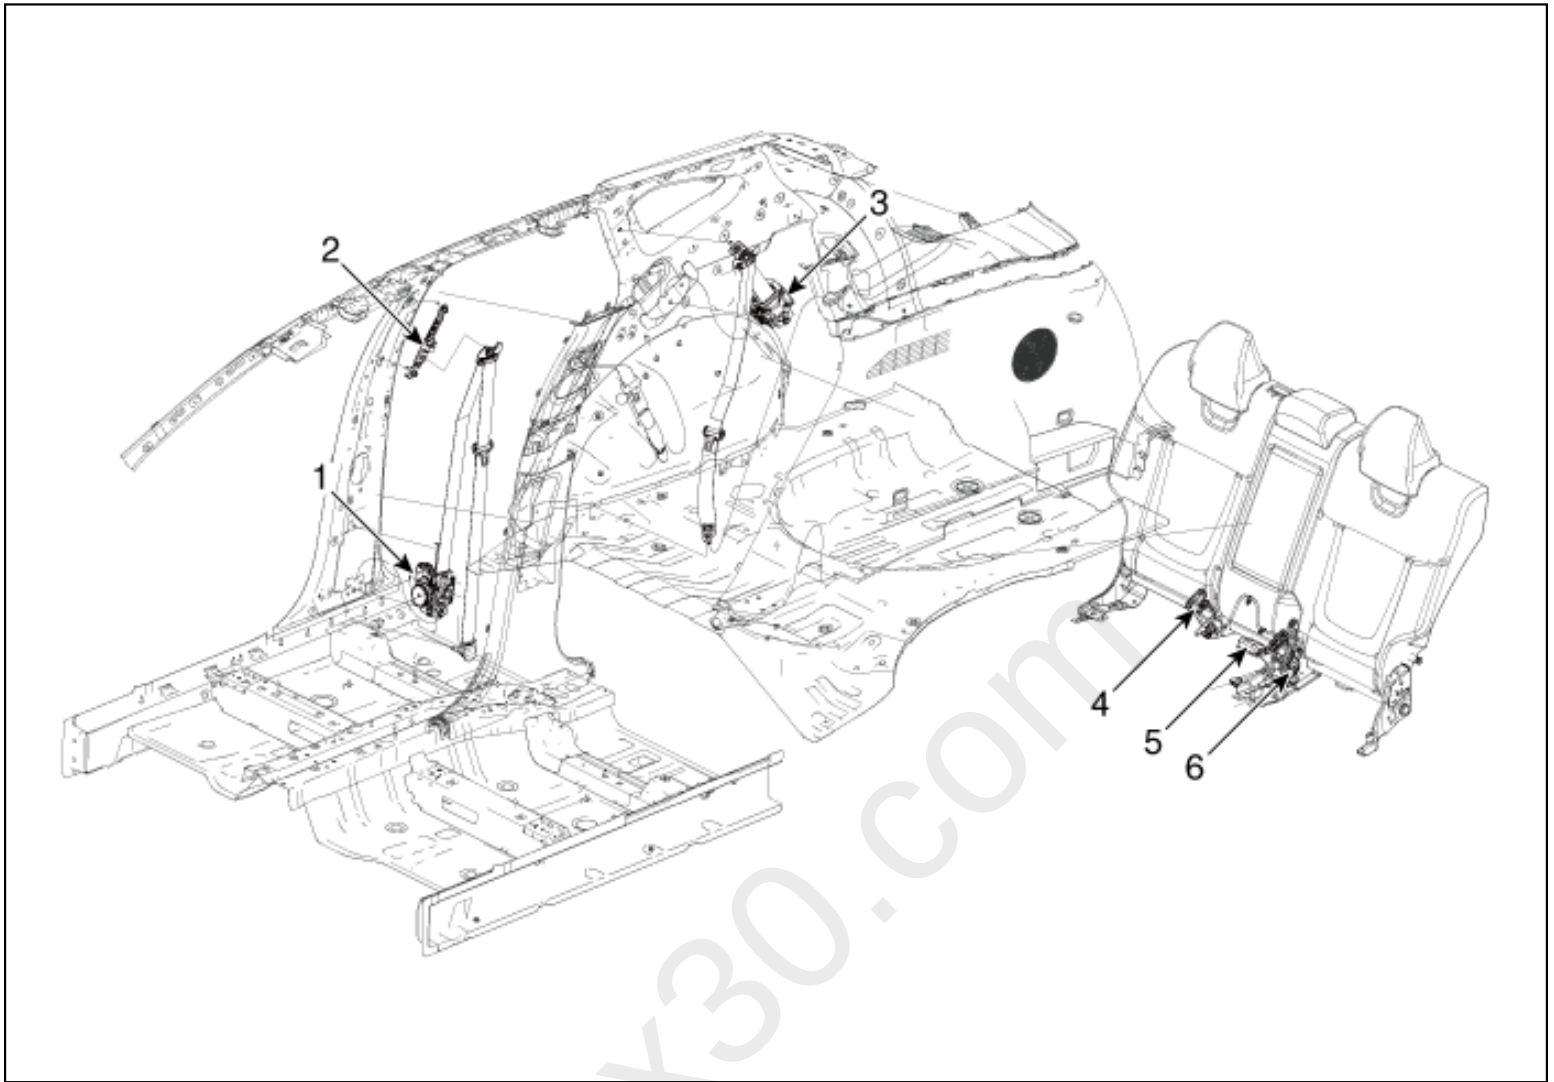

- 1. Front seat belt retractor
- 2. Height adjust
- 3. Rear seat belt retractor

- 4. Rear seat belt buckle [RH]
- 5. Rear seat belt buckle [CTR]
- 6. Rear seat belt buckle [LH]

Component  
Location

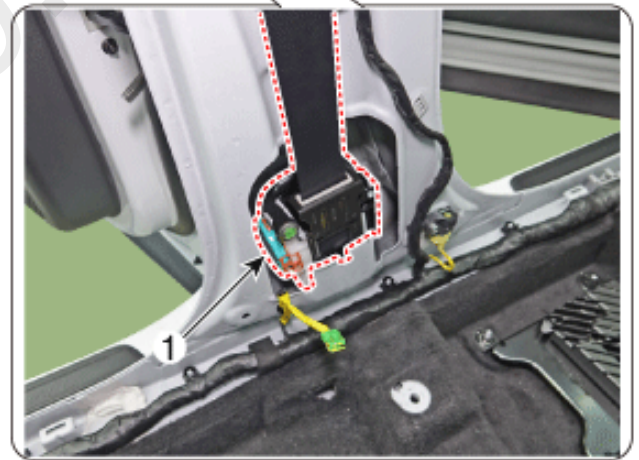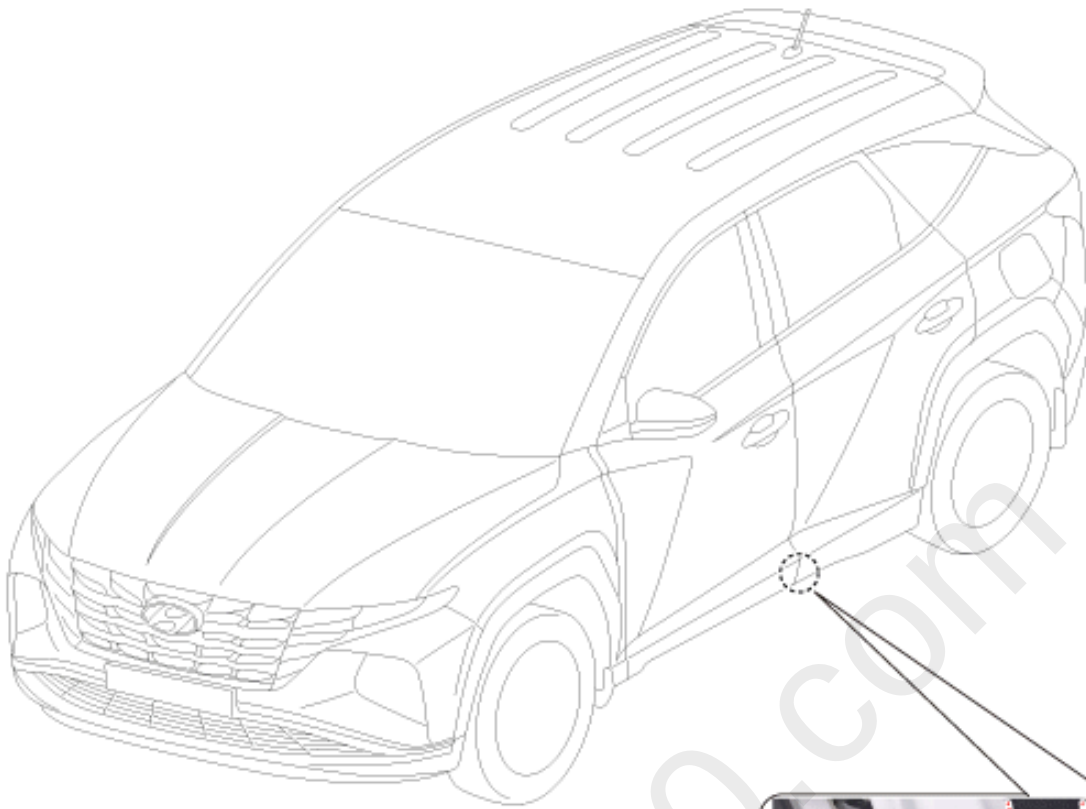

1. Front seat belt pretensioner

## Replacement



•When installing the belt, make sure not to damage the pretensioner.

1. Disconnect the negative (-) battery terminal.
2. Remove the center pillar upper trim.  
**(Refer to Interior Trim - "Center Pillar Trim")**
3. Loosen the mounting bolt and remove the front seat belt upper anchor (A).

---


### Tightening torque :

39.2 - 53.9 N.m (4.0 - 5.5 kgf.m , 28.9 - 39.8 lb-ft)

---




4. Press the lock pin and separate the front seat belt pretensioner connector (A).

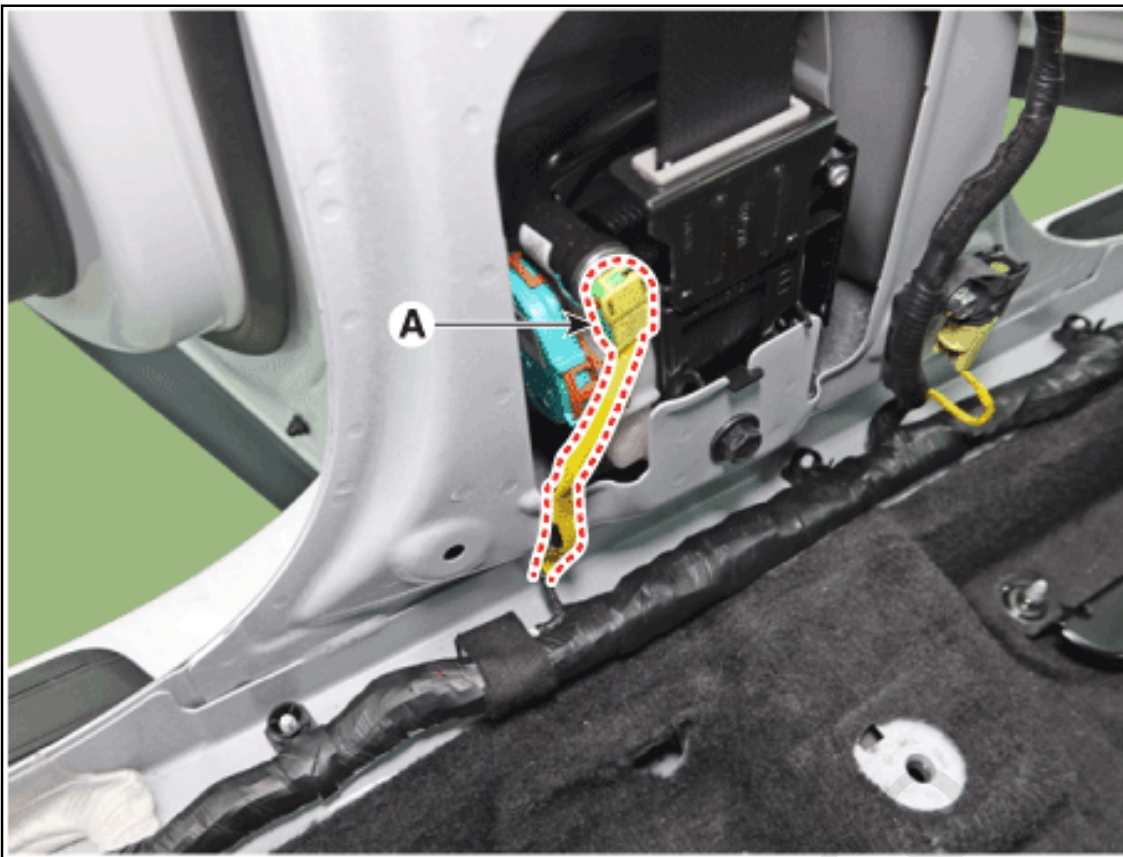

5. Loosen the mounting bolt and remove the front seat belt pretensioner (A).

**Tightening torque :**

39.2 - 53.9 N.m (4.0 - 5.5 kgf.m , 28.9 - 39.8 lb-ft)

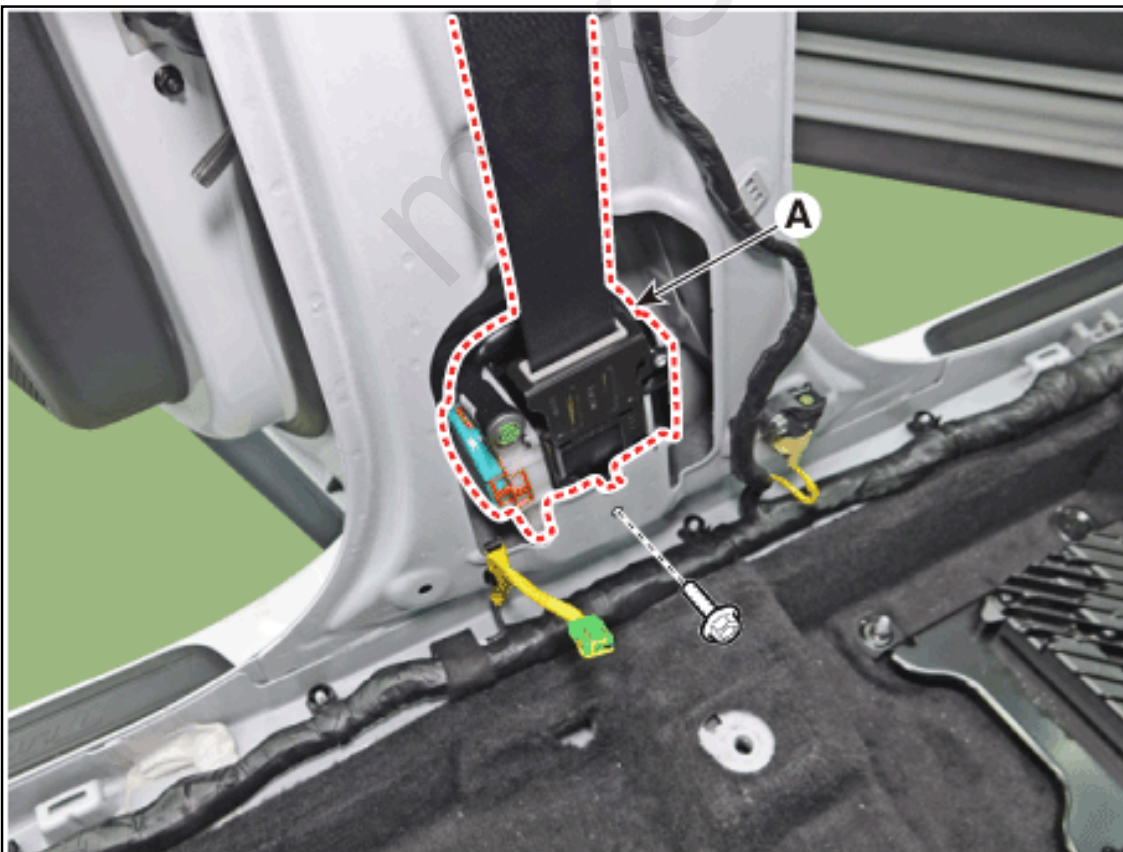



6. To install, reverse removal procedure.



- When installing the connector, be sure to insert it to the anchor pretensioner until "click" sound is heard and then check it for secure installation by pulling it.
- After installing the front seat belt retractor, check that the air bag warning indicator illuminates for about 6 seconds when the ignition is ON and then goes out.
- Make sure the connector is plugged in properly.
- Replace any damaged clips (or pin-type retainers).

mcx30.com

Component  
Location

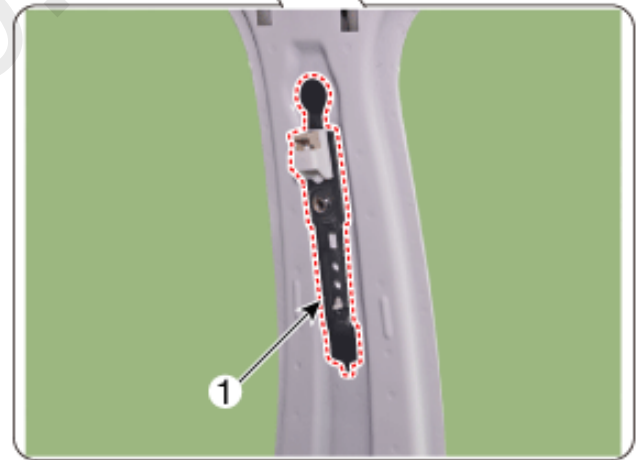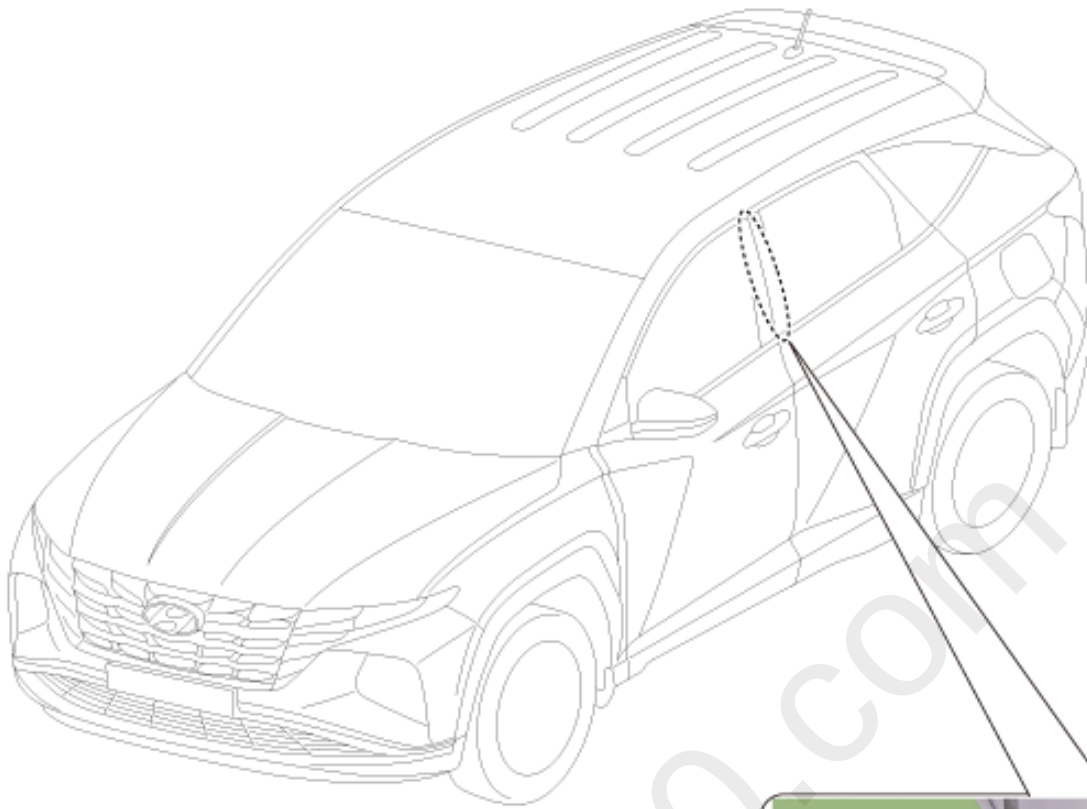

1. Height adjust

## Replacement


1. Remove the front seat belt upper anchor.  
**(Refer to Front Seat Belt - "Front Seat Belt Pretensioner")**
2. After loosening the mounting bolts, then remove the height adjust (A).

---

### Tightening torque :

39.2 - 53.9 N.m (4.0 - 5.5 kgf.m , 28.9 - 39.8 lb-ft)

---

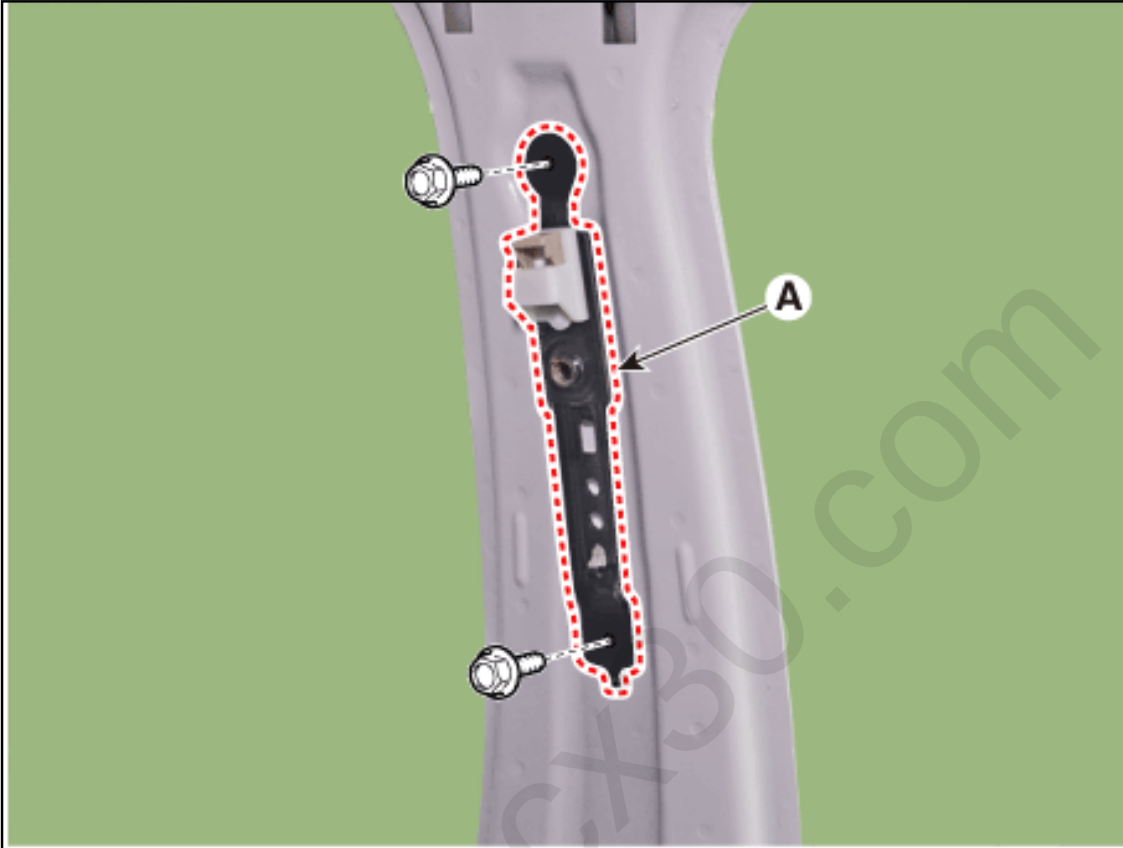


3. To install, reverse removal procedure.



- Replace any damaged clips (or pin-type retainers).

Component  
Location

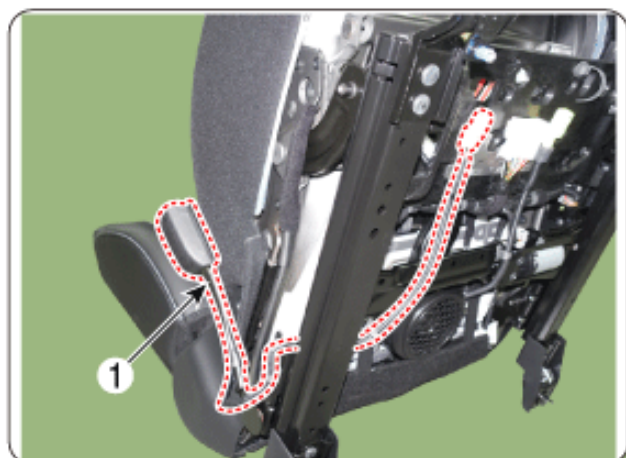

1. Front seat belt buckle

## Replacement


1. Remove the front seat assembly.  
**(Refer to Front Seat - "Front Seat Assembly")**
2. After loosening the mounting bolt, then remove the front seat belt buckle (A).

---

### Tightening torque :

39.2 - 53.9 N.m (4.0 - 5.5 kgf.m , 28.9 - 39.8 lb-ft)

---

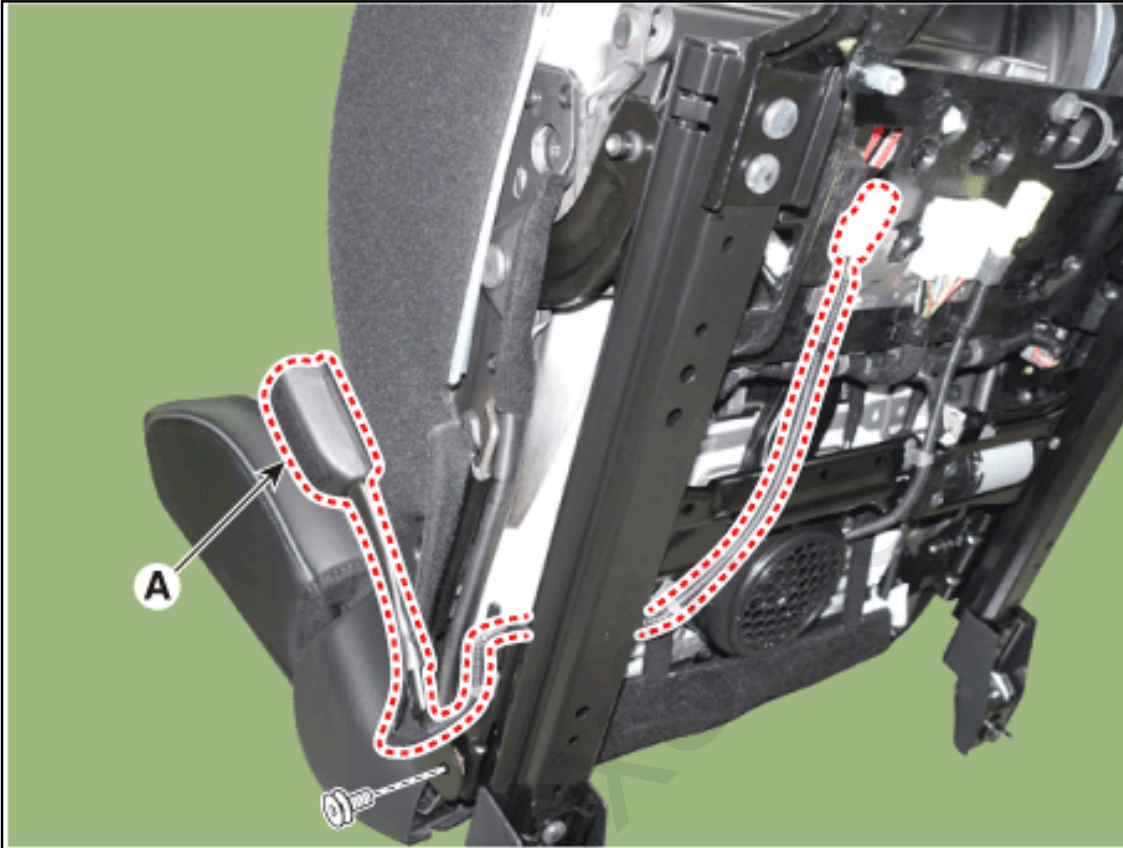

3. To install, reverse removal procedure.



- Make sure the connector is plugged in properly.