


Component
Location

[1]

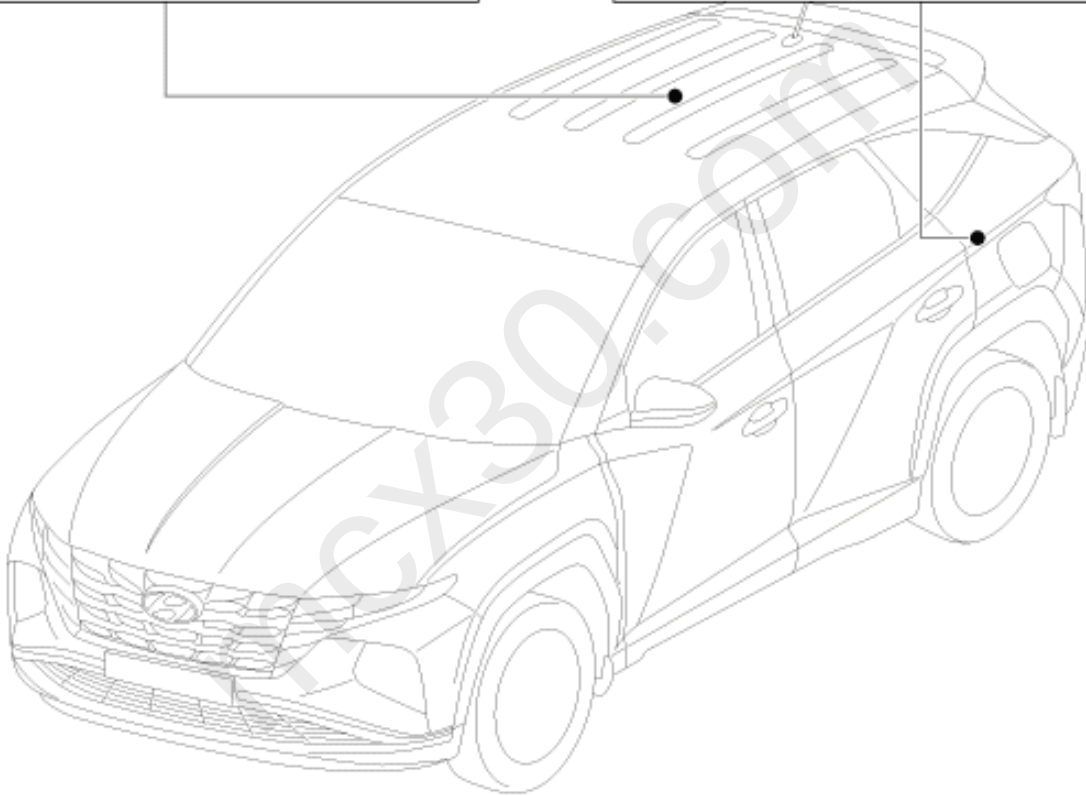

[2]



1. Rear seat belt retractor [RH]

2. Rear seat belt retractor [LH]


Replacement




•When installing the belt, make sure not to damage the retractor.

1. Remove the luggage side trim.
(Refer to Trunk Trim - "Luggage Side Trim")
2. Disconnect the rear seat belt retractor connector (A).

[LH]

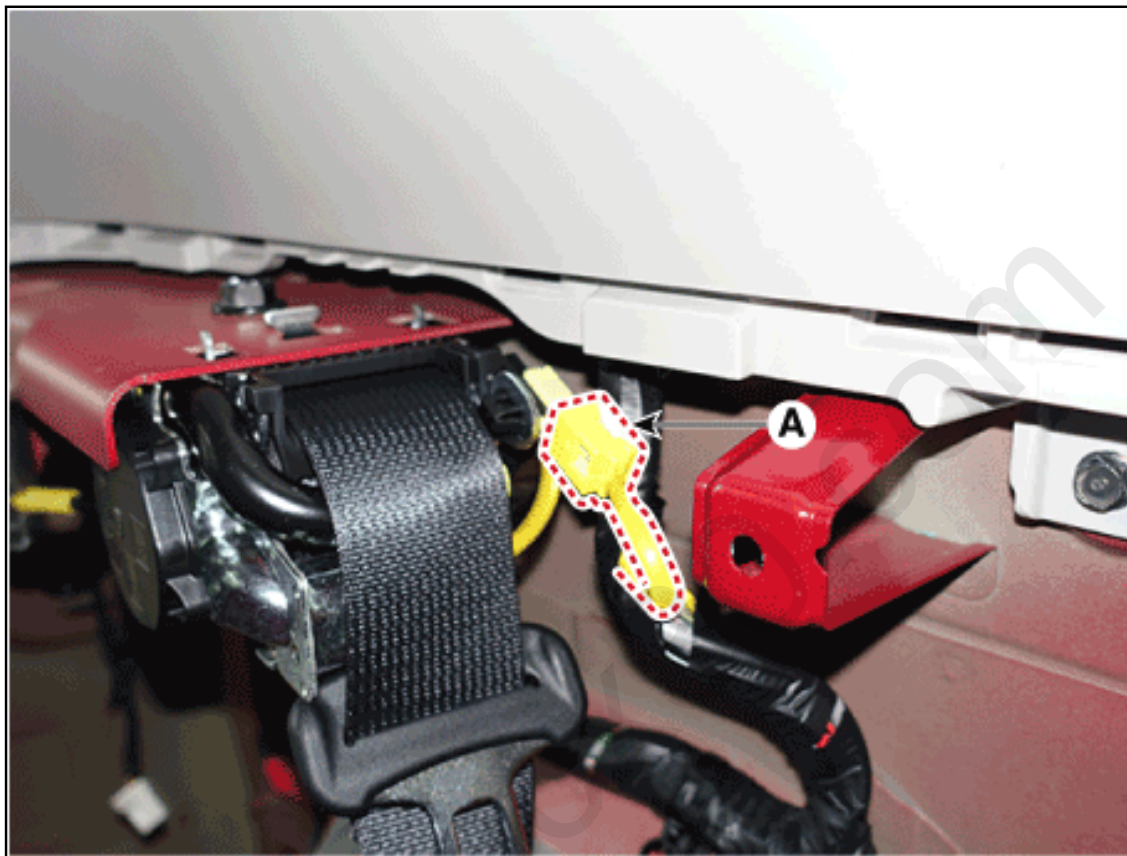

[RH]

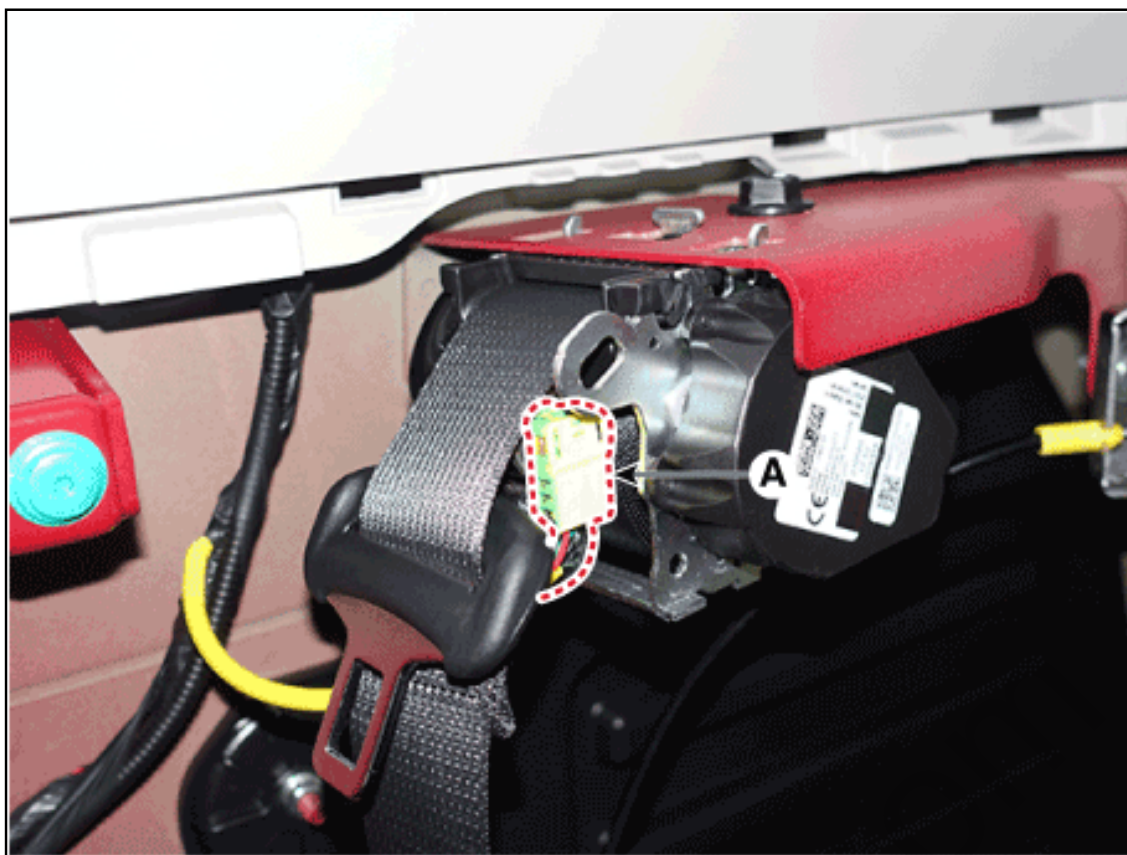


3. Loosen the mounting bolt, remove the rear seat belt retractor (A).


Tightening torque :

39.2 - 53.9 N.m (4.0 - 5.5 kgf.m, 28.8 - 39.8 lb-ft)

[LH]

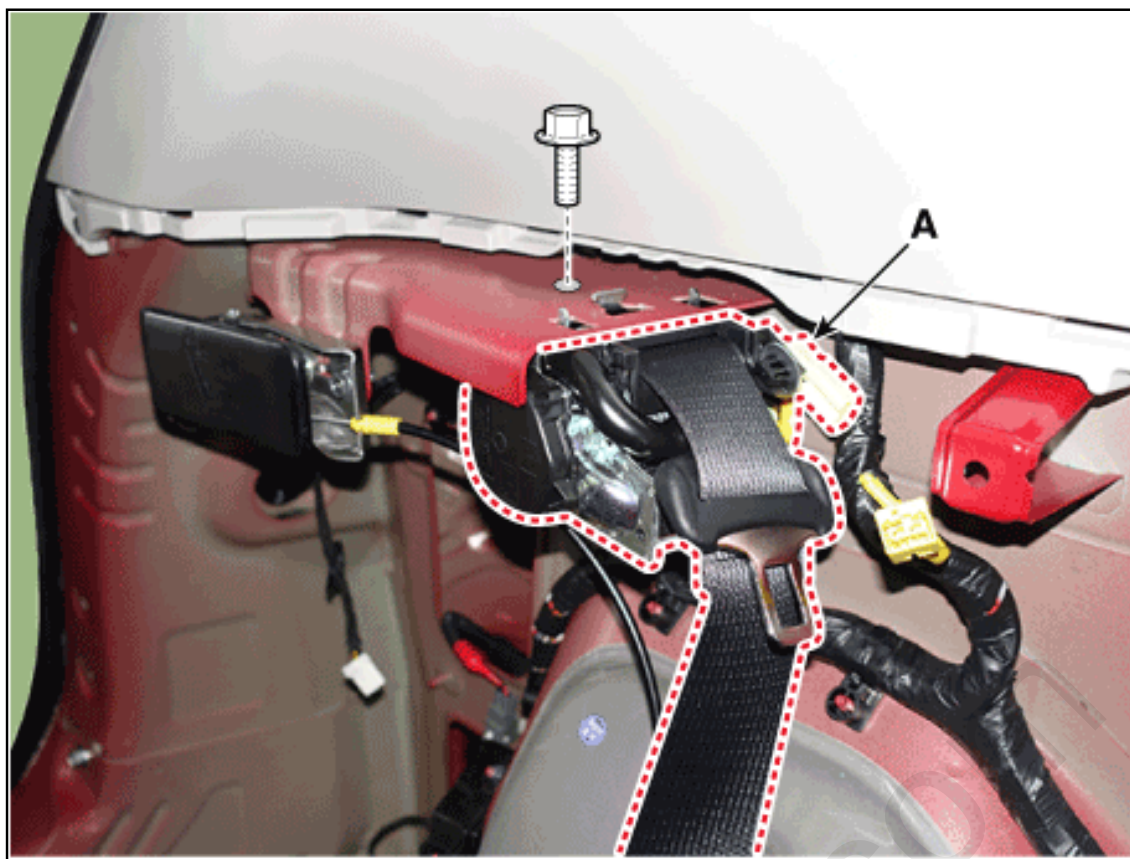

[RH]

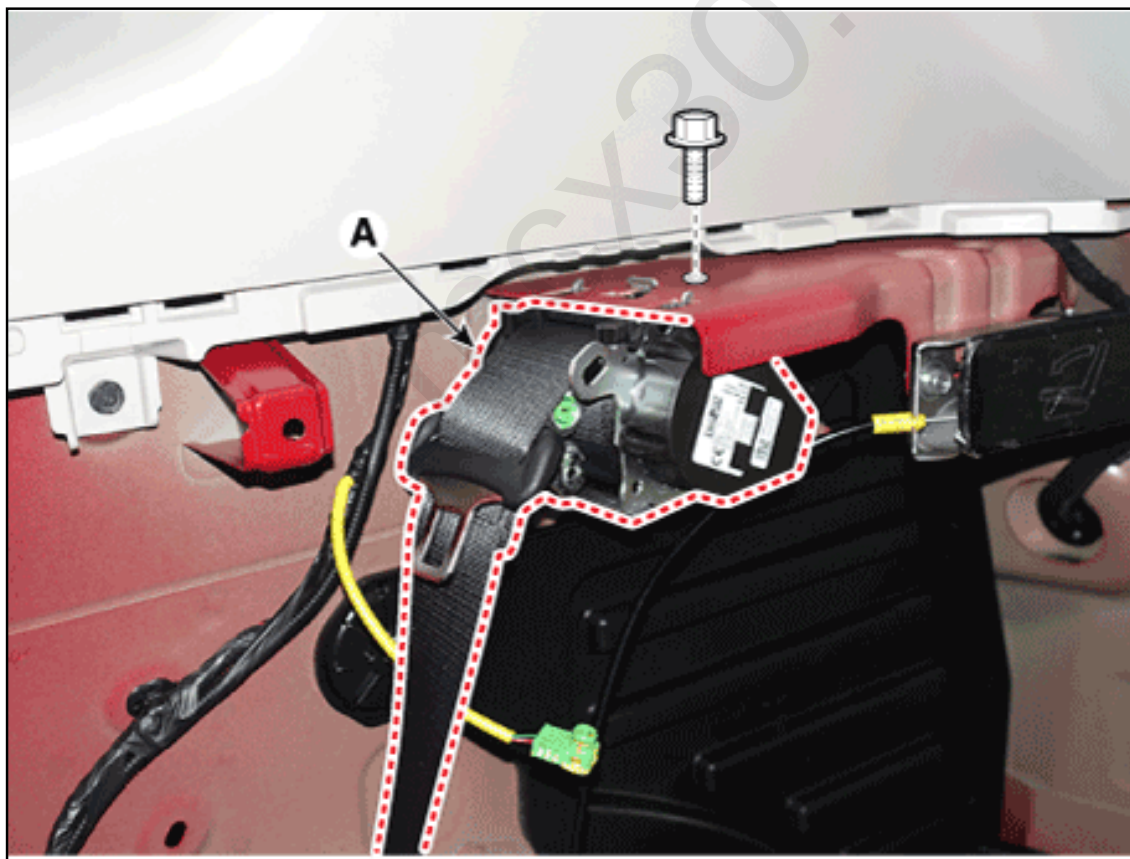

4. Install in the reverse order of removal.




- Make sure the connector is plugged in properly.
- Replace any damaged clips (or pin-type retainers).

mcx30.com

Component
Location

[1]

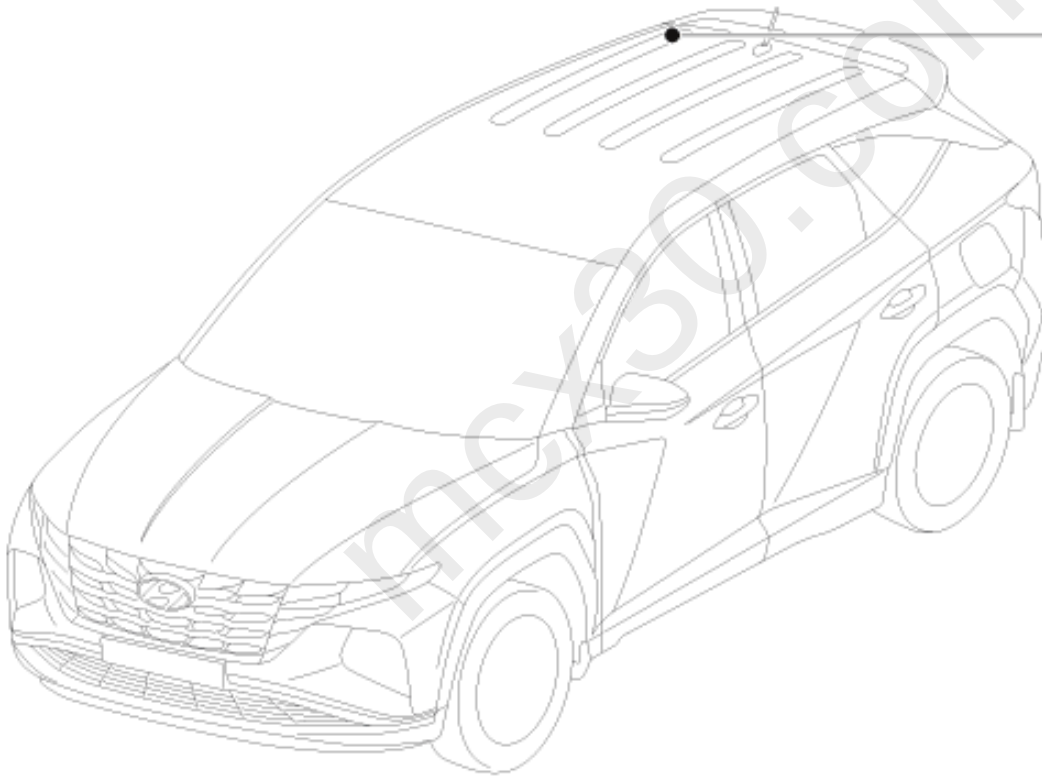

1. Rear center seat belt retractor

Replacement




- When installing the belt, make sure not to damage the retractor.

1. Remove the roof trim.
(Refer to Roof Trim - "Roof Trim Assembly")
2. After loosening the mounting bolts, remove the rear center seat belt retractor (A).

Tightening torque :

39.2 - 53.9 N.m (4.0 - 5.5 kgf.m, 28.8 - 39.8 lb-ft)

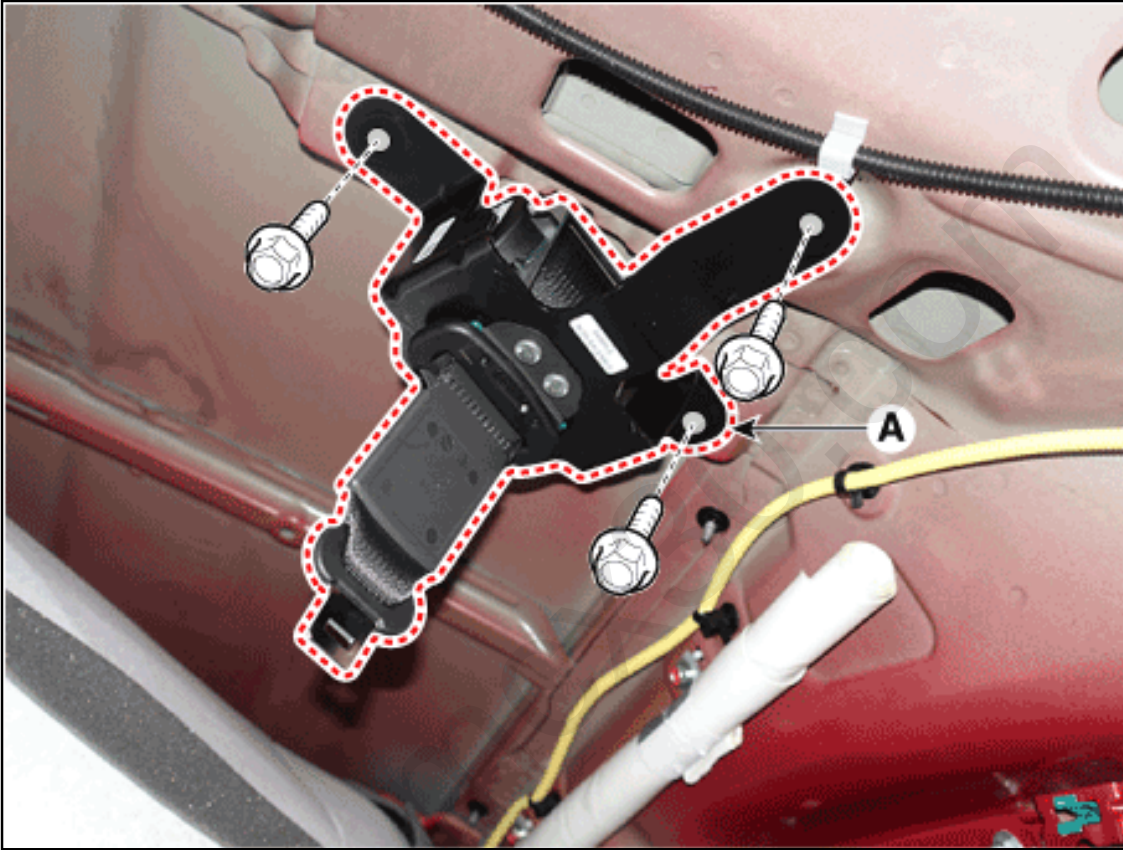

3. Install in the reverse order of removal.



- Replace any damaged clips.


Components
Location



[1]



[2]

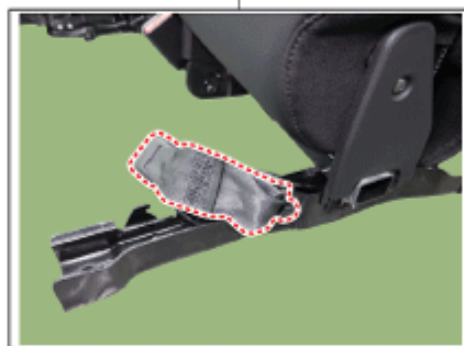

[3]

- 1. Rear seat belt buckle [LH]
- 2. Rear seat belt buckle [RH]

- 3. Rear seat belt buckle [CTR]


Replacement

[LH]

1. Remove the rear seat cushion assembly.
(Refer to Rear Seat - "Rear Seat Assembly")
2. Disconnect the connector (A) and loosen the mounting bolt, remove the rear seat belt buckle (B).

Tightening torque :

39.2 - 53.9 N.m (4.0 - 5.5 kgf.m , 28.9 - 39.8 lb-ft)

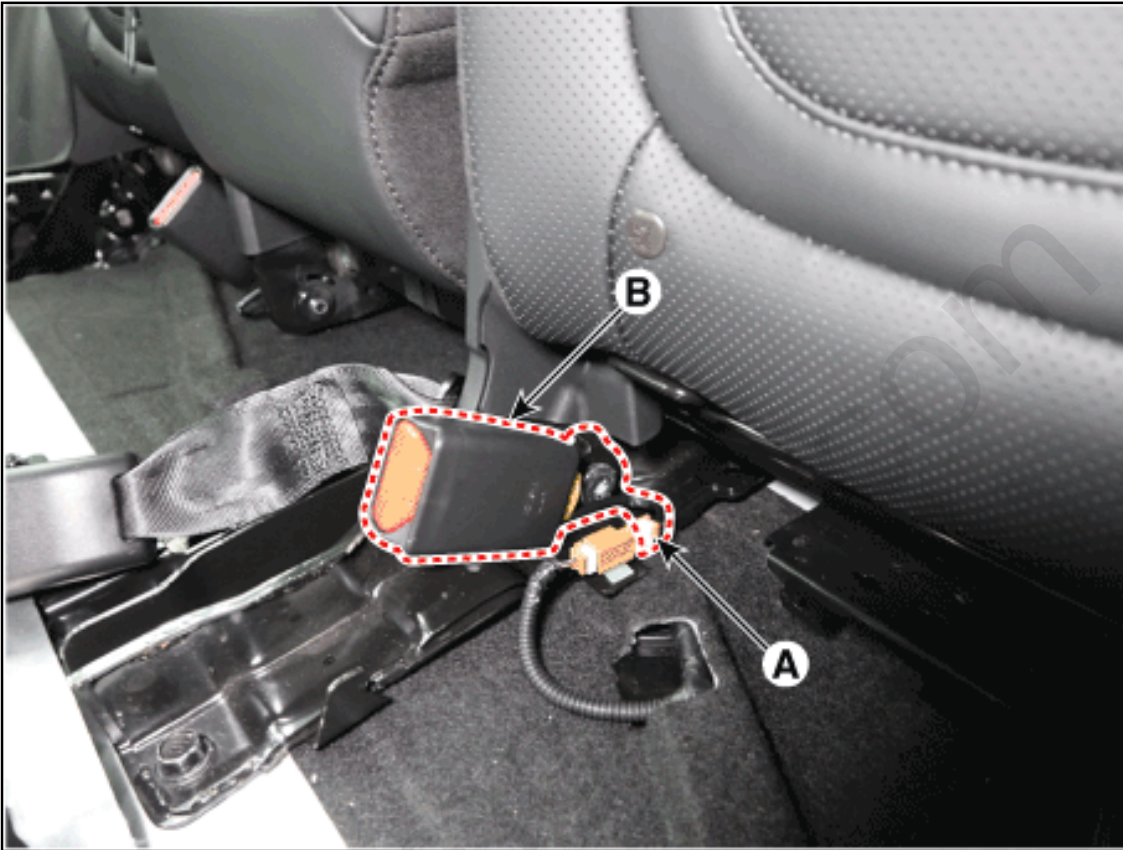

3. To install, reverse removal procedure


[CTR]

1. Remove the rear seat back assembly[RH].
(Refer to Rear Seat - "Rear Seat Assembly")

2. Loosen the mounting bolt, remove the rear seat belt buckle (A).

Tightening torque :

39.2 - 53.9 N.m (4.0 - 5.5 kgf.m , 28.9 - 39.8 lb-ft)

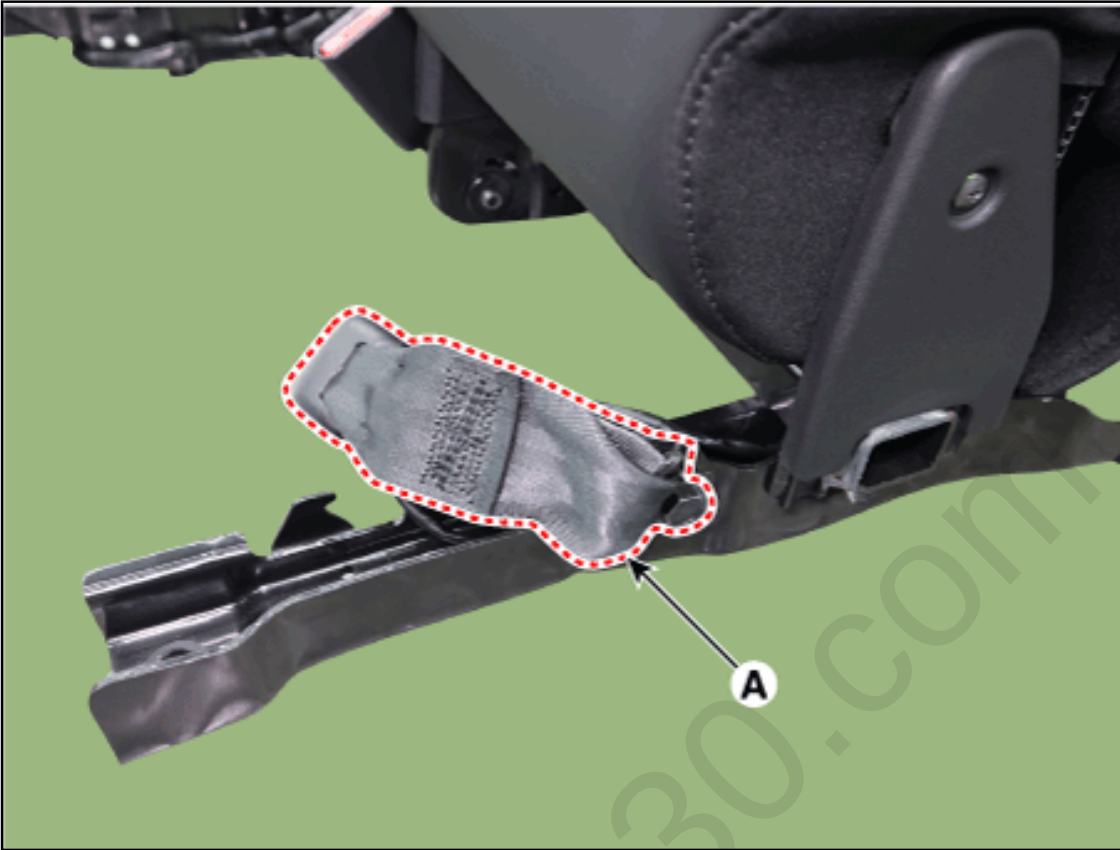


3. To install, reverse removal procedure

[RH]

1. Remove the rear seat cushion assembly.
(Refer to Rear Seat - "Rear Seat Assembly")
2. Disconnect the connector (A) and loosen the mounting bolt, remove the rear seat belt buckle (B).

Tightening torque :

39.2 - 53.9 N.m (4.0 - 5.5 kgf.m , 28.9 - 39.8 lb-ft)

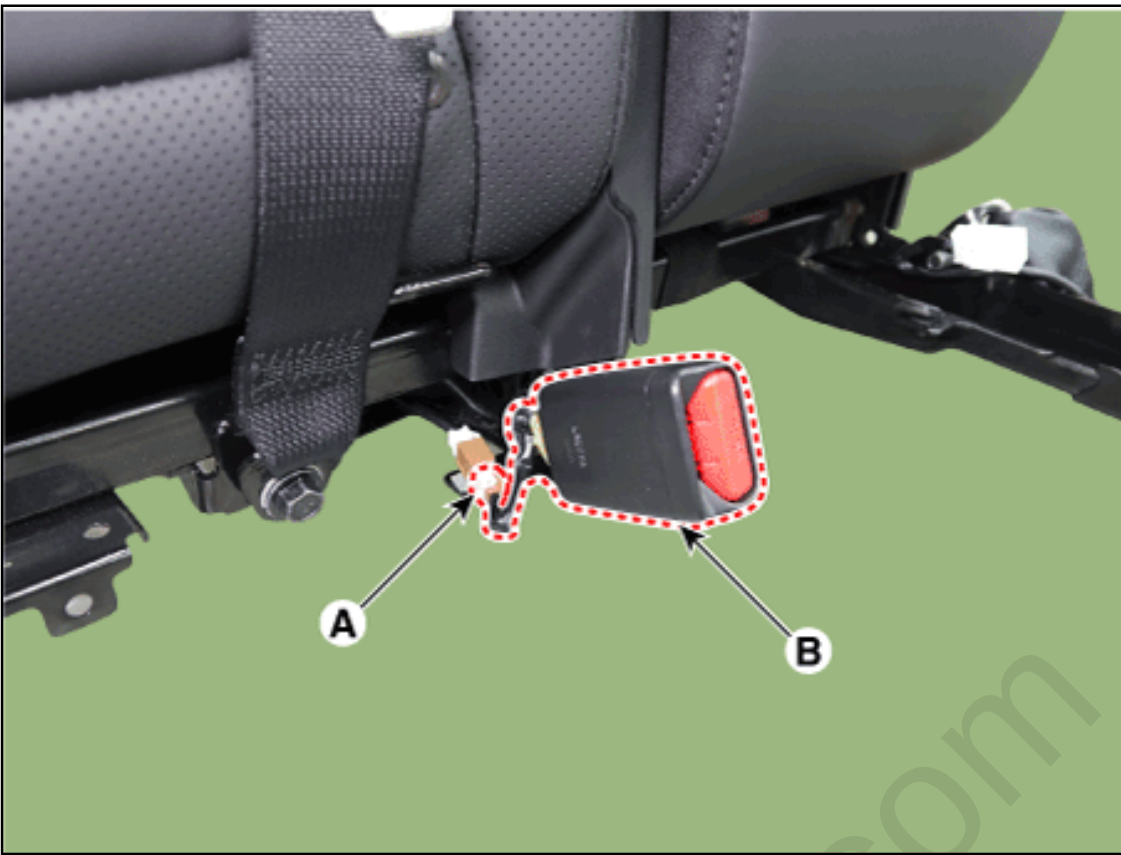

3. To install, reverse removal procedure