

Description

Back view camera will activate when the backup light is ON with the ignition switch ON and the shift lever in the R position.



This system is a supplemental system that shows behind the vehicle through the H/UNIT or the ECM (Reverse Display Room Mirror) mirror while backing-up.



This system is a supplementary function only. It is the responsibility of the driver or always check the inside/ outside rearview mirror and the area behind the vehicle before and while backing up because there is a dead zone that can't see through the camera.


mcx30.com

Component
Location

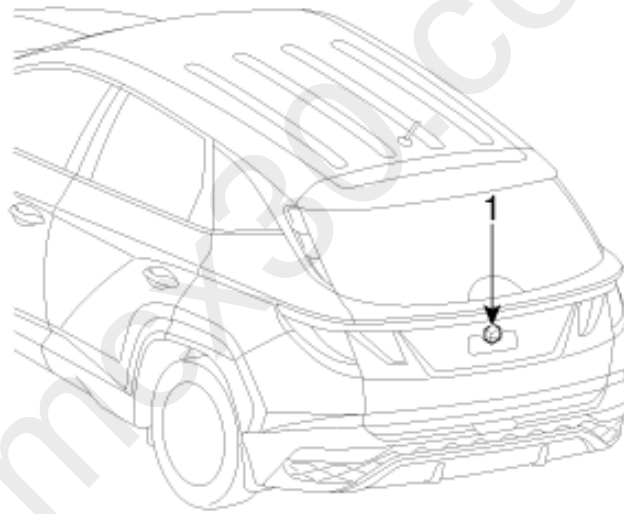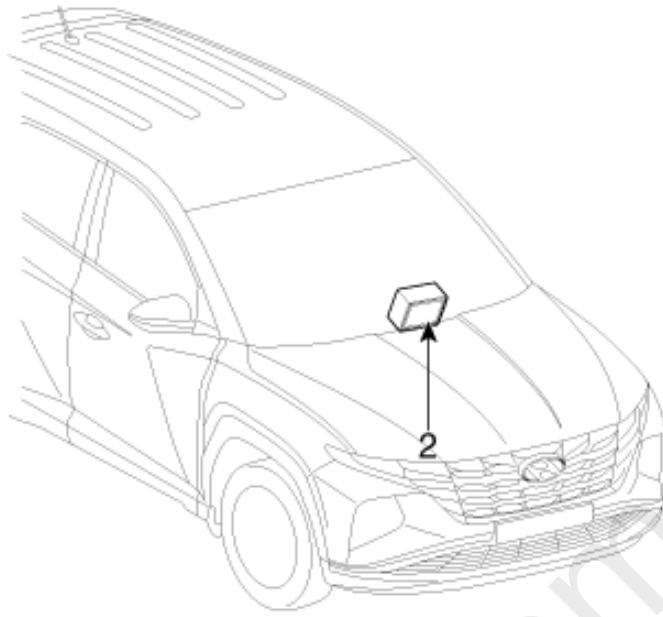



1. Rear view camera

2. H/UNIT

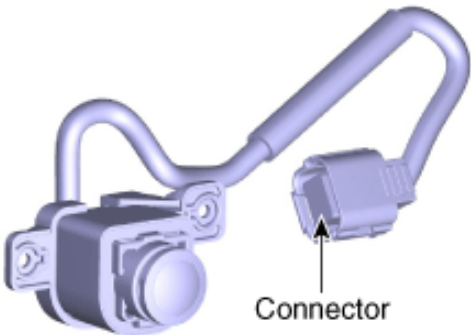


Connector

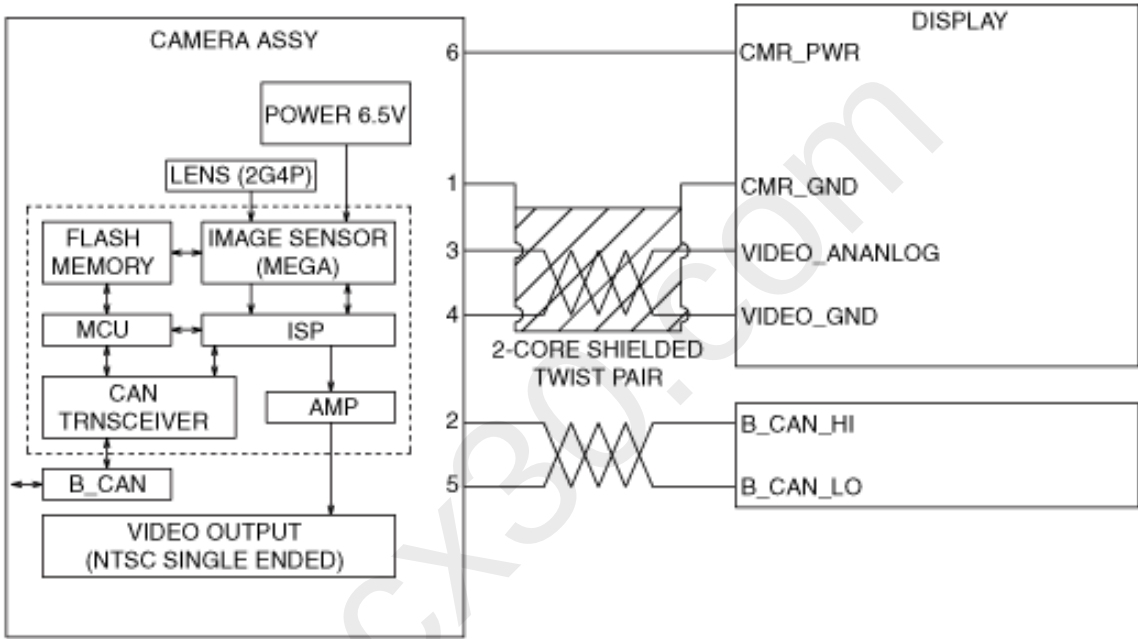

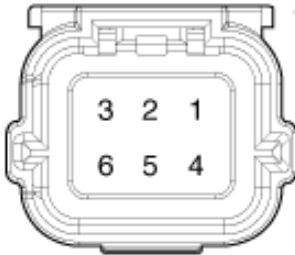Connector	Pin NO	Description
	1	Camera Ground
	2	B_CAN (High)
	3	Video Analog
	4	Video Ground
	5	B_CAN (Low)
	6	Camera Power

Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the tail gate back panel molding.
(Refer to Body - "Tail Gate Back Panel Molding")
3. Disconnect the rear inside combination lamp connector (A).

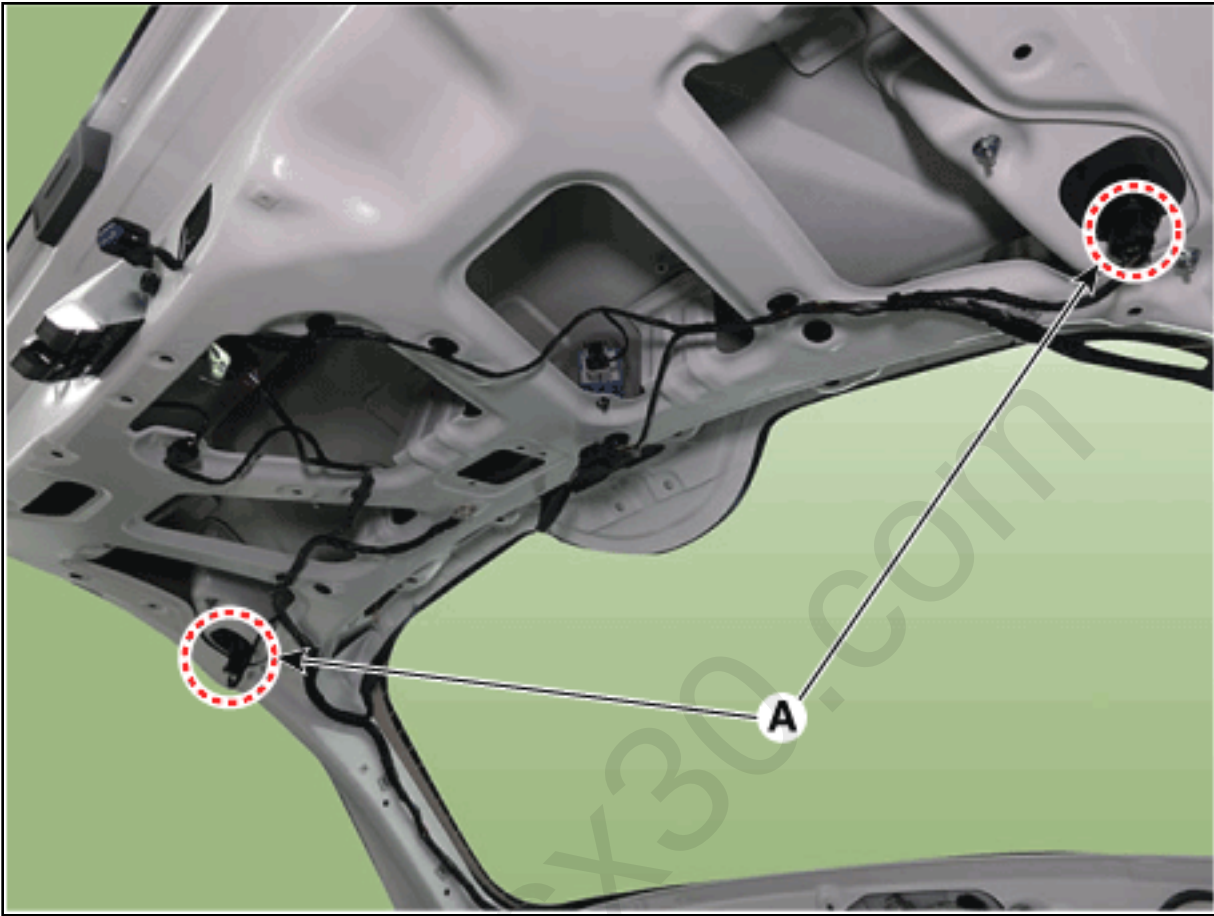


4. Disconnect the rear view camera connector (A).




5. Loosen the mounting nuts and remove the rear inside combination lamp (A).



6. Loosen the mounting screws and remove the rear view camera (A).

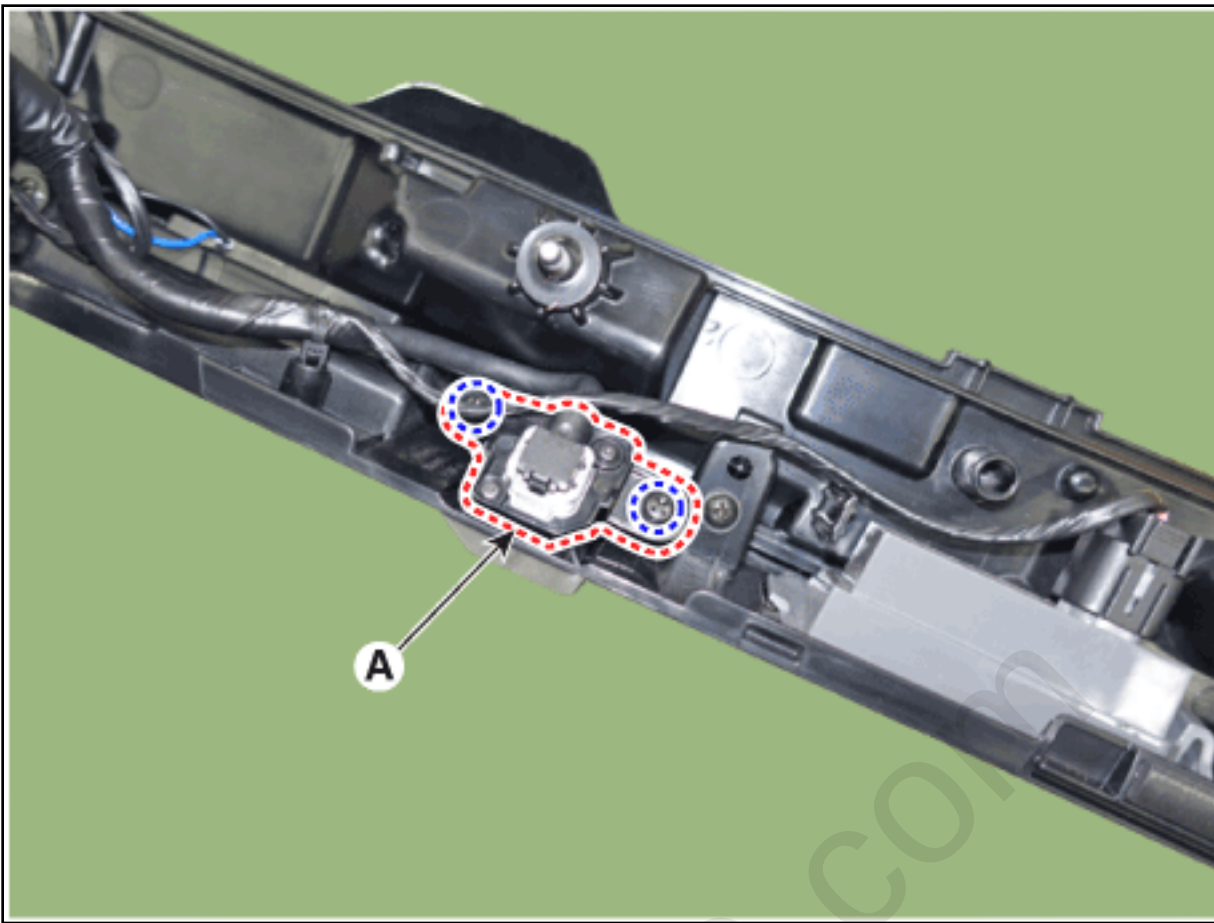

7. Disconnect the rear view camera connector (A).

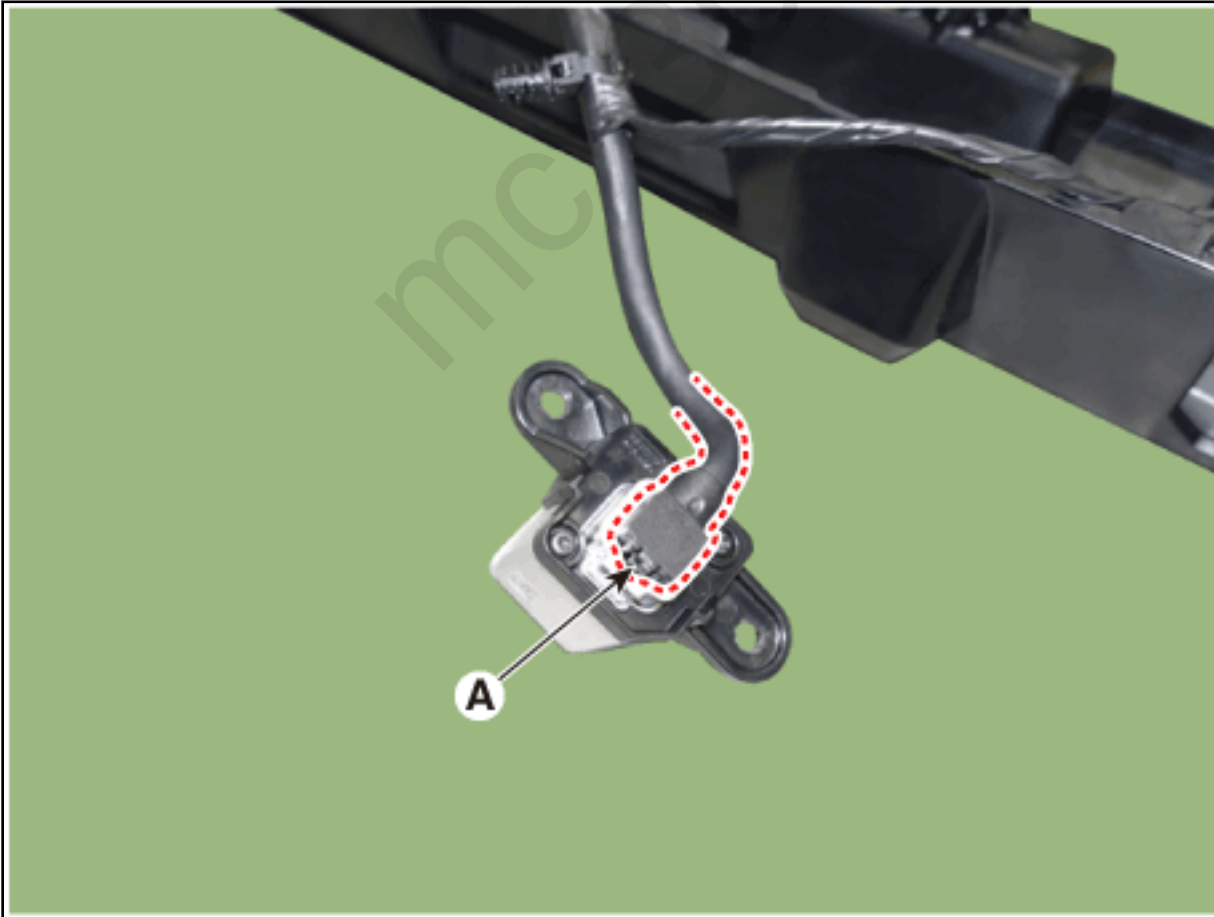

Installation

1. Install the rear view camera.
2. Install the tail gate back panel molding.

mcx30.com