

Engine - V8 5.0L Petrol -

Engine Data

Engine Description	Engine Capacity	Maximum Engine Torque (EEC)	Maximum Engine Power (EEC)	Compression Ratio	Bore	Stroke
• 90° "Vee" • 8 Cylinder • 32/16 Valves	4.999 ccm	510 Nm at 3.500 RPM	276 kW at 6.500 RPM	11.5 ± 0.5	92.5 mm	93 mm

Engine Firing Order

Firing Order
1:2:7:3:4:5:6:8

Engine Valve Clearance (cold)

Intake Valve	Exhaust Valve
N/A	0.25 mm ± 0.02

Spark Plugs

Specification	Spark Plug Gap
ILKR6C-10	1 mm

Lubricants, Fluids, Sealers and Adhesives

Description	Specification
Engine Oil	WSS-M2C925-A
Sealant	WSE-M4G323-A6
Core plug and stub pipe retainer	WSK-M2G349-A7

Capacities

Description	Liters
Engine oil, initial fill	9.5
Engine oil, service fill with oil filter change	8.0

Cylinder Head and Valve Train

Item	Specification
Cylinder head maximum permitted warp (mm) (flatness specification)	
overall	0.08
over 150x150 mm area	0.05
over 25x25 mm area	0.02
Valve guide inner diameter (mm)	5.51 ± 0.01
Intake valve effective length (mm) (tip to gauge line)	97.63 ± 0.1
Exhaust valve effective length (mm) (tip to gauge line)	94.39 ± 0.1
Valve stem to guide clearance intake diametrical (mm)	0.022 - 0.057
Valve stem to guide clearance exhaust diametrical (mm)	0.03 - 0.065
Valve head diameter intake (mm)	36 ± 0.1
Valve head diameter exhaust (mm)	30 ± 0.1
Intake valve face angle (degrees)	44.875 ± 0.125
Exhaust valve face angle (degrees)	44.875 ± 0.125
Valve stem diameter intake (mm)	5.4705 ± 0.0075
Valve stem diameter exhaust (mm)	5.4625 ± 0.0075
Valve spring free length (mm) - inlet	43.43
Valve spring free length (mm) - exhaust	46.1
Valve spring installed height (mm) - inlet	34.49
Valve spring installed height (mm) - exhaust	35.1
Camshaft lobe lift intake (mm)	5.5 (low) 10.53 (high)
Camshaft lobe lift exhaust (mm)	9.36
Camshaft journal to cylinder head bearing surface clearance diametrical (mm)	0.025 - 0.065
Camshaft journal diameter - all positions	26.965 ± 0.01
Bearing diameter - all positions	27.01 ± 0.01
Camshaft journal maximum run out limit (mm)	
Camshaft journals to end journals	0.03
Camshaft journals to adjacent journals	0.015
Camshaft journal maximum out of round (mm) - all journals	0.005

Torque Specifications

• NOTE: A = Refer to procedure for correct torque sequence.


Description	Nm	lb-ft	lb-in
Engine cover mounting bolts	10	7	-
Accessory drive belt tensioner retaining bolt	40	30	-
Supercharger belt idler/tensioner bracket retaining bolts	25	18	-
Secondary drive belt idler retaining bolts	40	30	-
Power steering pump pulley retaining bolts	25	18	-
Power steering pump retaining bolts	25	18	-
Power steering pump bracket to engine retaining bolts	25	18	-
Generator retaining bolts	48	35	-
Starter motor retaining bolts	40	30	-
Air conditioning compressor retaining bolts	25	18	-
Engine mounting to engine mounting bracket retaining nuts	100	74	-
Engine mounting to subframe retaining bolts	56	41	-

Description	Nm	lb-ft	lb-in
Engine mounting bracket to engine retaining bolts	45 + 60°	33 + 60°	-
Crankshaft damper pulley retaining LH threaded bolt	200 + 270°	148 + 180°	-
Flexplate retaining bolts	45 + 90°	33 + 90°	-
Exhaust manifold heat shield retaining bolts	A	-	-
Exhaust manifold retaining bolts	A	-	-
Engine wiring harness bracket retaining bolts	10	7	-
Coolant outlet pipe	10	7	-
Intercooler retaining bolts	25	18	-
Intake manifold retaining bolts	25	18	-
Oil Cooler retaining bolts	13	10	-
Knock sensor (KS) retaining bolt	20	14	-
Ignition coil retaining bolts	8	-	71
Spark plugs	20	15	-
Fuel rail retaining bolts	A	-	-
High pressure fuel pipe retaining bolts	A	-	-
High pressure fuel pump retaining bolts	12	9	-
Oil filter housing assembly retaining bolts	12	9	-
Oil filter cap	25	18	-
Lifting eye bolts	25 + 90°	18 + 90°	-
Manifold absolute pressure and temperature (MAPT) sensor sensor retaining bolts	5	-	44
Coolant pump retaining bolts	12	9	-
Variable valve timing (VVT) oil control solenoid retaining bolts	10	7	-
Camshaft position (CMP) sensor retaining bolts	10	7	-
Camshaft cover retaining bolts	13	10	-
Front upper timing cover retaining bolts	12	9	-
Front lower timing cover retaining bolts	A	-	-
Engine rear cover retaining bolts	A	-	-
VVT to camshaft retaining bolts	32	24	-
Camshaft bearing caps retaining bolts	11	8	-
Primary timing chain fixed guide retaining bolts	12	9	-
Primary timing chain tensioner retaining bolts	12	9	-
Primary timing chain tensioner guide blade retaining bolts	25	18	-
Auxiliary chain tensioner guide retaining bolts	21	15	-
Auxiliary chain fixed guide retaining bolt	12	9	-
Oil pump sprocket retaining bolt	21	15	-
Cylinder head retaining bolts	A	-	-
Engine oil level (EOL) sensor retaining bolt	12	9	-
Crankshaft position (CKP) sensor retaining bolt	10	7	-
Oil sump body to engine retaining bolts	25	18	-
Oil pan drain plug	24	18	-
Oil transfer tube to Oil pan body retaining bolts	11	8	-
Oil pump to engine block retaining bolts	25	18	-
Pick-up pipe to oil pump retaining bolts	12	9	-
Windage tray retaining bolts	25	18	-
Piston cooling jet retaining bolts	12	9	-
Engine block coolant draining plug	50	37	-
Cooling fan pulley	25	18	-

Engine - V8 5.0L Petrol - Engine

Description and Operation

EXTERNAL VIEW

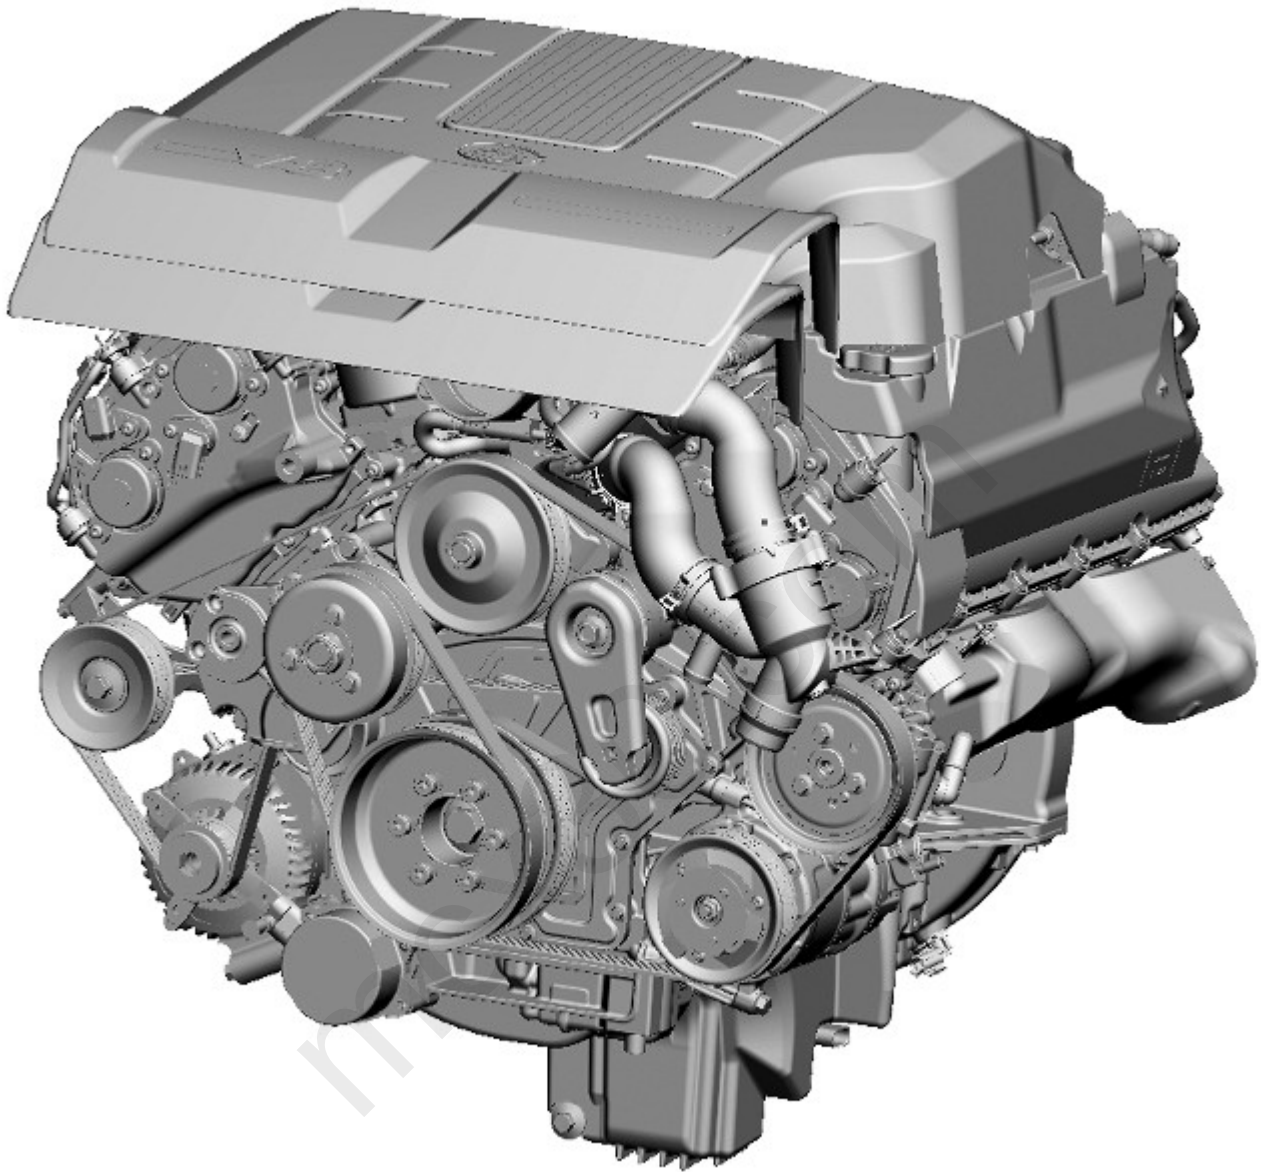


E122432

INTRODUCTION

The 5.0L NA (naturally aspirated) gasoline engine is a liquid cooled V8 unit featuring direct fuel injection, four overhead camshafts and four valves per cylinder. All four camshafts incorporate **VCT (variable camshaft timing)**. The intake camshafts and valves also incorporate CPS (camshaft profile switching).

The main structural components of the engine are all manufactured from aluminum alloy. The engine is built around a very stiff, lightweight, enclosed V, deep skirt cylinder block. A structural windage tray is bolted to the bottom of the cylinder block to further improve the block stiffness, minimize **NVH (noise, vibration and harshness)** and help reduce oil foaming. To further enhance the stiffness of the lower engine structure, a heavily ribbed sump is installed. The sump also helps to reduce engine noise.


Engine Structure

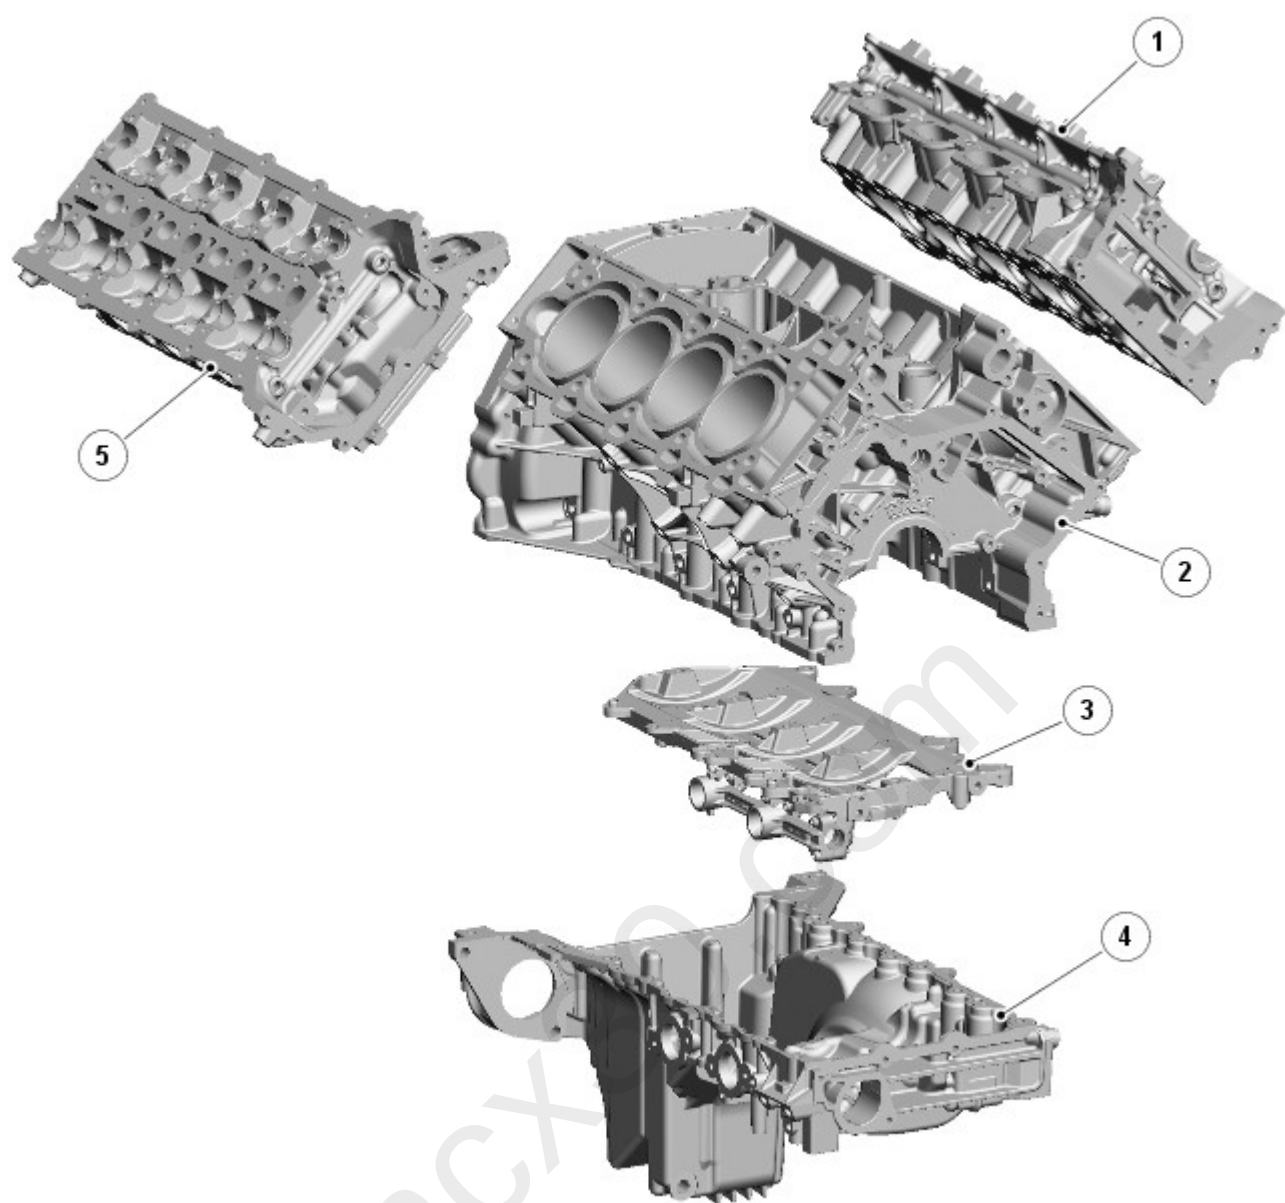

E121104

Item	Part Number	Description
1	-	LH (left hand) cylinder head (bank B)
2	-	Cylinder block
3	-	Windage tray
4	-	Sump
5	-	RH (right hand) cylinder head (bank A)

CYLINDER BLOCK

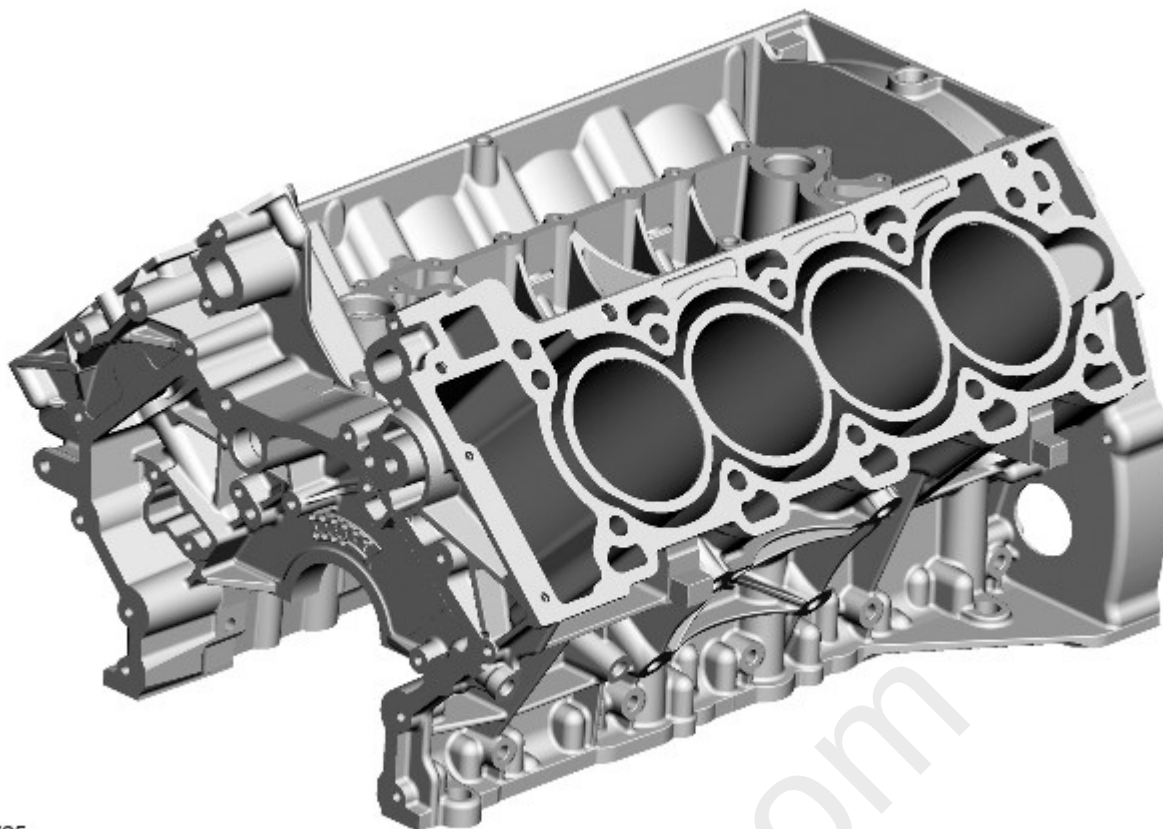


E106725


The cylinder block is a 90 degree configuration with cast-in iron cylinder liners and an open deck die-cast coolant jacket. The low volume coolant jacket gives good warm-up times and low piston noise levels. The longitudinal flow design of the coolant jacket, with a single cylinder head coolant transfer port in each bank, provides good rigidity and head gasket sealing.

Cylinder Numbering

The cylinders are numbered as shown below, with cylinders 1 and 2 at the front of the engine.

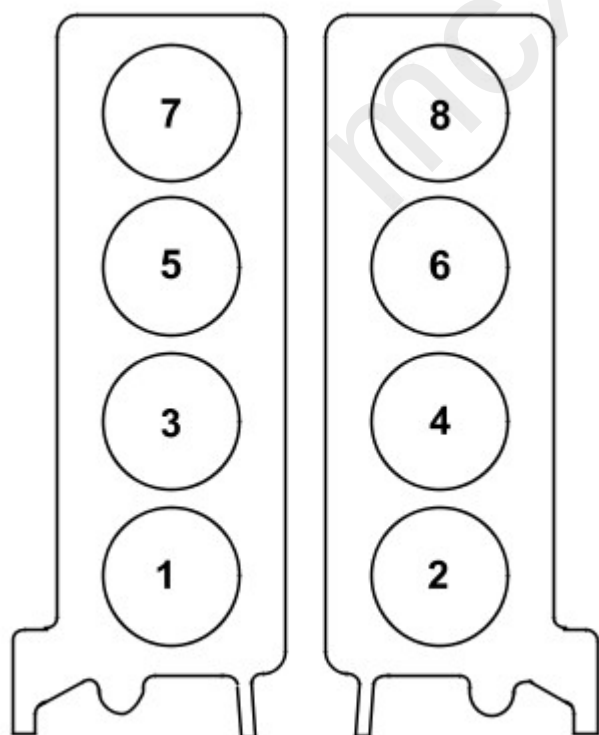

E133972

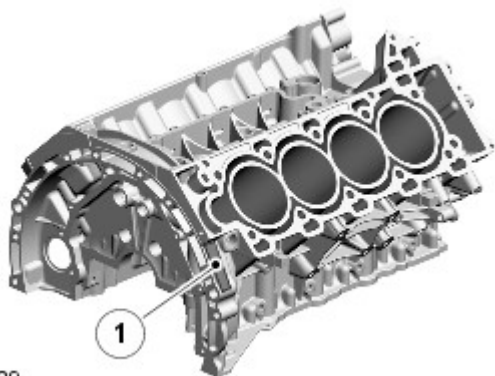


E108429

Item	Part Number	Description
1	-	Engine data location

Engine data is marked on the cylinder block at the rear of the [RH \(right-hand\)](#) cylinder bank.

CRANKSHAFT

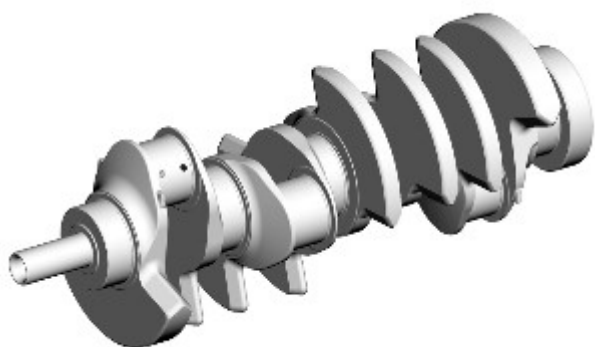


E106729

The crankshaft is made from spheroidal graphite cast iron, which, compared with grey cast iron, has higher mechanical strength, ductility and increased shock resistance. The undercut and rolled fillets also improve strength. Eight counter-balance weights ensure low vibration levels and the large, cross-drilled main bearing journals are designed to contribute to stiffness.

An oil groove in the upper half of each main bearing transfers the oil into the crankshaft for lubrication of the connecting rod bearings. A thrust washer is installed each side of the top half of the center main bearing.

Crankshaft Data Location

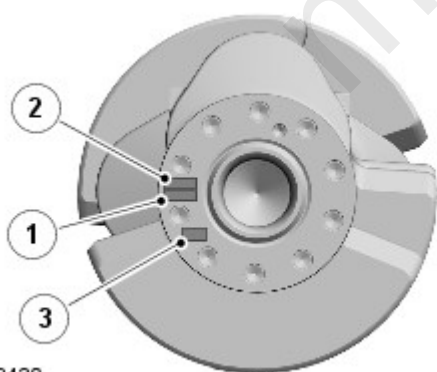


E108430

Item	Part Number	Description
1	-	Pin journal classification and plant identification
2	-	Main journal classification
3	-	Date and time codes

The main bearings are numbered 1 to 5 starting from the front of the engine. There are five grades of main bearing available, each being color coded. Journal sizes are marked on the rear of the crankshaft.

For additional information, refer to: [Crankshaft Main Bearing Journal Clearance](#) (303-00 Engine System - General Information, General Procedures).

Crankshaft Installation

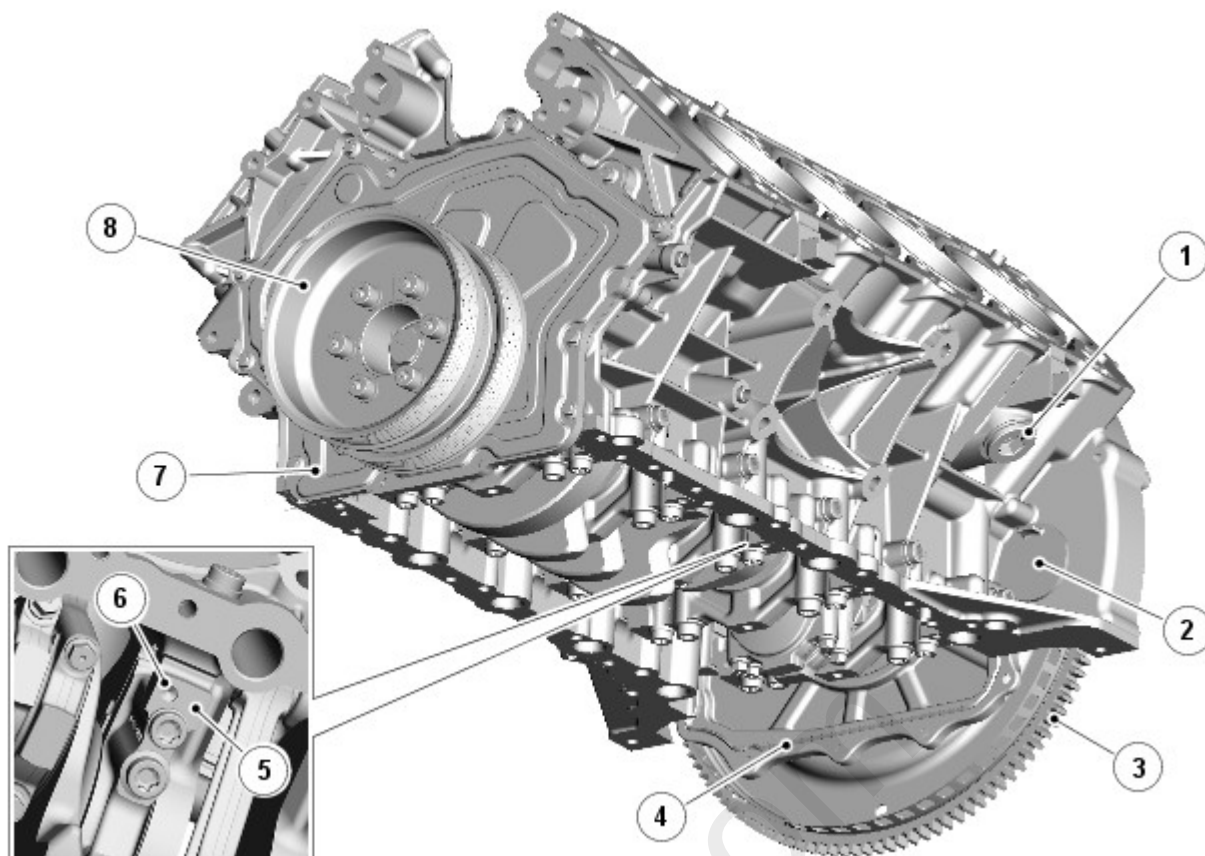

E122349

Item	Part Number	Description
1	-	Coolant drain plug
2	-	Torque converter access plug
3	-	Drive plate
4	-	Rear cover
5	-	Main bearing cap
6	-	Identification mark
7	-	Front cover
8	-	Front pulley

The main bearing caps are made from cast iron and are cross bolted to increase rigidity. An identification mark on the bearing cap faces the front of the engine.

At the front of the crankshaft, a tuned torsional vibration damper is incorporated into the crankshaft front pulley. At the rear of the crankshaft a pressed steel drive plate, with a steel starter ring gear, is installed to transfer drive from the engine to the transmission. The reluctor ring for the [CKP \(crankshaft position\)](#) sensor is integrated into the perimeter of the drive plate.

The crankshaft seals are located in the front and rear covers.

PISTONS AND CONNECTING RODS




E115619

The diameter of each piston is graded and precisely matched to each cylinder bore to help reduce noise. In the vertical plane, the pistons have a slight barrel form, which helps to ensure a reliable oil film is maintained between the piston and the cylinder bore. A solid film lubricant coating is applied to both reaction faces of the piston to reduce wear and improve fuel economy.

A three-ring piston-sealing system is used. The steel top ring is treated with a PVD (physical vapor deposition) peripheral coating. PVD is a coating technique where material can be deposited with improved properties to ensure good cylinder bore compatibility and wear resistance. A Napier center ring helps cylinder pressure and oil management, while the three-piece oil control lower ring is produced from nitrided steel.

The connecting rods are forged from high strength steel. The cap is fracture-split from the rod to ensure precision re-assembly for bearing shell alignment. There are three grades of large end bearing available, each being color coded. For additional information, refer to: [Connecting Rod Large End Bore](#) (303-00 Engine System - General Information, General Procedures).

Cap Alignment with Connecting Rod


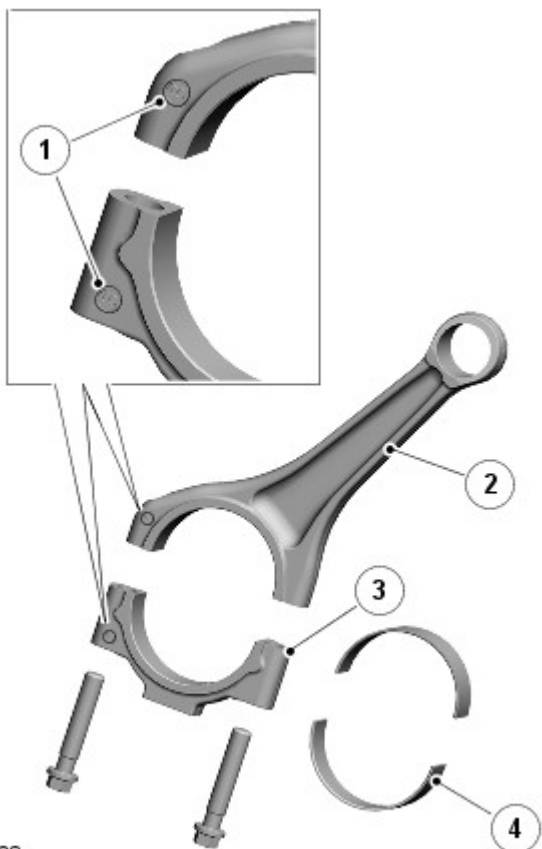


E108438

Item	Part Number	Description
1	-	Alignment marks
2	-	Connecting rod
3	-	Cap
4	-	Bearings

The correct alignment of the cap with the connecting rod is indicated by marks on adjacent faces of the two components.

Connecting Rod and Piston Orientation

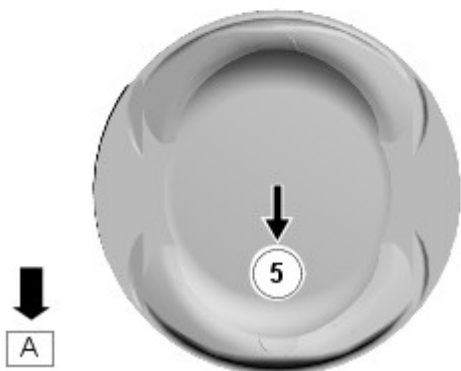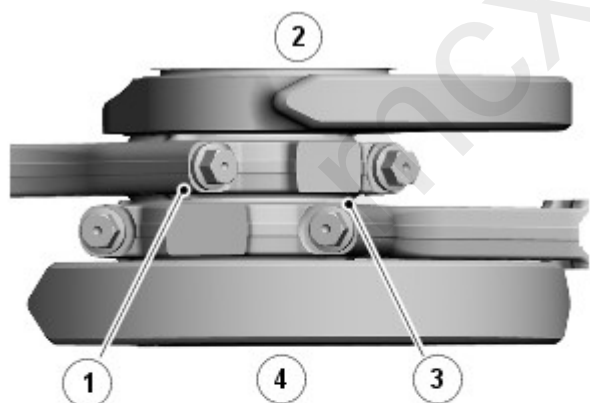

E108439


Item	Part Number	Description
A	-	Front of engine
1	-	Alignment mark
2	-	LH side (bank B)
3	-	Alignment mark
4	-	RH side (bank A)
5	-	Piston orientation arrow

The orientation of the connecting rods and pistons on the crankshaft are given below:

- Bank A - The arrow on the piston crown must face the front of the engine and the cap and connecting rod alignment marks must face the rear of the engine.
- Bank B - The arrow on the piston crown must face the front of the engine and the cap and connecting rod alignment marks must face the front of the engine.

CYLINDER HEADS

- NOTE: [RH](#) (A bank) cylinder head shown, LH (left-hand) (B bank) cylinder head similar.

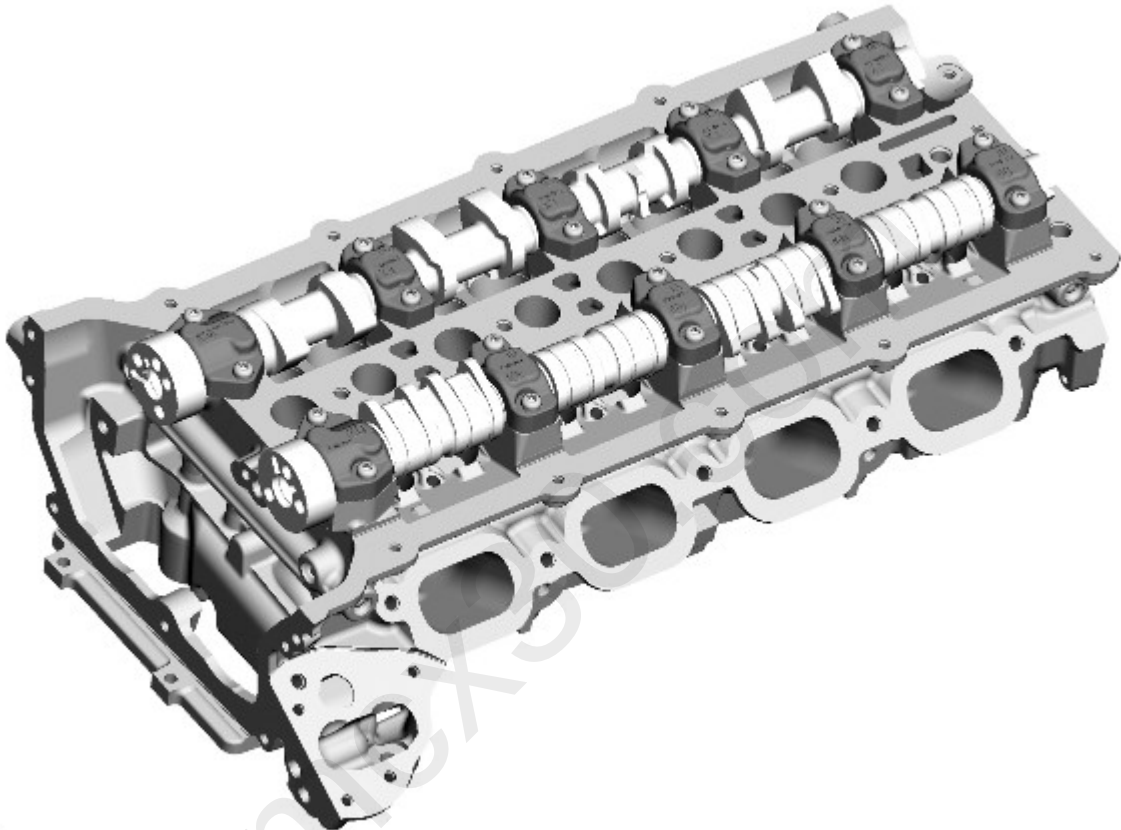

E106732


The cylinder heads are manufactured in gravity die cast aluminum alloy and are unique for each cylinder bank. Deep-seated bolts reduce distortion and secure the cylinder heads to the cylinder block.

Each cylinder is served by four valves. To help achieve the required gas-flow characteristics, these are arranged asymmetrically around the cylinder bore. Each cylinder has a centrally mounted fuel injector and spark plug.

The cylinder head gasket is of a multi-layer steel construction.

EXHAUST MANIFOLD

- NOTE: LH (B bank) installation shown, RH (A bank) installation similar.

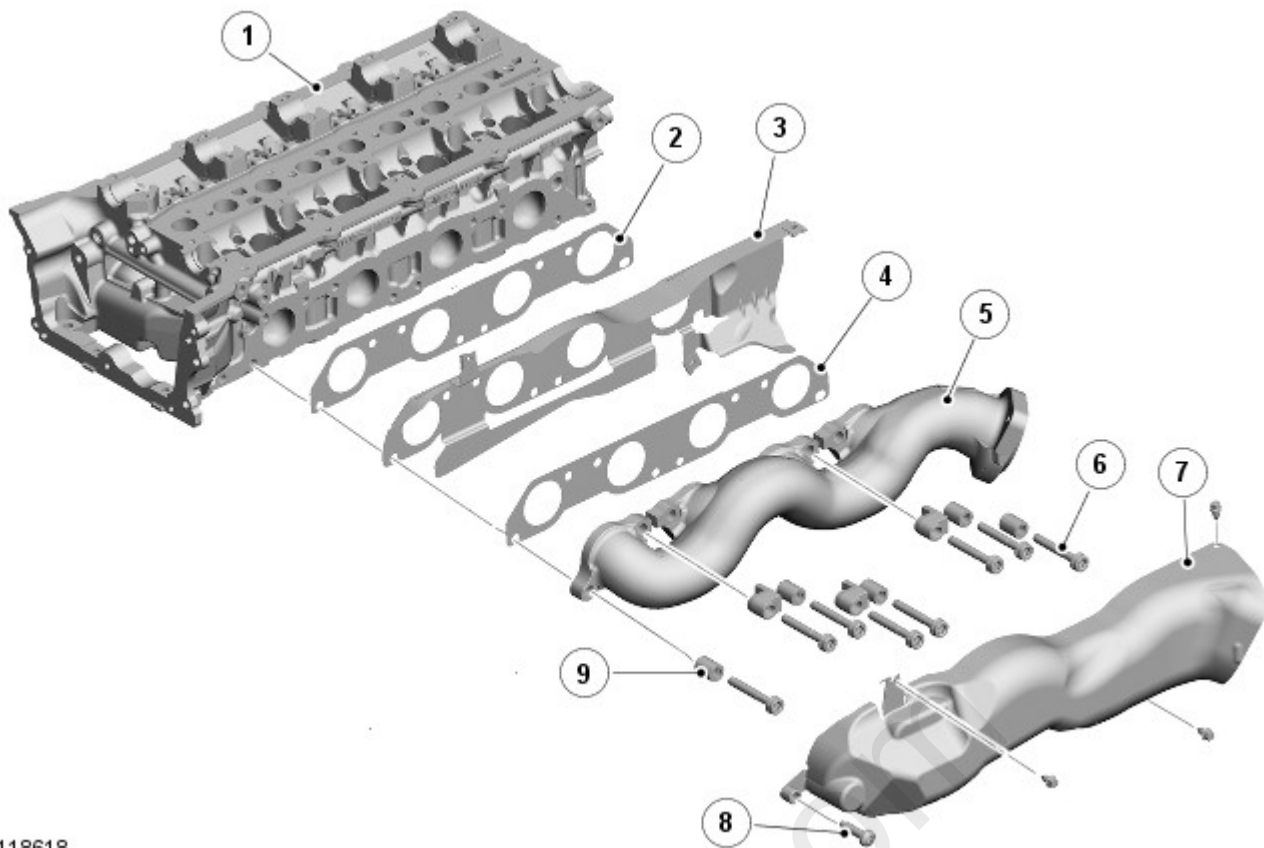


E118618

Item	Part Number	Description
1	-	Cylinder head
2	-	Gasket
3	-	Heat shield
4	-	Gasket
5	-	Exhaust manifold
6	-	Bolt (8 off)
7	-	Heat shield
8	-	Bolt (4 off)
9	-	Spacer (8 off)

The high SiMo (silicon molybdenum) cast iron exhaust manifolds are unique for each cylinder bank. Each exhaust manifold installation includes two metal gaskets and two heat shields. Spacers on the securing bolts allow the manifolds to expand and contract with changes of temperature while maintaining the clamping loads.


VALVE TRAIN

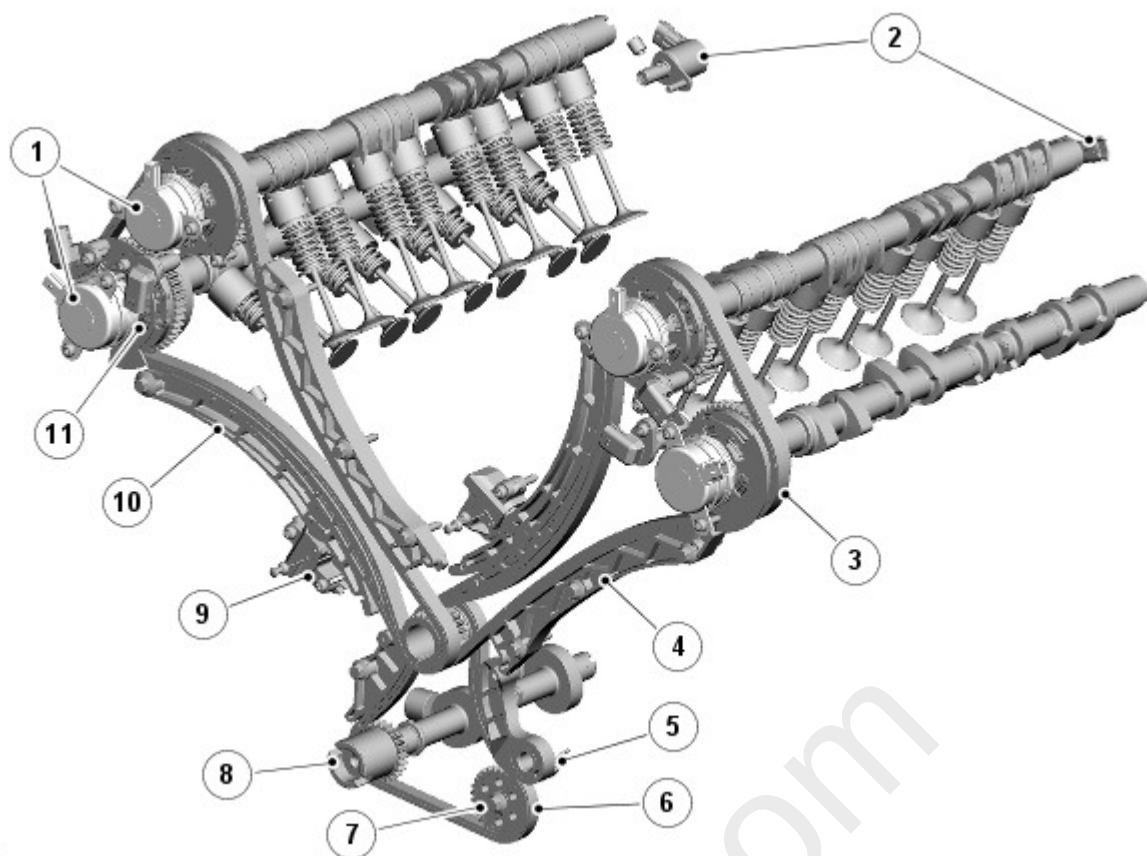

E106733

Item	Part Number	Description
1	-	VCT solenoids
2	-	CPS solenoids
3	-	Inverted tooth timing chain
4	-	Nylon chain guide
5	-	Auxiliary chain tensioner
6	-	Auxiliary drive chain
7	-	Oil pump drive
8	-	Auxiliary drive camshaft
9	-	Timing chain tensioner
10	-	Tensioner lever
11	-	VCT unit

Camshafts

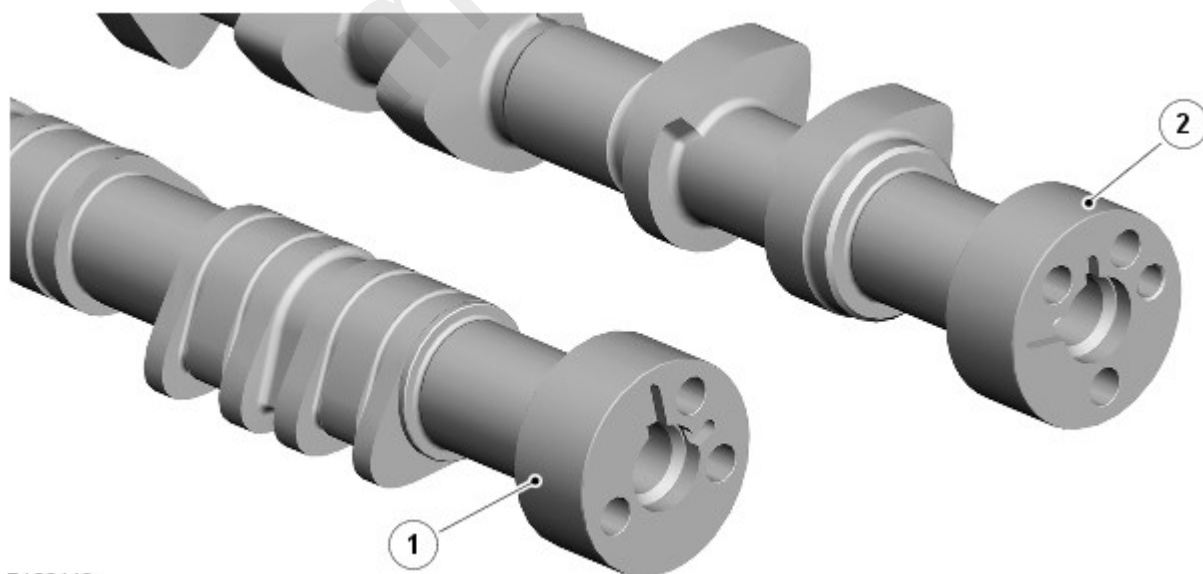

E108443


Item	Part Number	Description
1	-	Intake camshaft
2	-	Exhaust camshaft

The lightweight valve train provides good economy and noise levels and is chain driven from the crankshaft.

Double overhead camshafts on each cylinder head operate the valves. For each cylinder head, an inverted tooth timing chain transfers drive from the crankshaft to the [VCT](#) unit on the front of each camshaft. Graded tappets enable setting of exhaust valve clearances. Switchable tappets with hydraulic lash adjusters are installed on the intake valves.

Each timing chain has a hydraulic tensioner operated by engine oil pressure. The chain tensioners incorporate a ratchet mechanism, which maintains tension while the engine is stopped to eliminate start-up noise. The chains are lubricated with engine oil from jets located at the front of the engine block. Nylon chain guides control chain motion on the drive side.

Variable Camshaft Timing

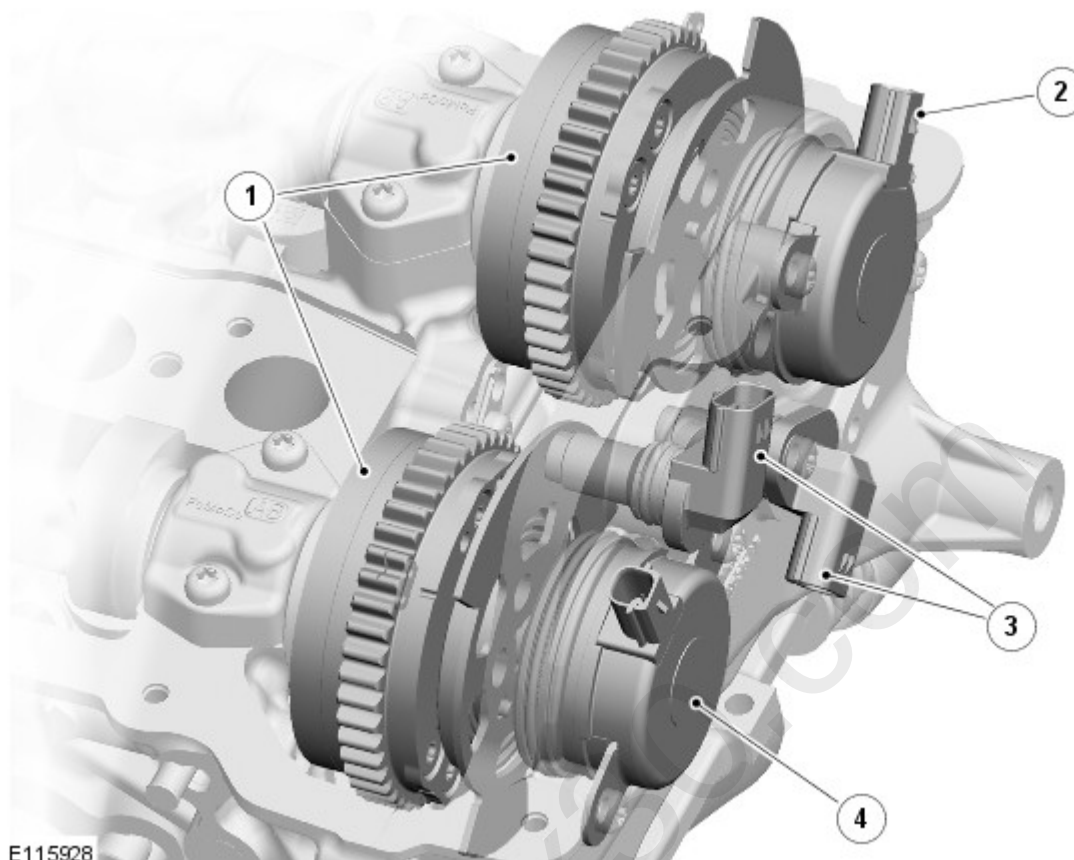

Item	Part Number	Description
1	-	VCT units
2	-	Intake camshaft VCT solenoid
3	-	Camshaft position sensors
4	-	Exhaust camshaft VCT solenoid

The [VCT](#) system varies the timing of the intake and exhaust camshafts to deliver optimum engine power, efficiency and emissions. The timing of the intake camshafts has a range of 62 degrees of crankshaft angle. The timing of the exhaust camshafts has a range of 50 degrees of crankshaft angle.

In the base timing position:

- The intake camshafts are fully retarded.
- The exhaust camshafts are fully advanced.

VCT Operating Ranges


Camshaft	Valve Opens	Valve Closes
Intake - Low Lift	27 degrees BTDC (before top dead center) to 35 degrees ATDC (after top dead center)	187 to 249 degrees ATDC
Intake - High Lift	37 degrees BTDC to 25 degrees ATDC	213 to 275 degrees ATDC
Exhaust	244 to 194 degrees BTDC	6 to 56 degrees ATDC

The system consists of a [VCT](#) unit and a [VCT](#) solenoid for each camshaft. The [ECM](#) (engine control module) controls the system using [PWM](#) (pulse width modulation) signals to the [VCT](#) solenoids.

The torsional energy generated by the valve springs and the inertia of the valve train components are used to operate the system.

Variable Camshaft Timing Units

The [VCT](#) units change the position of the camshafts in relation to the timing chains.

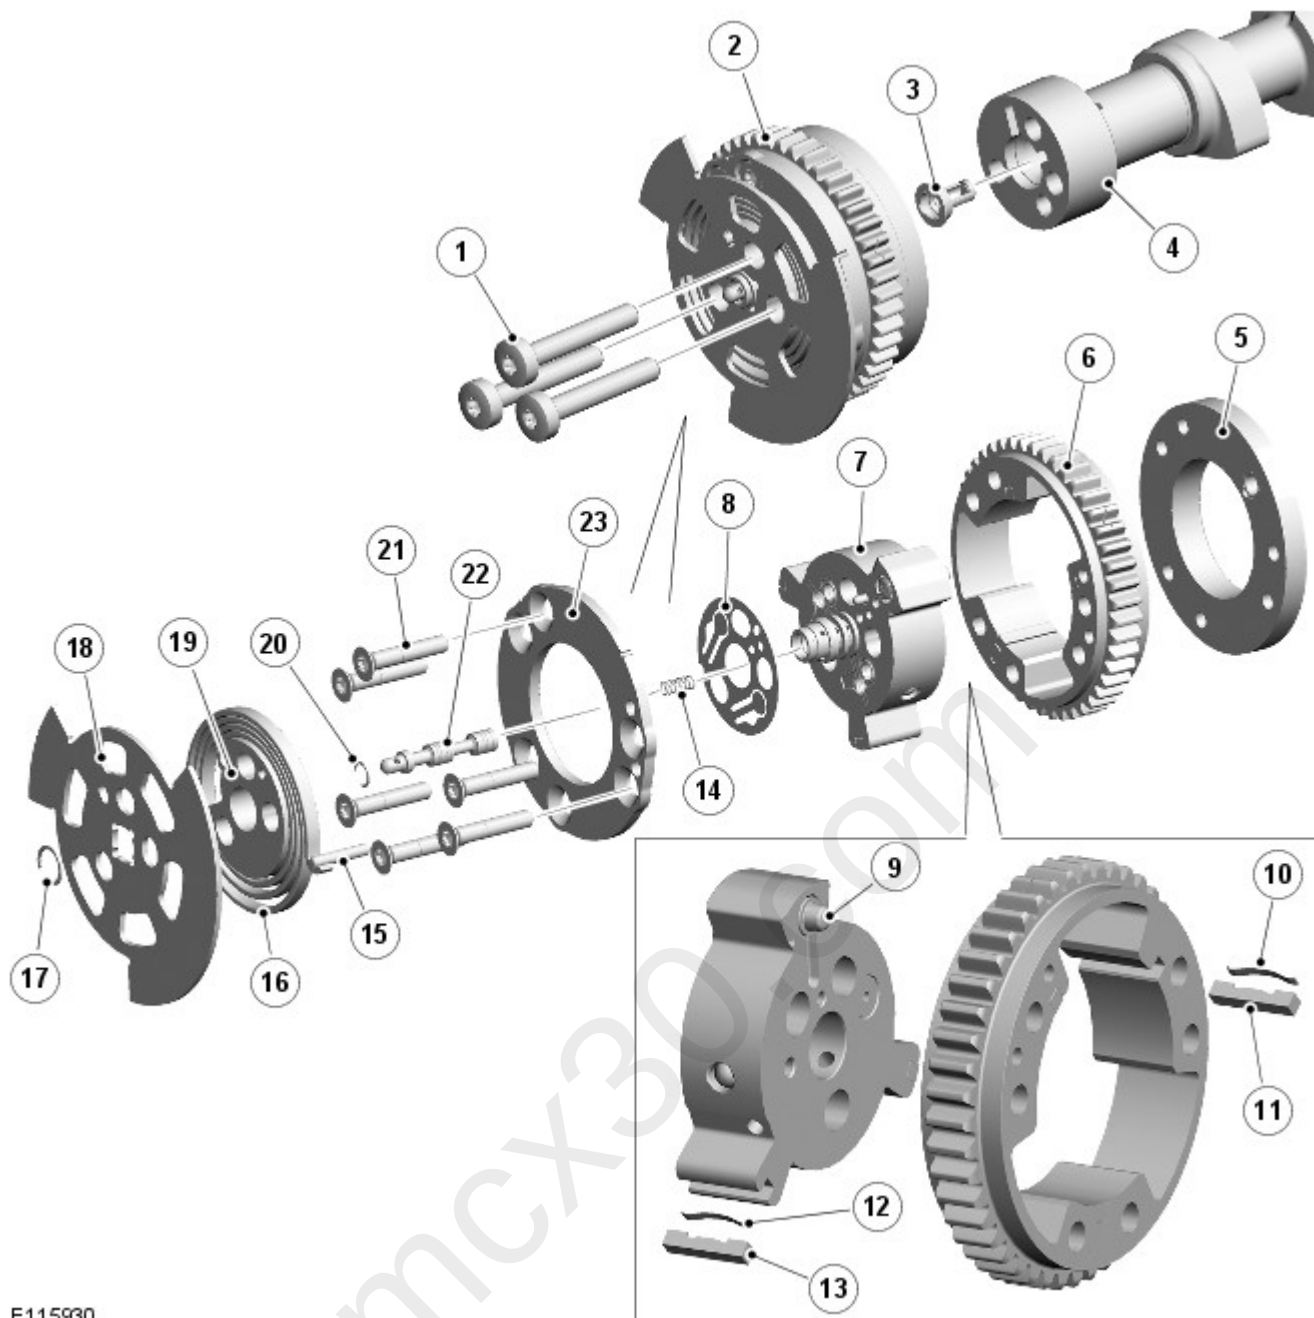

E115930

Item	Part Number	Description
1	-	Bolt (3 off)
2	-	VCT unit
3	-	Filter
4	-	Camshaft
5	-	Inner plate
6	-	Housing and sprocket
7	-	Rotor assembly
8	-	Reed plate
9	-	Spring and lock pin
10	-	Spring (3 off)
11	-	Tip seal (3 off)
12	-	Spring (2 off)
13	-	Tip seal (2 off)
14	-	Spring
15	-	Dowel pin
16	-	Bias spring
17	-	Snap ring
18	-	Reluctor ring
19	-	Center plate
20	-	Snap ring
21	-	Screw (6 off)
22	-	Spool valve
23	-	Outer plate

Each [VCT](#) unit is attached to the camshaft by three bolts. A rotor assembly and a reed plate are installed inside a sprocket

housing, which consists of a sprocket, an outer plate and an inner plate held together by six screws.


A reluctor ring, for the [CMP \(camshaft position\)](#) sensor, a center plate and a bias spring are installed at the front of the [VCT](#) unit. The ends of the bias spring locate on the center plate assembly and the sprocket housing, to give a turning moment to the camshaft in the advance direction. A snap ring locates the reluctor ring on to a sleeve installed in the center of the rotor assembly. The opposite end of the sleeve locates in a bore in the front face of the camshaft, which contains a filter.

A spring and spool valve are installed in the rotor assembly sleeve and retained by a snap ring. The spring keeps the spool valve in contact with the armature of the related [VCT](#) solenoid.

Each [VCT](#) unit is supplied with engine oil from an oil gallery in the cylinder head, through the camshaft front bearing cap and a bore in the center of the camshaft.

Variable Camshaft Timing Solenoids

The [VCT](#) solenoids control the position of the spool valves in the [VCT](#) units.

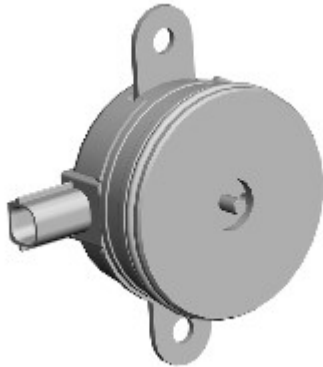

E115929


The [VCT](#) solenoids are installed in the front upper timing covers, immediately in front of their related [VCT](#) units. Each [VCT](#) solenoid is secured with two screws and sealed with an O-ring. A two pin electrical connector provides the interface with the engine harness.

Each [VCT](#) solenoid incorporates a spindle that acts on the spool valve in the related [VCT](#) unit to advance and retard the camshaft timing. The [VCT](#) solenoids operate independently and are controlled by a [PWM](#) signal from the [ECM](#).

Variable Camshaft Timing Operation

When the engine is running, the compression and expansion of the valve springs causes momentary increases and decreases in the torque acting on the camshafts. These momentary changes of torque are sensed in the [VCT](#) units and used to change the camshaft timing.

Camshaft Torsional Energy (For a Single Valve Event)

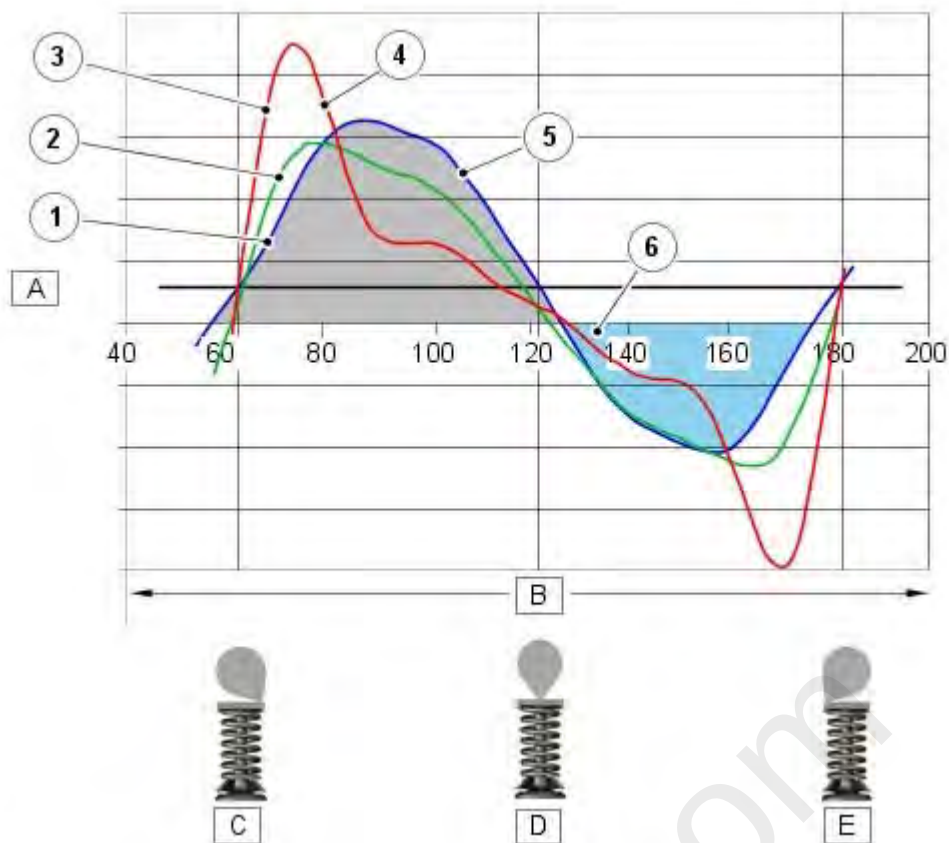


E112406

Item	Part Number	Description
A	-	Camshaft torque
B	-	Camshaft rotation (degrees)
C	-	Valve opening
D	-	Peak lift
E	-	Valve closing
1	-	1000 rev/min
2	-	4000 rev/min
3	-	7000 rev/min
4	-	Inertia effects from valve train rotating components
5	-	Force caused by valve spring
6	-	Bias torque from friction

Variable Camshaft Timing Unit Schematic - Base Timing

- NOTE: Intake camshaft [VCT](#) unit shown. For exhaust camshaft [VCT](#) unit, read advance for retard and retard for advance.

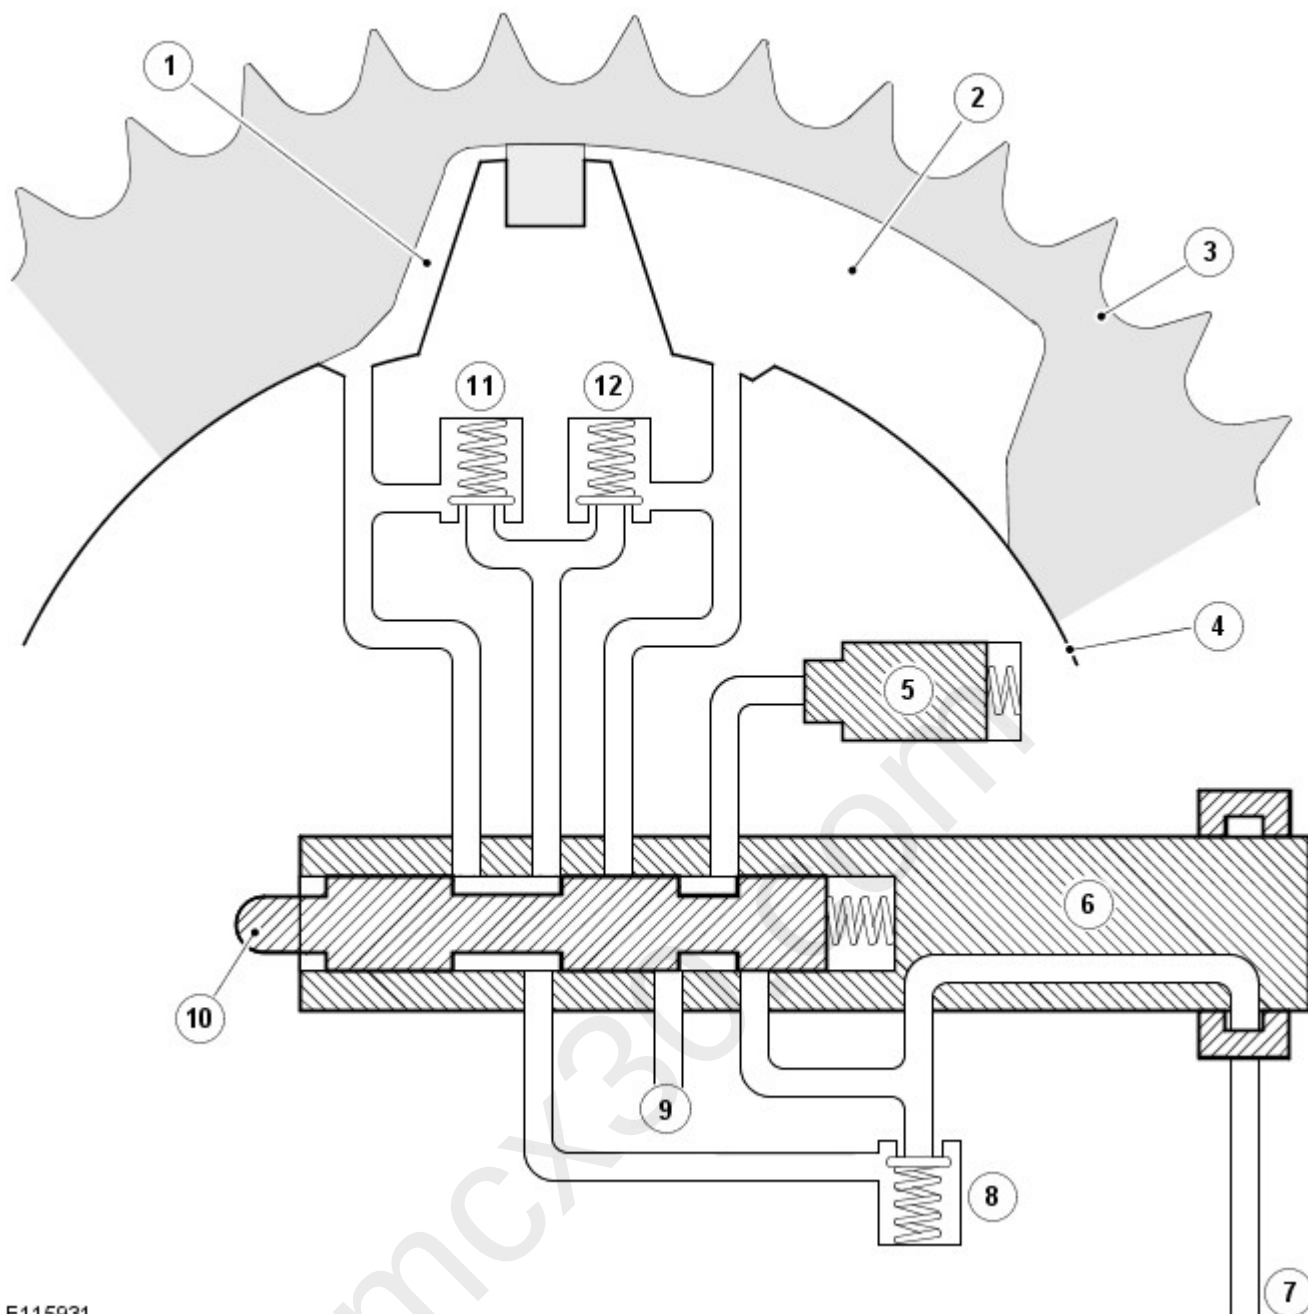

E115931


Item	Part Number	Description
1	-	Advance chamber
2	-	Retard chamber
3	-	Sprocket housing
4	-	Rotor assembly
5	-	Lock pin
6	-	Sleeve
7	-	Engine oil supply from camshaft
8	-	Inlet check valve
9	-	Lock pin drain
10	-	Spool valve
11	-	Advance check valve
12	-	Retard check valve

• NOTE: The following description is for intake camshaft [VCT](#) units. For exhaust camshaft [VCT](#) units, read advance for retard, and retard for advance.

At engine start-up, once the engine oil pressure in the camshaft is sufficient to open the inlet check valve, engine oil flows across the spool valve, through the advance and retard check valves and into the advance and retard chambers. During the start cycle, the [ECM](#) signals the [VCT](#) solenoid to move the spool valve into the sleeve and connect the lock pin to inlet oil pressure. The inlet oil pressure causes the lock pin to retract from the inner plate and unlock the rotor assembly and camshaft from the sprocket housing.

There is a constant supply of oil to the [VCT](#) to ensure the unit remains filled during operation.

Variable Camshaft Timing Unit Schematic - Advance

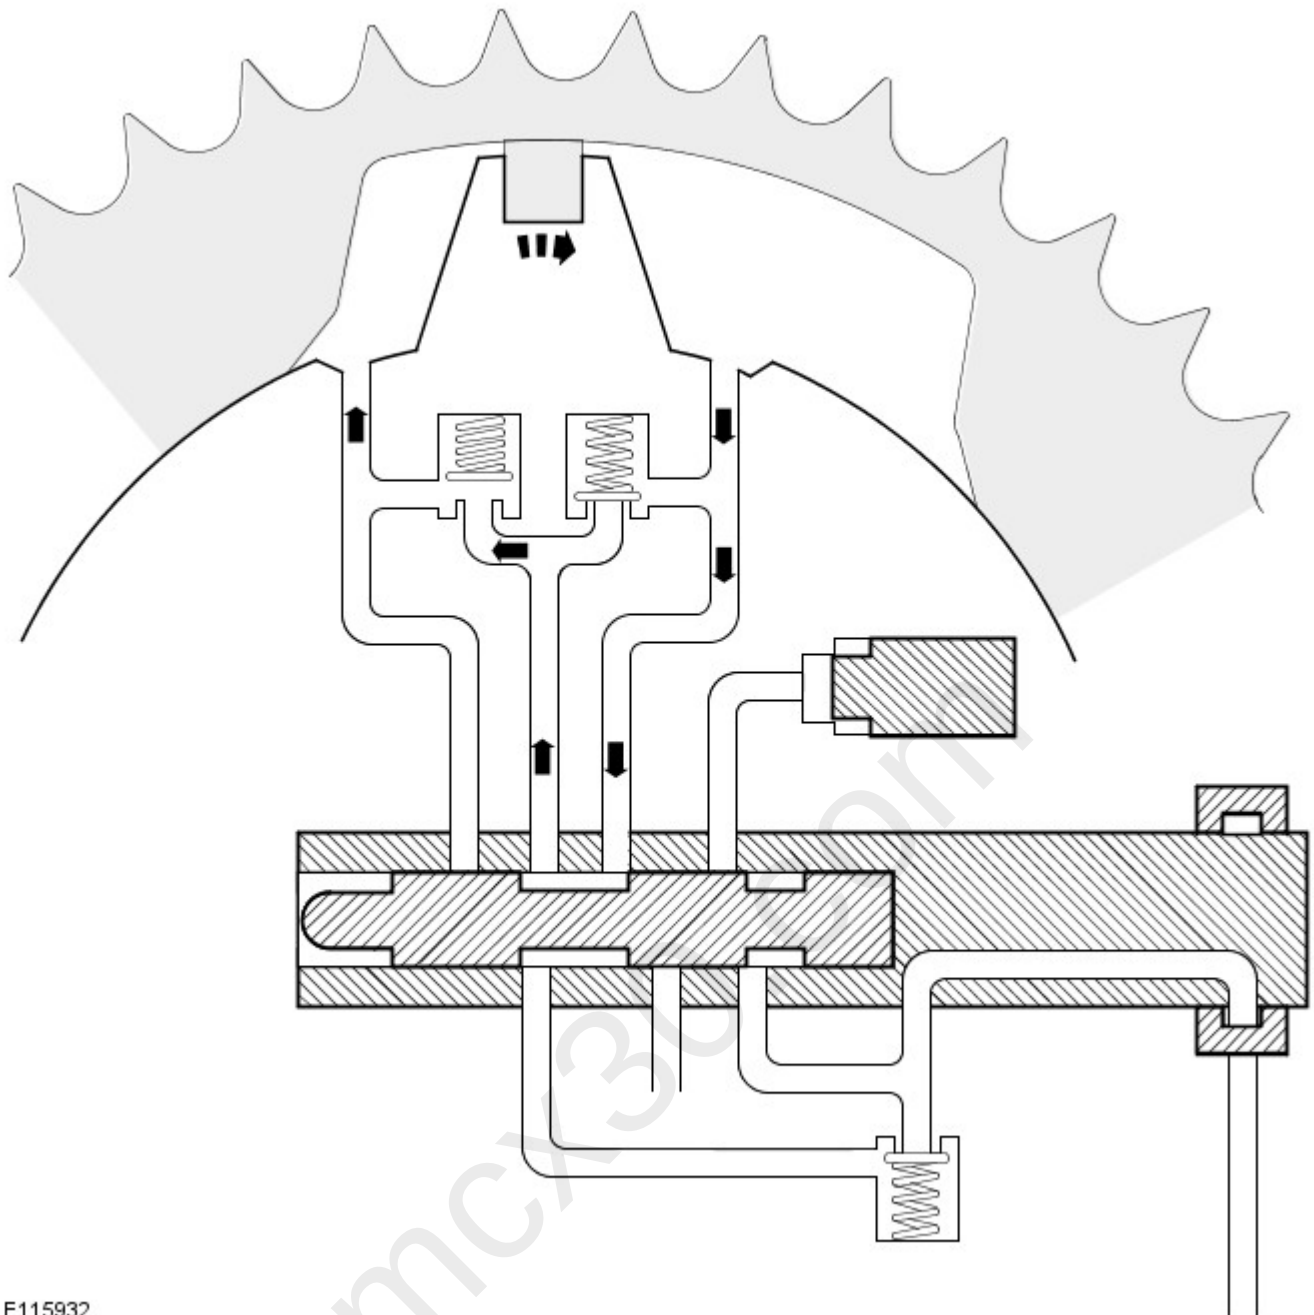


E115932

To advance the camshaft timing, the [ECM](#) adjusts the signal to the [VCT](#) solenoid to move the spool valve so that the advance chamber oil passage is closed and the retard chamber oil passage is connected to inlet oil.

Each momentary increase of the torque acting on the camshaft generates a pressure pulse in the retard chamber. Oil moves from the retard chamber, through the spool valve and the advance check valve to the advance chamber, to equalize the pressures in the two chambers. The displacement of oil from the retard chamber causes the rotor assembly to advance in relation to the sprocket housing. Each momentary decrease of torque acting on the camshaft also generates a pressure pulse in the advance chamber, but, with the advance chamber oil passage closed, no movement of oil between the advance and retard chambers occurs and the rotor assembly cannot move in the retard direction.


Variable Camshaft Timing Unit Schematic - Null

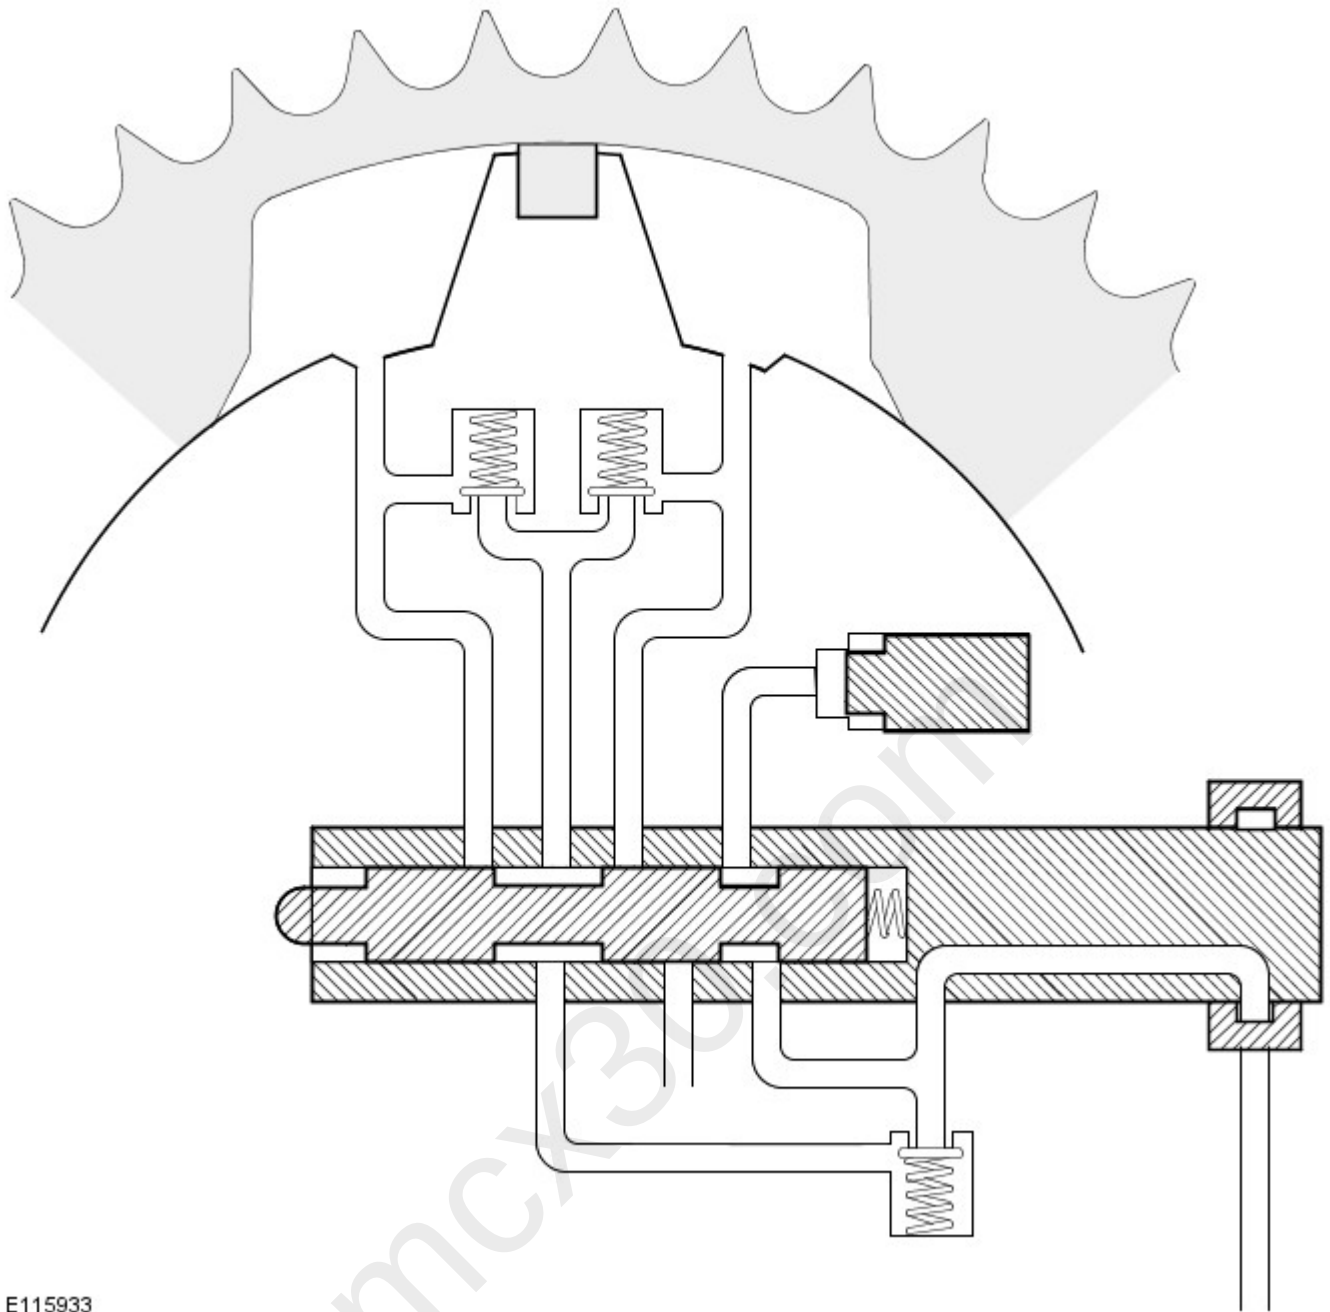

E115933

Once the camshaft has reached the required timing position the [ECM](#) adjusts the signal to the [VCT](#) solenoid to set the spool valve in the null position. In the null position, the advance and retard chamber oil passages are both closed by the spool valve and the rotor assembly is hydraulically locked to the sprocket housing.

Variable Camshaft Timing Unit Schematic - Retard

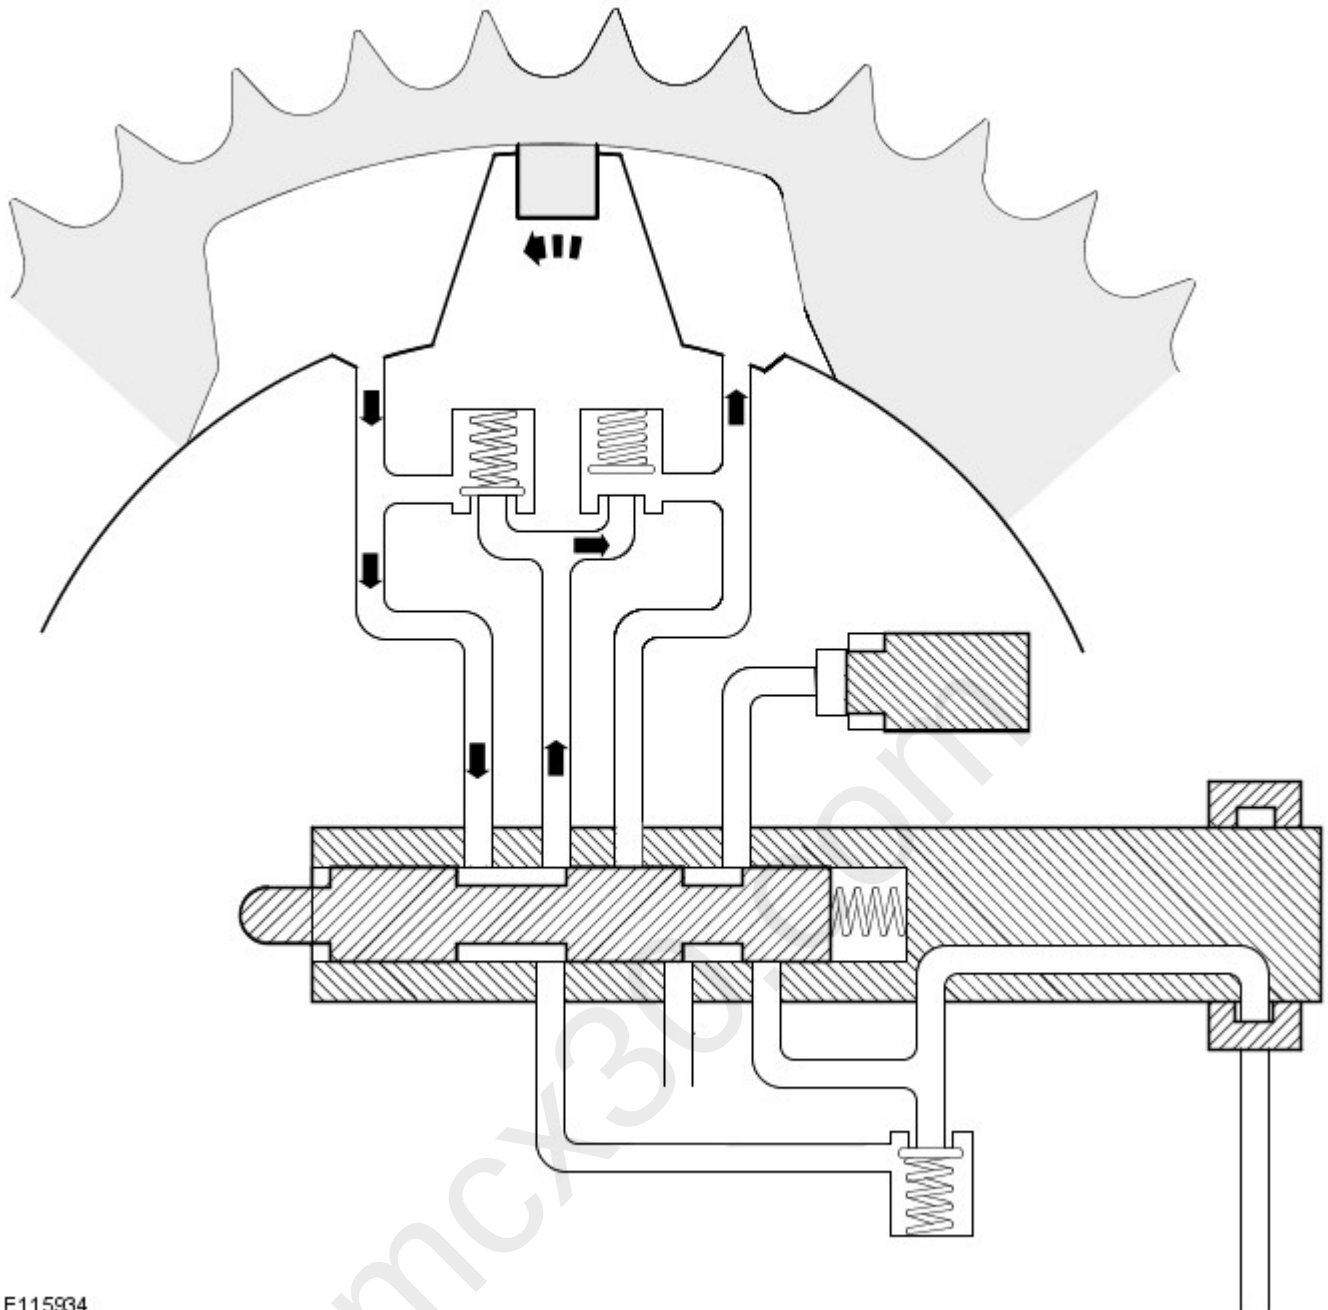


E115934

To retard the camshaft timing, the [ECM](#) adjusts the signal to the [VCT](#) solenoid to move the spool valve to close the retard chamber oil passage and connect the advance chamber oil passage to the inlet oil.

Each momentary decrease of the torque acting on the camshaft causes oil to transfer from the advance chamber, through the spool valve and the retard check valve to the retard chamber, and so retard the camshaft timing.

Camshaft Profile Switching

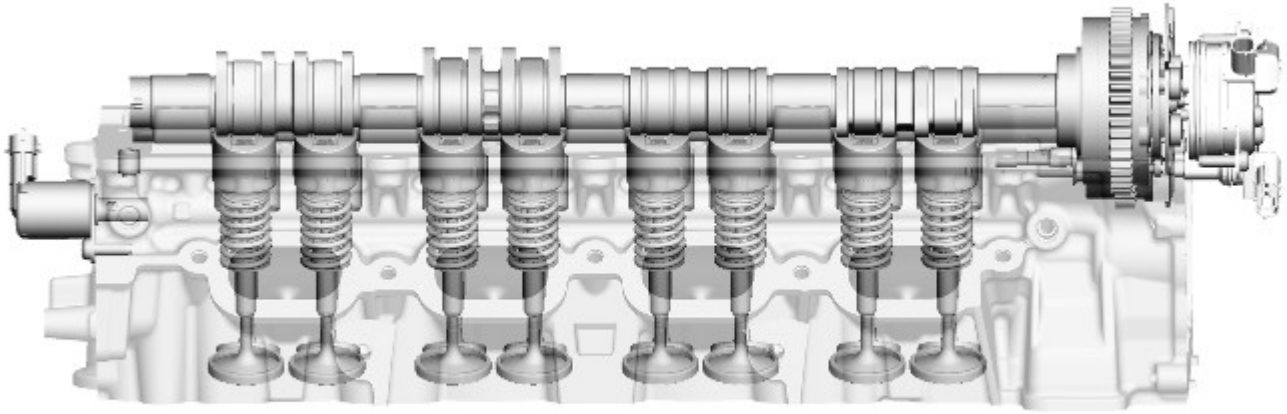


E106735

The CPS (camshaft profile switching) system switches the intake valves between two cam profiles which have different lift and period. The low lift profile improves driveability and emissions at lower engine speeds. The high lift profile improves power and torque output at higher engine speeds.

The intake camshafts have three lobes for each valve. The two outer lobes have identical profiles that produce the high lift of 10.53 mm (0.415 in.). The central lobe produces the low lift of 5.50 mm (0.217 in.). Switching between cam profiles is performed by a switchable tappet on each intake valve. The switchable tappets are operated by engine oil controlled by a CPS solenoid on each cylinder head. Operation of the CPS solenoids is controlled by the [ECM](#).

Camshaft Profile Switching Solenoids

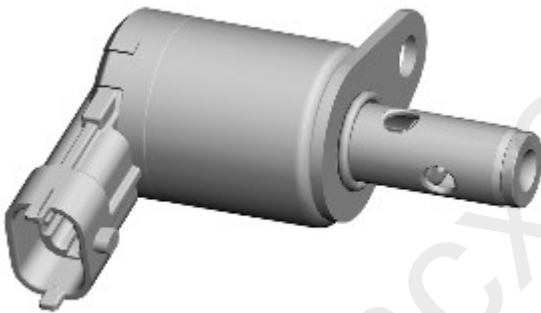


E115935

The CPS solenoids control the supply of engine oil pressure to the locking pins in the switchable tappets, to switch the tappets between the two cam profiles.

A CPS solenoid is installed on the rear of each cylinder block. Each CPS solenoid has a pintle installed in a sleeve, which incorporates oil inlet and outlet holes. The sleeve is installed at the junction of oil galleries in the cylinder head, with the oil inlet and outlet holes aligned with the galleries. Movement of the pintle in the sleeve controls a connection between the oil galleries. When the CPS solenoid is energized, the pintle connects an oil supply gallery to the gallery along the outboard side of the switchable tappets. When the CPS solenoid is de-energized, the oil gallery along the outboard side of the switchable tappets is connected to drain.

The CPS solenoids receive a fused battery supply from the main relay. The [ECM](#) switches a ground connection to operate the solenoids.

Switchable Tappets

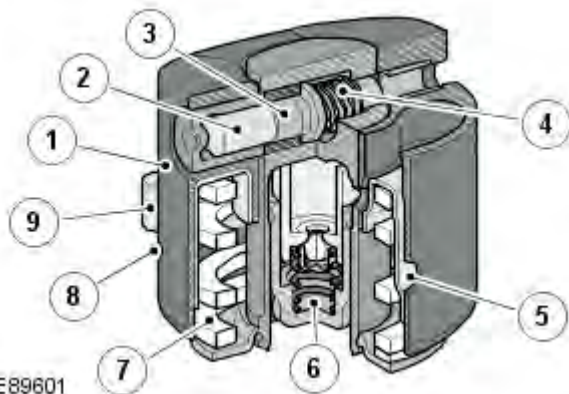

E89601


Item	Part Number	Description
1	-	Outer tappet
2	-	Outer locking pin
3	-	Inner locking pin
4	-	Return spring
5	-	Lash adjuster oil inlet
6	-	Lash adjuster
7	-	Lost motion spring
8	-	CPS oil inlet
9	-	Anti-rotation lug

The switchable tappets are installed on the intake valves, in bores in the cylinder heads. The cylinder heads incorporate engine oil galleries along the inboard and outboard sides of the bores. The inboard oil galleries (between the tappets and the spark plug/fuel injector bores) supply an oil feed to the locking pins in the switchable tappets. The outboard oil galleries (over the inlet ports) supply an oil feed to the hydraulic lash adjusters in the switchable tappets.



Each switchable tappet consists of inner and outer tappets, which can operate independently or be locked together by locking pins. A hydraulic lash adjuster on the bottom of the inner tappet locates on the intake valve stem.

In low lift, the intake valve lift is controlled by the inner tappets, which run on the center lobes of the intake camshafts. The outer tappets run on the outer lobes of the intake camshafts, and move up and down the inner tappets without affecting the valve lift. The lost motion springs keep the outer tappets in contact with the outer lobes. Movement of the inner tappets is transferred to the intake valves through the hydraulic lash adjusters.

In high lift, engine oil is supplied to the locking pins, which lock the outer tappets to the inner tappets. Intake valve lift is controlled by the outer tappets, which run on the outer lobes of the intake camshafts. Movement of the outer tappets is transferred to the intake valves through the locking pins, the inner tappets and the hydraulic lash adjusters.

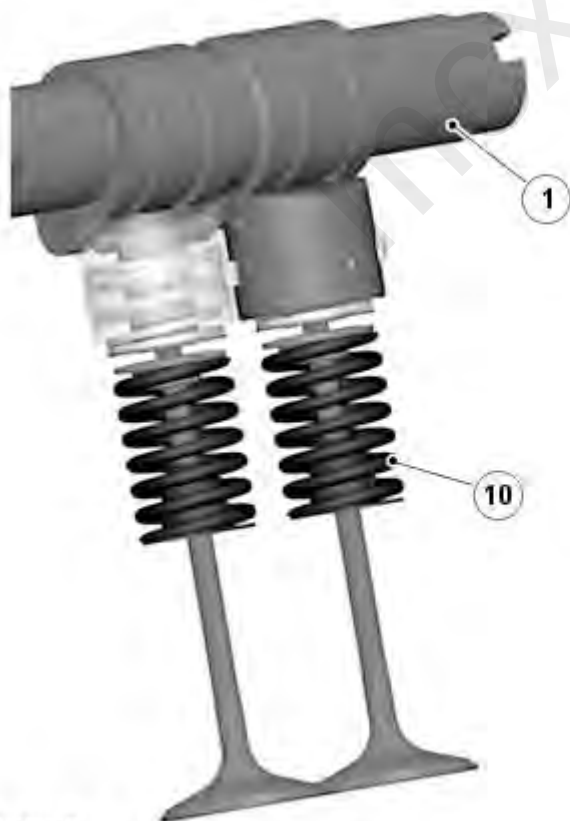

E108445

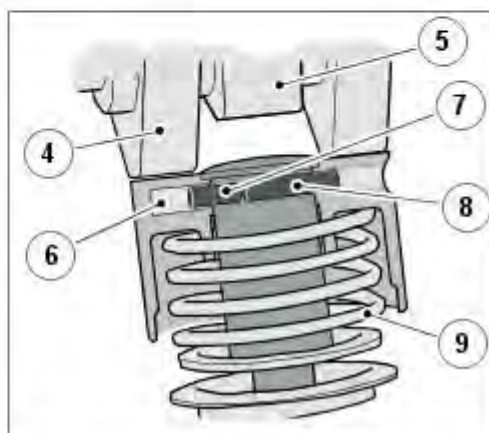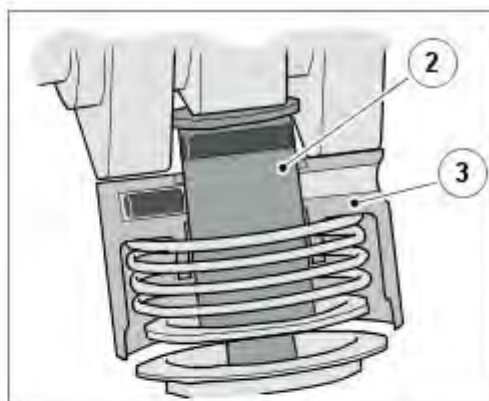

Item	Part Number	Description
------	-------------	-------------

1	-	Intake camshaft
2	-	Inner tappet
3	-	Outer tappet
4	-	Outer cam profile (high lift)
5	-	Inner cam profile (low lift)
6	-	Locking pin oil pressure inlet
7	-	Outer locking pin
8	-	Inner locking pin
9	-	Outer tappet lost motion spring
10	-	Valve spring

Camshaft Profile Switching Operation


The switching point is speed and load dependent. This strategy ensures that switching occurs at air flow neutral points in the engine's operation and is imperceptible to the driver.

At engine speeds from idle up to the range of 2825 - 4250 rev/min (depending on engine load), the CPS solenoids are de-energized and the switchable tappets are set to low lift. At engine speeds above the 2825 - 4250 rev/min range, the CPS solenoids are energized by the [ECM](#) and the switchable tappets are set to high lift. There is a 200 rev/min hysteresis when switching from high lift to low lift with decreasing engine speed. Switching between lift settings occurs within one revolution of the camshaft.

Switching is only enabled at engine oil temperatures of 20 °C (68 °F) and above. At oil temperatures below 20 °C (68 °F), CPS operation is disabled and the switchable tappets remain in the low lift setting. CPS operation is also disabled if a CPS solenoid fails. When CPS operation is disabled, engine speed is limited to 5000 rev/min.

The [ECM](#) can diagnose the operation of the CPS solenoids and store fault related [DTC \(diagnostic trouble code\)](#) if it detects a failure.

LUBRICATION SYSTEM

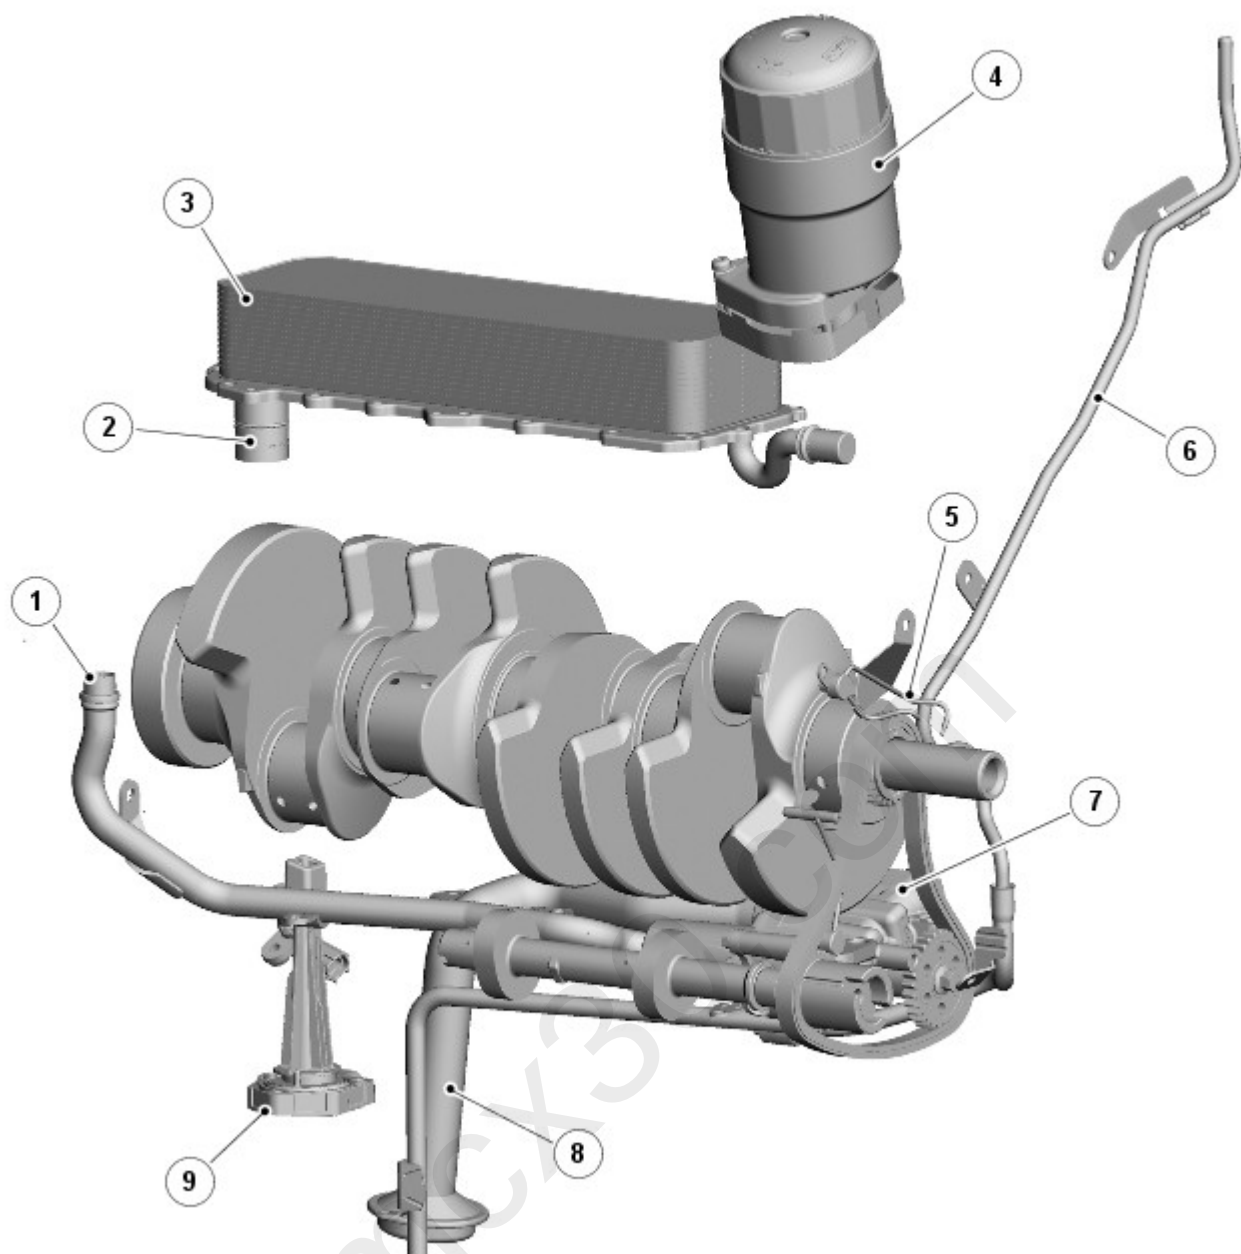

E118619

Item	Part Number	Description
1	-	Oil pump outlet tube
2	-	Anti-drain valve
3	-	Oil cooler
4	-	Oil filter
5	-	Timing chain lubrication jet (2 off)
6	-	Oil evacuation tube
7	-	Oil pump
8	-	Oil pick-up
9	-	Oil temperature and level sensor

The oil pump is attached to the underside of the windage tray. The input shaft of the oil pump is driven from the front of the crankshaft, by the auxiliary chain, at 0.87 engine speed.

The oil pump draws oil from the sump through a centrally mounted pick-up pipe. The oil is pressurized and pumped through an output tube to the cylinder block. After passing through an anti-drain valve and a plate type oil cooler, the oil is filtered by a replaceable cartridge installed on the front of the [RH](#) cylinder head.

The output from the oil filter is distributed through oil galleries in the cylinder heads and cylinder block. All moving parts are lubricated by pressure or splash oil. Pressurized oil is also provided for the [VCT](#) system, the CPS system, the timing chain tensioners and the timing chain lubrication jets.

The oil returns to the oil pan under gravity. Large drain holes through the cylinder heads and cylinder block ensure the rapid return of the oil to the sump. System replenishment is through the oil filler cap on the [LH](#) cylinder head cover.

An oil evacuation tube is installed to allow oil to be drawn from the sump. The upper end of the oil evacuation tube is located under the oil filler cap.

An oil drain plug is installed in the [RH](#) side of the sump.

Oil Pump Nominal Operating Pressures

Engine Speed, rev / min	Temperature, °C (°F)	Pressure, bar (lbf/in ²)
Idle	20 (68)	2.0 (29.0)
1500	20 (68)	6.0 (87.0)
3000	40 (104)	6.2 (90.0)
3000	110 (230)	5.0 (72.5)
3000	130 (266)	4.0 (58.0)

Oil Level Monitoring

Oil level monitoring is provided by an oil level and temperature sensor that measures the oil level in the sump. The oil level can be displayed in the message center of the instrument cluster.

Oil Level and Temperature Sensor



E115936

The oil level and temperature sensor supplies the [ECM](#) with a signal containing the level and temperature of the oil in the sump. The oil level and temperature sensor is secured to the bottom of the sump with three screws and sealed with a gasket.

The oil level and temperature sensor sends an ultrasonic pulse vertically upward and measures the time taken for the pulse to be reflected back from the top surface of the oil. This time is compared with the time taken for an ultrasonic pulse to travel a reference distance within the oil level and temperature sensor to determine the oil level. The oil level reading is combined with the oil temperature reading and transmitted in a [PWM](#) signal to the [ECM](#).

Oil Level and Temperature Sensor Specifications

Feature	Details
Power Source	Battery Voltage
Level Accuracy	±2 mm (±0.08 in.) at temperatures of -30 °C (-22 °F) and above; (±4 mm (±0.16 in.) at temperatures below -30 °C (-22 °F))
Temperature Accuracy	±2 °C (±3.6 °F)
Operating Level Range	116 to 147 mm (4.57 to 5.79 in.)
Operating Temperature Range	-40 to 160 °C (-40 to 320 °F)

Oil Level Check

For additional information, refer to: [Engine Oil Draining and Filling](#) (303-01D Engine - V8 5.0L Petrol, General Procedures).

For accuracy, oil level checks should be performed with the vehicle on level ground when the oil is hot. The vehicle needs to stand for approximately 10 minutes, after the engine is switched off, to allow the oil to drain back into the sump and the oil level to stabilize. The oil level system will not give a reading until the oil level has stabilized.

To check the oil level, make sure that the ignition is on, the engine stopped and the transmission is in P (park). Access the vehicle information and settings menu, then select **Oil Level Display** from the **Service Menu**. An **Engine Oil Level** sight glass will be displayed in the message center. The current oil level will be displayed in the sight glass. One of the following messages will also be displayed:

- If the oil level is within acceptable limits, the message **Level OK** is displayed.
- If the oil level is less than acceptable, a message advising how much oil to add is displayed e.g. **Add 1 Litre**, or **Add 1 Quart**, depending on the market.
- If the message **Overfilled** is displayed, the oil level must be reduced to within acceptable limits before starting the engine again.
- If the message **Not available** is displayed, the oil level is still stabilizing. Wait 10 minutes and then recheck level.



E121582

Engine - V8 5.0L Petrol - Engine

Diagnosis and Testing

For additional information, refer to Diagnosis and Testing, Engine - 5.0L

REFER to: [Engine - V8 5.0L Petrol](#) (303-00 Engine System - General Information, Diagnosis and Testing).

mcx30.com

Engine - V8 5.0L Petrol - Engine Oil Draining and Filling

General Procedures

Draining

 


WARNING: The spilling of hot engine oil is unavoidable during this procedure, care must be taken to prevent scalding.



CAUTION: Correct installation of the oil filler cap can be obtained by tightening the cap until hard stop.

- **NOTE:** Clean the components general area prior to dismantling.



1. **CAUTION:** Make sure the engine is warm.

Start the engine and allow to run for 10 minutes, stop the engine.


2.



3. Refer to: [Engine Cover - V8 5.0L Petrol](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

4.

- Loosen the element cover 4 complete turns to allow engine oil to drain from the filter cover.
- Make sure that the O-ring seal is exposed.

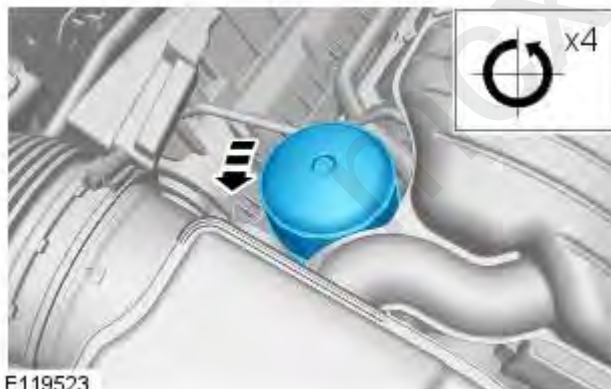

5. **NOTE:** Allow 10 minutes for the engine oil to drain from the oil filter housing.




WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.



8. Refer to: [Engine Undershield](#) (501-02 Front End Body Panels, Removal and Installation).

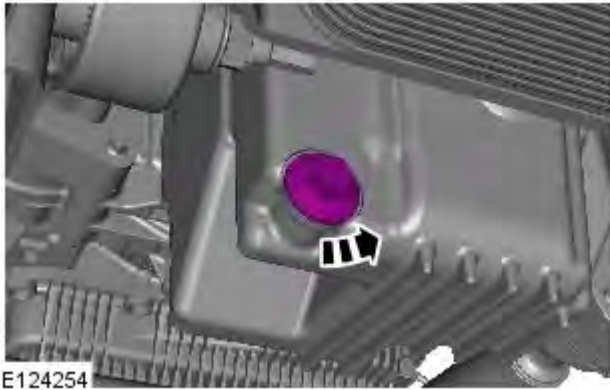

9. **9. CAUTIONS:**




Be prepared to collect escaping oil.



Allow at least 10 minutes for the engine oil to drain.

- NOTE: Discard the sealing washer.

Filling

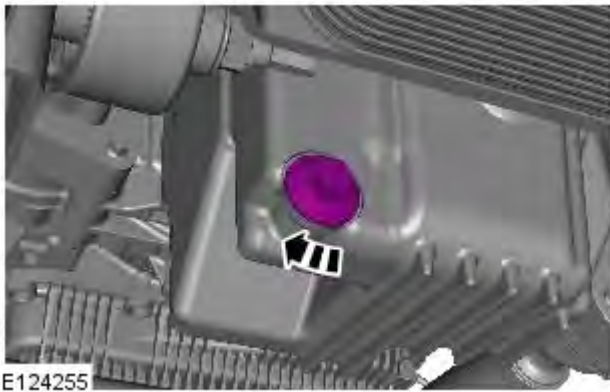

1. **10. ⚠ CAUTION:** Make sure that the area around the component is clean and free of foreign material.


- NOTE: Install a new sealing washer.

Torque: 24 Nm

2. Refer to: [Engine Undershield](#) (501-02 Front End Body Panels, Removal and Installation).

3. **12. NOTE:** Install new O-ring seals.

Lubricate the oil filter element O-ring seal with clean engine oil.

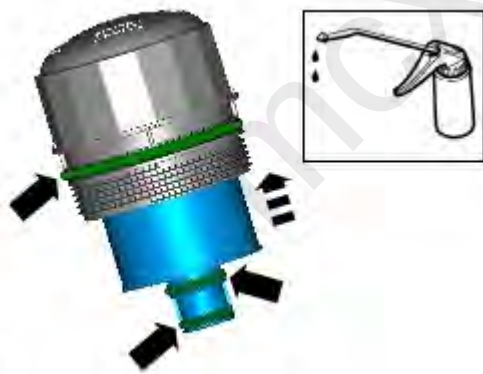

4. **13. ⚠ CAUTION:** Tighten the component finger tight first.

- Torque: 25 Nm

5. **14.**  **CAUTION:** Make sure that the vehicle is left for 5 minutes from filling with oil and that the engine oil level is reading at least minimum (by following Steps 9-15), before starting the engine.

- Fill the engine with oil - for filling values on vehicles without supercharger:

Refer to: [Specifications](#) (303-01D Engine - V8 5.0L Petrol, Specifications).

- Fill the engine with oil - for filling values on vehicles with supercharger:

Refer to: [Specifications](#) (303-01D Engine - V8 5.0L Petrol, Specifications).

- Clean any residual engine oil from the oil filler cap area.

6.



7. **16.**  **CAUTION:** Make sure that the vehicle has been left for 5 minutes from filling with oil.

Follow the Steps 9-15 before starting the engine.

8.

- Start the engine and allow to run for 10 minutes, stop the engine.
- Check for leaks.

9. **18.** **CAUTIONS:**



Make sure that the selector lever and the gearshift mechanism are in the park (P) position.



Make sure that the hood is open.

- Turn the ignition on.

10.

- Press the right-hand directional button to access the instrument cluster menu.



E123926

11.

- Press the right-hand OK button.



E123925

12.

- Press the right-hand directional button to access the Oil Level Display.



E123927

13.

- Press the right-hand OK button and follow the instructions.



E123928



E121008

14.

- Press the cruise control cancel button twice within 2 seconds.



15.

- The message center display will revert to the normal display in the trip computer.
- Press the right-hand OK button and follow the instructions.
- Check that the oil level display shows an oil level reading.
- Only after having started and run the engine for 10 minutes (as indicated in Step 8), switch off the engine, then stabilizing for 10 minutes, take a reading from the oil level display and, if necessary top up with engine oil.



E123929

16. **25. NOTE:** If instructed to follow Steps 9-15 in a previous step, return to Step 8 and continue the procedure.

Turn the ignition off.

17. Allow 10 minutes for the engine oil level to stabilize if there has been additional oil top up.



E121008

18. **27. NOTE:** The following steps are to update the average oil level value.

- Turn the ignition on.
- Press and hold the cruise control cancel button for more than 2 seconds.

19.

- The message center display will revert to the normal display in the trip computer.

20. Turn the ignition off.

21. Turn the ignition on.

22.

- Press the right-hand directional button to access the instrument cluster menu.



E123926



E123925

23.

- Press the right-hand OK button.



24.

- Press the right-hand directional button to access the Oil Level Display.



E123927

25.

- Press the right-hand OK button and follow the instructions.
- Make sure that the average oil level value has now been updated.



E123929

26. Refer to: [Engine Cover - V8 5.0L Petrol](#) (501-05 Interior Trim and Ornamantation, Removal and Installation).

Engine - V8 5.0L Petrol - Engine Oil Vacuum Draining and Filling

General Procedures

Special Tool(s)

 E129630	303-1484 Vacuum Pump, Oil Drain
 E129631	303-1484-01 Adapter for 303-1484

Draining



WARNING: The spilling of hot engine oil is unavoidable during this procedure, care must be taken to prevent scalding.



CAUTION: Correct installation of the oil filler cap can be obtained by tightening the cap until hard stop.

- NOTE: Make sure that the vehicle is parked on level ground.
- NOTE: Clean the components general area prior to dismantling.

1.

- Start the engine and allow to run for 10 minutes, stop the engine.




2.  **CAUTION:** Allow 10 minutes from turning the engine off before starting oil extraction.

3. Refer to: [Engine Cover - V8 5.0L Petrol](#) (501-05 Interior Trim and Ornamantation, Removal and Installation).



4.

- Loosen the element cover 4 complete turns to allow engine oil to drain from the filter cover.

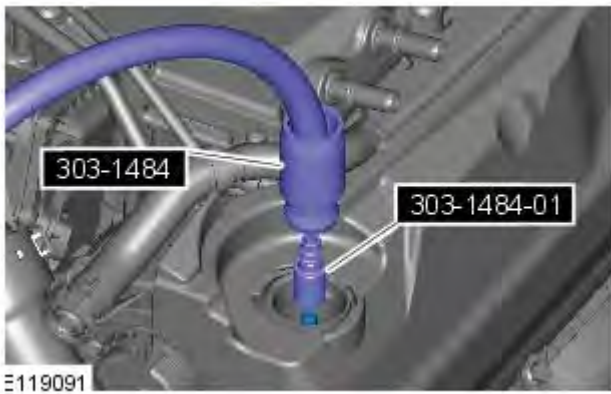

5.

- Using the oil vacuum pump drain the oil out through the oil extraction tube.


Special Tool(s): [303-1484](#), [303-1484-01](#)

6.

- Remove the oil vacuum pump.



7.

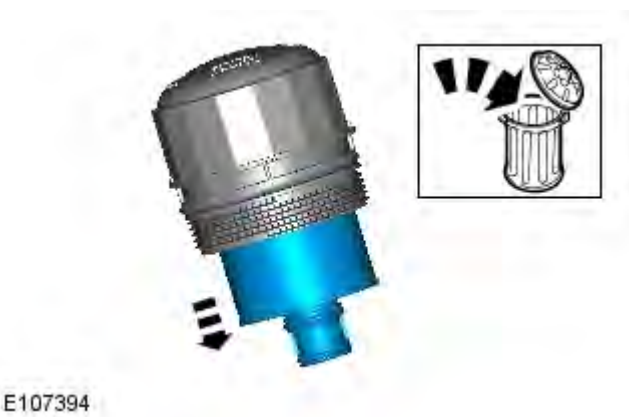


8. **8. NOTE:** Discard the O-ring seals.

Filling

1. **9.** NOTE: Install new O-ring seals.

Lubricate the oil filter element O-ring seal with clean engine oil.

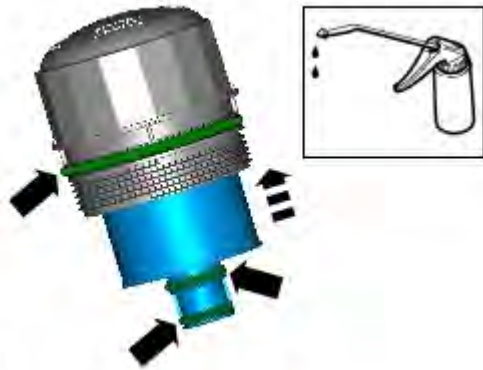

E107727



E119510

2. **10.**  CAUTION: Tighten the component finger tight first.

- Torque: 25 Nm

3. **11.**  CAUTION: Make sure that the vehicle is left for 5 minutes from filling with oil and that the engine oil level is reading at least minimum (by following Steps 7-13), before starting the engine.

- Fill the engine with oil - for filling values on vehicles without supercharger:

Refer to: [Specifications](#) (303-01D Engine - V8 5.0L Petrol, Specifications).

- Fill the engine with oil - for filling values on vehicles with supercharger:

Refer to: [Specifications](#) (303-01D Engine - V8 5.0L Petrol, Specifications).

- Clean any residual engine oil from the oil filler cap area.

- 4.



E119495

5. **13.**  CAUTION: Make sure that the vehicle has been left for 5 minutes from filling with oil.

Follow the Steps 7-13 before starting the engine.

6.
 - Start the engine and allow to run for 10 minutes, stop the engine.
 - Check for leaks.

7. **15. CAUTIONS:**



Make sure that the selector lever and the gearshift mechanism are in the park (P) position.



Make sure that the hood is open.

- Turn the ignition on.

8.

- Press the right-hand directional button to access the instrument cluster menu.





E123925

9.

- Press the right-hand OK button.



10.

- Press the right-hand directional button to access the Oil Level Display.



E123927

11.


- Press the right-hand OK button and follow the instructions.



E123928

12.

- Press the cruise control cancel button twice within 2 seconds.

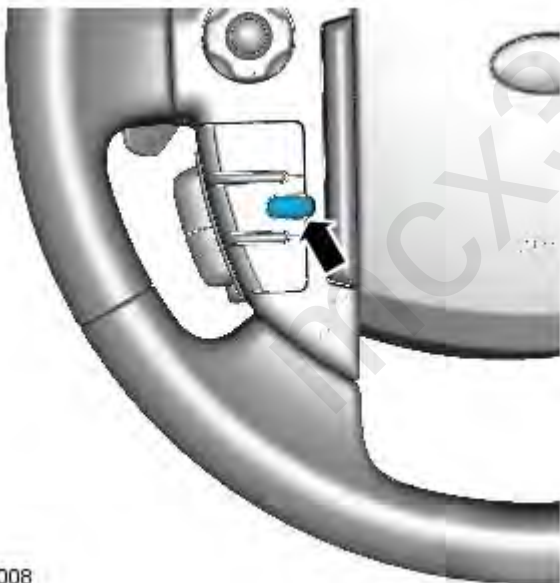

E121008



E123929

13.

- The message center display will revert to the normal display in the trip computer.
- Press the right-hand OK button and follow the instructions.
- Check that the oil level display shows an oil level reading.
- Only after having started and run the engine for 10 minutes (as indicated in Step 6), switch off the engine, then stabilizing for 10 minutes, take a reading from the oil level display and, if necessary top up with engine oil.

14. **22. NOTE:** If instructed to follow Steps 7-13 in a previous step, return to Step 6 and continue the procedure.

Turn the ignition off.

15. Allow 10 minutes for the engine oil level to stabilize if there has been additional oil top up.



E121008

16. **24. NOTE:** The following steps are to update the average oil level value.

- Turn the ignition on.
- Press and hold the cruise control cancel button for more than 2 seconds.

17.

- The message center display will revert to the normal display in the trip computer.

18. Turn the ignition off.

20.

- Press the right-hand directional button to access the instrument cluster menu.



E123926

21.

- Press the right-hand OK button.



E123925

22.

- Press the right-hand directional button to access the Oil Level Display.



E123927

23.

- Press the right-hand OK button and follow the instructions.
- Make sure that the average oil level value has now been updated.



E123929

24. Refer to: [Engine Cover - V8 5.0L Petrol](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Engine - V8 5.0L Petrol - Camshaft LH

Removal and Installation

Removal

CAUTION: Make sure that the orientation and code on the top of the camshaft bearing caps is noted (along with the bank - A or B), so that on installation the components are installed to their original position. Failure to follow this instruction may cause damage to the vehicle.

- NOTE: Removal steps in this procedure may contain installation details.
- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.


1. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2. **WARNING:** Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3. Refer to: [Timing Drive Components - Assembly Part Number: INA Timing Drive](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

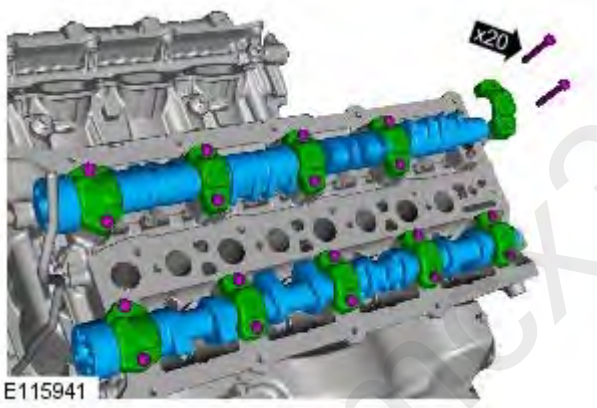


4. **CAUTIONS:**

CAUTION: Rotate the camshafts until all the valves are at their minimum open point.

CAUTION: Evenly and progressively, release the camshaft bearing caps.

- NOTE: Remove the camshaft bearing caps. Note: their position, orientation and markings. Each is marked with its position (number) and an orientation (arrow).

Installation

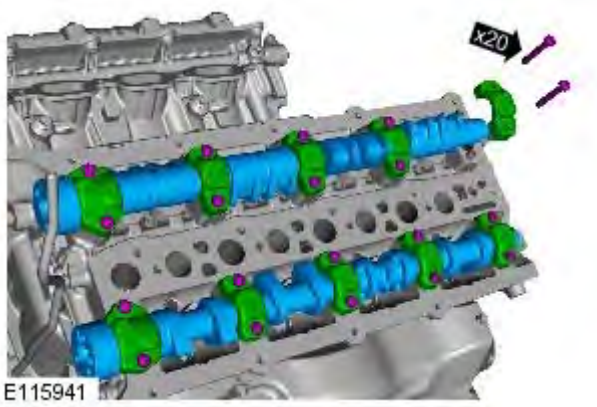

1. **CAUTIONS:**


CAUTION: Prior to installing the camshafts, position the crankshaft 45 degrees ATDC cylinder 1A to prevent valve/piston collision.

CAUTION: Make sure that the camshafts and camshaft bearing caps are installed in their original locations.

CAUTION: Evenly and progressively install and tighten the camshaft bearing caps.

- NOTE: Lubricate the camshafts and the camshaft bearing caps with EP90 oil (or 75/90 viscosity oil will suffice) prior to installation.

Torque: 3 Nm

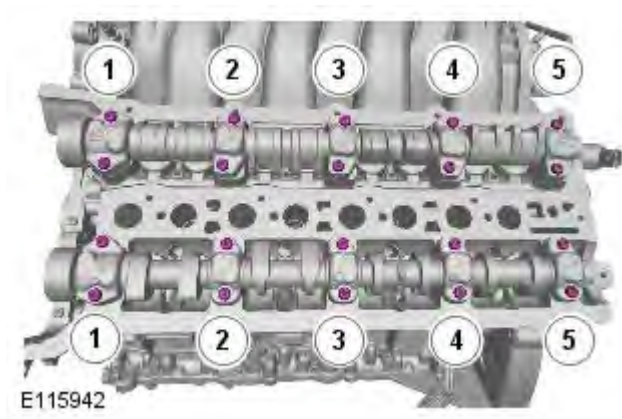

2. **2. NOTE:** Tighten the bolts in the indicated sequence.

Torque: 12 Nm

3. **3. ⚠ CAUTION:** Only rotate the crankshaft clockwise.

Rotate the crankshaft until the camshaft lobe on the valve being checked is 180 degrees from the maximum opening position.

4. **4. NOTE:** If the valve clearance is incorrect, continue to the next step. If the valve clearance is correct, continue to step 8.

• **NOTE:** On vehicles without supercharger the inlet camshaft valve clearances cannot be checked.

Using feeler gauge check the gap between the tappet and the camshaft lobe and check against specifications table.

5. **5. CAUTIONS:**



Do not use a magnet to remove the tappet.



Use the following formula to calculate the required bucket thickness. Original thickness + measured clearance - desired clearance = required bucket thickness.

Remove the tappet and measure the thickness.

6. **6. NOTE:** If a new tappet is installed then go back to step 1 of the install procedure.

Install a new tappet if required.

7. Using feeler gauge check the gap between the tappet and the camshaft lobe and check against specifications table.

8. Refer to: [Timing Drive Components - Assembly Part Number: INA Timing Drive](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

9. Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

Engine - V8 5.0L Petrol - Camshaft RH

Removal and Installation

Removal

CAUTION: Make sure that the orientation and code on the top of the camshaft bearing caps is noted (along with the bank - A or B), so that on installation the components are installed to their original position. Failure to follow this instruction may cause damage to the vehicle.

- NOTE: Removal steps in this procedure may contain installation details.
- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2. **WARNING:** Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


3. Refer to: [Timing Drive Components - Assembly Part Number: INA Timing Drive](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

4. **CAUTIONS:**


CAUTION: Rotate the camshafts until all the valves are at their minimum open point.

CAUTION: Evenly and progressively, release the camshaft bearing caps.

- NOTE: Remove the camshaft bearing caps. Note: their position, orientation and markings. Each is marked with its position (number) and an orientation (arrow).

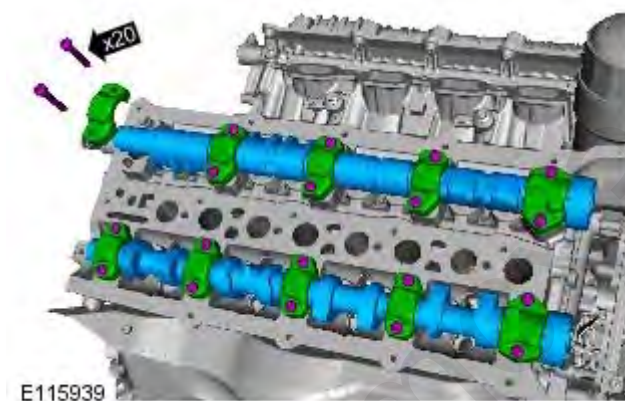

Installation

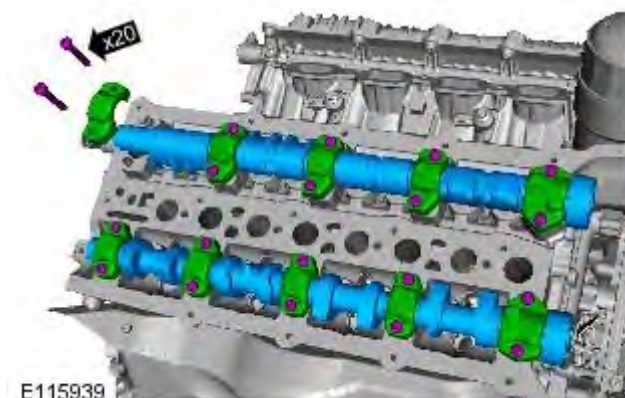

1. **CAUTIONS:**


CAUTION: Prior to installing the camshafts, position the crankshaft 45 degrees ATDC cylinder 1A to prevent valve/piston collision.

CAUTION: Make sure that the camshafts and camshaft bearing caps are installed in their original locations.

CAUTION: Evenly and progressively install and tighten the camshaft bearing caps.

- NOTE: Lubricate the camshafts and the camshaft bearing caps with EP90 oil (or 75/90 viscosity oil will suffice) prior to installation.

Torque: 3 Nm

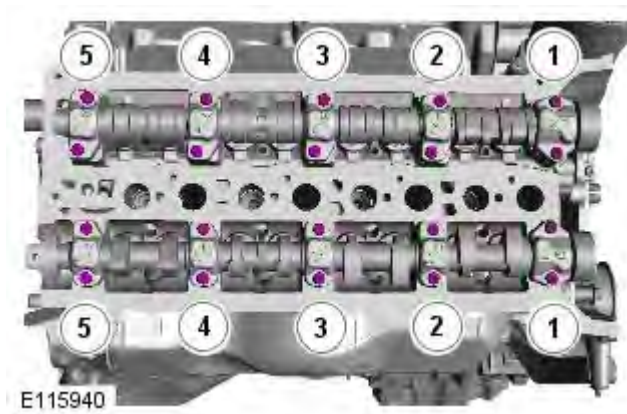

2. **2. NOTE:** Tighten the bolts in the indicated sequence.

Torque: 12 Nm

3. **3. ⚠ CAUTION:** Only rotate the crankshaft clockwise.

Rotate the crankshaft until the camshaft lobe on the valve being checked is 180 degrees from the maximum opening position.

4. **4. NOTE:** If the valve clearance is incorrect, continue to the next step. If the valve clearance is correct, continue to step 8.

• **NOTE:** On vehicles without supercharger the inlet camshaft valve clearances cannot be checked.

Using feeler gauge check the gap between the tappet and the camshaft lobe and check against specifications table.

5. **5. CAUTIONS:**



Use the following formula to calculate the required bucket thickness. Original thickness + measured clearance - desired clearance = required bucket thickness.



Do not use a magnet to remove the tappet.

Remove the tappet and measure the thickness.

6. **6. NOTE:** If a new tappet is installed then go back to step 1 of the install procedure.

Install a new tappet if required.

7. Using feeler gauge check the gap between the tappet and the camshaft lobe and check against specifications table.


8. Refer to: [Timing Drive Components - Assembly Part Number: INA Timing Drive](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

9. Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

Engine - V8 5.0L Petrol - Crankshaft Front Seal

Removal and Installation

Special Tool(s)

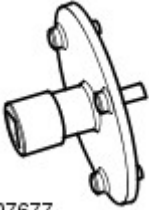 E107677	303-1434 Installer/remover, Front Crankshaft Seal
--	--

Removal


- NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2. Refer to: [Crankshaft Pulley](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

3. *Special Tool(s):* [303-1434](#)
Torque: 26 Nm

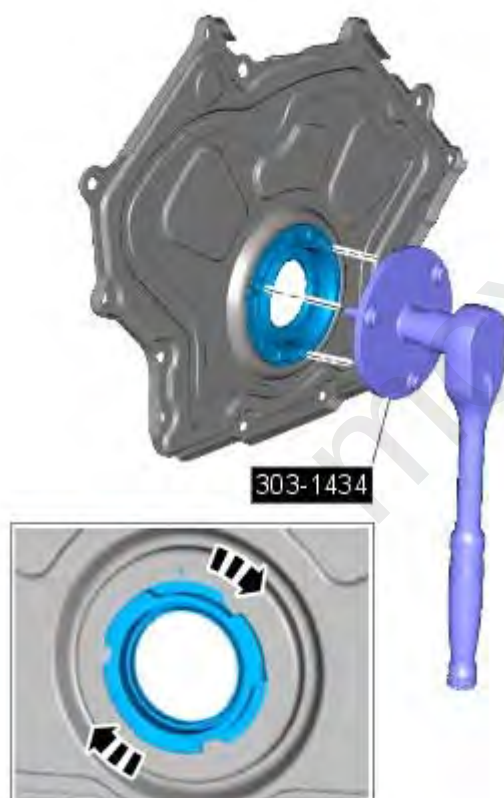

E112056

Installation

1. CAUTIONS:



Do not over tighten the crankshaft front seal. Failure to follow this instruction may result in damage to the vehicle.



Take extra care not to damage the seal.

To install, reverse the removal procedure.

mcx30.com

Engine - V8 5.0L Petrol - Crankshaft Pulley

Removal and Installation

Special Tool(s)

 E115256	303-1437 Crankshaft Damper Remover/Installer
 E115257	303-1438 Crankshaft Damper Bolt Remover/Installer
 E115258	303-1439 Crankshaft Damper Removal Plate
 E115259	303-1440 Crankshaft Damper Removal/Installation Stud
 E115260	303-1441 Crankshaft Damper Remover/Installer Body
 E115266	303-1448 Locking Tool
 E119168	303-1500 Installer, Stretchy Belt

Removal

- NOTE: Removal steps in this procedure may contain installation details.
- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


2.  **WARNING:** Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


3. Refer to: [Radiator](#) (303-03D Engine Cooling - V8 5.0L Petrol, Removal and Installation).


4. Refer to: [Starter Motor](#) (303-06D Starting System - V8 5.0L Petrol, Removal and Installation).

5.

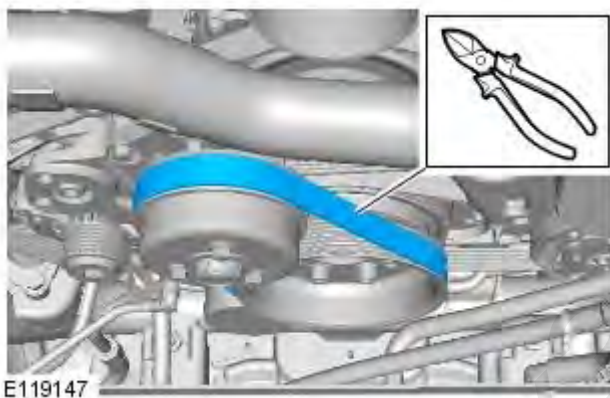

6.

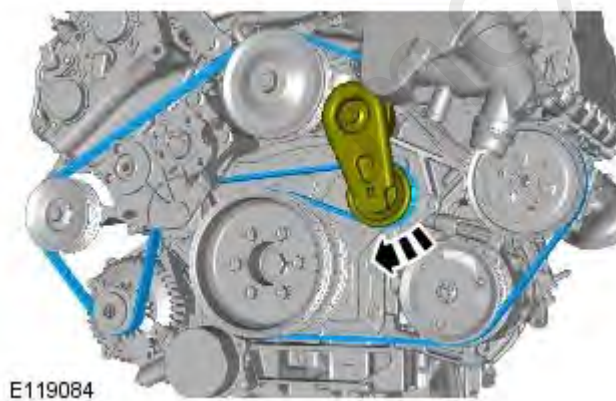

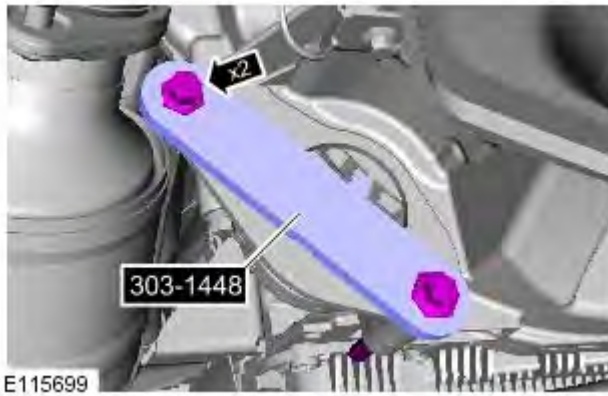

7. Install the special tool.

Special Tool(s): [303-1448](#)





8.  **CAUTION:** Before removing the crankshaft pulley bolt, note the numbers on the bolt head. If the bolt head shows 10.9, the bolt must be removed counter clockwise. If the bolt head shows 12.9, the bolt must be removed clockwise. Failure to follow this instruction may result in damage to the crankshaft.

Note the markings on the crankshaft pulley bolt.




- 9.

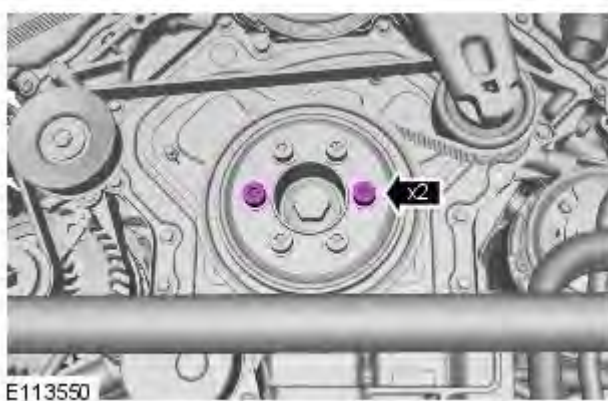

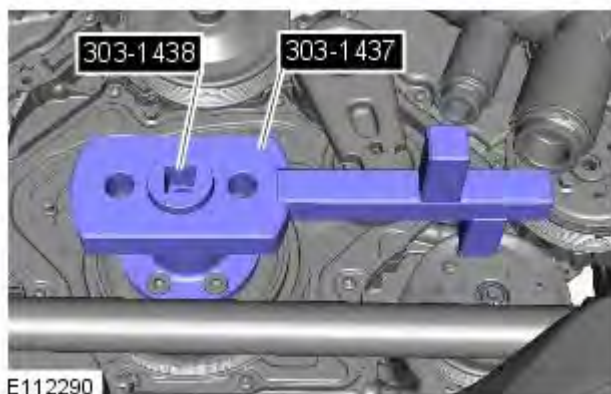


10. Install the special tool.

Special Tool(s): [303-1437](#), [303-1438](#)

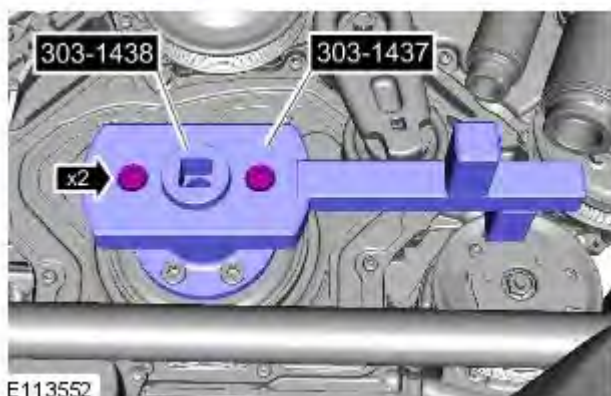


11. Torque: 65 Nm

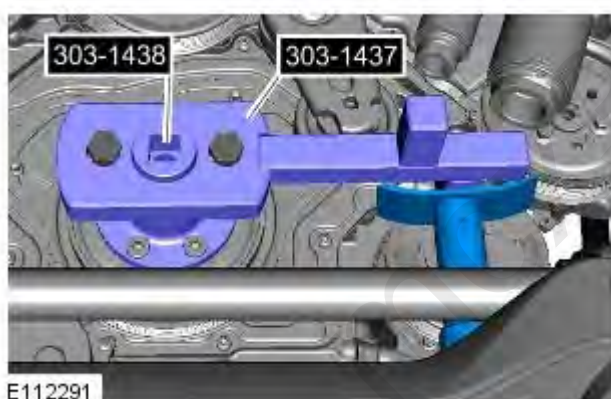

12. **12.** NOTE: The graphic shows the tool position for LH thread only, RH thread will be the opposite.


Using a suitable stand, support the special tool.

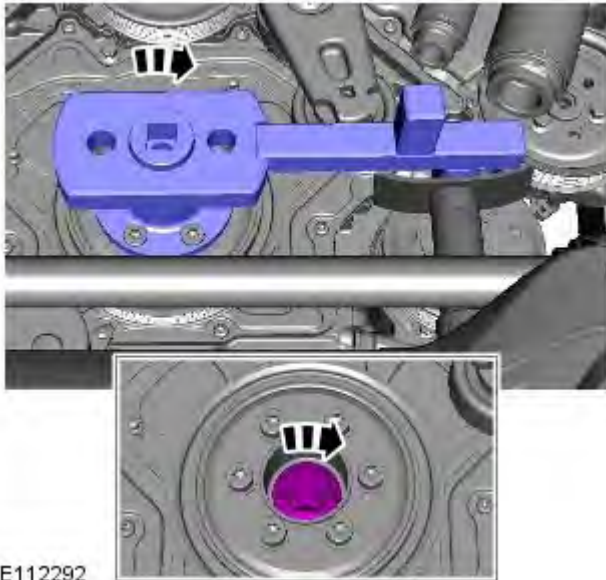

E112292


13. **13.** NOTE: Discard the bolt after removal.

- NOTE: The graphic shows the step for LH thread only, RH thread will be the opposite.

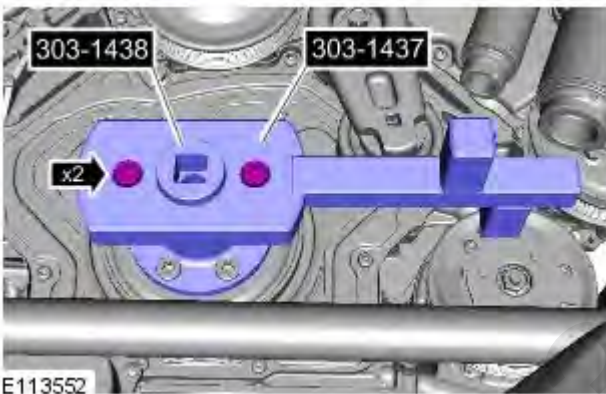

E113552


14.

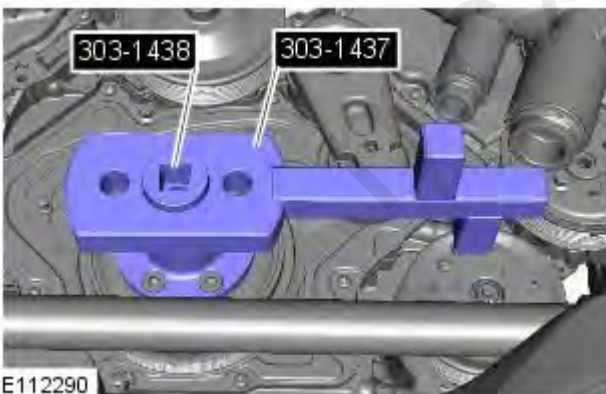

E112290

15. **15.** NOTE: If the crankshaft damper is fitted with an early RH thread crankshaft bolt then the pulley can be removed with a standard puller.

Remove the special tool.

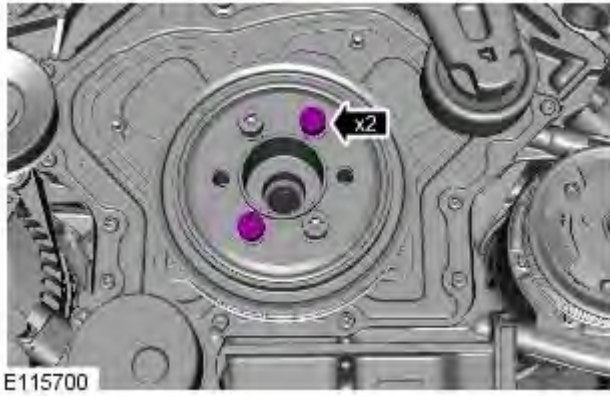


16.




17. Install the special tool.

Special Tool(s): [303-1440](#)

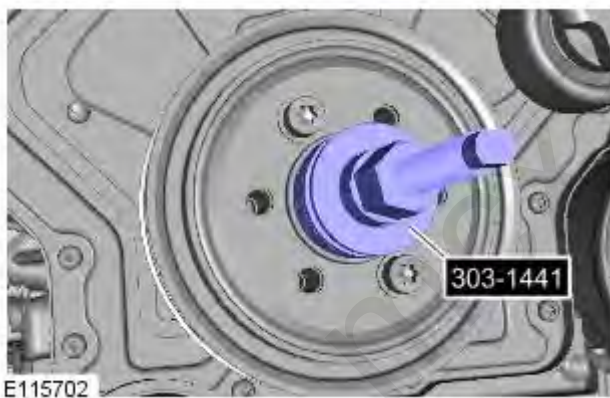


18. Install the special tool.

Special Tool(s): [303-1441](#)

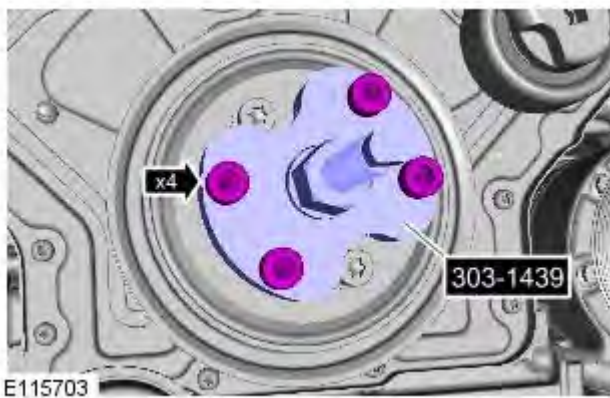

19. Install the special tool.

Special Tool(s): [303-1439](#)

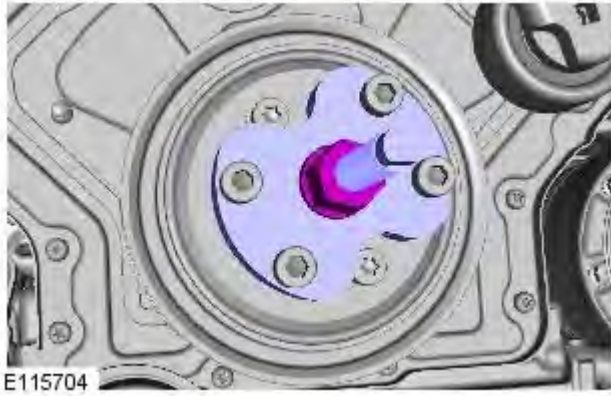

20.



21. **21.**  **CAUTION:** Discard the friction washer after removing the crankshaft pulley.
- **NOTE:** Make sure to clean the threads in the end of the crankshaft and that the crank nose is free of any foreign materials.




22.




23.

Installation

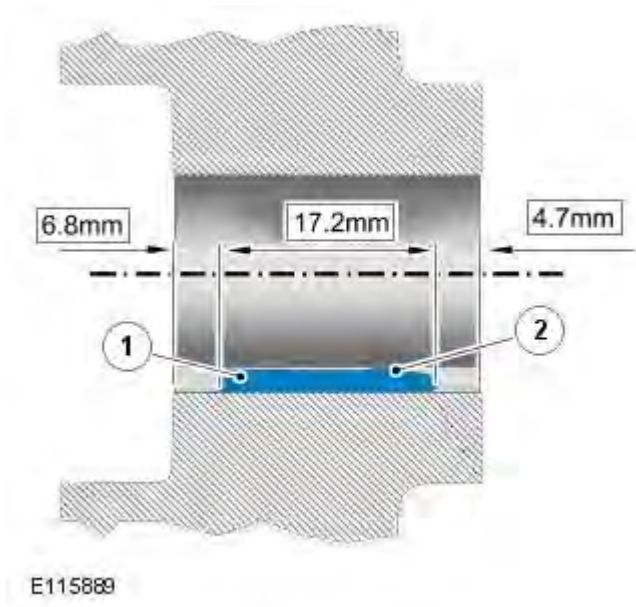

1.
 - Apply RTV sealant to the crankshaft pulley keyway.
 - Make sure that the RTV sealant is applied in a 2mm diameter bead.
 - Make sure that when the RTV sealant is applied that the RTV sealant is level with the top of the keyway.

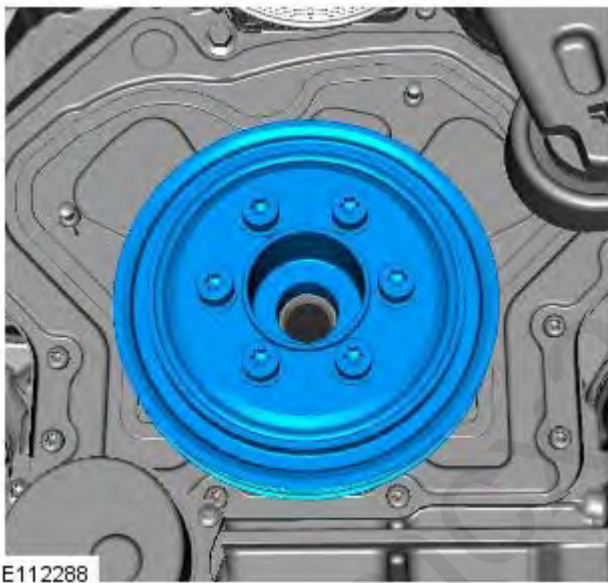

2. **CAUTION:** Install a new friction washer before installing the crankshaft pulley.
 - NOTE: Make sure to clean the threads in the end of the crankshaft and that the crank nose is free of any foreign materials.
 - NOTE: Skip to step 11 for engines fitted with early RH thread crankshaft bolt.




3. Install the special tool.



4. Install the special tool.



5. Install the special tool.

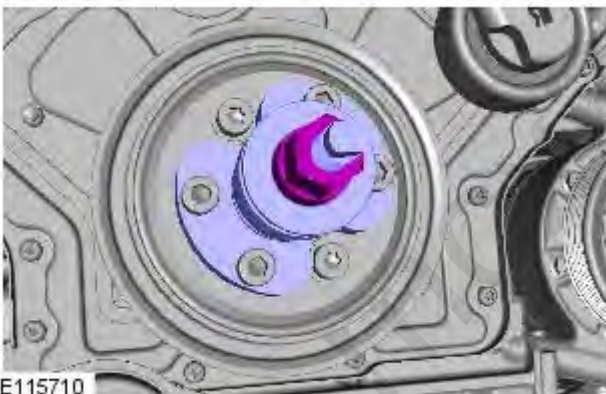

6.  **CAUTION:** Rotate the crankshaft pulley installation tool anti-clockwise until the pulley is fully located, do not over tighten. Failure to do this may result in damage to the components.




7. Remove the special tool.




8.

- Remove the special tool.
- *Torque: 15 Nm*

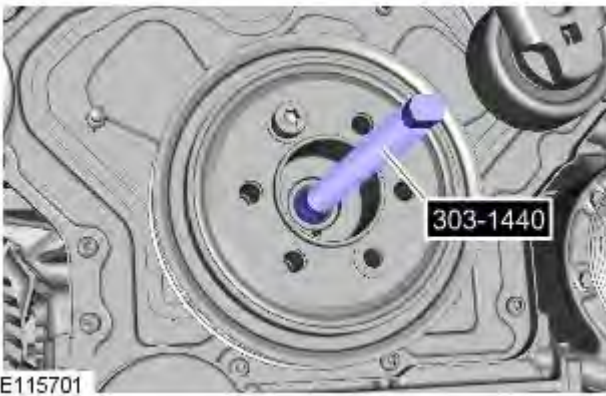


9. Remove the special tool.

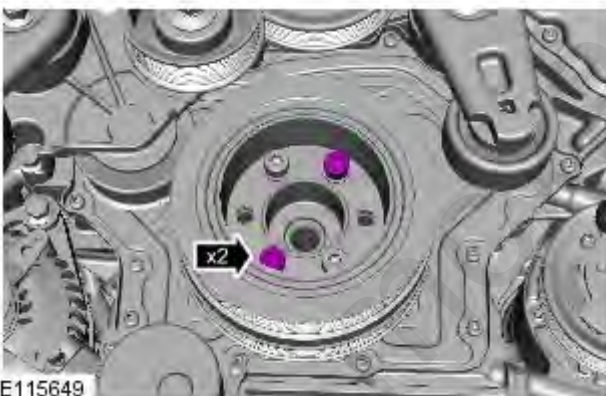


10. **10.**  **WARNING:** Make sure that a new bolt is installed.


- Apply loctite 270 to the thread of the bolts.
- *Torque: 65 Nm*

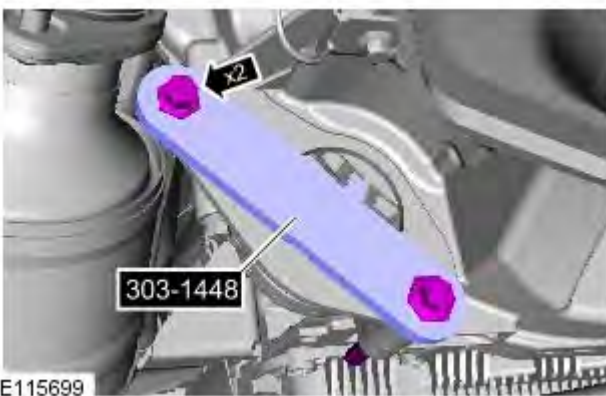


11. Remove the special tool.

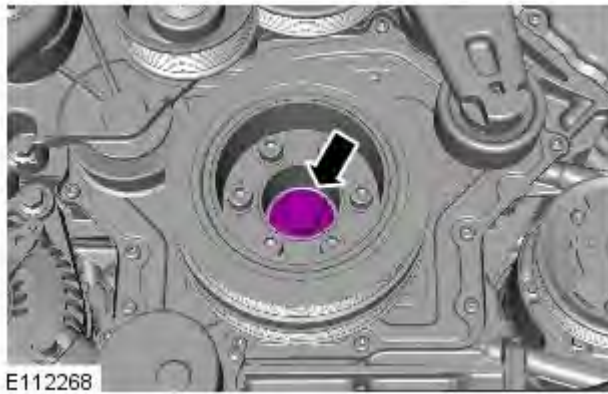


12. **12.**  **WARNING:** Make sure that a new bolt is installed.

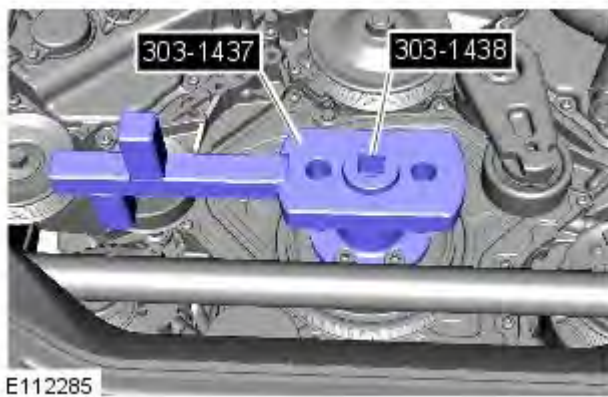


13. Install the special tool.

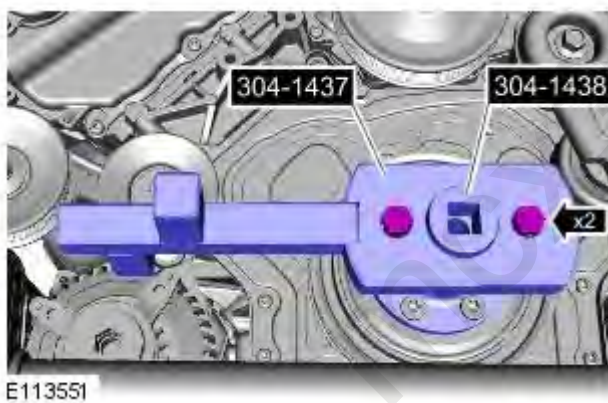


14. Torque: 65 Nm

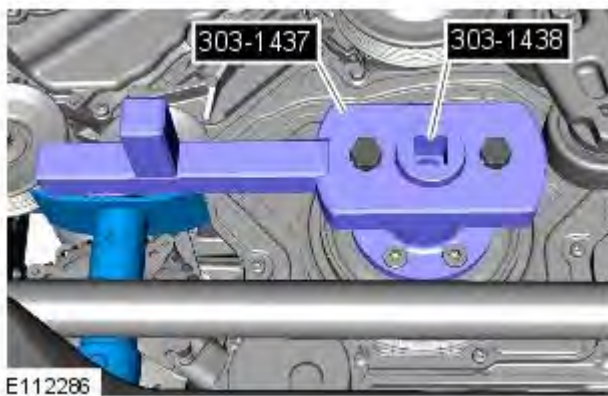


15. **15.** **NOTE:** The graphic shows the tool position for LH thread only, RH thread will be the opposite.
Using a suitable stand, support the special tool.

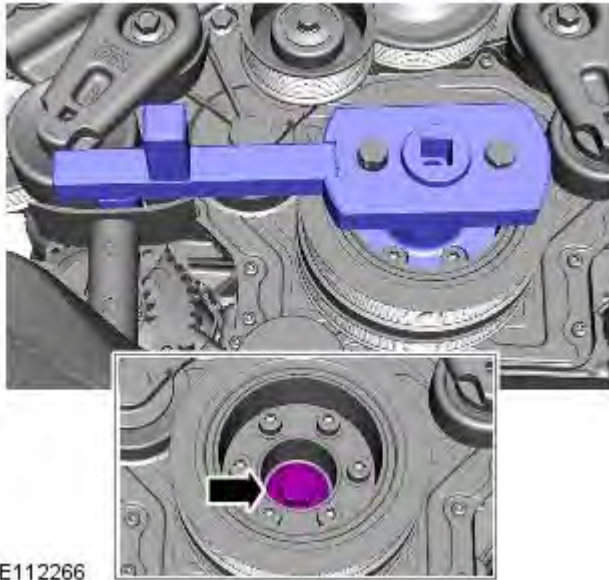


16. Torque: 200 Nm

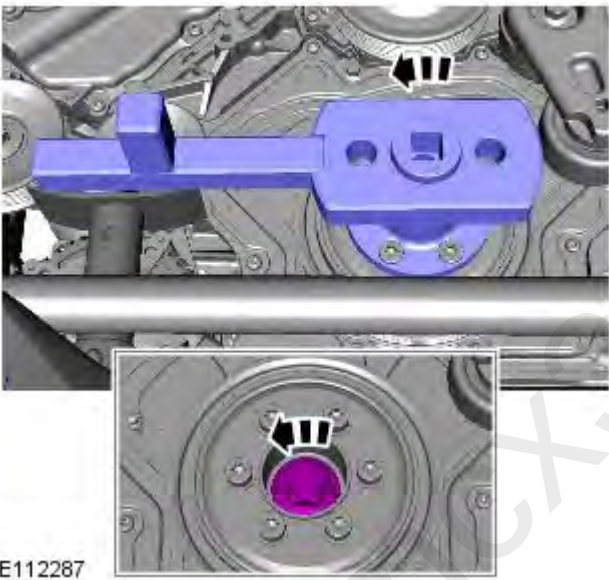


17. **17. NOTE:** The use of a torque multiplier capable of 600Nm will be required.
- Torque: 270°
 - Make sure that the socket is turned through 270 degrees not the torque wrench.

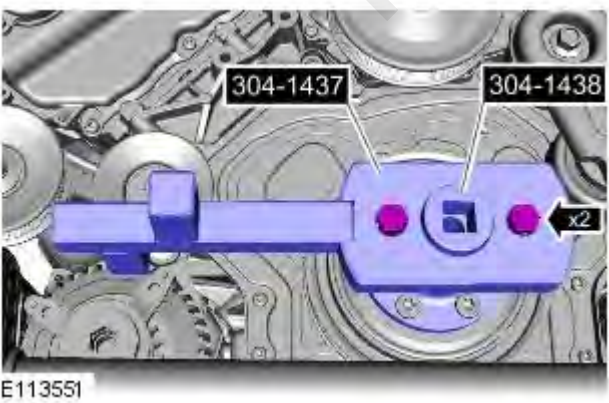

18.

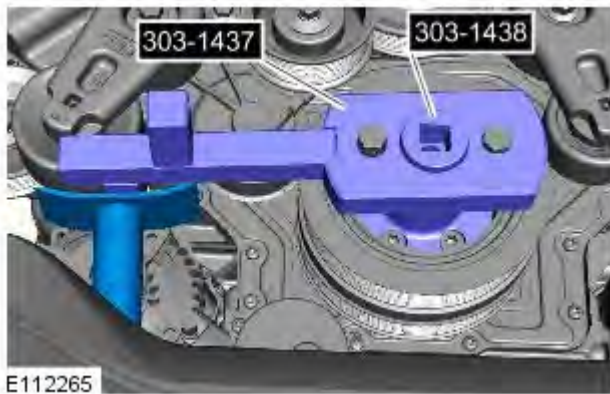


19. Remove the special tool.

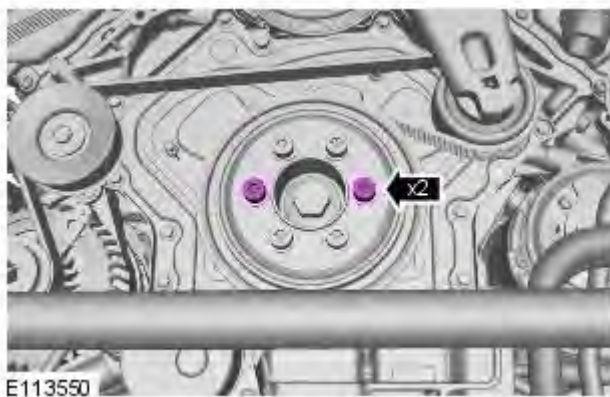

20.


- Apply loctite 270 to the thread of the bolts.
- Torque: 65 Nm

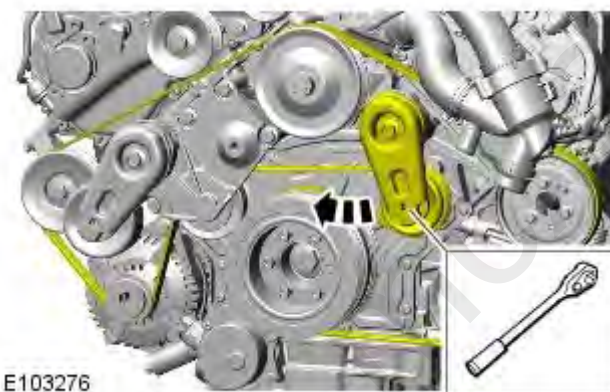

21.



22. Special Tool(s): [303-1500](#)

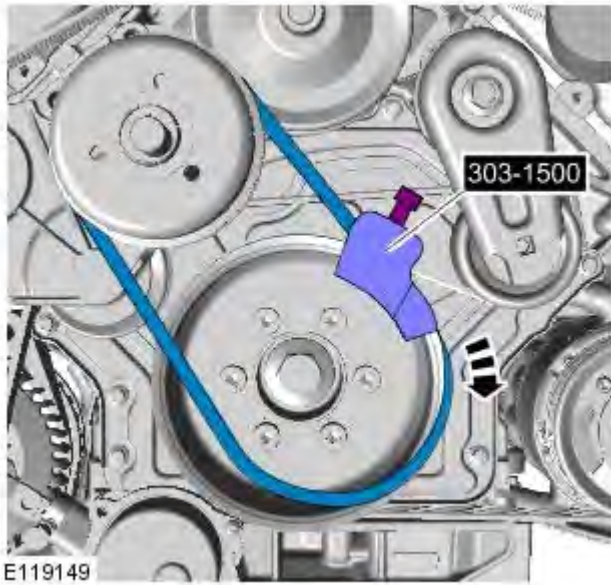

23.

- Install the cooling fan belt.
- Install the tool at the 12 o'clock position.
- Rotate the engine clockwise twice, making sure that the belt is seated on both pulleys correctly.
- Remove the special tool.

24. Refer to: [Starter Motor](#) (303-06D Starting System - V8 5.0L Petrol, Removal and Installation).

25. Refer to: [Radiator](#) (303-03D Engine Cooling - V8 5.0L Petrol, Removal and Installation).

26. Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

Engine - V8 5.0L Petrol - Crankshaft Rear Seal

Removal and Installation

Special Tool(s)

 E107678	303-1442 Rear Crankshaft Seal Installer
 E107679	303-1443 Rear Crankshaft Cover Alignment Tool

Removal

- NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2. Refer to: [Flexplate](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

3.




Installation

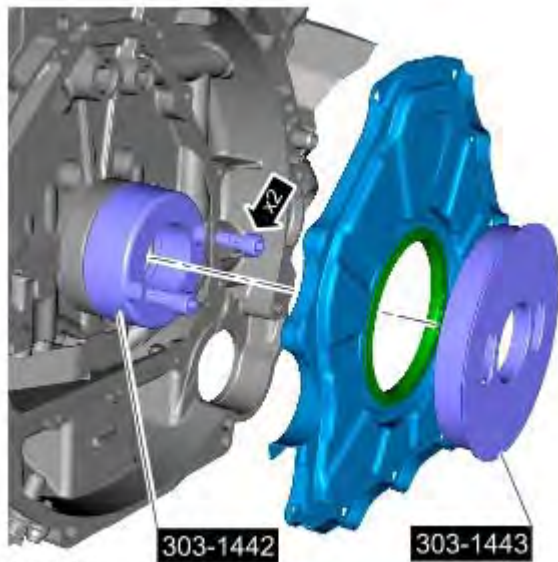

E111935

1. Install the special tool.

Special Tool(s): [303-1442](#), [303-1443](#)

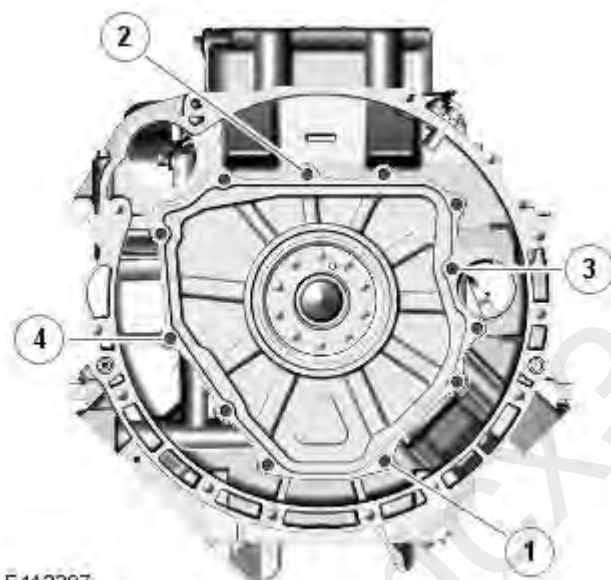

E112297

2. **2.** NOTE: Tighten the bolts in the indicated sequence.

Torque: 11 Nm



E112306

3. Torque: 11 Nm

4.

5. Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

mcx30.com

Engine - V8 5.0L Petrol - Cylinder Head LH

Removal and Installation

Removal

- NOTE: Some illustrations may show the engine removed for clarity.
- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.
- NOTE: Removal steps in this procedure may contain installation details.

1. Remove the battery for access.

Refer to: [Battery](#) (414-01 Battery, Mounting and Cables, Removal and Installation).


2.  **WARNING:** Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


3. Refer to: [Camshaft LH](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).


4. Refer to: [Exhaust Manifold LH](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

- 5.

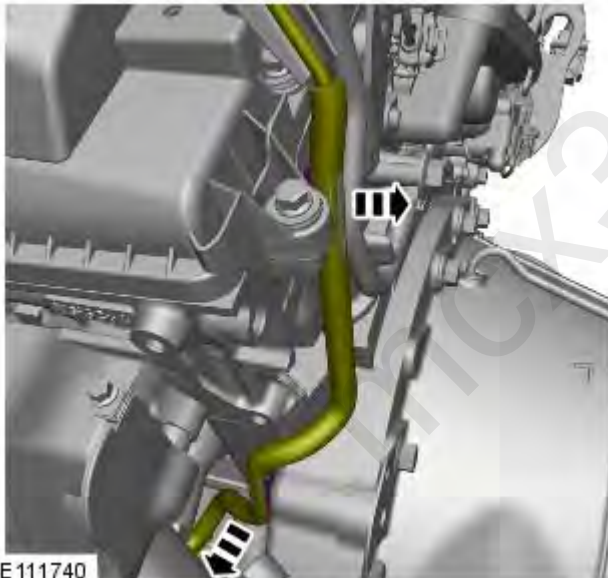


- 6.

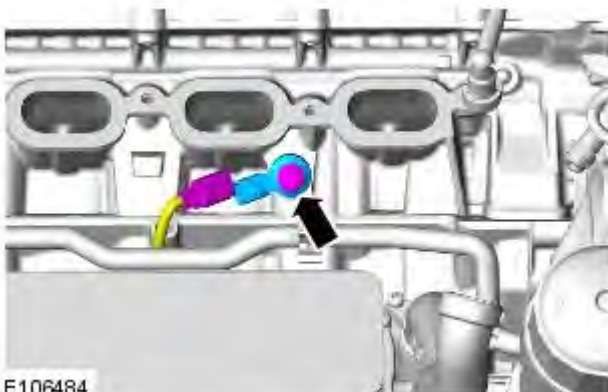


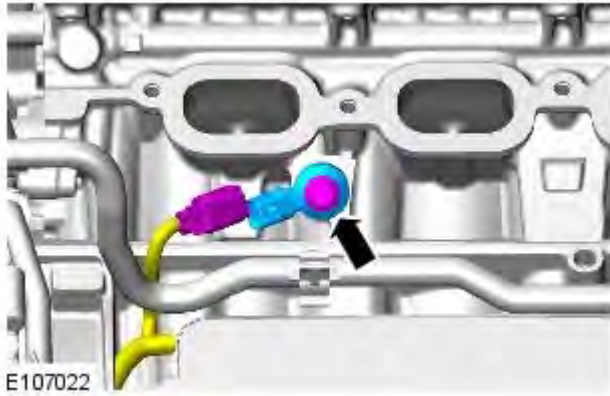


7.

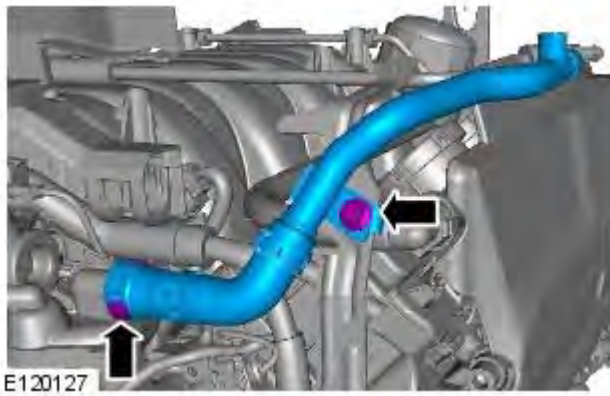


8.  CAUTION: Be prepared to collect escaping coolant.

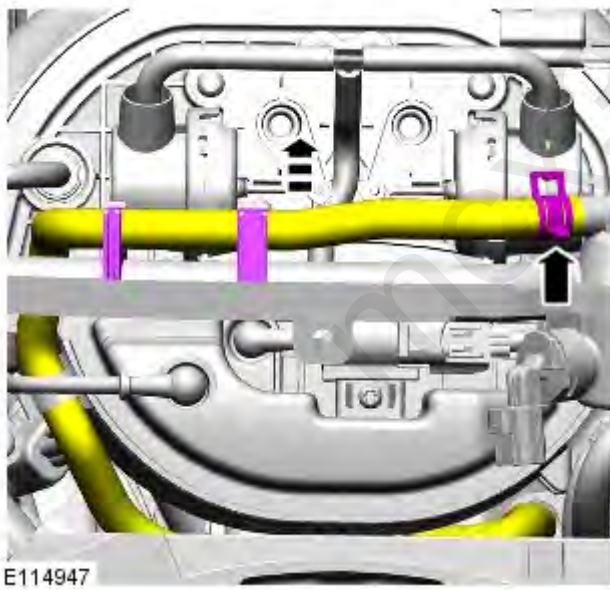


9. **9.** NOTE: Clamp the hose to minimize coolant loss.

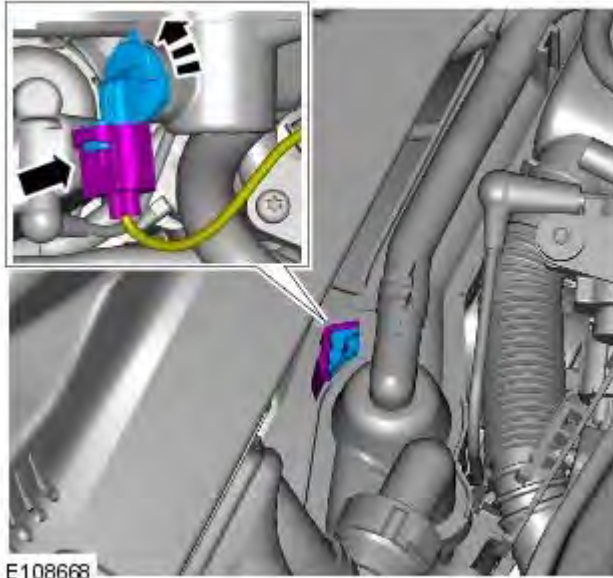


10.

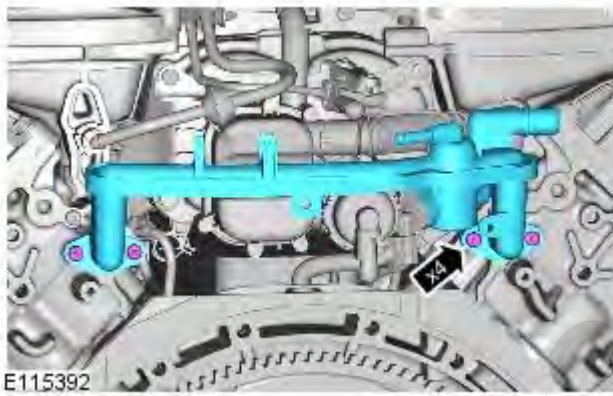

11. **11.**  CAUTION: Discard the seals.

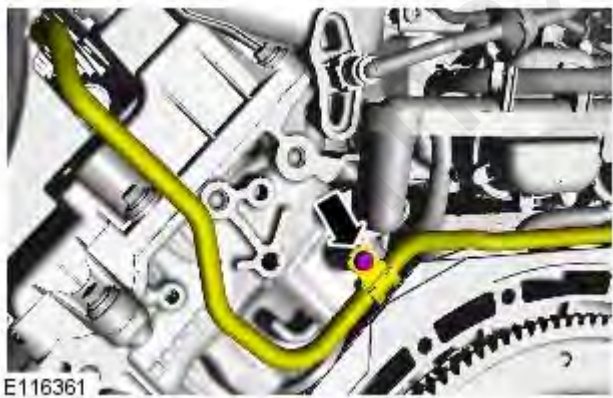

12.

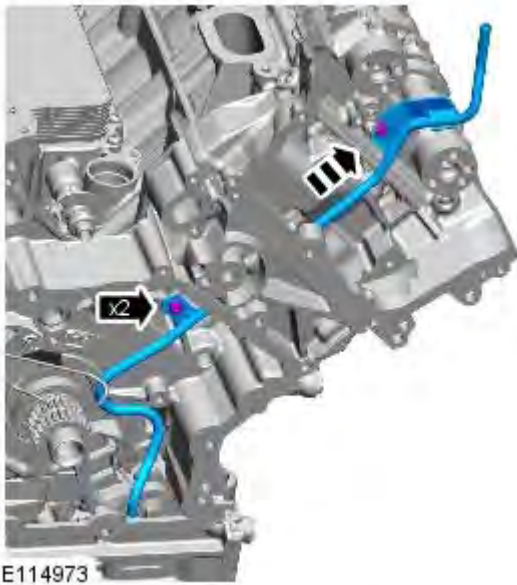

13. **13.**  **CAUTION:** Make sure that all openings are sealed. Use new blanking caps.



14. **14.** **CAUTIONS:**





If a new cylinder head has been installed then new tappets must be installed.




If the cylinder head is being removed without a new component being installed, the tappets must be installed in their original positions.

- **NOTE:** Left-hand shown, right-hand similar.


15.

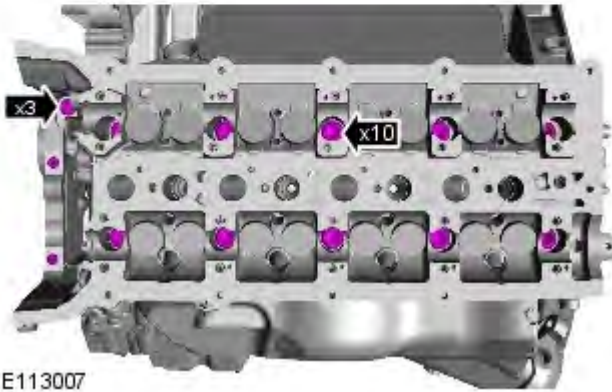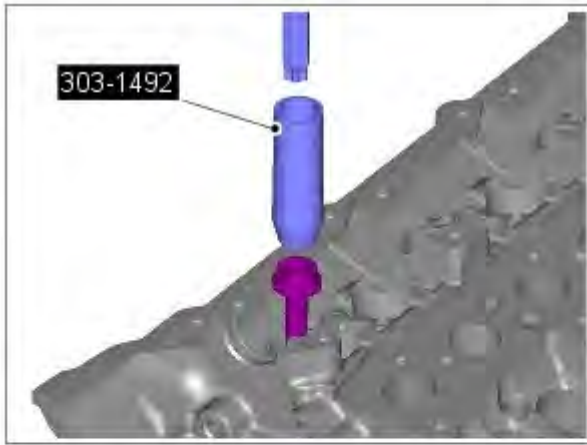

16.

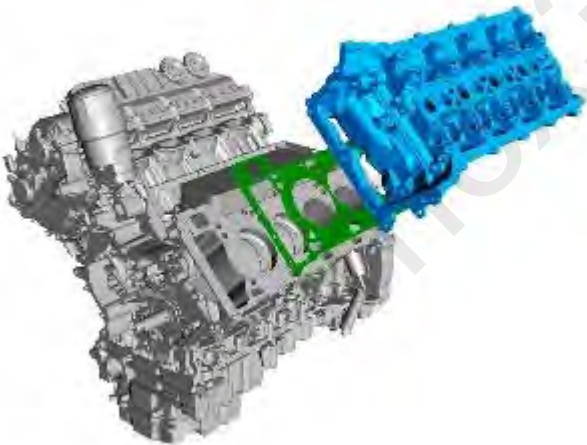

Installation

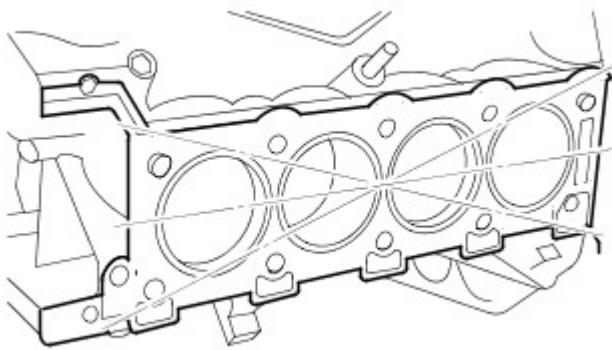

E46855

1.  **CAUTION:** An acceptable flatness of the cylinder head is 0.1mm.

Check cylinder head face for distortion, across the center and from corner to corner.



E113006


2.  **WARNING:** Make sure care is taken when handling the cylinder head gasket.

- **CAUTIONS:**

 The head gasket must be installed over the cylinder block dowels.

 Make sure that the mating faces are clean and free of foreign material.


- **NOTE:** Install a new cylinder head gasket.

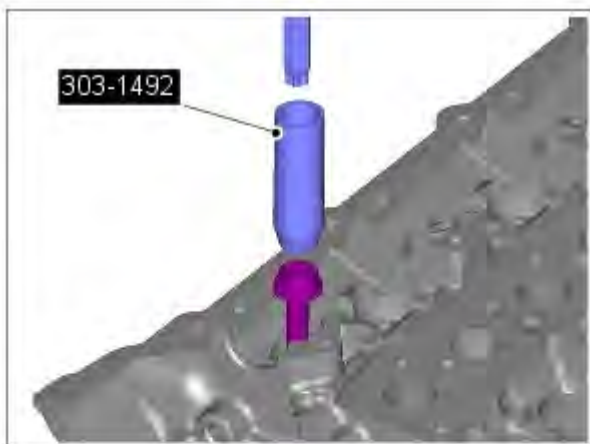


3.  **CAUTION:** Make sure that new cylinder head bolts are installed.

• **NOTE:** Tighten the bolts in the indicated sequence.

Torque: 20 Nm

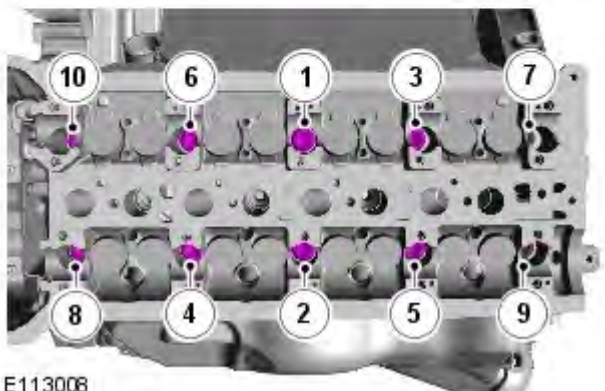


E113008


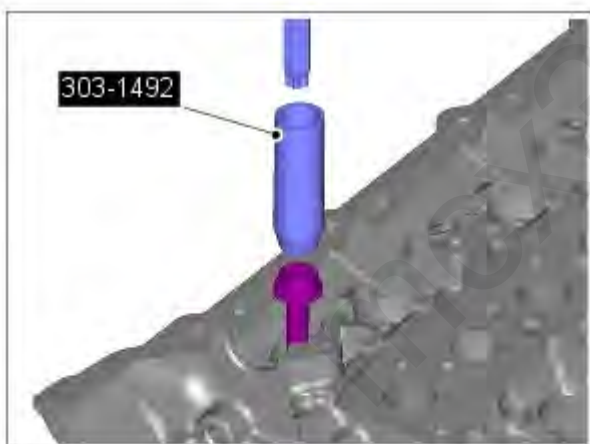


4. **NOTE:** Tighten the bolts in the indicated sequence.

Torque: 35 Nm


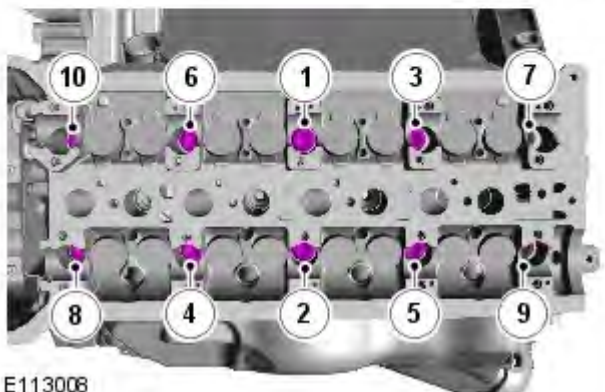


E113008

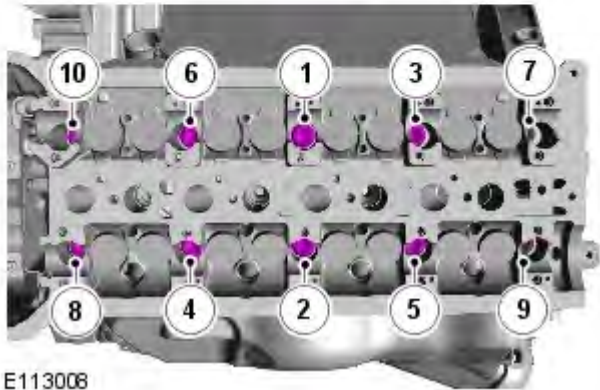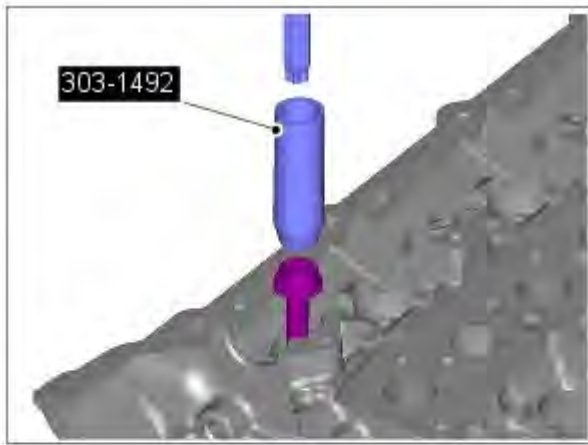


5. **5. NOTE:** Tighten the bolts in the indicated sequence.

Tighten the bolts 1 to 10, a further 90 degrees.

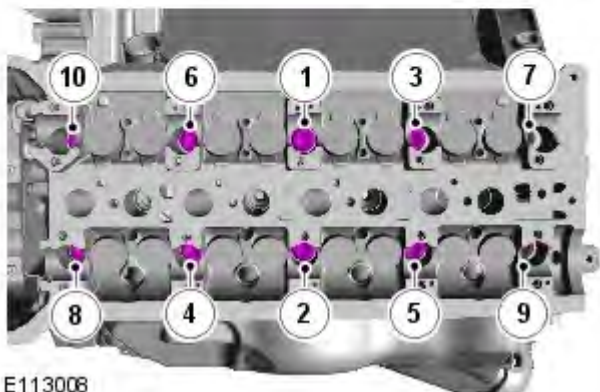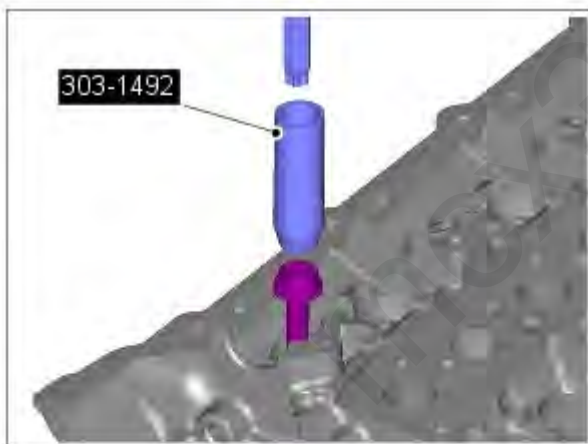


6. **6. NOTE:** Tighten the bolts in the indicated sequence.

Tighten the bolts 1 to 10, a further 120 degrees.

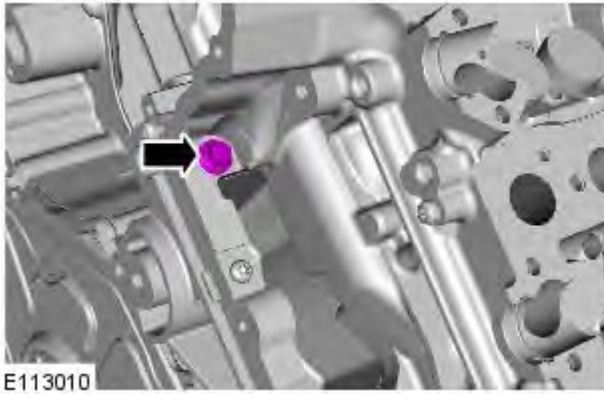

7. Torque: 25 Nm

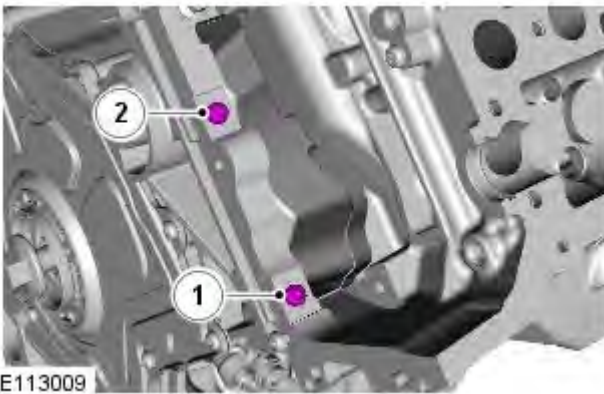

8. **8. NOTE:** Tighten the bolts in the indicated sequence.

Torque: 12 Nm



9. **9. CAUTIONS:**



If a new cylinder head has been installed then new tappets must be installed.




If the cylinder head is being removed without a new component being installed, the tappets must be installed in their original positions.


Lubricate the valve tappets with clean engine oil.

10. Refer to: [Camshaft LH](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).


11. Torque: 12 Nm

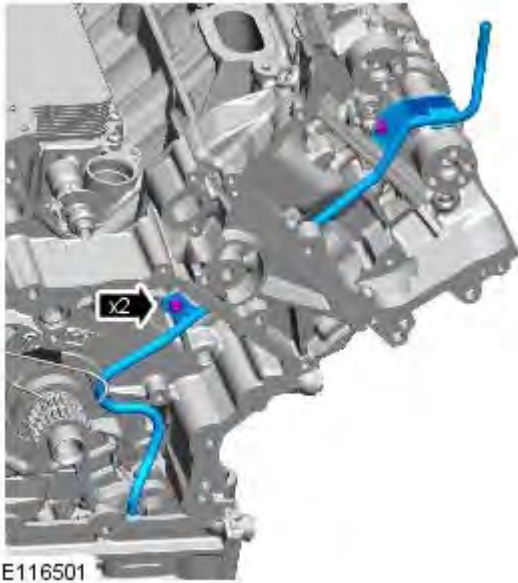


12. Torque: 10 Nm

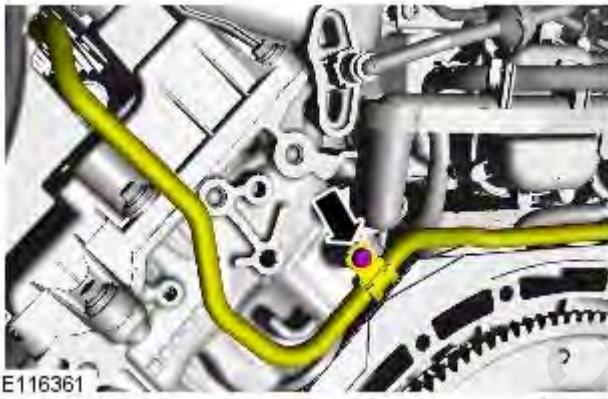


13.

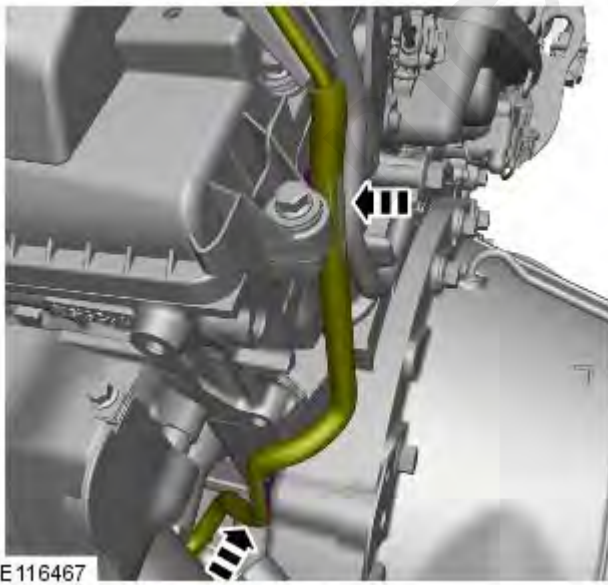

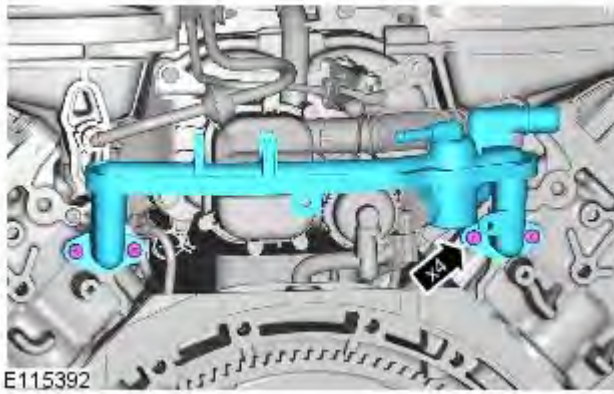


14. **14.**  **CAUTION:** Install the new seals.

Torque: 10 Nm

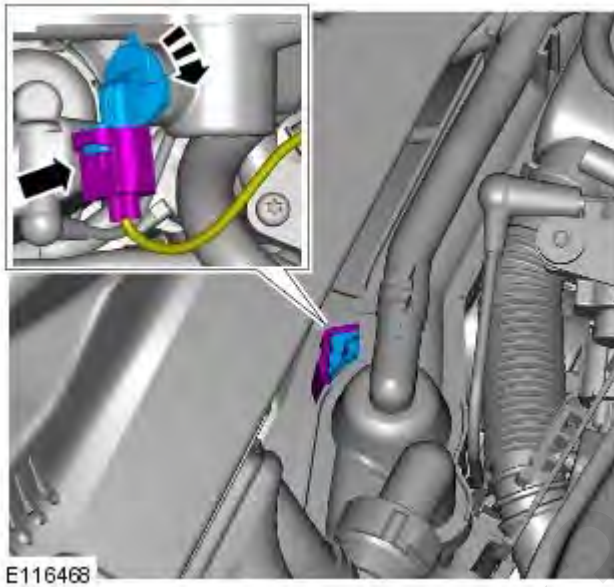


- 15.

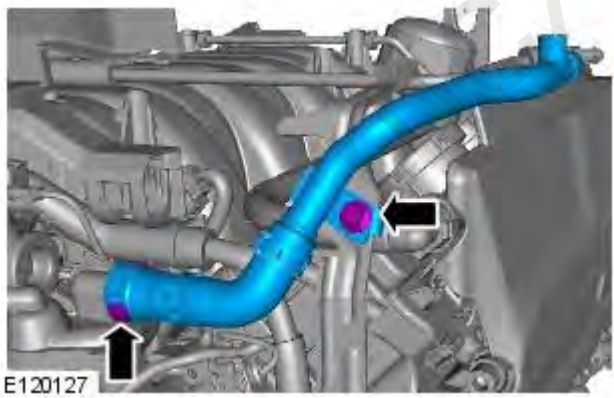


16. **16.**  **CAUTION:** Be prepared to collect escaping coolant.


Torque: 10 Nm

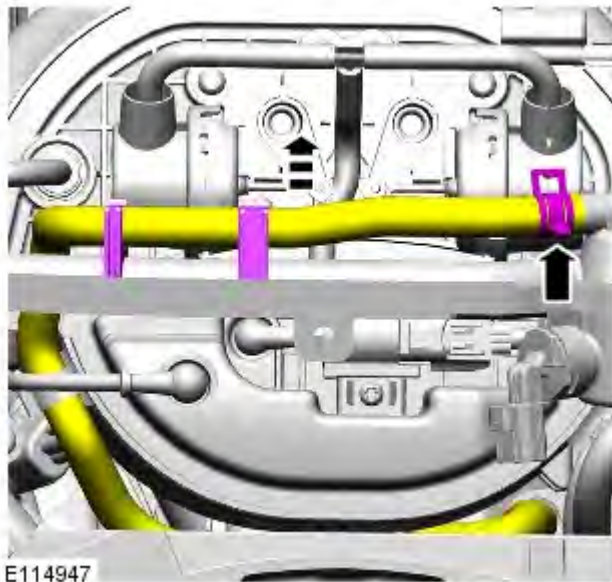

17.

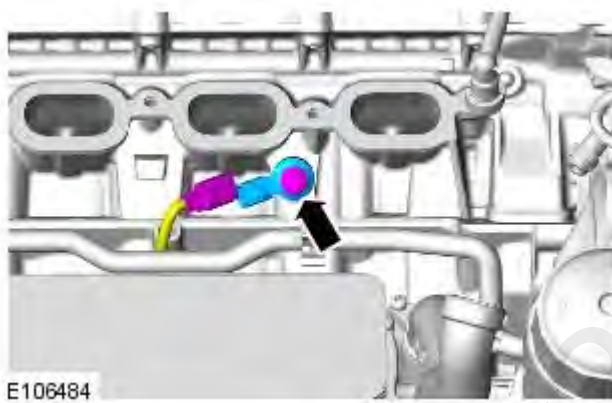

18. Torque: 20 Nm

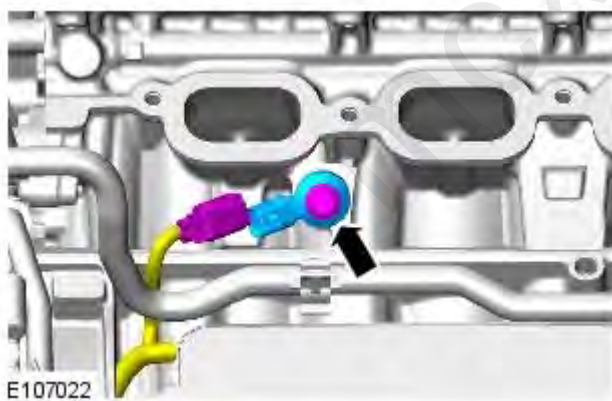

19. Torque: 20 Nm

20. Refer to: [Exhaust Manifold LH](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

21. Install the battery.

Refer to: [Battery](#) (414-01 Battery, Mounting and Cables, Removal and Installation).

Engine - V8 5.0L Petrol - Cylinder Head RH

Removal and Installation

Removal

- NOTE: Removal steps in this procedure may contain installation details.
- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


2.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.


3. Refer to: [Intake Manifold](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

4. Refer to: [Camshaft RH](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).


5. Refer to: [Exhaust Manifold RH](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

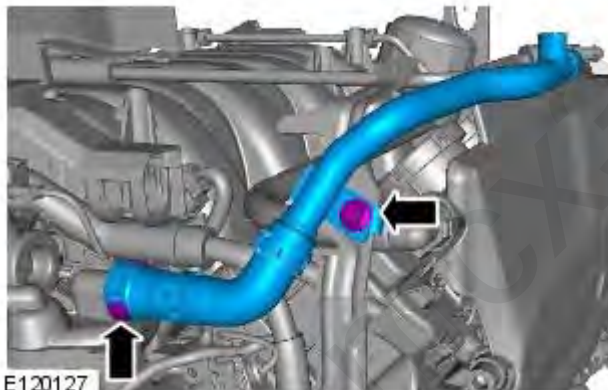


6.  **CAUTION:** Be prepared to collect escaping coolant.

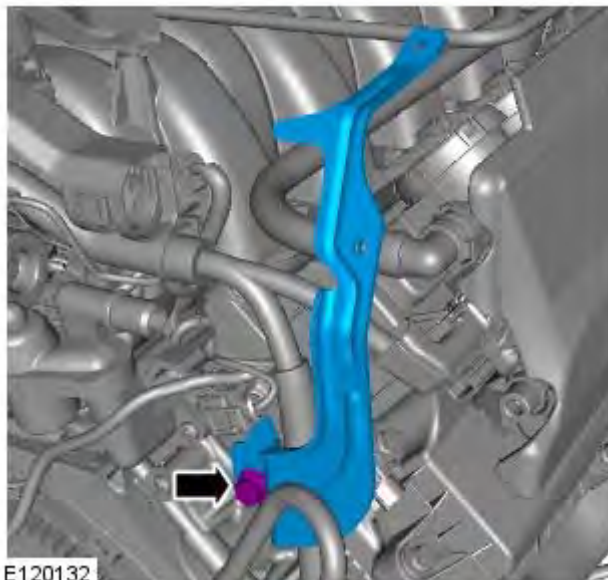

- 7.

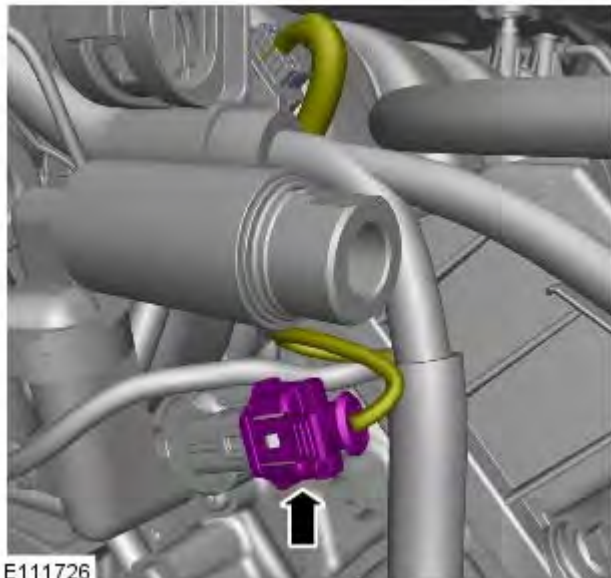

8.

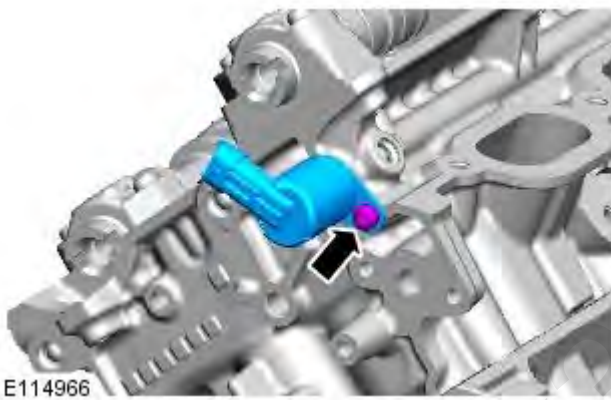

9. **9. CAUTIONS:**




Discard the seal.




LH illustration shown, RH is similar.


- NOTE: Engine shown removed for clarity.

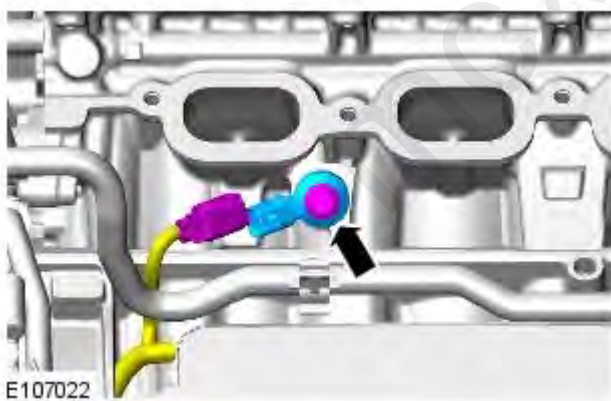


10.

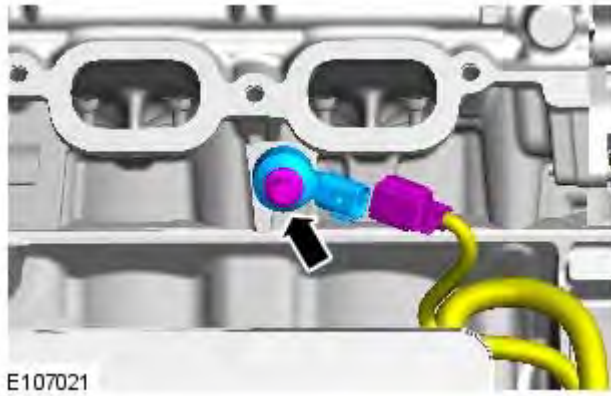


11.

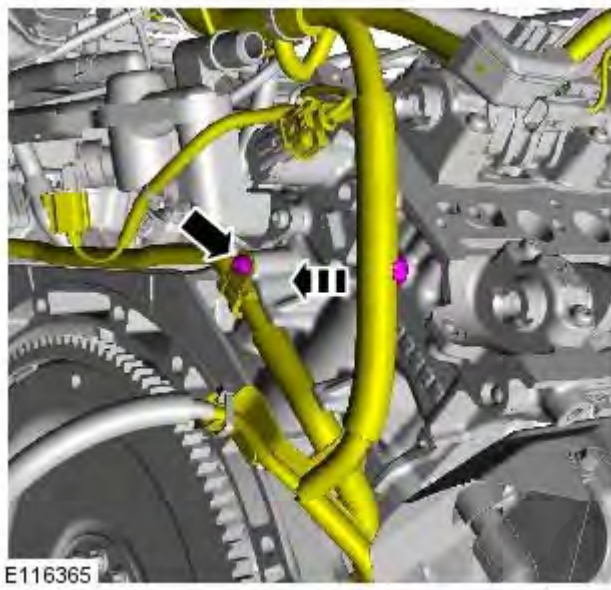

12.

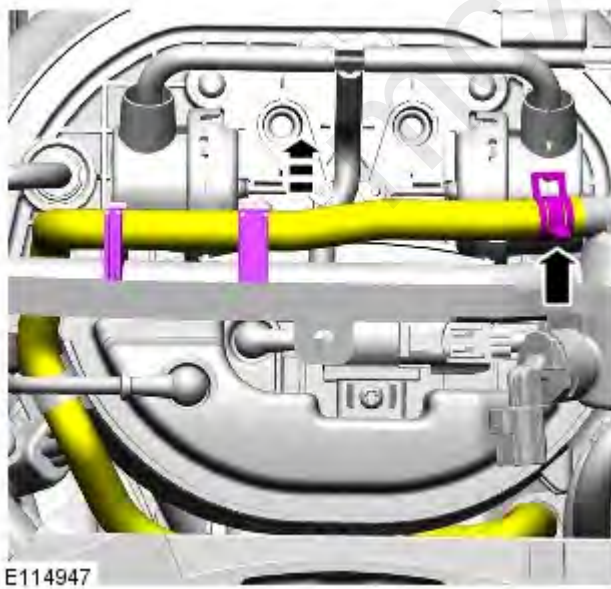


13. **13.** NOTE: Clamp the hose to minimize coolant loss.

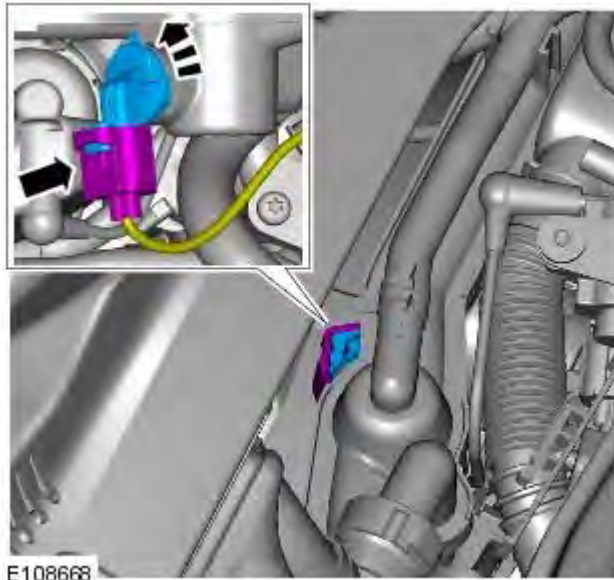


E108668

14.

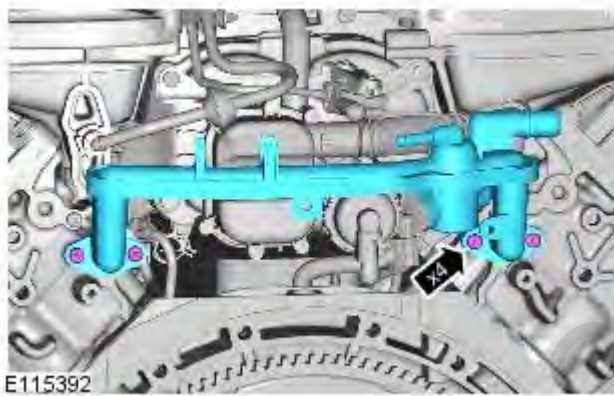


E115392

15. **15.**  **CAUTION:** Discard the seals.

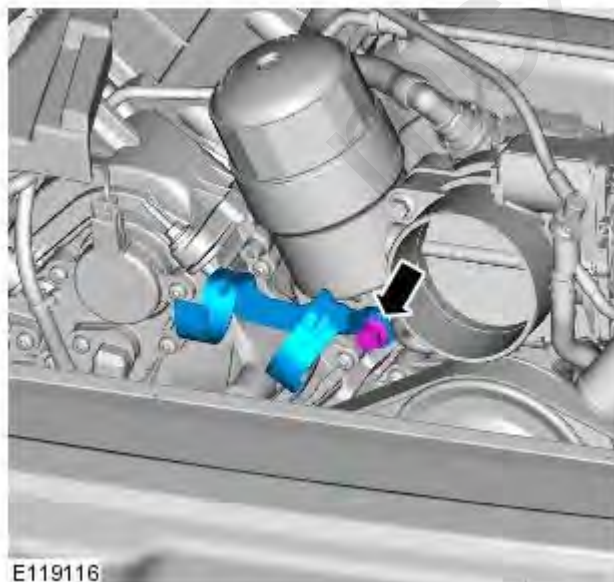

E119116

16.

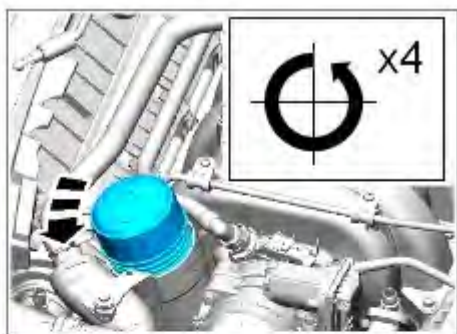

17. **17.** NOTE: Remove and discard the O-ring seal.




E114960

18. **18.** NOTE: Discard the gasket.



E114959

19.

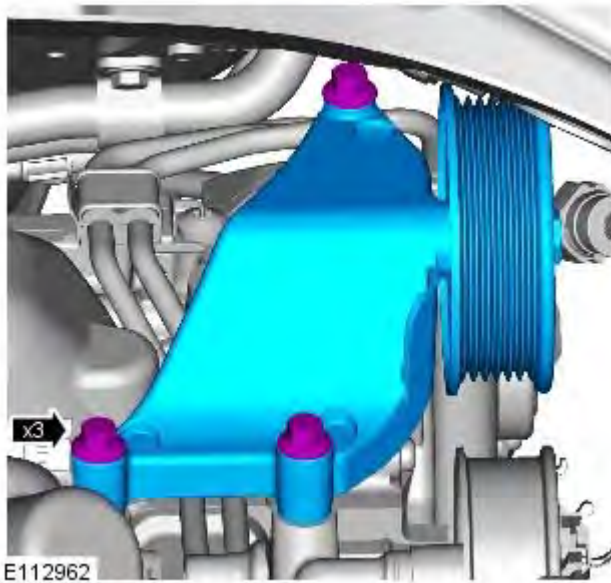

20. **20. CAUTIONS:**




If a new cylinder head has been installed then new tappets must be installed.



If the cylinder head is being removed without a new component being installed, the tappets must be installed in their original positions.



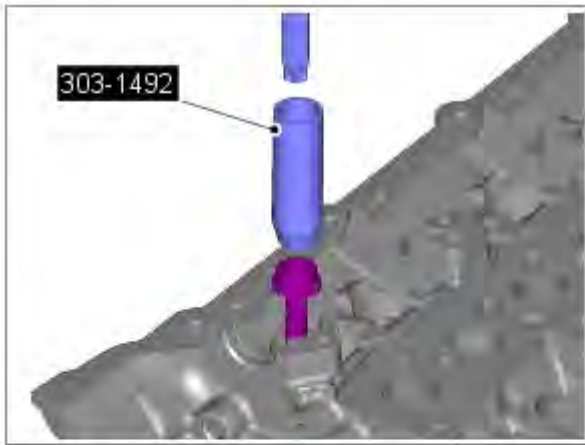


21. **21.**  CAUTION: Discard the bolts.




E116363

22. **22.** NOTE: Discard the gasket.

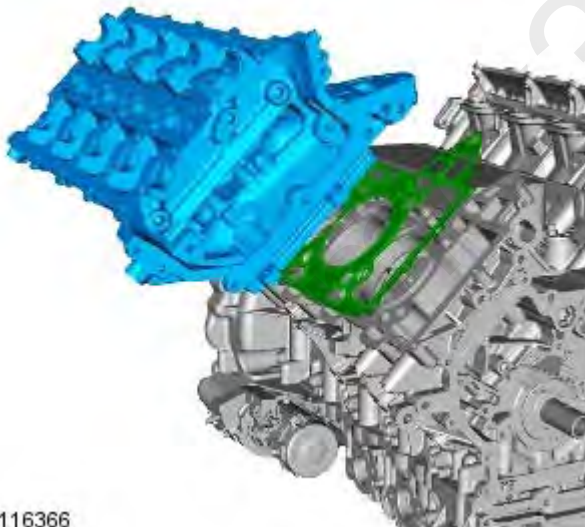

E116366


Installation

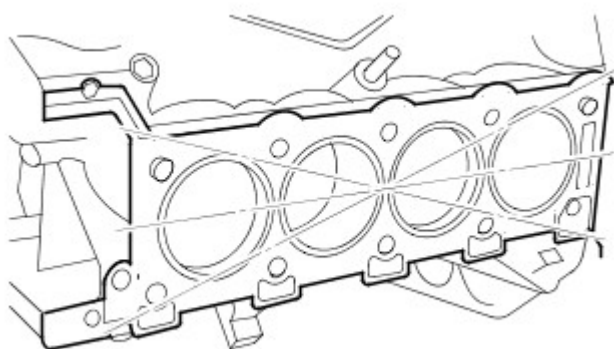

E46855

1.  **CAUTION:** An acceptable flatness of the cylinder head is 0.1mm.
 - **NOTE:** For cylinder head with distortion above the maximum allowance, the cylinder head material must be measured.


Check cylinder head face for distortion, across the center and from corner to corner.

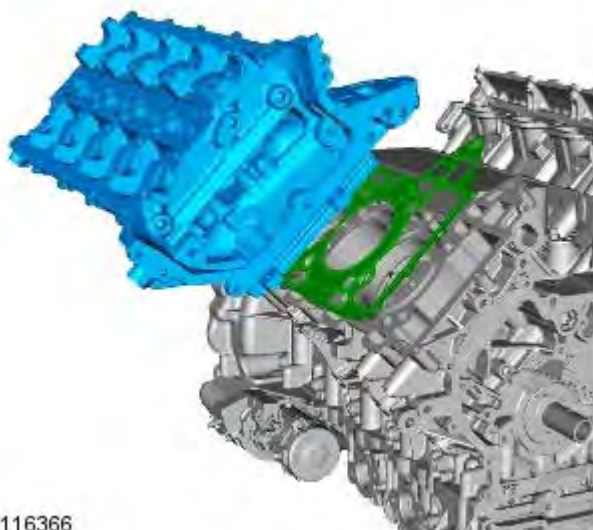

E116366


2.  **WARNING:** Make sure care is taken when handling the cylinder head gasket.
 - **NOTE:** Install a new gasket.

mcx30.com


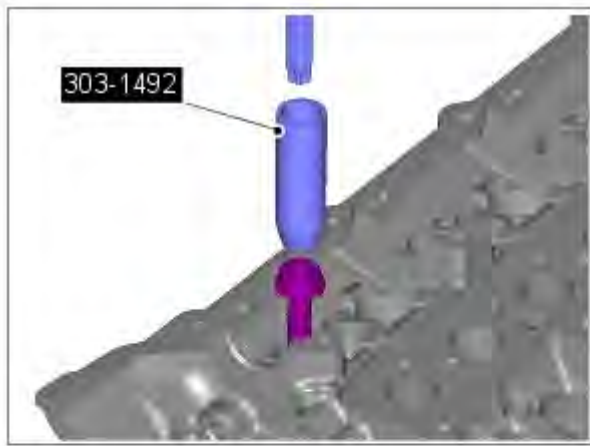



3.  **CAUTION:** Make sure that new cylinder head bolts are installed.

Torque: 20 Nm


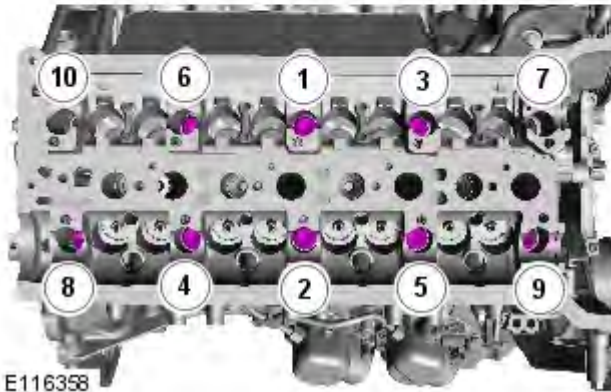


4. *Torque:* 35 Nm

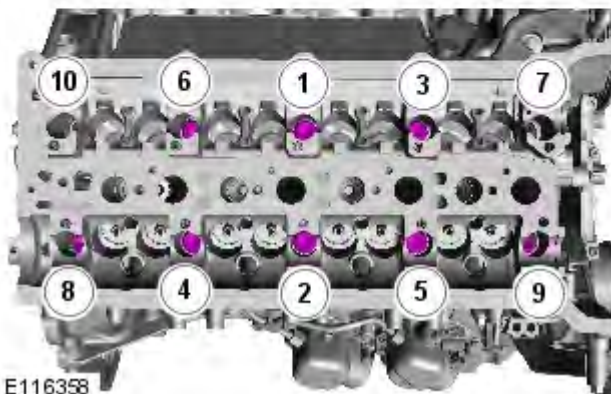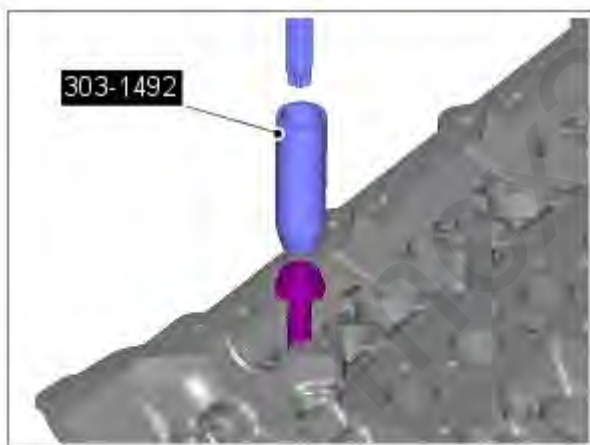


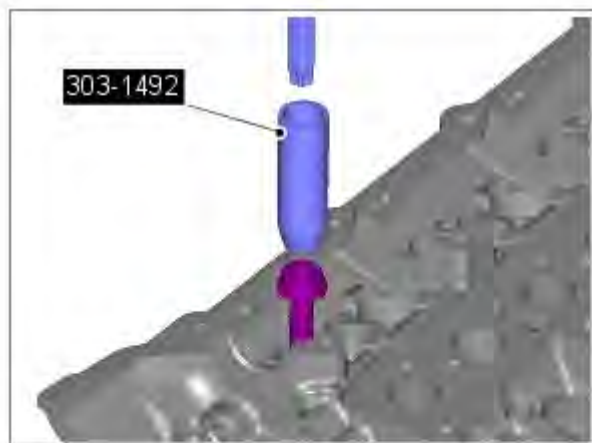


5. Tighten the bolts 1 to 10, a further 90 degrees.

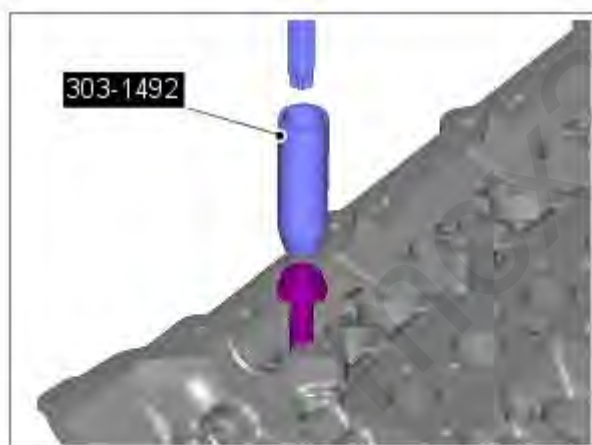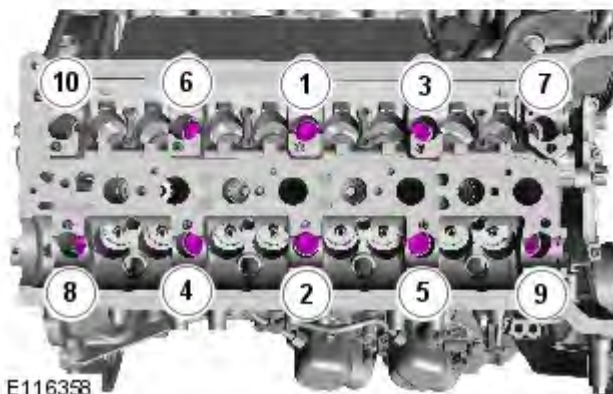


6. Tighten the bolts 1 to 10, a further 120 degrees.

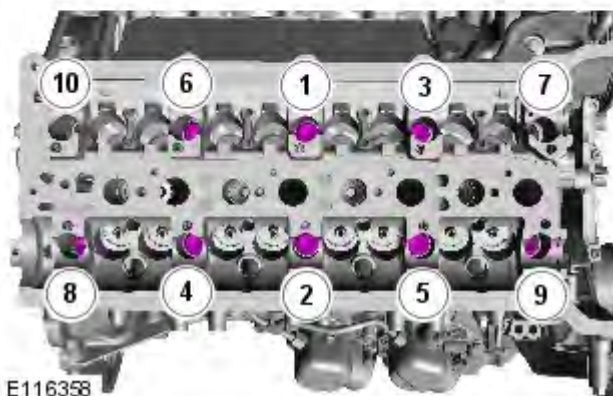

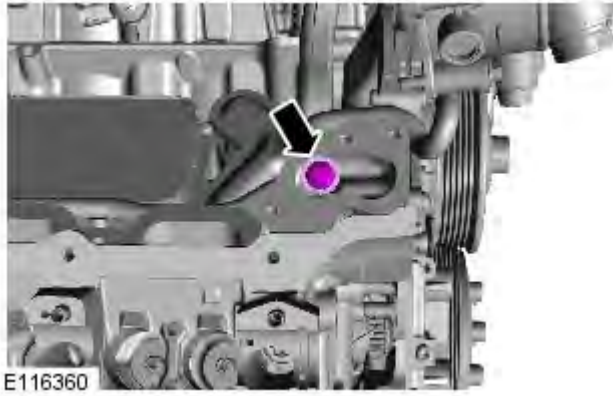

7. Torque: 25 Nm

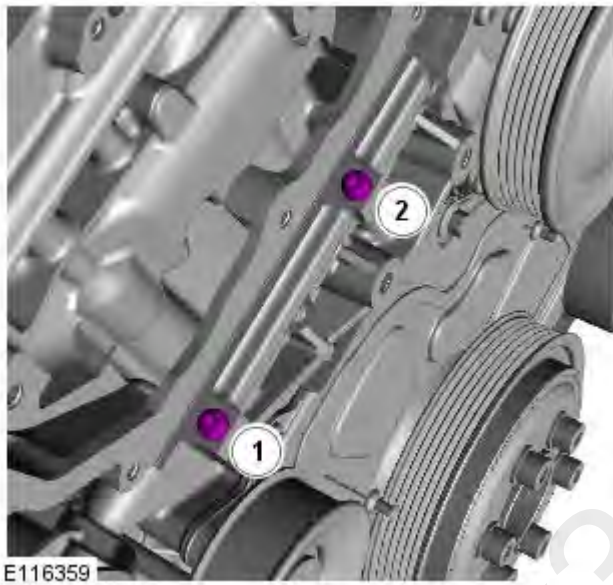

8. Torque: 12 Nm



9. **9. CAUTIONS:**




If a new cylinder head has been installed then new tappets must be installed.



If the cylinder head is being removed without a new component being installed, the tappets must be installed in their original positions.

Lubricate the valve tappets with clean engine oil.


10. Torque: 25 Nm

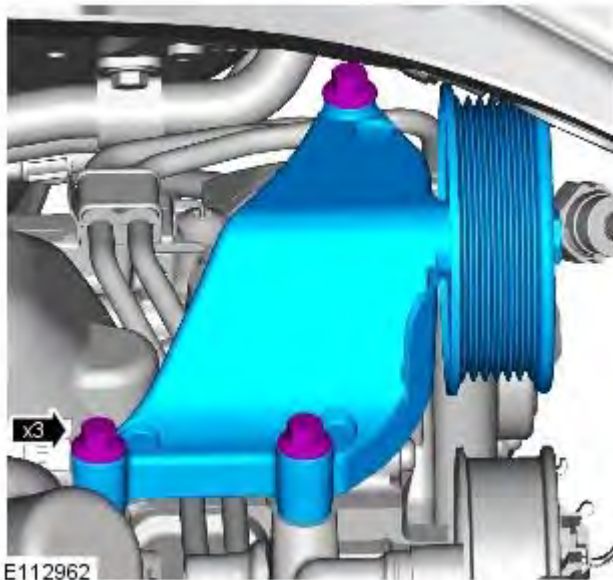

11. Refer to: [Camshaft RH](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

12. **12.** NOTE: Install a new gasket.



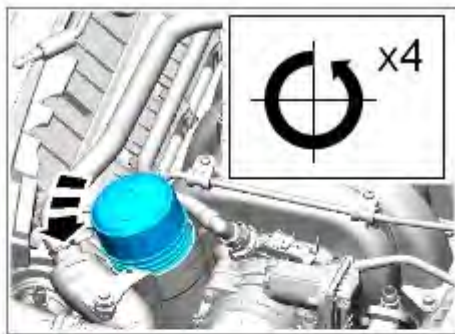


13. **13.**  **CAUTION:** A new O-ring seal is to be installed.

- **NOTE:** Install a new engine oil filter.




E114960

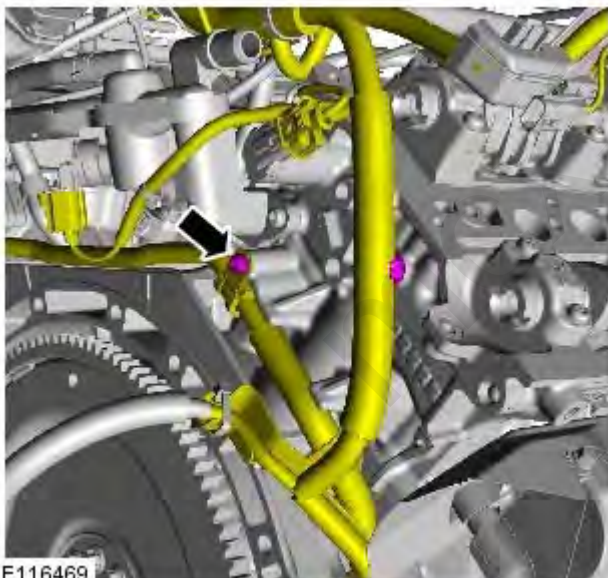


E116469

14. **Torque:** 12 Nm

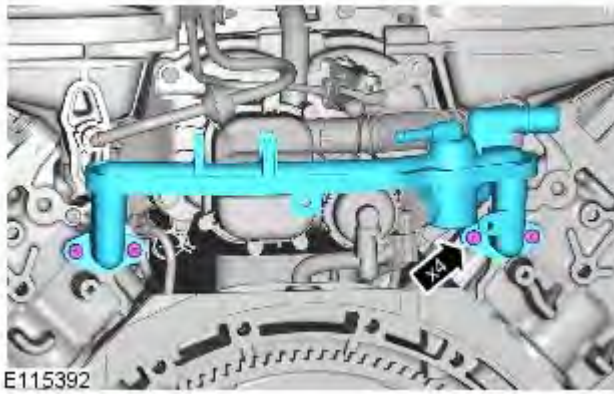


15. **15.**  **CAUTION:** Install the new seals.


Torque: 10 Nm

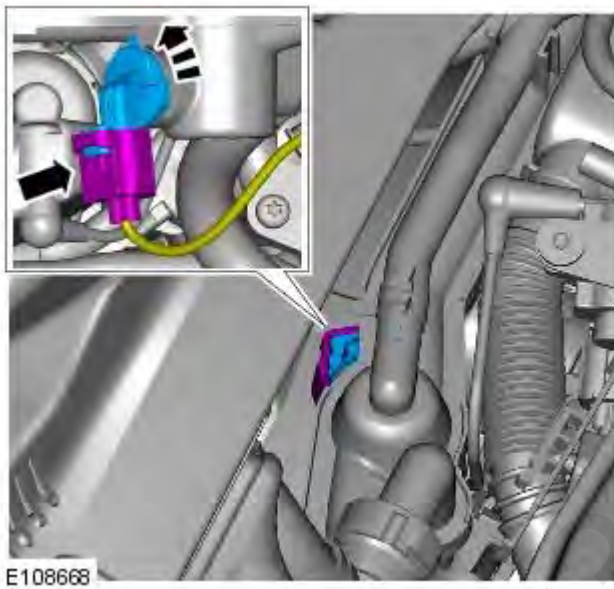

- 16.

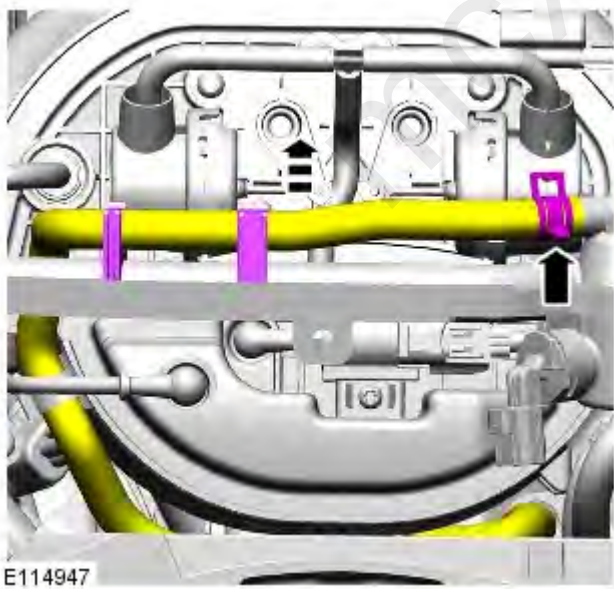

17. **17.** **NOTE:** Clamp the hose to minimize coolant loss.

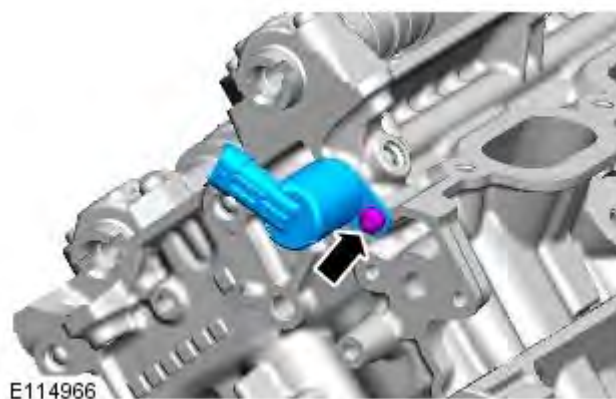

18. **18. CAUTIONS:**




Install a new seal.




LH illustration shown, RH is similar.


Torque: 12 Nm

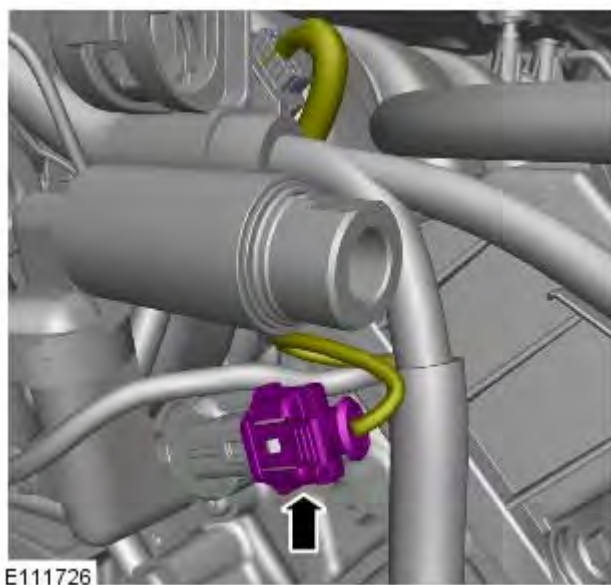

19.

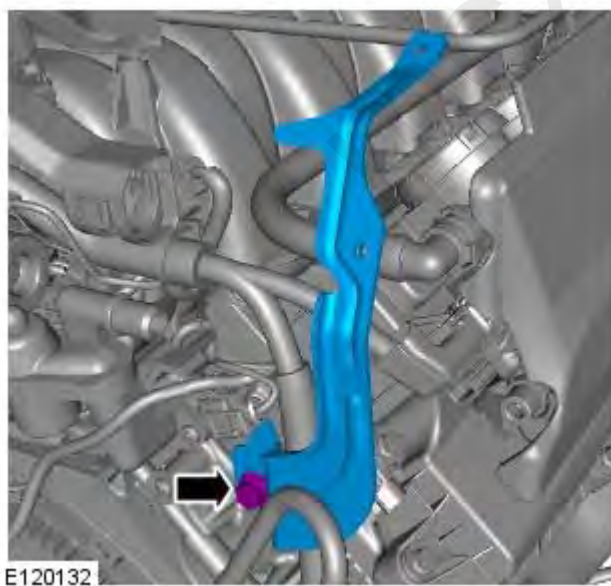


20.

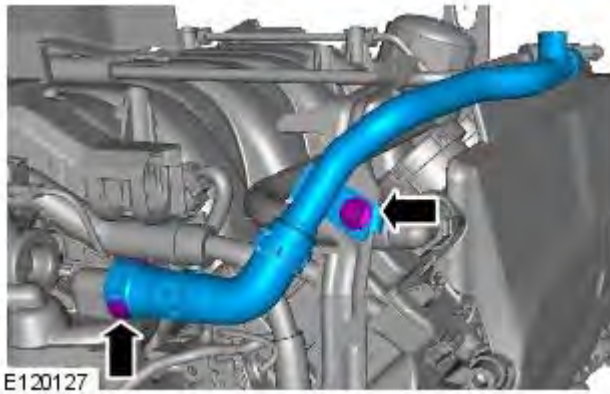


21. **21.**  **CAUTION:** Be prepared to collect escaping coolant.


Torque: 10 Nm

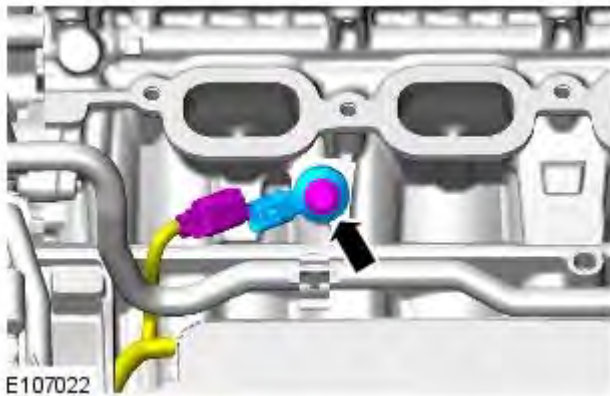

22. *Torque:* 20 Nm

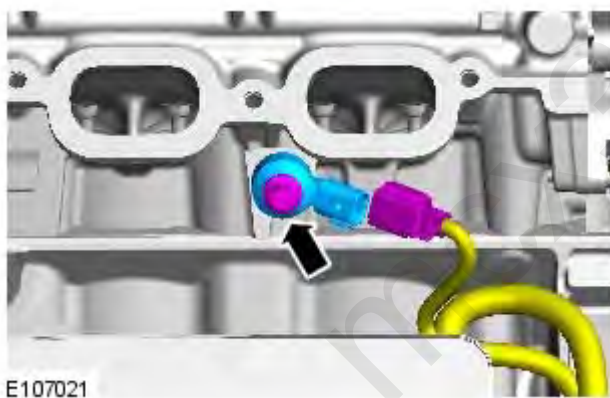

23. *Torque:* 20 Nm

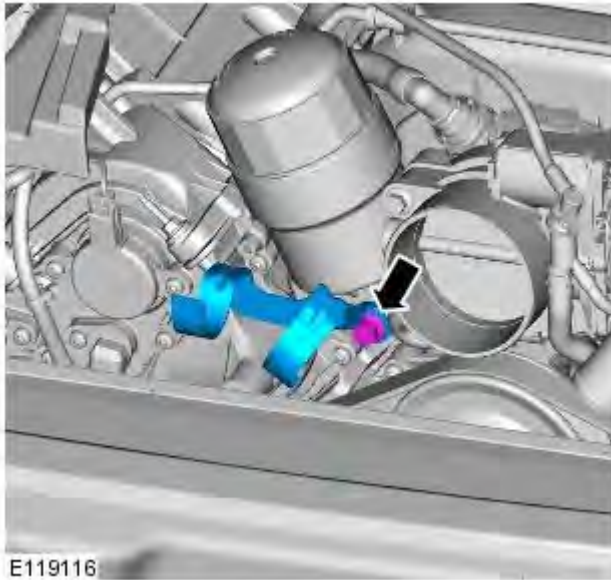

24. Torque: 25 Nm


25. Refer to: [Exhaust Manifold RH](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).
26. Refer to: [Intake Manifold](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).
27. Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

Engine - V8 5.0L Petrol - Engine Mount LH

Removal and Installation

Special Tool(s)

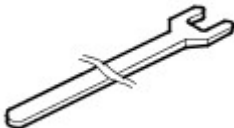 E46076	303-1142 Viscous Coupling Wrench
 E55382	303-1143 Viscous Coupling Holding Tool

Removal

- NOTE: Some illustrations may show the engine removed for clarity.
- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.
- NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


2.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

3. Refer to: [Catalytic Converter LH](#) (309-00D Exhaust System - V8 5.0L Petrol, Removal and Installation).


4. Remove the LH front wheel and tire.

- 5.

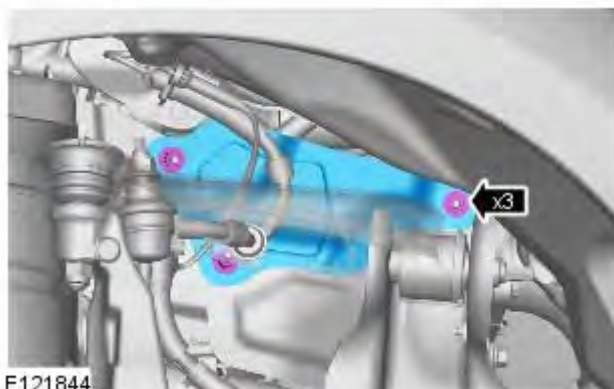


E121844


6.

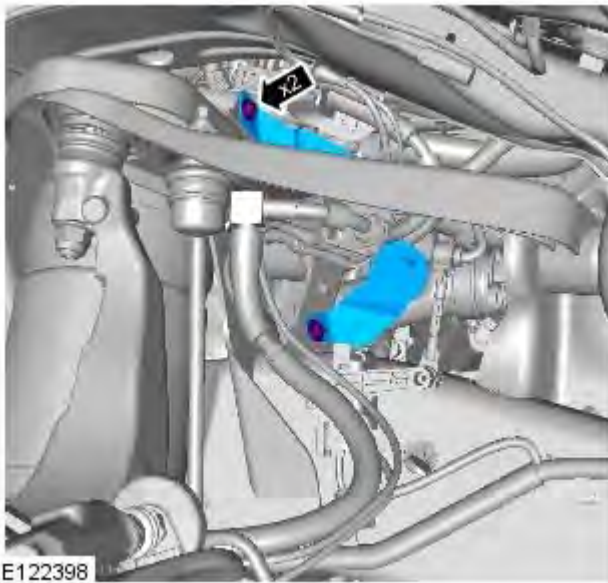


7.

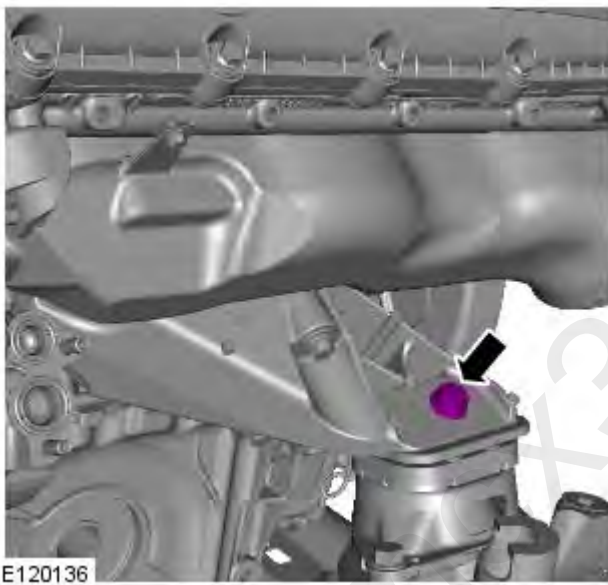


8.

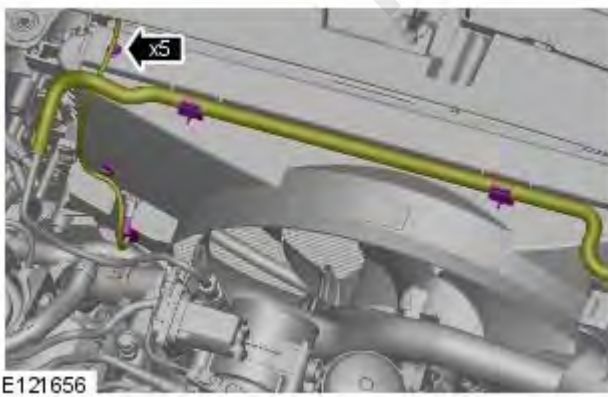

9.

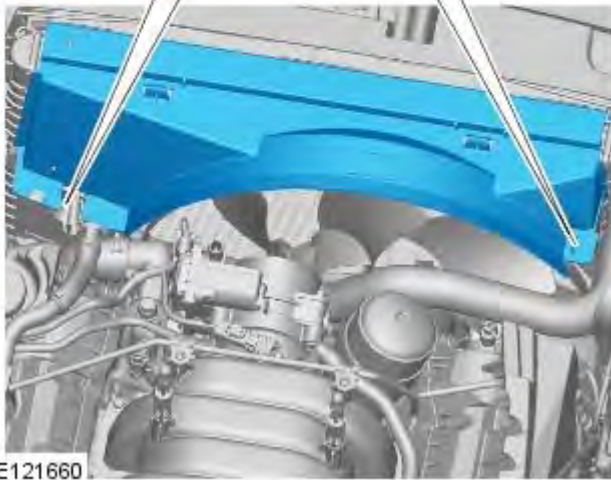

E121660

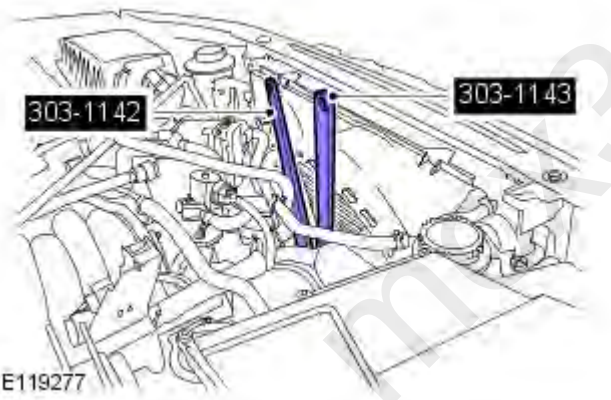


E119277

10. **10.**  **CAUTION:** Always protect the cooling pack elements to prevent accidental damage.
- **NOTE:** Some variation in the illustrations may occur, but the essential information is always correct.

11. **11.**  **CAUTION:** Use a wooden block to protect the oil pan when supporting the engine.


Using a suitable hydraulic jack, raise and support the engine.

12.

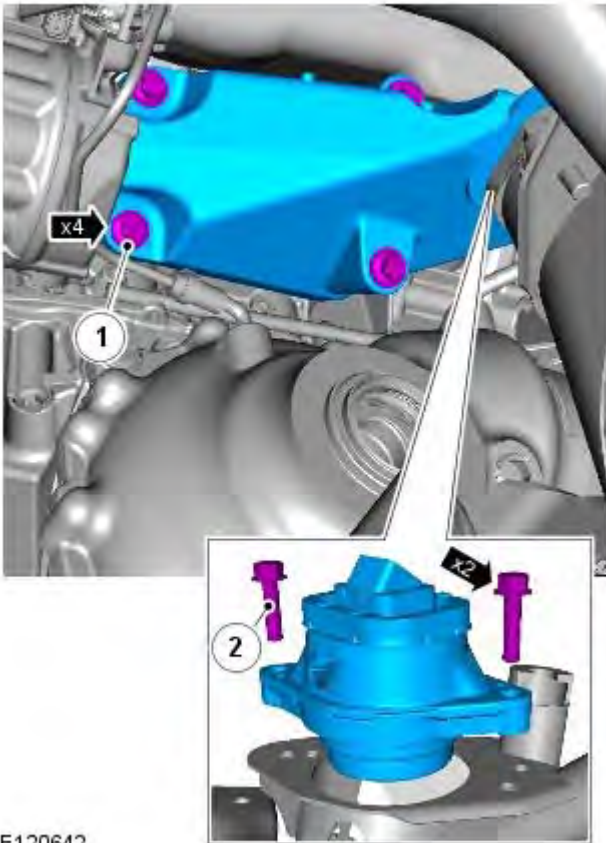

E120642


Installation

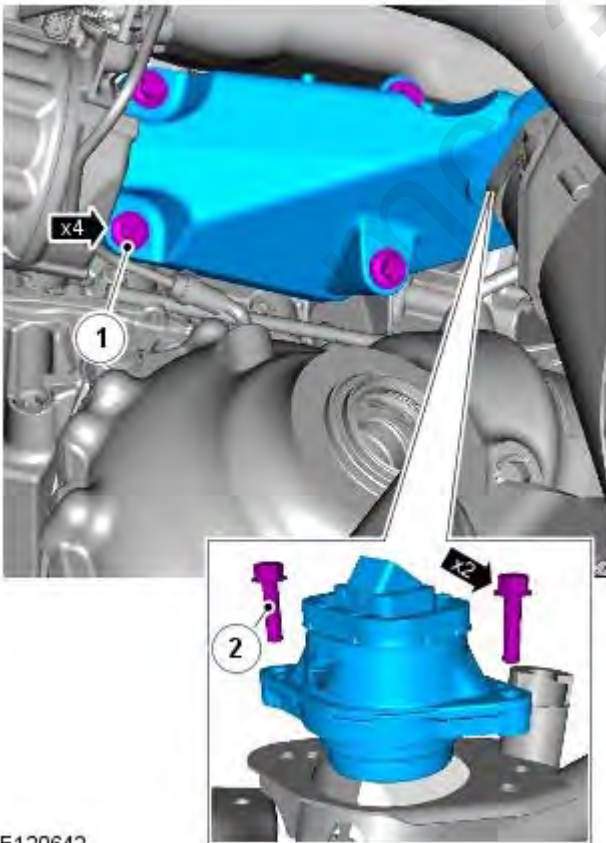

E120642


1.

- Torque:
 - 1 45 Nm
 - 1 60°
 - 2 56 Nm

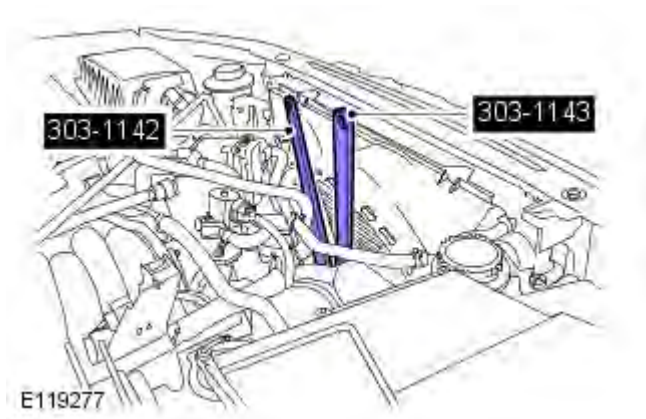


2.  **CAUTION:** Always protect the cooling pack elements to prevent accidental damage.
- **NOTE:** Some variation in the illustrations may occur, but the essential information is always correct.


Special Tool(s): [303-1142](#), [303-1143](#)
Torque: 65 Nm

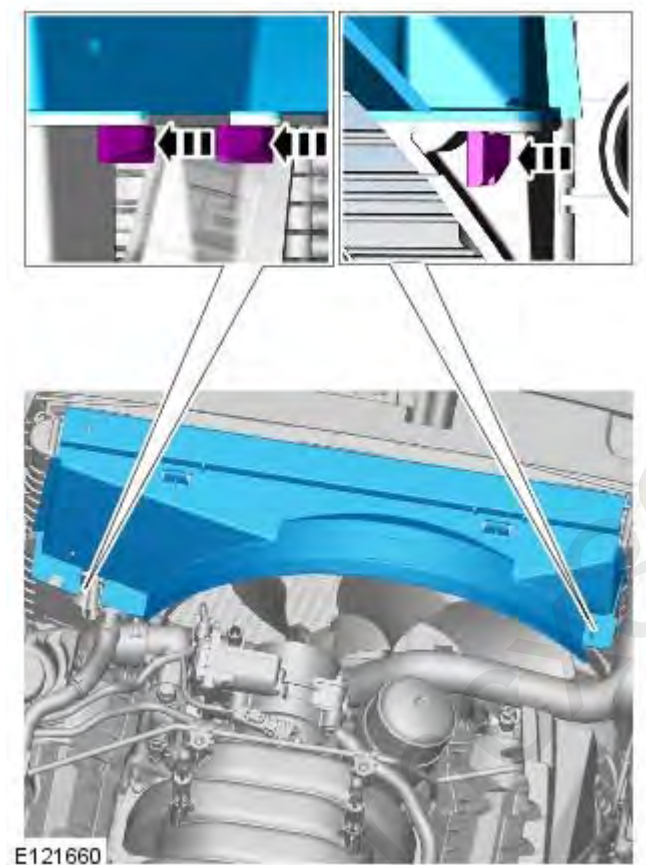


3.

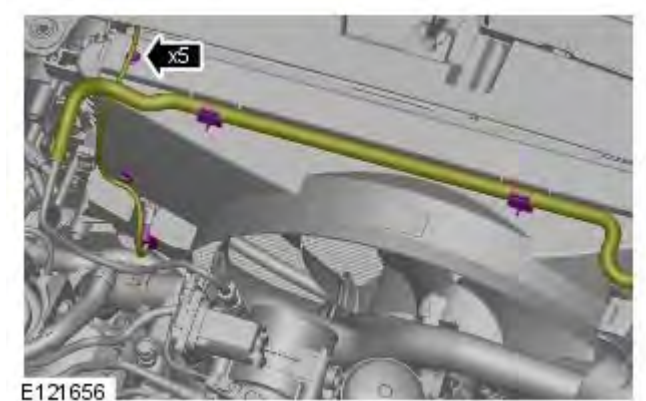


4.

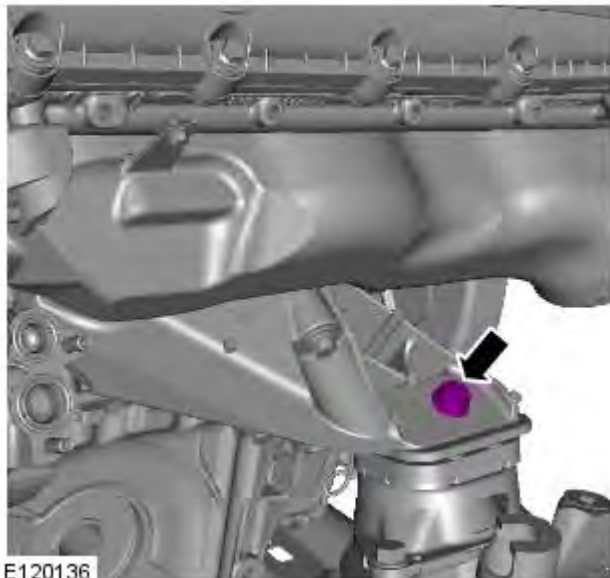

5. Torque: 100 Nm

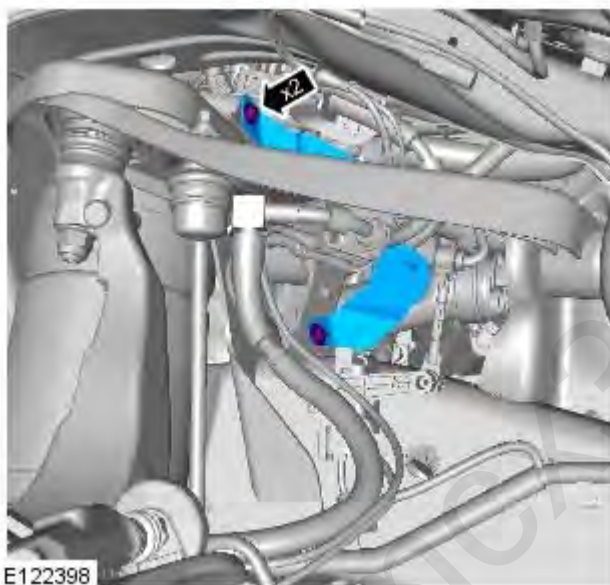

6. Torque: 12 Nm

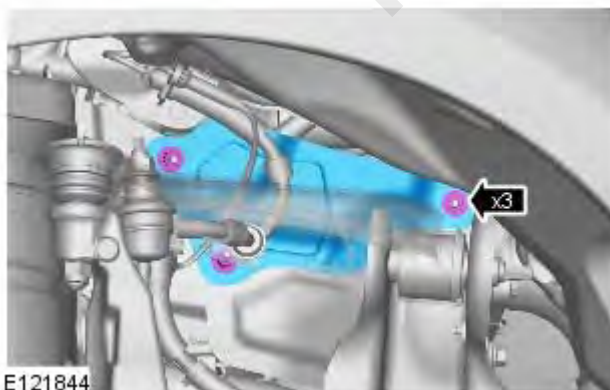

7. Torque: 12 Nm

8. Install the LH front wheel and tire.

9. Refer to: [Catalytic Converter LH](#) (309-00D Exhaust System - V8 5.0L Petrol, Removal and Installation).

10. Lower the vehicle.

11. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

mcx30.com

Engine - V8 5.0L Petrol - Engine Mount RH

Removal and Installation

Special Tool(s)

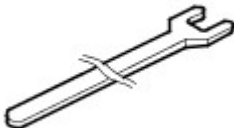 E46076	303-1142 Viscous Coupling Wrench
 E55382	303-1143 Viscous Coupling Holding Tool


Removal

- NOTE: Some illustrations may show the engine removed for clarity.
- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.


1.  **WARNING:** Make sure to support the vehicle with axle stands.
Raise and support the vehicle.
2. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
3. Remove the RH front wheel and tire.
4. Refer to: [Exhaust System](#) (309-00D Exhaust System - V8 5.0L Petrol, Removal and Installation).
5. Refer to: [Air Cleaner Outlet Pipe T-Connector](#) (303-12D Intake Air Distribution and Filtering - V8 5.0L Petrol, Removal and Installation).


6.

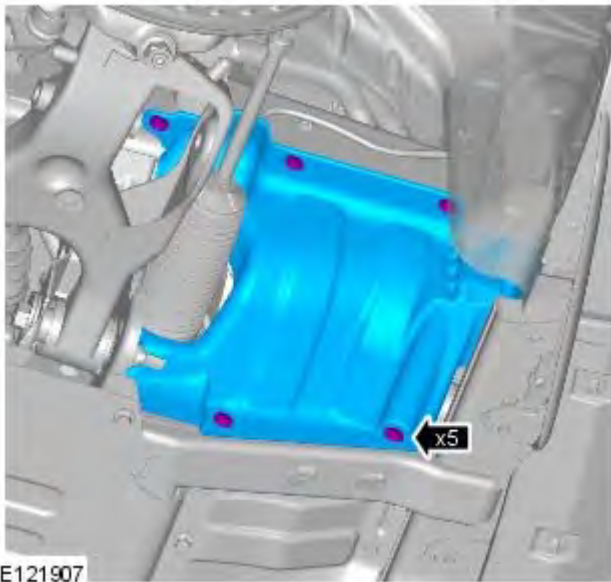


7.

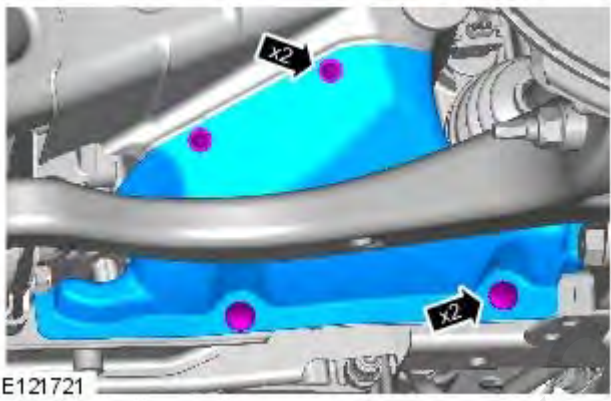


8.

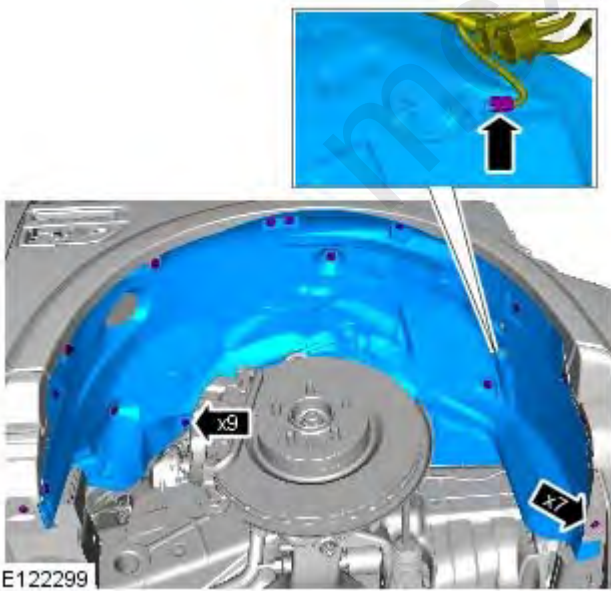


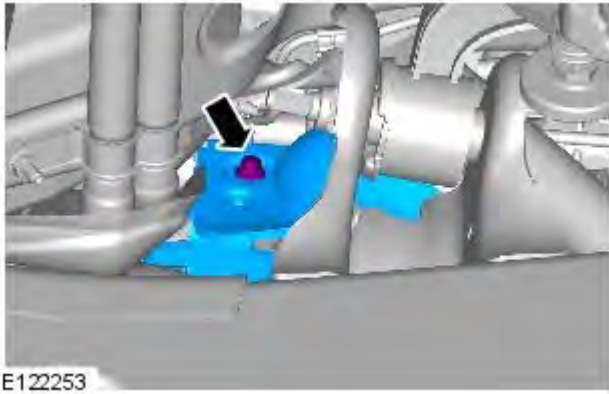


9.

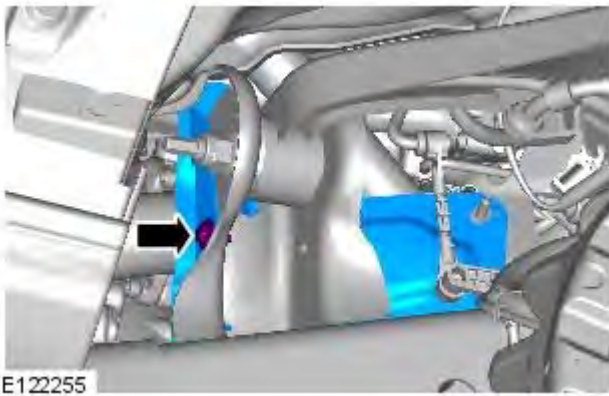


10.

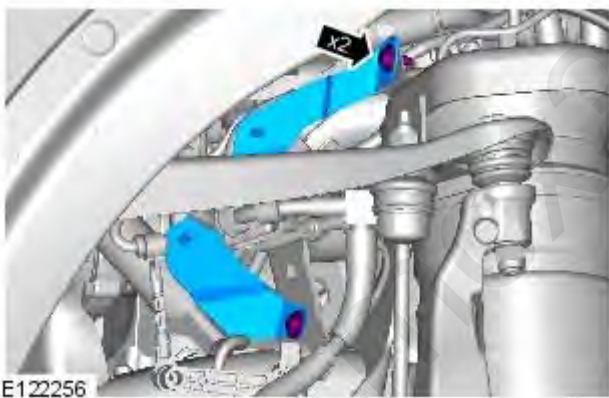

11.

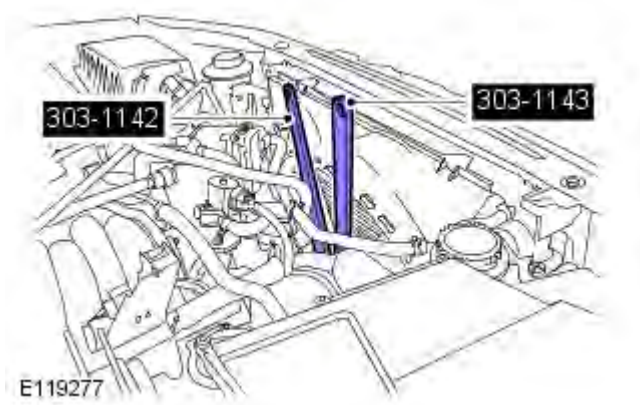


12. **12.**  **CAUTION:** Always protect the cooling pack elements to prevent accidental damage.
- NOTE: The thread is right handed.
 - NOTE: Some variation in the illustrations may occur, but the essential information is always correct.

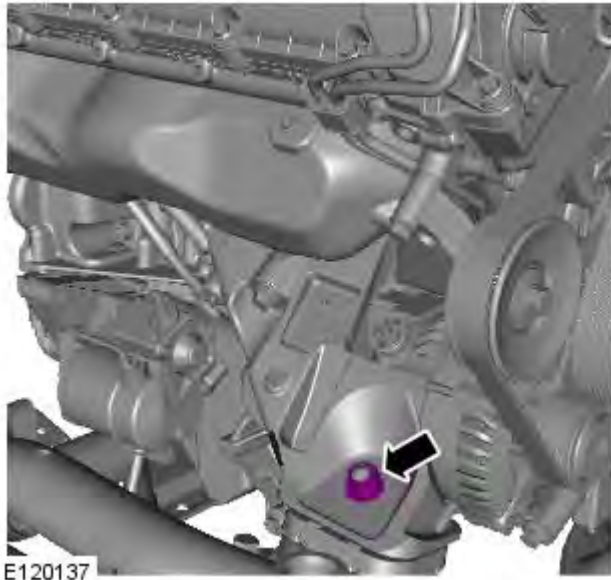

13.


14. **14.**  **CAUTION:** Use a wooden block to protect the oil pan when supporting the engine.

Using a suitable hydraulic jack, raise and support the engine.

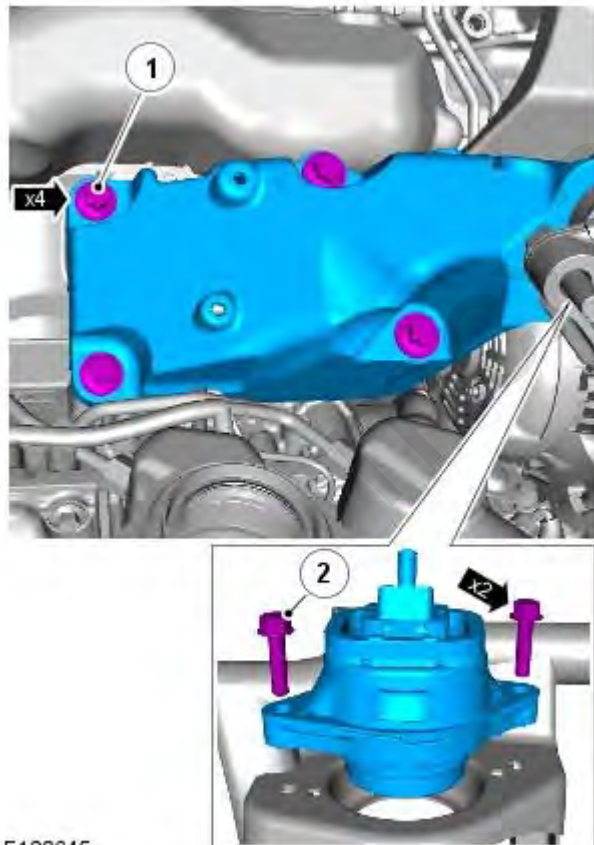


15.

Installation

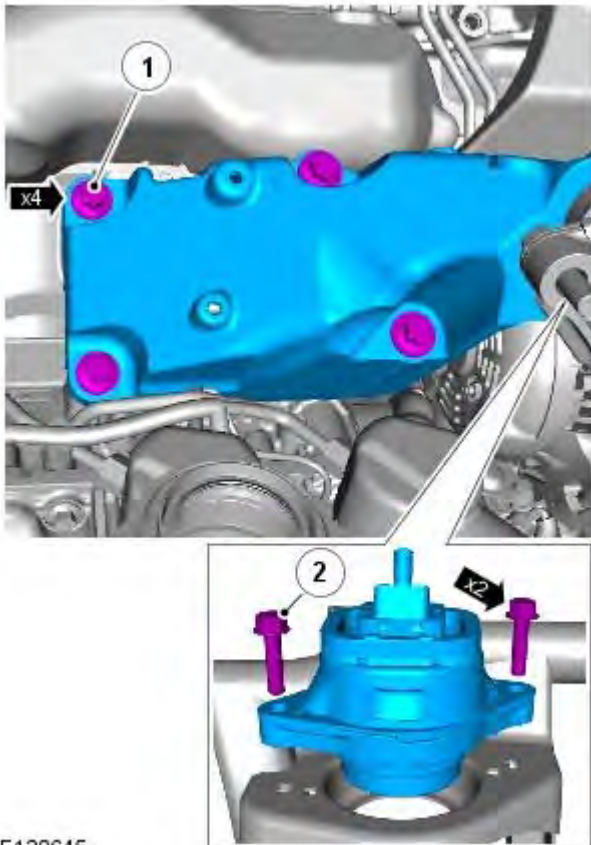


E120645

1. Torque:
 - 1 45 Nm
 - 1 60°
 - 2 56 Nm

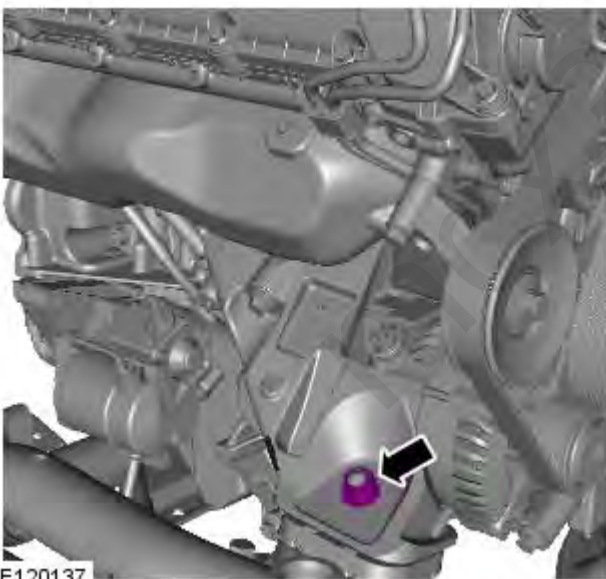

E120137

2. Torque: 100 Nm

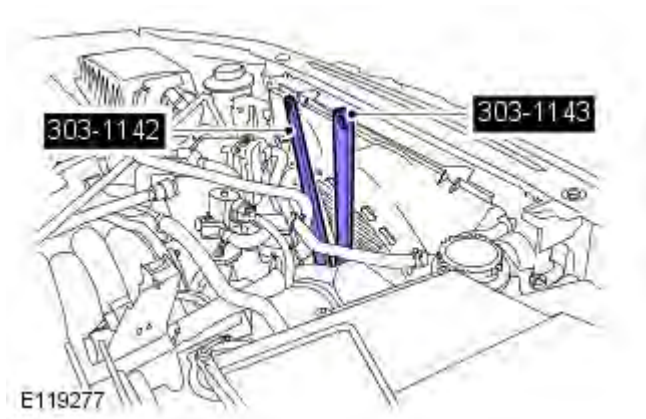


3.  **CAUTION:** Always protect the cooling pack elements to prevent accidental damage.

- **NOTE:** The thread is right handed.


- **NOTE:** Some variation in the illustrations may occur, but the essential information is always correct.

Special Tool(s): [303-1142](#), [303-1143](#)


Torque: 65 Nm

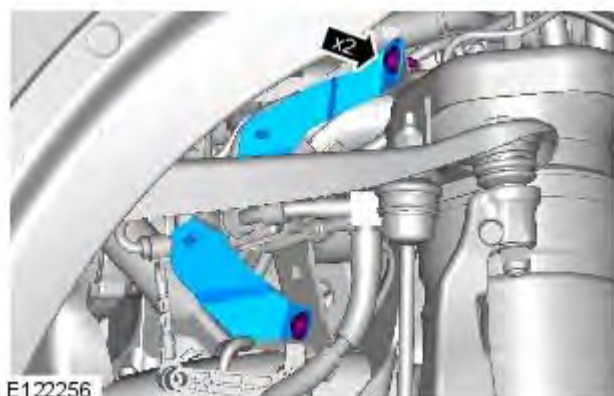

4.

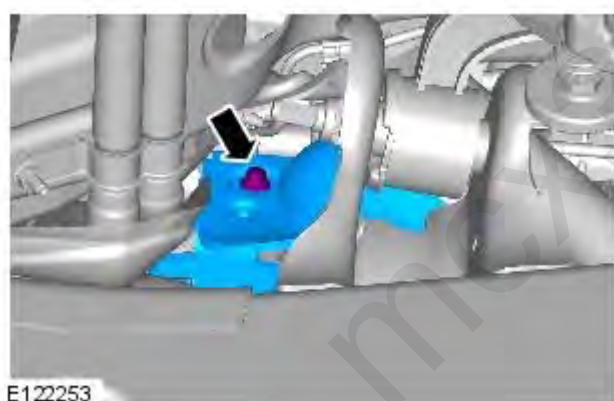


5.

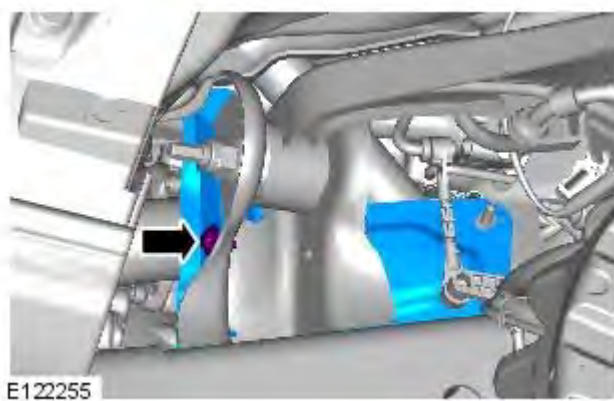


6.


7.

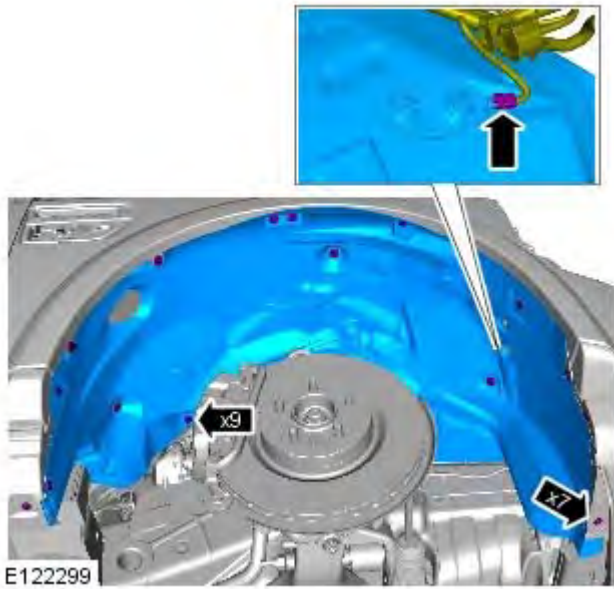

8.

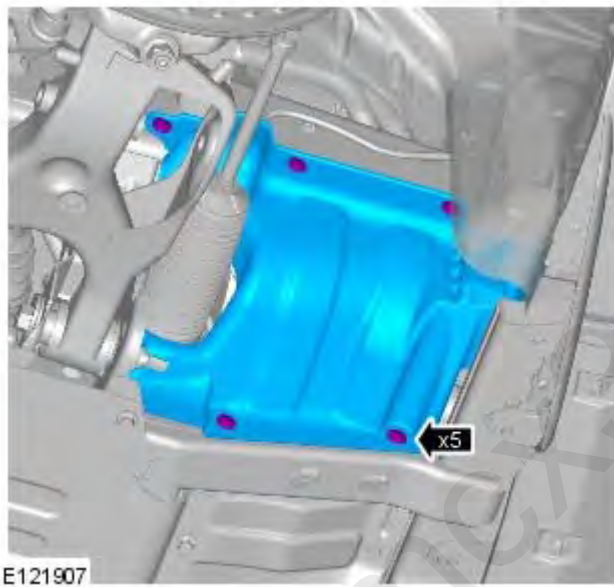

9.

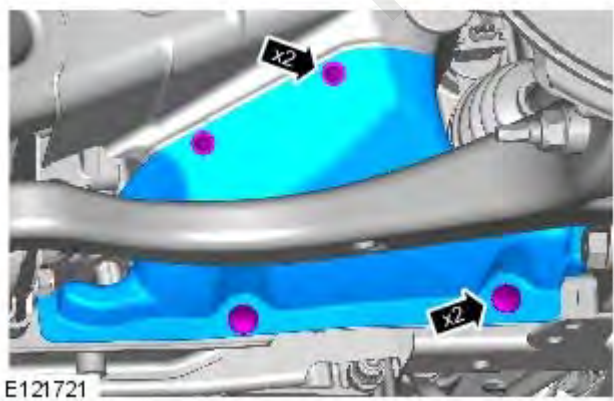

10. Install the RH front wheel and tire.

11. Refer to: [Air Cleaner Outlet Pipe T-Connector](#) (303-12D Intake Air Distribution and Filtering - V8 5.0L Petrol, Removal and Installation).

12. Refer to: [Exhaust System](#) (309-00D Exhaust System - V8 5.0L Petrol,

Removal and Installation).

13. Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

mcx30.com

Engine - V8 5.0L Petrol - Exhaust Manifold LH

Removal and Installation

Special Tool(s)

 E115261	303-1444-01 Exhaust Manifold Installation Guide Pins - Threaded
 E115262	303-1444-02 Exhaust Manifold Installation Guide Pins - Unthreaded

Removal

- NOTE: Removal steps in this procedure may contain installation details.
- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.


1. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


2.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.


3. Refer to: [Power Steering Pump - V8 5.0L Petrol](#) (211-02 Power Steering, Removal and Installation).
4. Refer to: [Exhaust System](#) (309-00D Exhaust System - V8 5.0L Petrol, Removal and Installation).

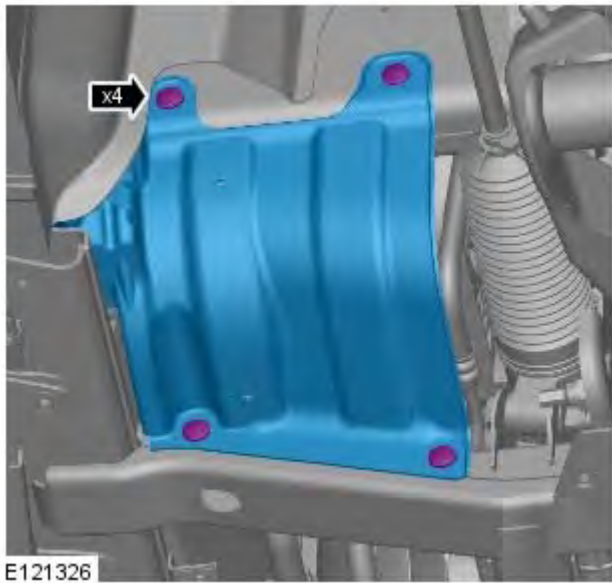

5.

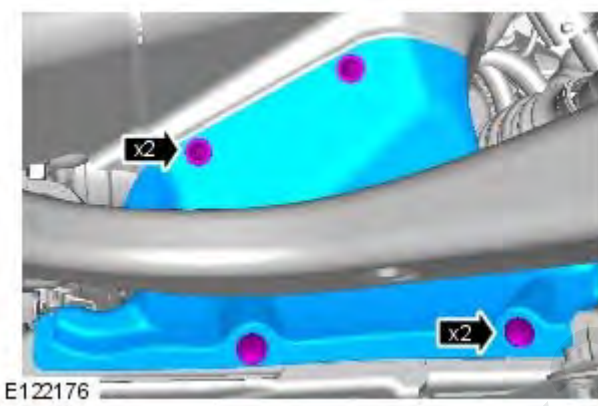


6.

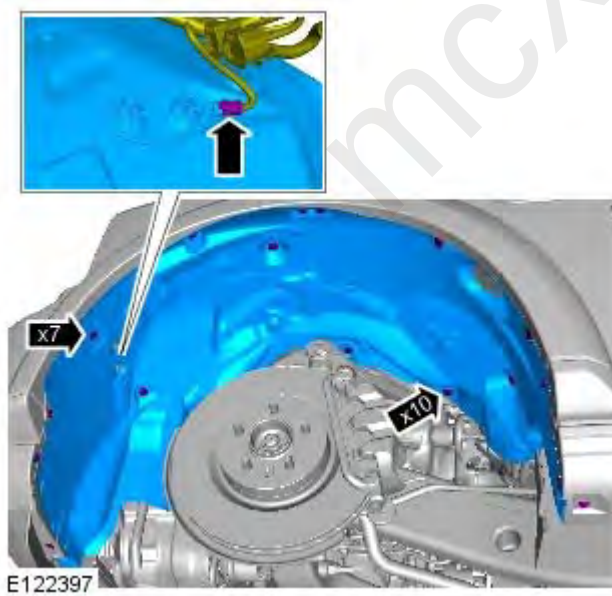


7.


8.

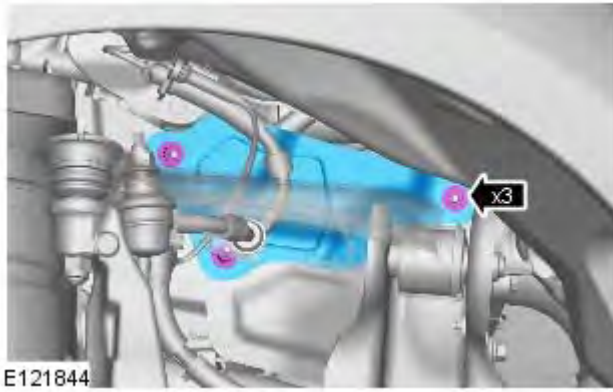


9.

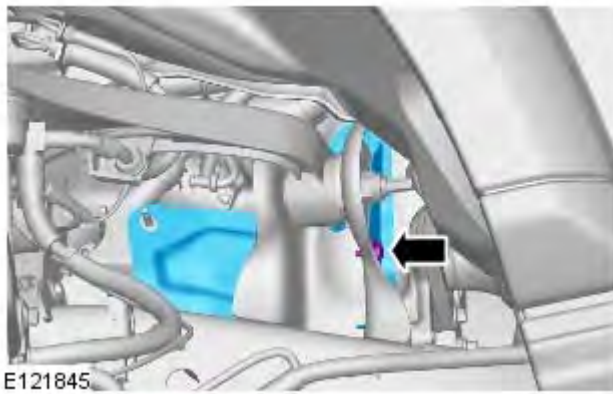


10.

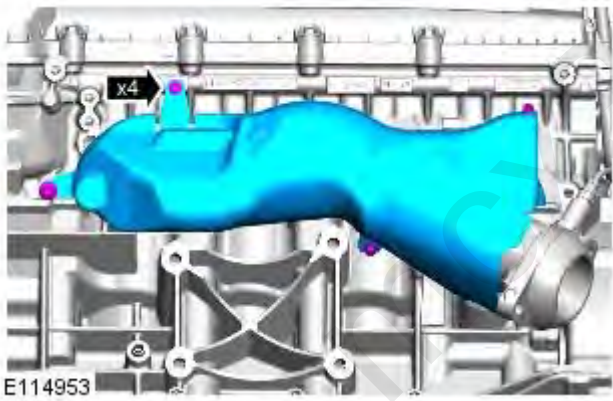


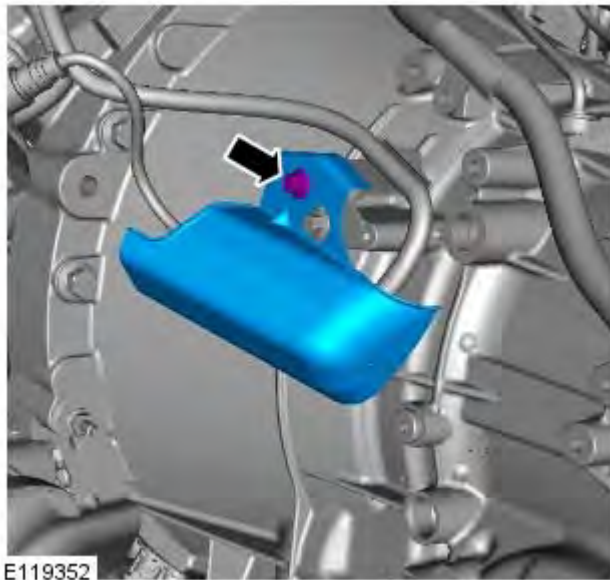

11.

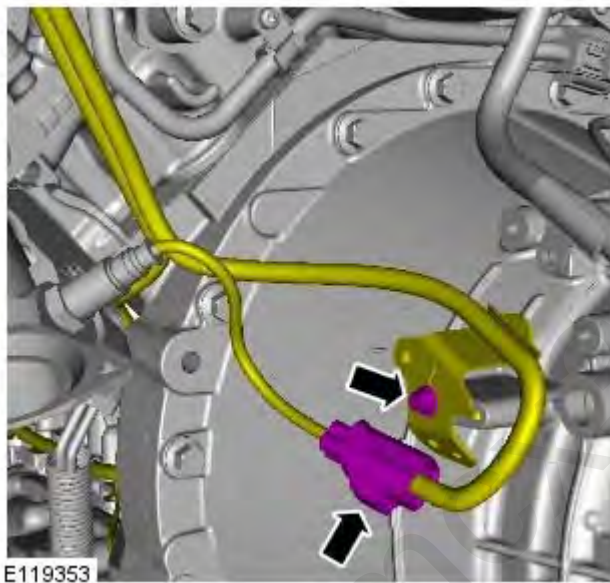


12.

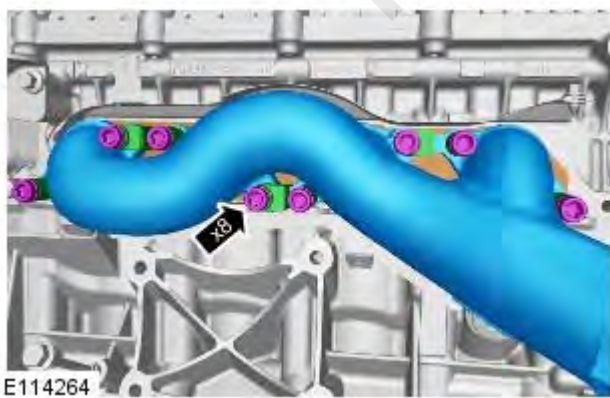


13. **13.**  **CAUTION:** Discard the bolts.
- **NOTE:** Discard the gasket.
 - **NOTE:** Make sure that the position of the spacers is noted before removal of the manifold.

14. **14.** NOTE: Do not disassemble further if the component is removed for access only.

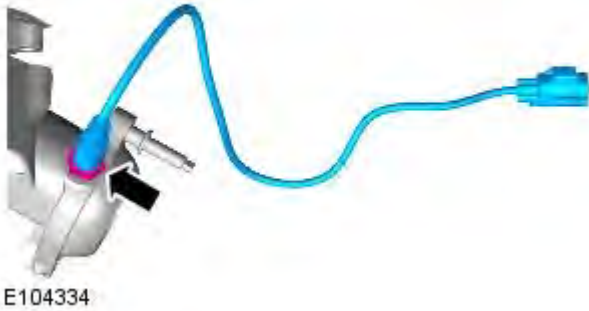

Installation

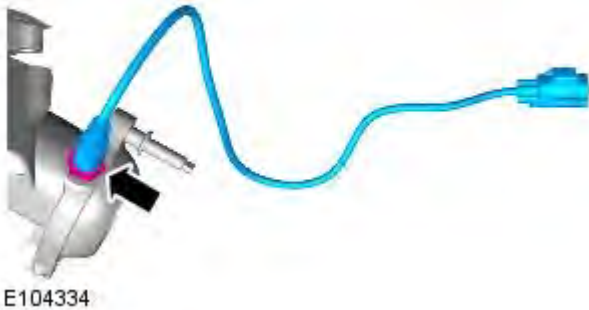

1. **1.** CAUTIONS:



Make sure that the mating faces are clean and free of foreign material.



Make sure the anti-seize compound does not contact the catalyst monitor sensor tip.



If accidentally dropped or knocked install a new sensor.




Make sure the catalyst monitor sensor wiring harness is not twisted more than 180 degrees and is not in contact with either the exhaust or driveshaft.


- NOTE: If the original sensor is to be installed, apply lubricant meeting specification ESE-M12A4-A to the thread of the sensor.

Torque: 45 Nm

2. **2.** NOTE: Install a new gasket.


Special Tool(s): 303-1444-01

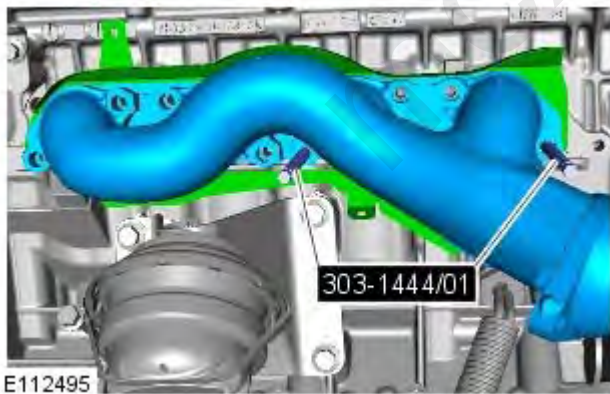

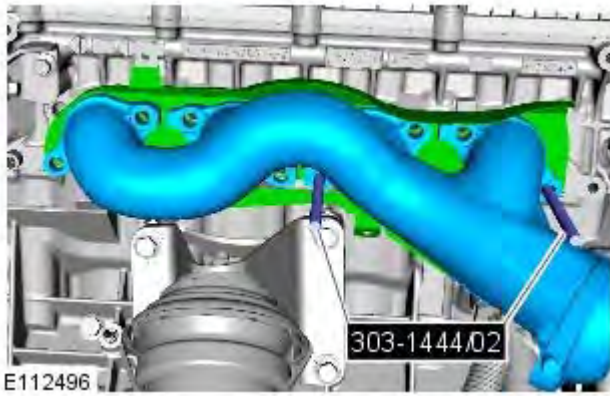

3. **3.** NOTE: If a new cylinder head is installed use the special tools in the illustration.


Special Tool(s): [303-1444-02](#)

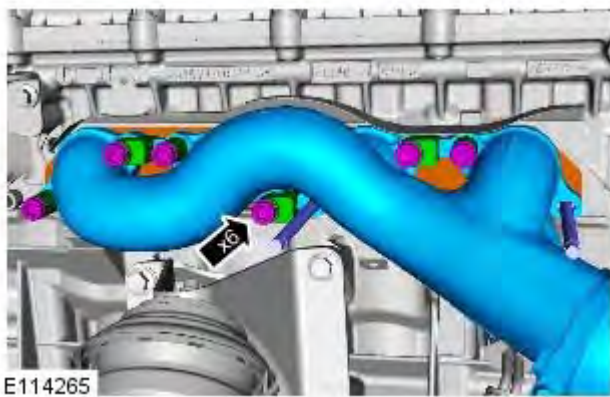


4. **4.**  CAUTION: Make sure that new bolts are installed.

- NOTE: Install the spacers in the noted position.

Torque: 10 Nm

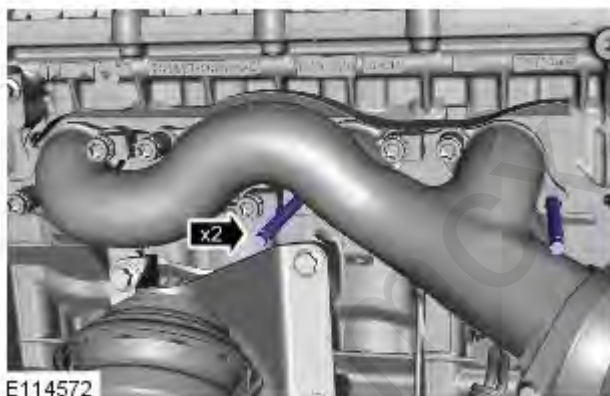


5. Remove the special tool.

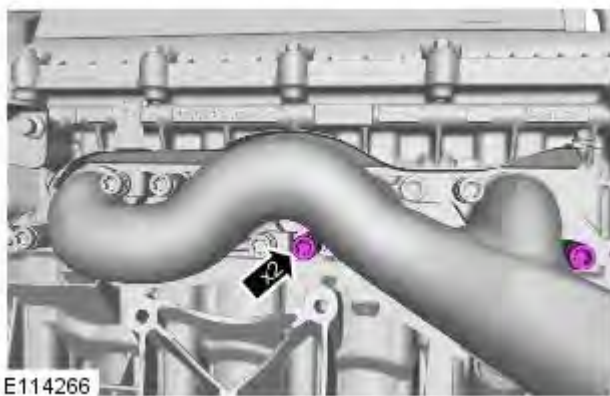


6. **6.**  CAUTION: Make sure that new bolts are installed.

- NOTE: Install the spacers in the noted position.


Torque: 10 Nm

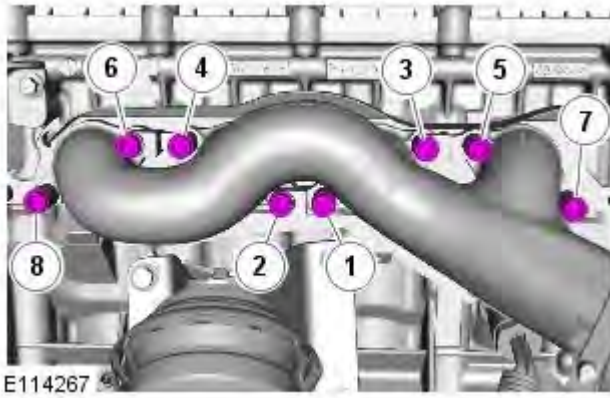


7. Torque: 18 Nm

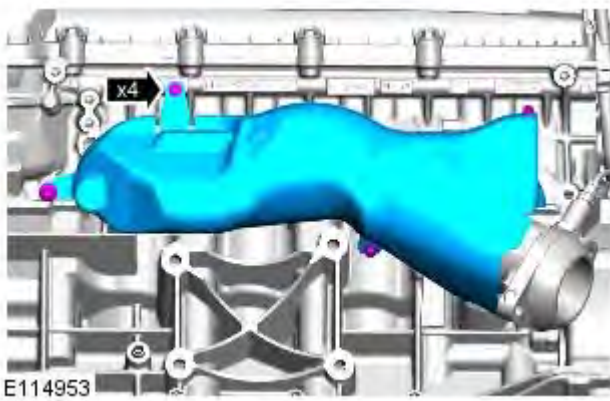

8. Torque: 3 Nm

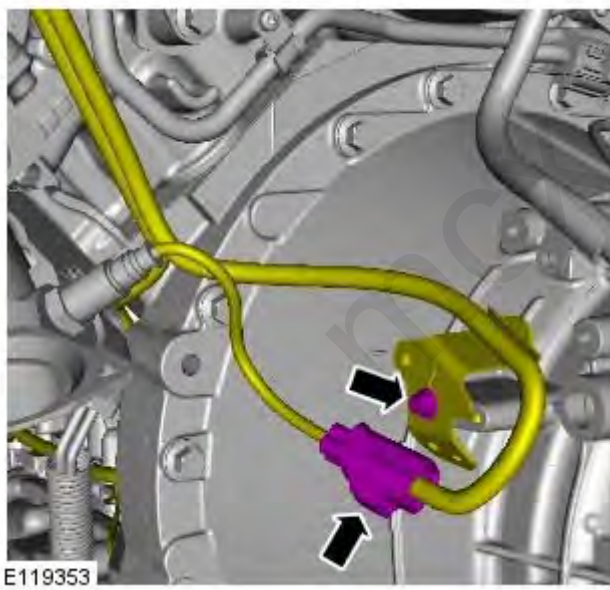


9. Torque: 10 Nm

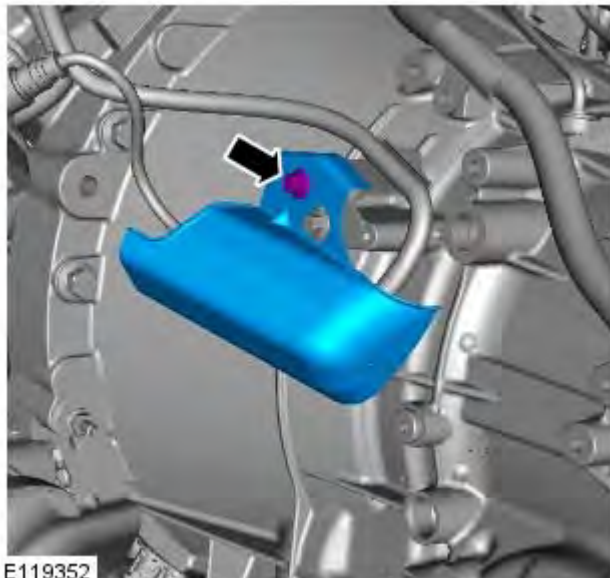


E119352

10. Torque: 10 Nm

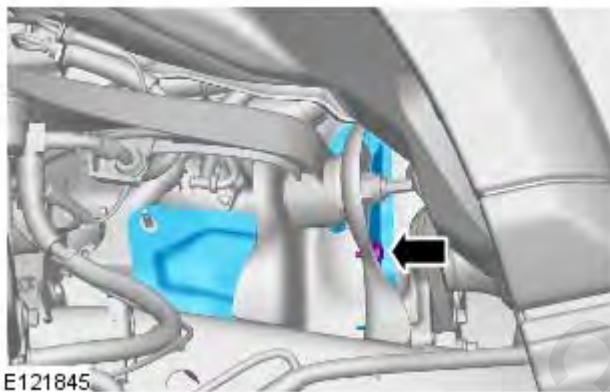

E121845


11.

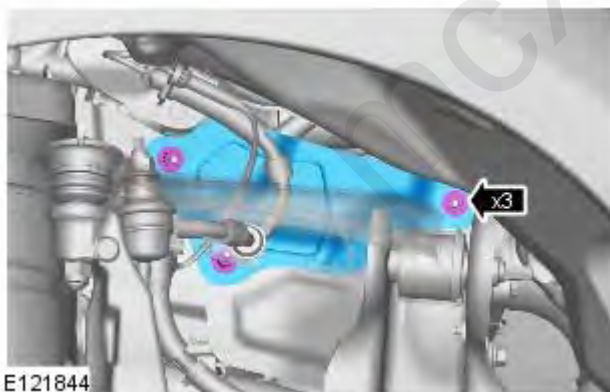


E121844

12.


13.

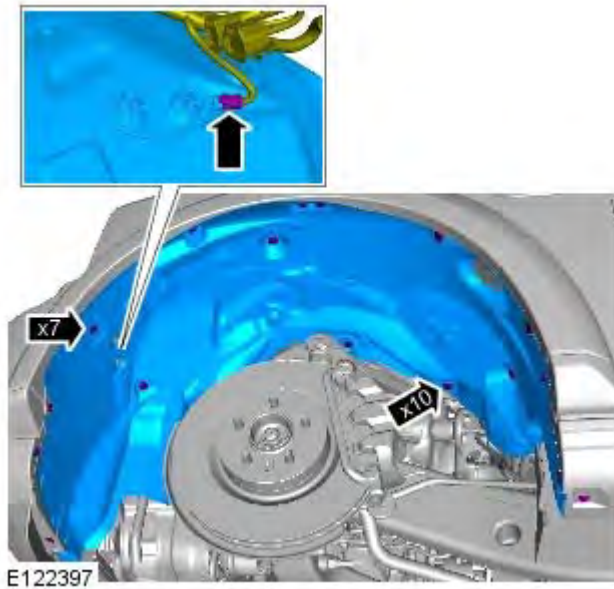

14.

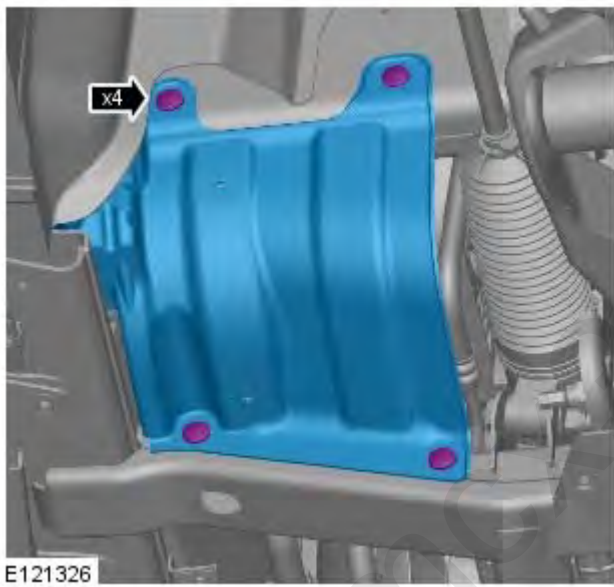

15.

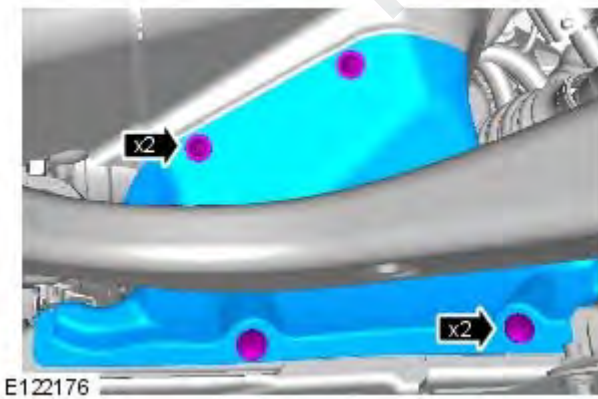

16. Refer to: [Exhaust System](#) (309-00D Exhaust System - V8 5.0L Petrol, Removal and Installation).

17. Refer to: [Power Steering Pump - V8 5.0L Petrol](#) (211-02 Power Steering, Removal and Installation).

18. Install the battery.

Refer to: [Battery](#) (414-01 Battery, Mounting and Cables, Removal and Installation).

mcx30.com

Engine - V8 5.0L Petrol - Exhaust Manifold RH

Removal and Installation

Special Tool(s)

 E115261	303-1444-01 Exhaust Manifold Installation Guide Pins - Threaded
 E115262	303-1444-02 Exhaust Manifold Installation Guide Pins - Unthreaded

Removal

- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.
- NOTE: Some illustrations may show the engine removed for clarity.

1. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


2.  **WARNING:** Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3. Refer to: [Exhaust System](#) (309-00D Exhaust System - V8 5.0L Petrol, Removal and Installation).

4.


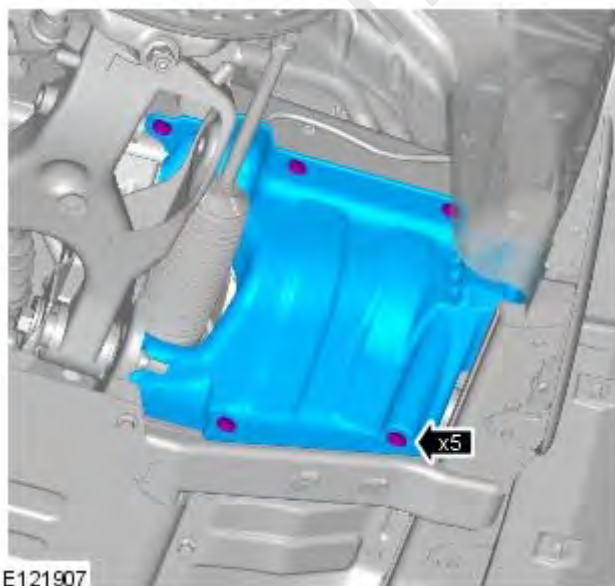


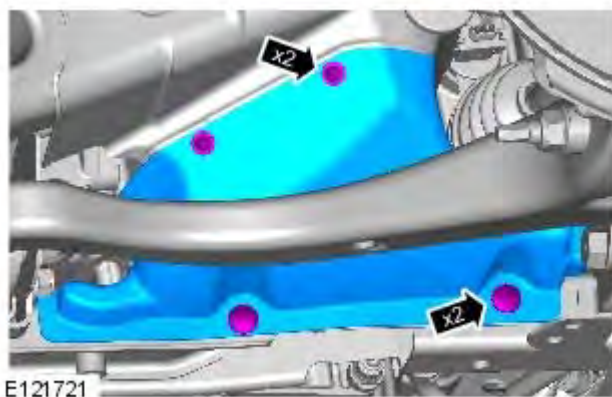


5.




6.

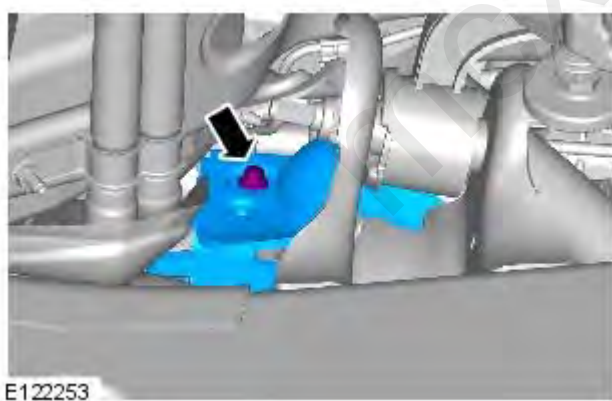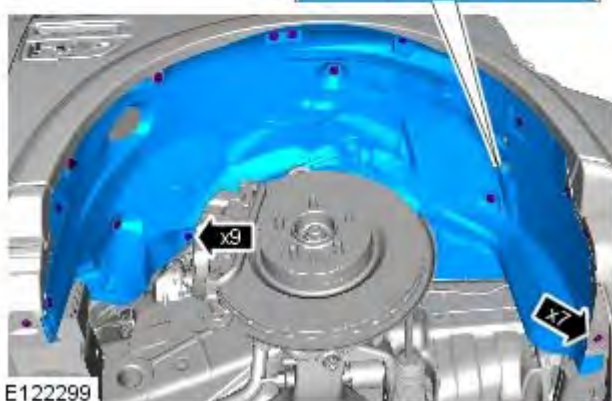


7.

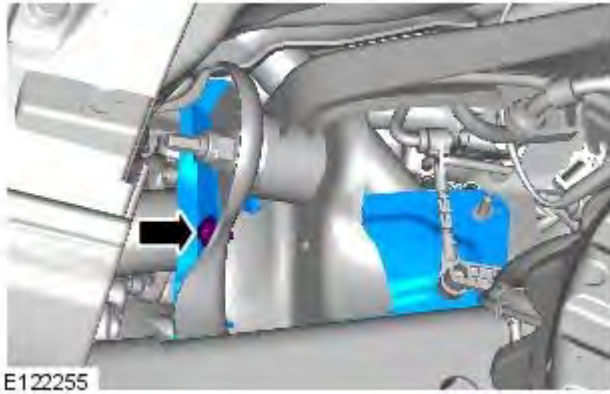


8.

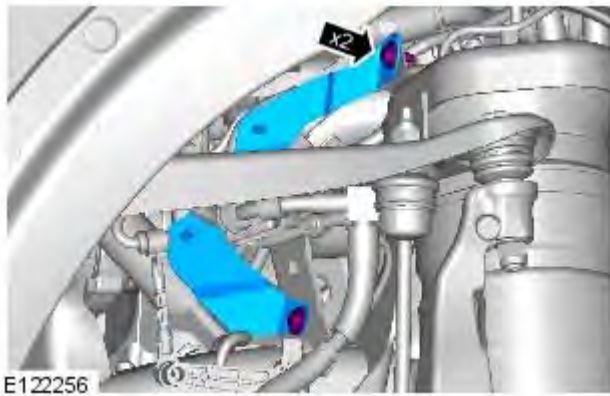

9.

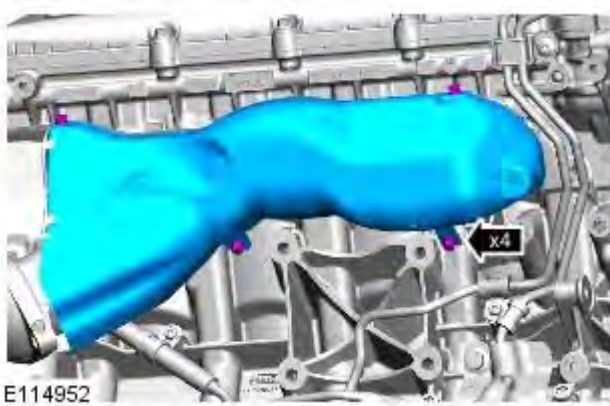

10.

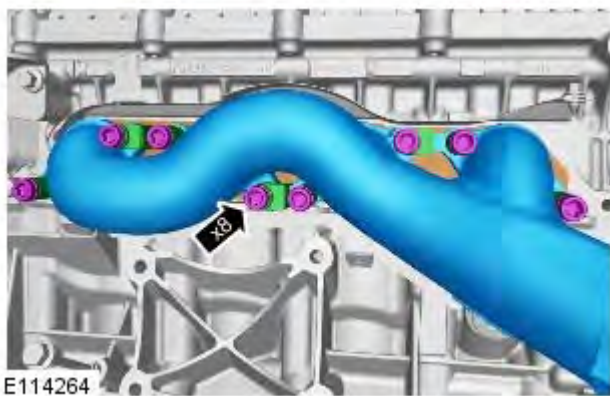

11. **11. CAUTIONS:**




Discard the bolts.



LH illustration shown, RH is similar.



- NOTE: Discard the gasket.
- NOTE: Make sure that the position of the spacers is noted before removal of the manifold.

12. **12.** NOTE: Do not disassemble further if the component is removed for access only.

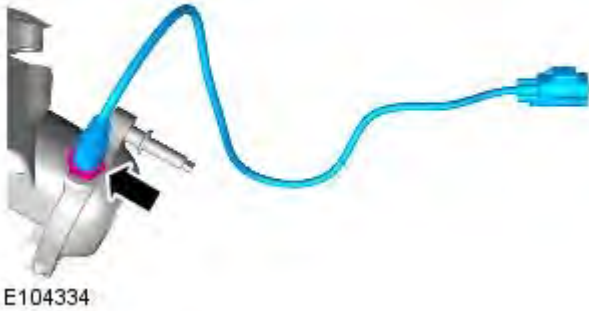

Installation

1. Torque: 45 Nm

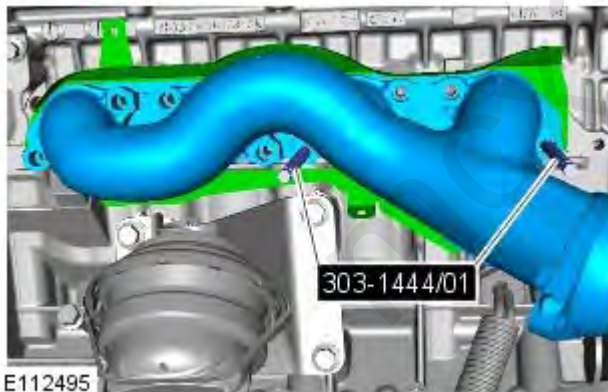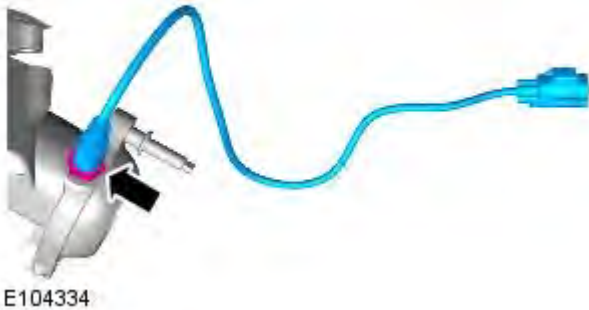


2. **2.**  CAUTION: LH illustration shown, RH is similar.

- NOTE: Install a new gasket.

Install the special tool.

Special Tool(s): [303-1444-01](#)

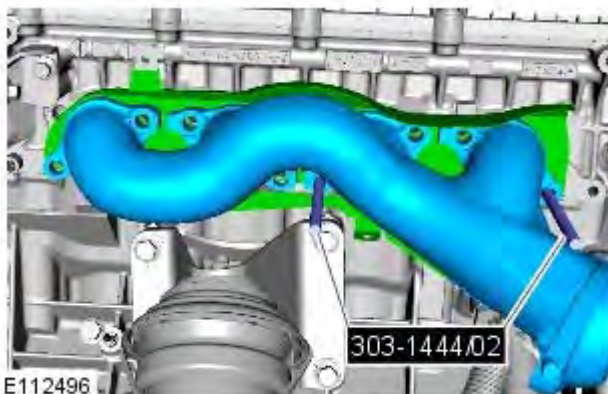


3. **3.**  CAUTION: LH illustration shown, RH is similar.

- NOTE: If a new cylinder head is installed use the special tools in the illustration.

Install the special tool.

Special Tool(s): [303-1444-02](#)

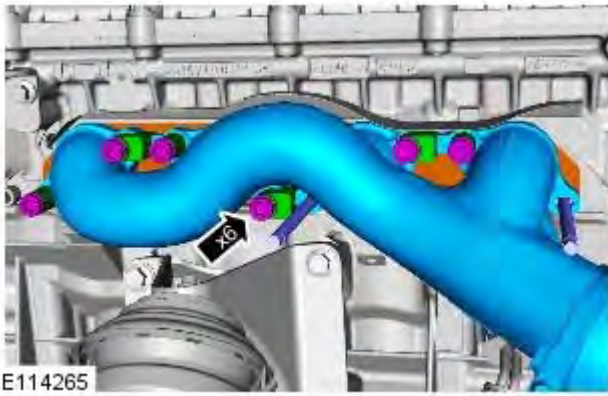

4. **4. CAUTIONS:**



Make sure that new bolts are installed.




LH illustration shown, RH is similar.

- **NOTE:** Install the spacers in the noted position.

Torque: 10 Nm



5. **5. CAUTION:** LH illustration shown, RH is similar.
Remove the special tool.

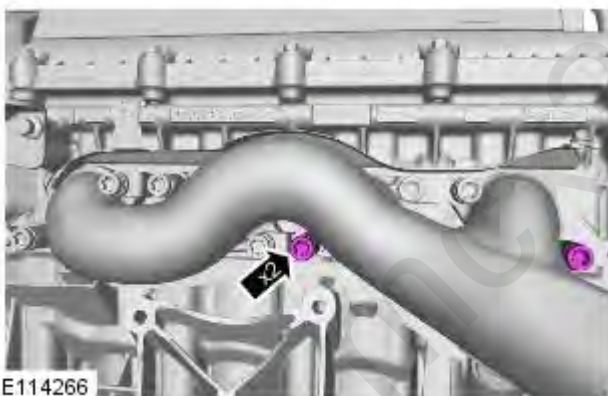

6. **6. CAUTIONS:**




Make sure that new bolts are installed.



LH illustration shown, RH is similar.


- **NOTE:** Install the spacers in the noted position.

Torque: 10 Nm

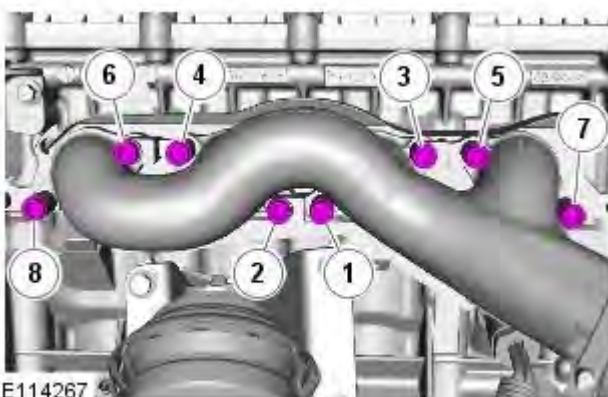


7. **7. CAUTION:** LH illustration shown, RH is similar.


Torque: 18 Nm

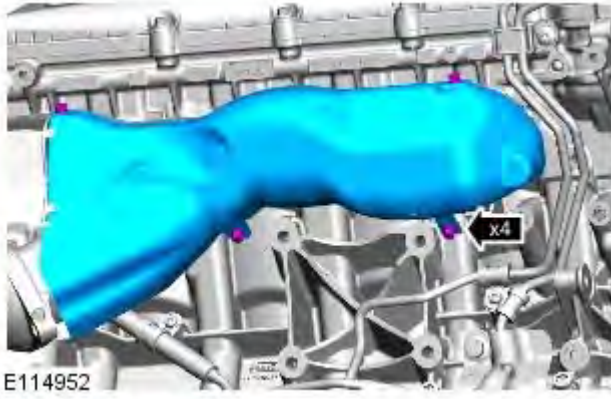


8.

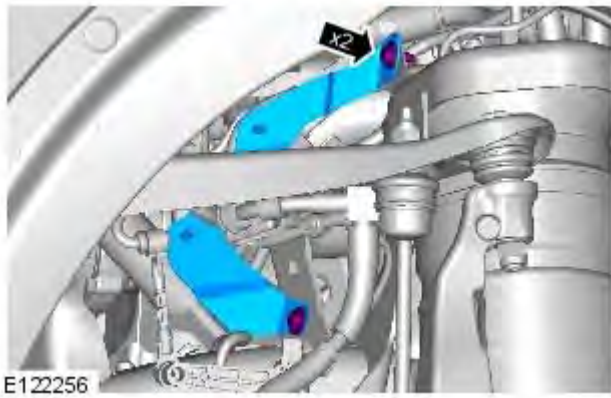

9.

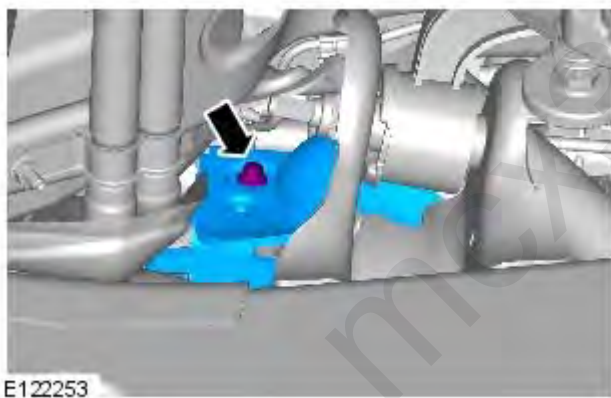


10.

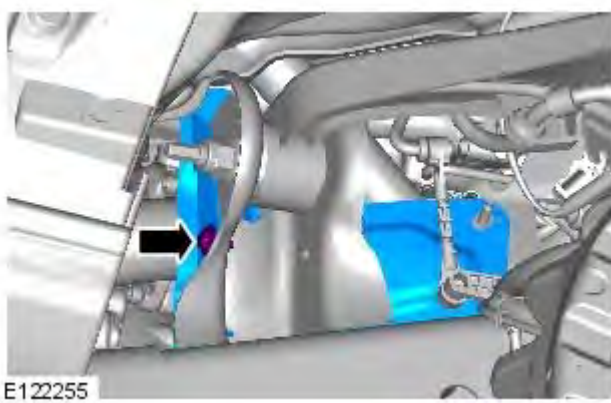


11.


12.

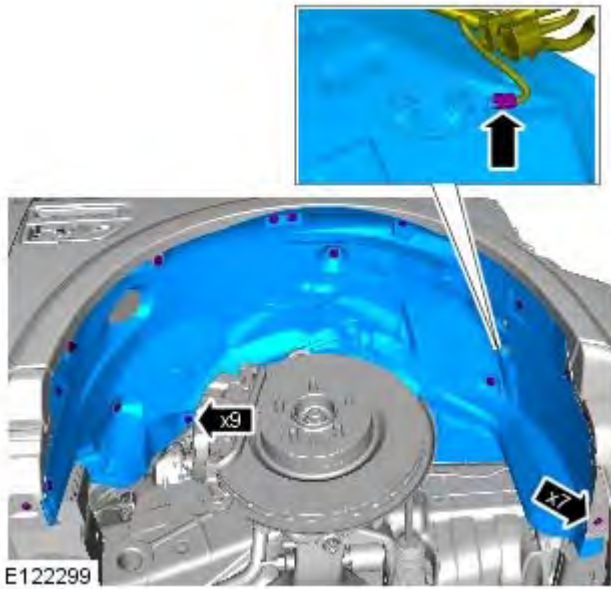

13.

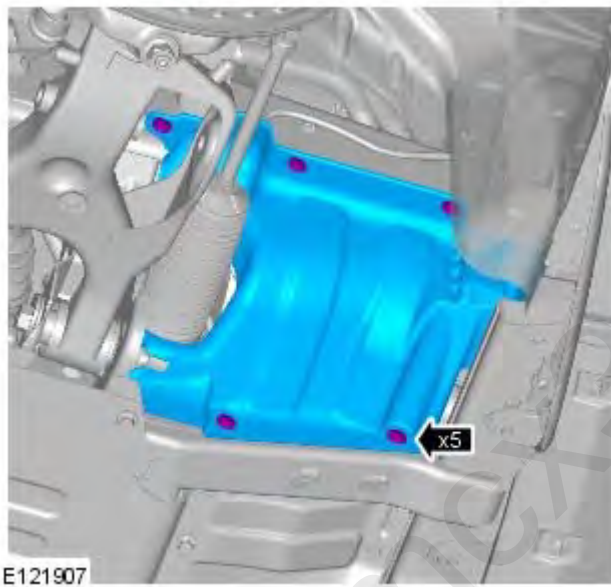

14.

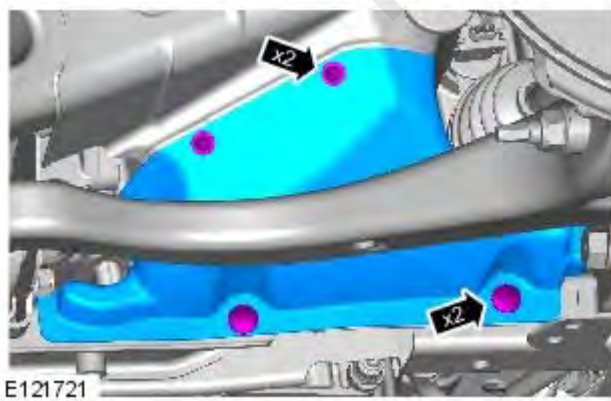

15. Refer to: [Exhaust System](#) (309-00D Exhaust System - V8 5.0L Petrol, Removal and Installation).

16. Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System -

General Information, Specifications).

mcx30.com

Engine - V8 5.0L Petrol - Flexplate

Removal and Installation

Removal

- NOTE: Removal steps in this procedure may contain installation details.


1. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.  **WARNING:** Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3. Refer to: [Transmission - V8 5.0L Petrol](#) (307-01D Automatic Transmission/Transaxle - V8 5.0L Petrol/TDV6 3.0L Diesel, Removal).

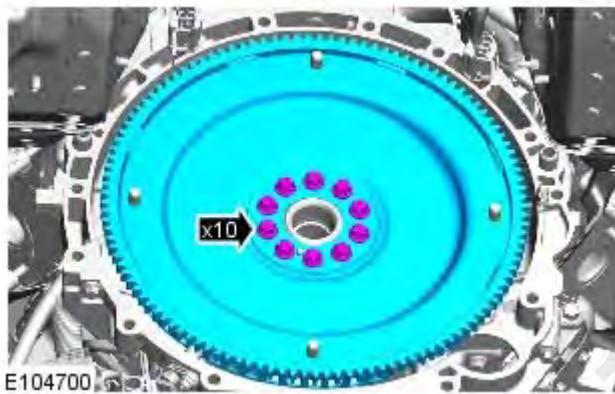

4. **4. CAUTIONS:**



Install all the bolts finger tight before final tightening.



The bolts can only be used 3 times, mark the bolts with a center punch. If 2 punch marks are visible, discard the bolts.



Make sure that no components fall off during removal.



Install the bolts in the noted position.

- NOTE: Make sure that the crankshaft is not rotated.

- NOTE: Make sure the crankshaft and flexplate mating faces are clean before installation.

- NOTE: Tighten the retaining bolts working diagonally.

Torque:

Stage 1: 45 Nm

Stage 2: 90°

Installation

1. To install, reverse the removal procedure.

Engine - V8 5.0L Petrol - Intake Manifold

Removal and Installation

Removal

- NOTE: Removal steps in this procedure may contain installation details.

Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2. Refer to: [Engine Cover - V8 5.0L Petrol](#) (501-05 Interior Trim and Ornammentation, Removal and Installation).


3.  **WARNING:** Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

4.

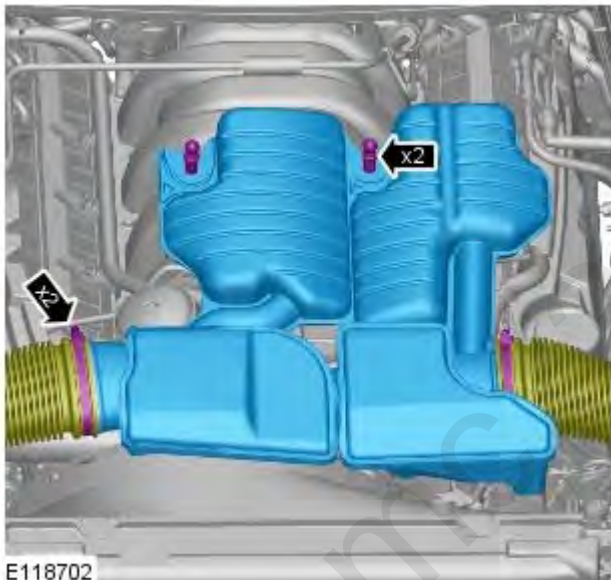


5.

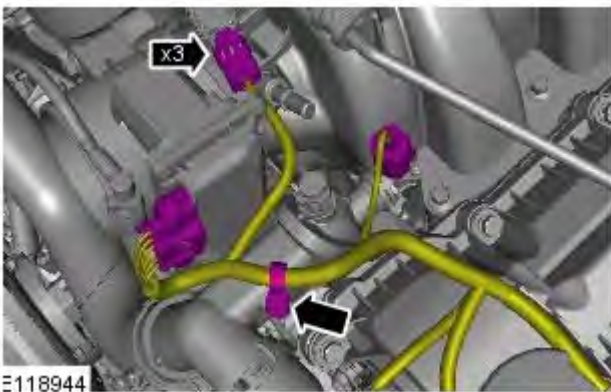


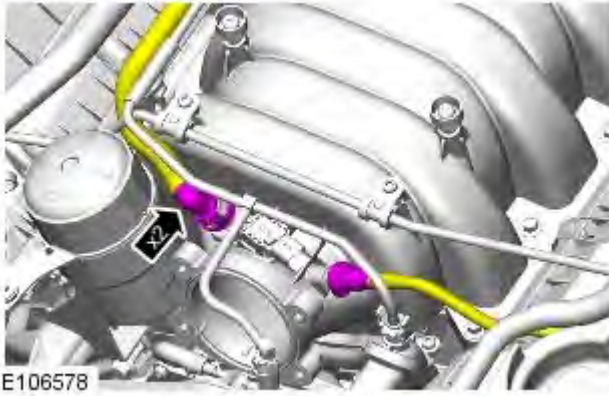


6.

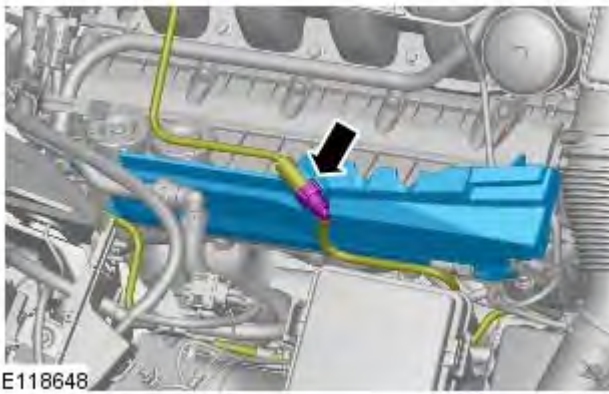

7.

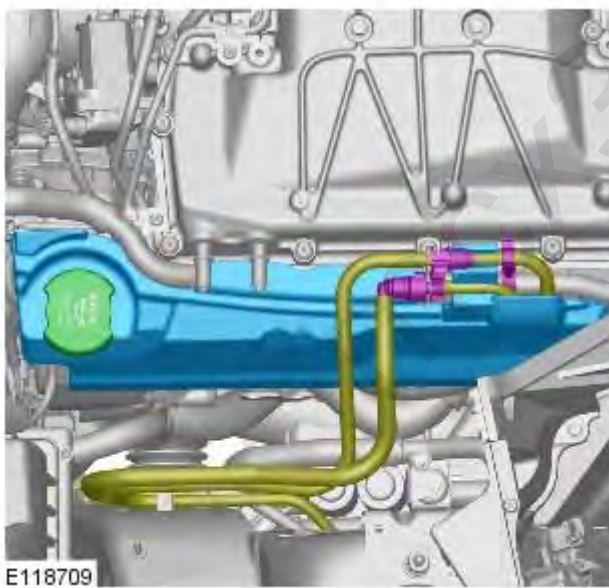

8.

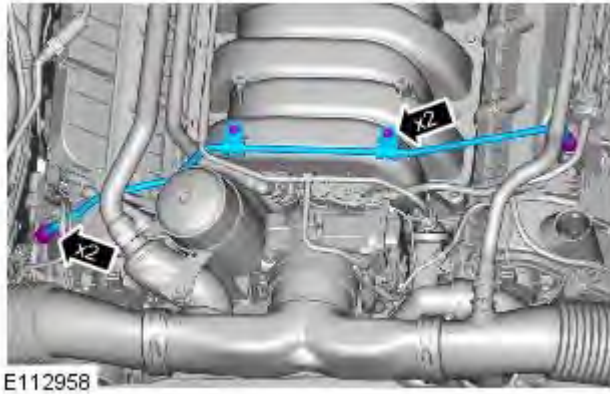


9. **9. CAUTIONS:**




Be prepared to collect escaping fluids.



Make sure that all openings are sealed. Use new blanking caps.

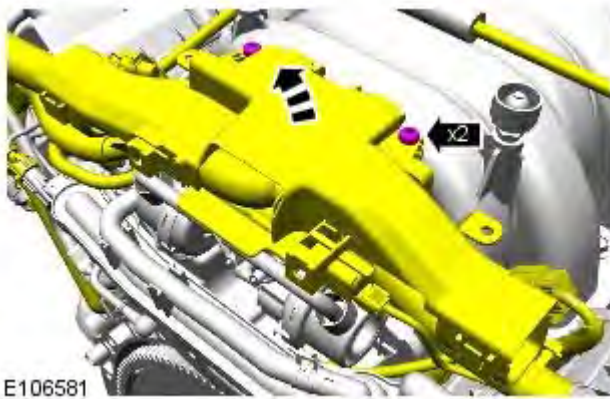


10.

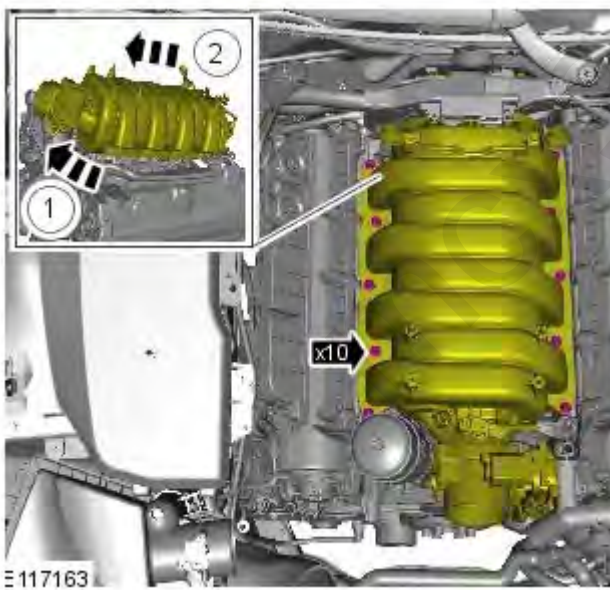


11.


12.

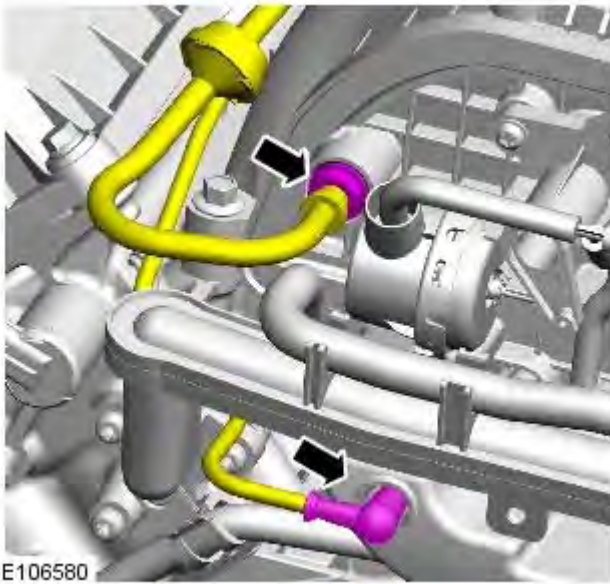


13.

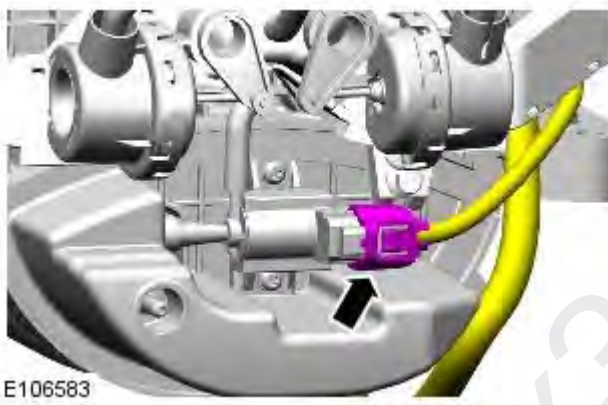

14.

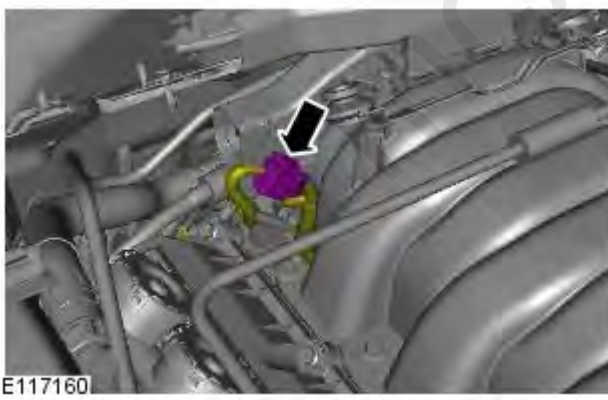


15.

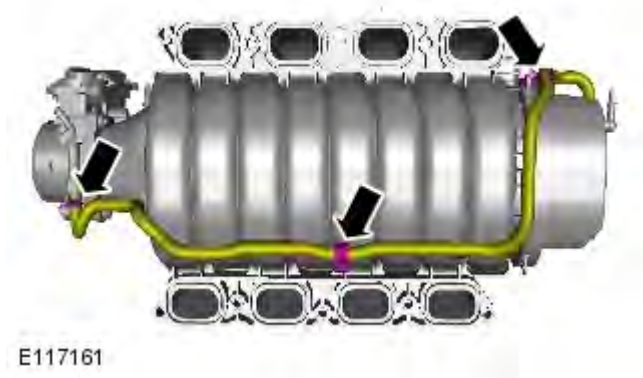


E117161

16. **16.** NOTE: Remove and discard the O-ring seal.

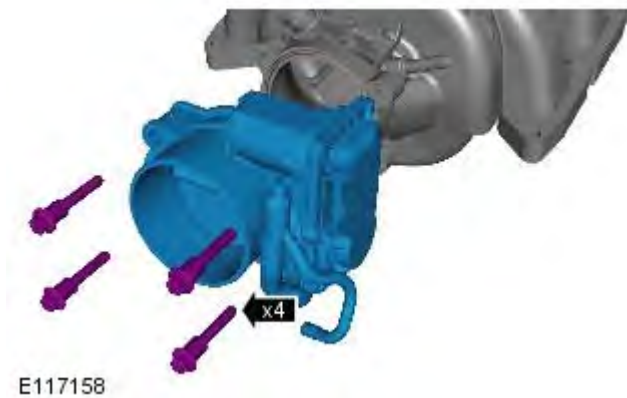


E117158

17.

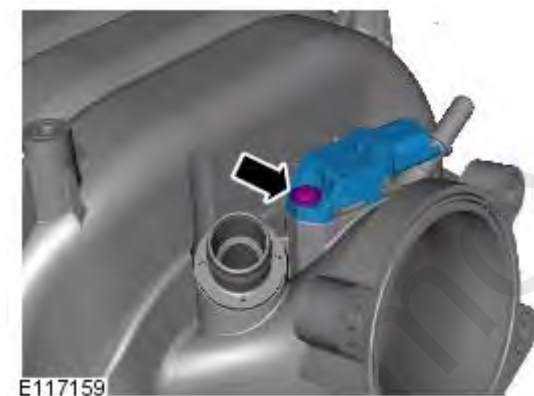


E117159

18.

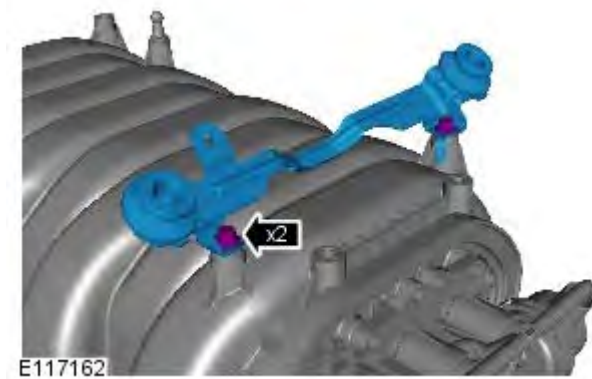


E117162


19.

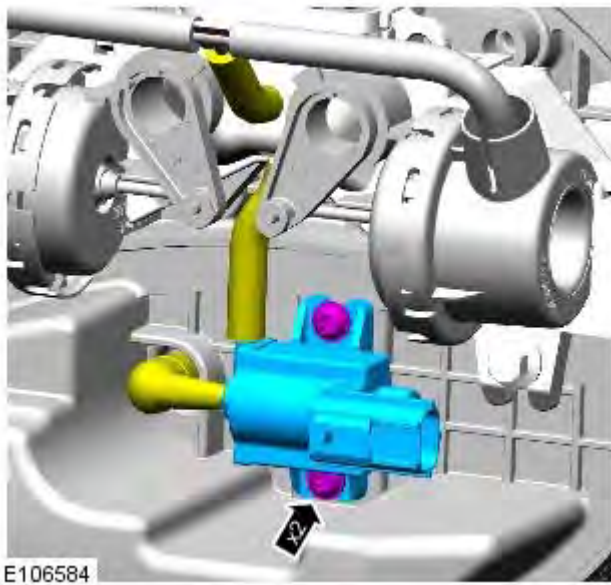

20.

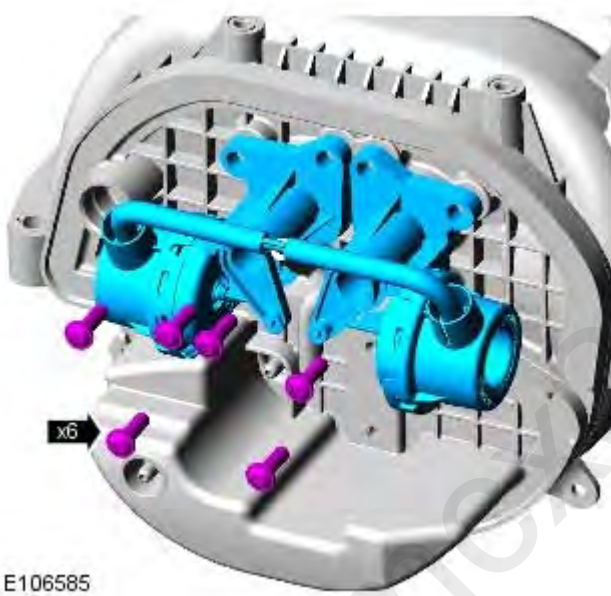


Installation

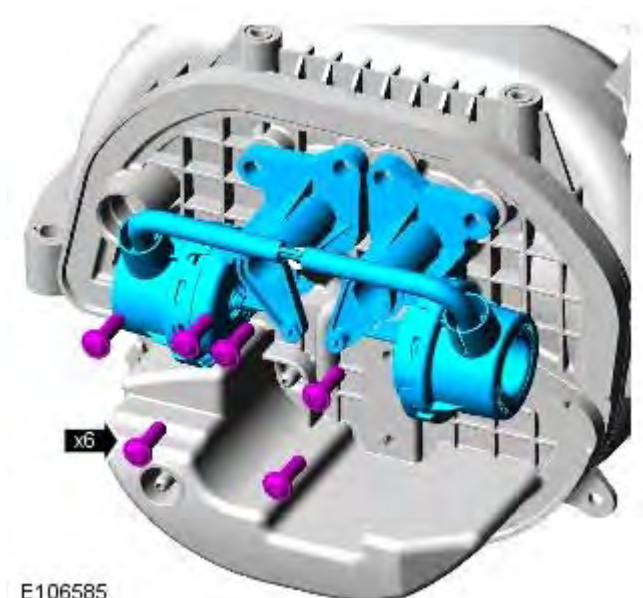


E106585

1. Torque: 5 Nm

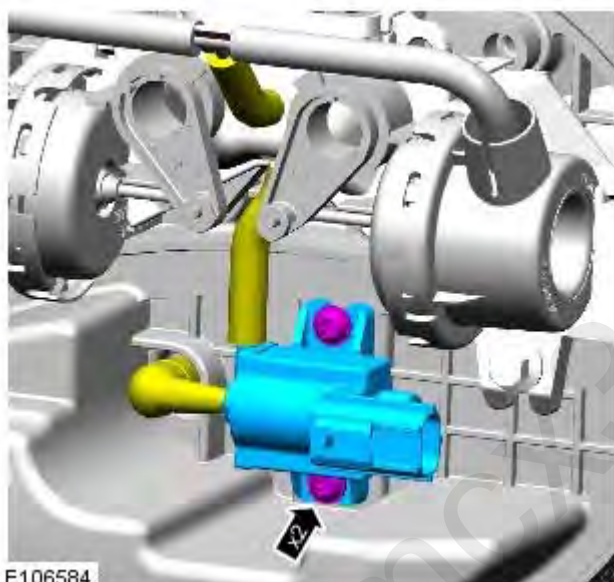

E106584


2. Torque: 10 Nm

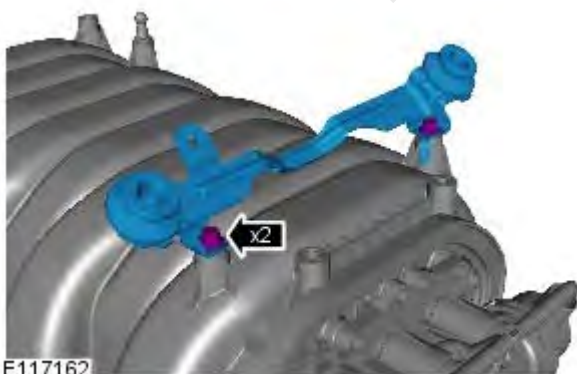

E117162


3. Torque: 10 Nm

4. Torque: 5 Nm

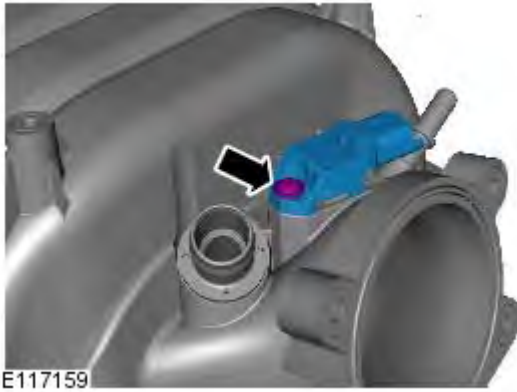


5.  CAUTION: A new O-ring seal is to be installed.


Torque: 18 Nm

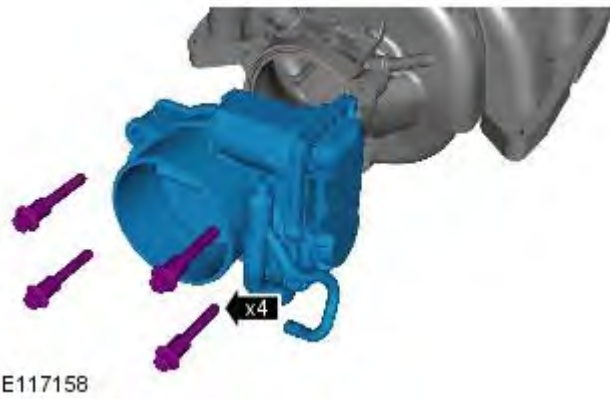


6.

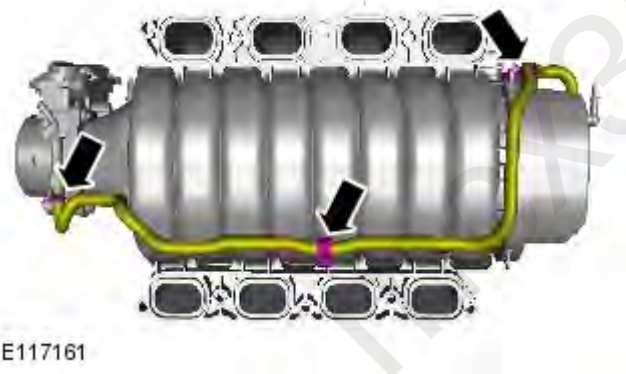


7.

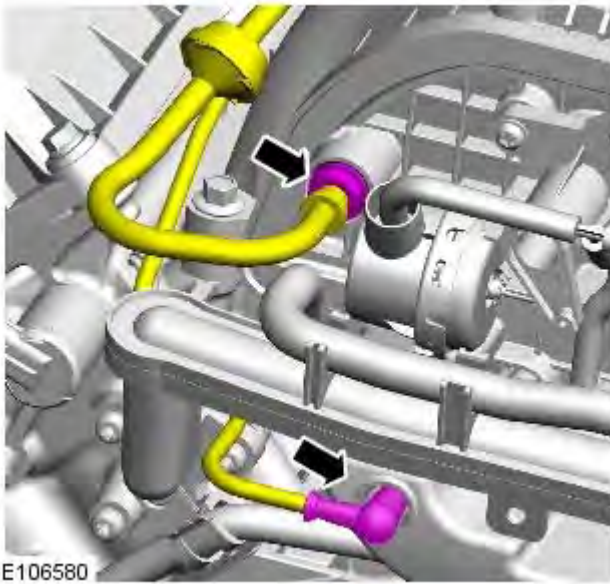


8.

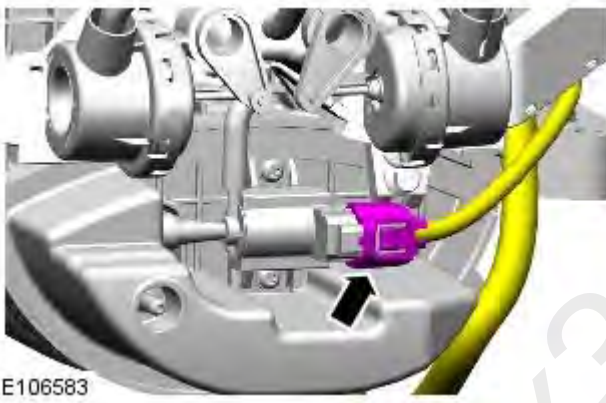

9.

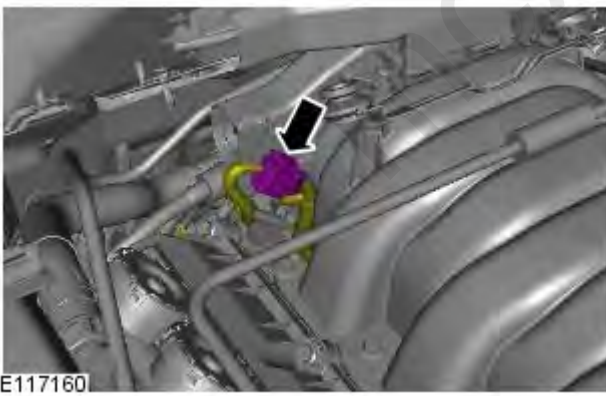

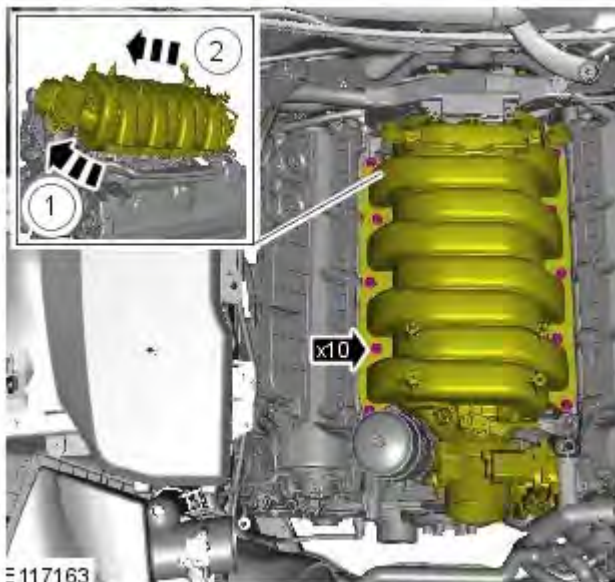

10. **10. CAUTIONS:**




Make sure that the mating faces are clean and free of corrosion and foreign material.




Install new o-ring seals


- NOTE: Do not tighten at this stage.

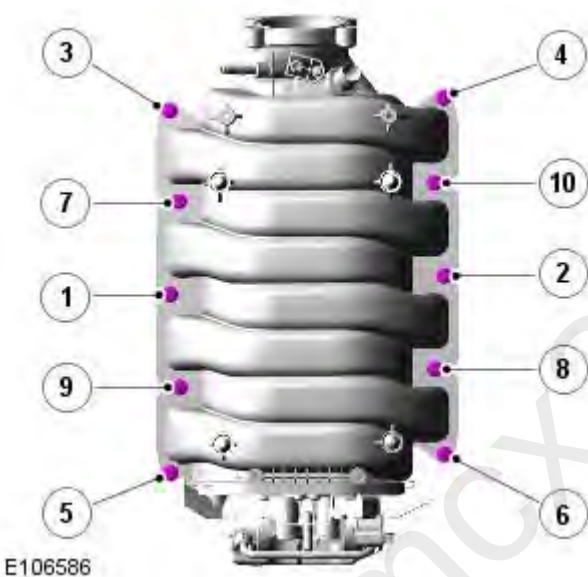


11. Torque: 25 Nm

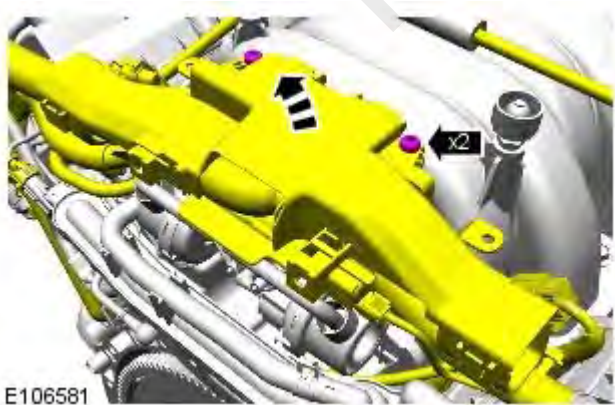


12. Torque: 8 Nm

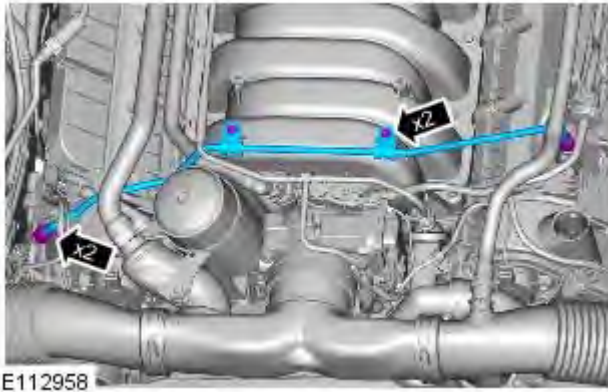


13. **13.** NOTE: Do not tighten at this stage.
- NOTE: Remove and discard the blanking caps.

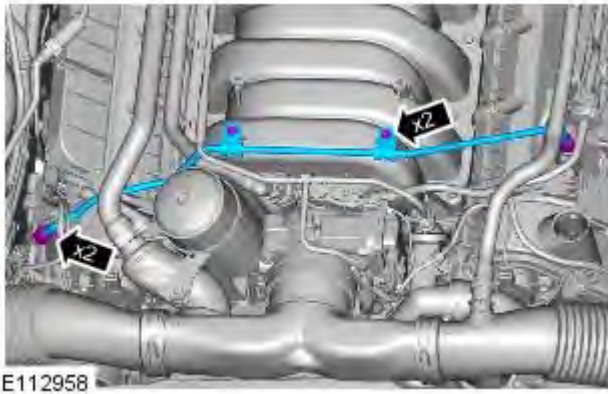


- 14.
- Torque:*
Unions 21 Nm
Bolts 8 Nm

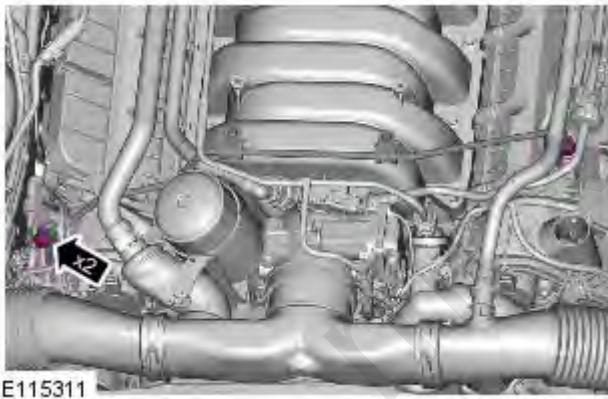


- 15.
- Torque:* 21 Nm

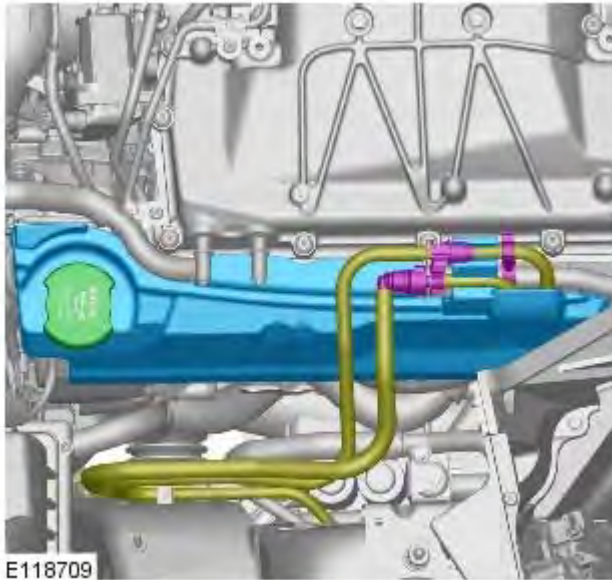


16.

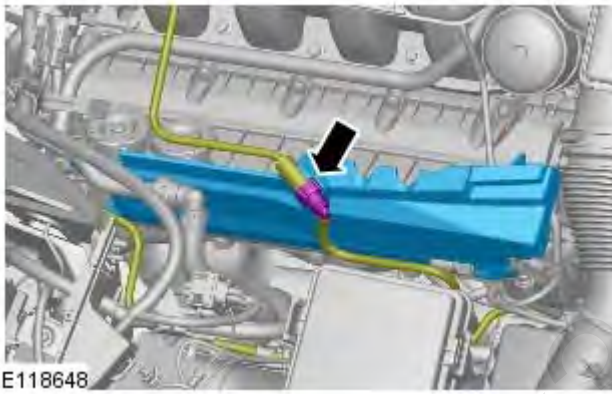


17.

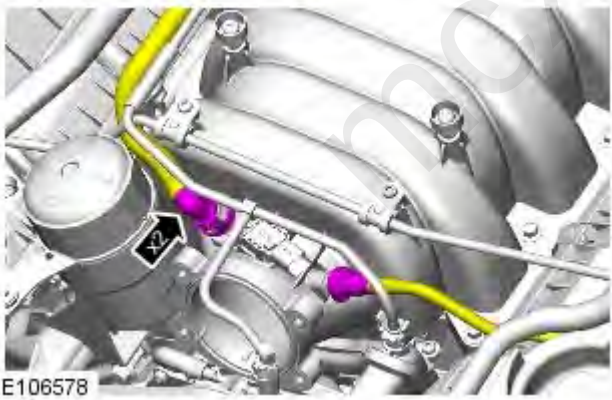

18.

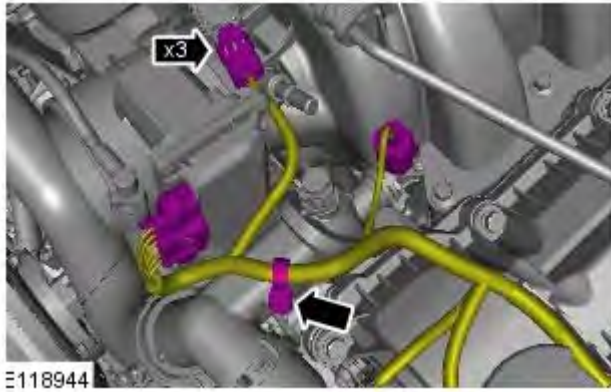

19.

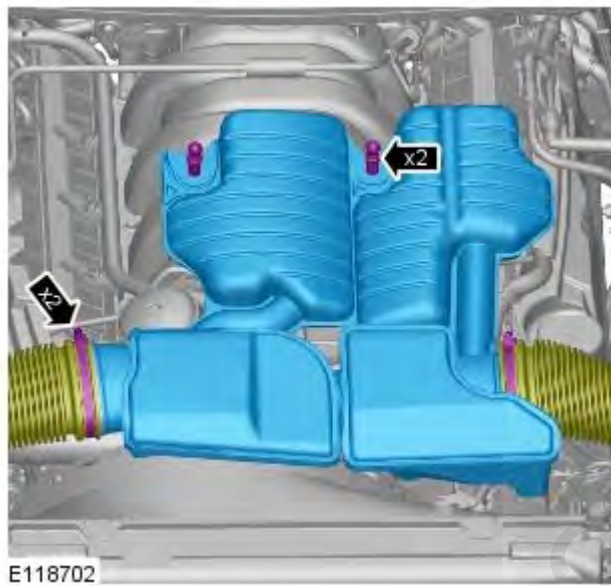

20. Torque: 10 Nm

21. Lower the vehicle.

22. Refer to: [Engine Cover - V8 5.0L Petrol](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

23. Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

Engine - V8 5.0L Petrol - Oil Cooler

Removal and Installation

Removal

- NOTE: Removal steps in this procedure may contain installation details.
- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.  **WARNING:** Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

3. Refer to: [Engine Oil Draining and Filling](#) (303-01D Engine - V8 5.0L Petrol, General Procedures).

4. Refer to: [Cooling System Draining, Filling and Bleeding](#) (303-03D Engine Cooling - V8 5.0L Petrol, General Procedures).


5. Refer to: [Intake Manifold](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

6.

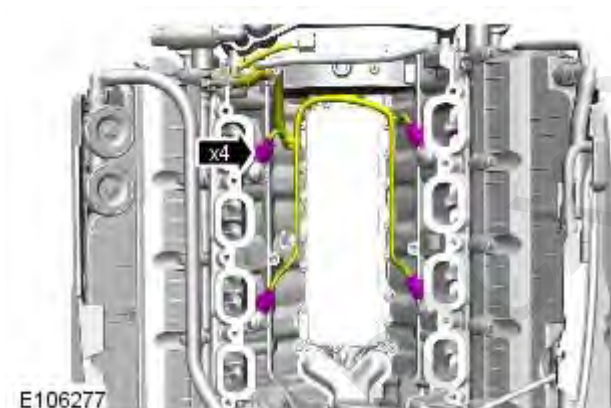

7.



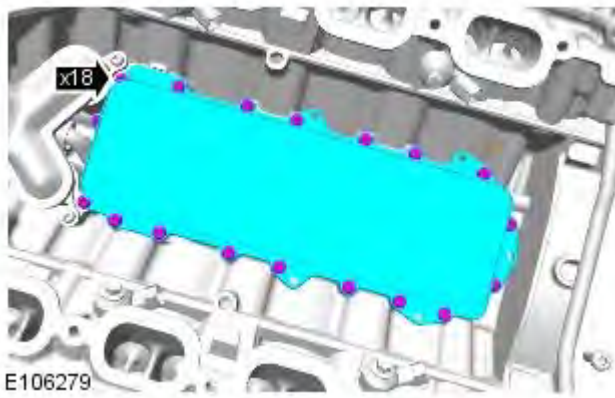

8. **8. CAUTIONS:**




Be prepared to collect escaping oil.




Be prepared to collect escaping coolant.



Torque: 13 Nm

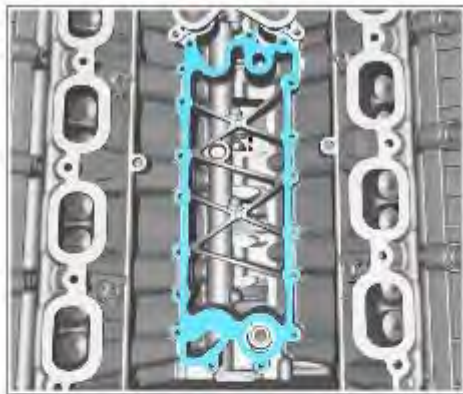

9. **9. CAUTION:** Make sure that these components are installed to the noted removal position.


- NOTE: Install a new gasket.

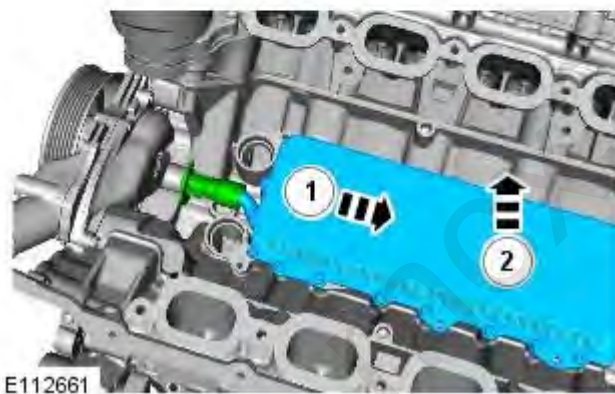

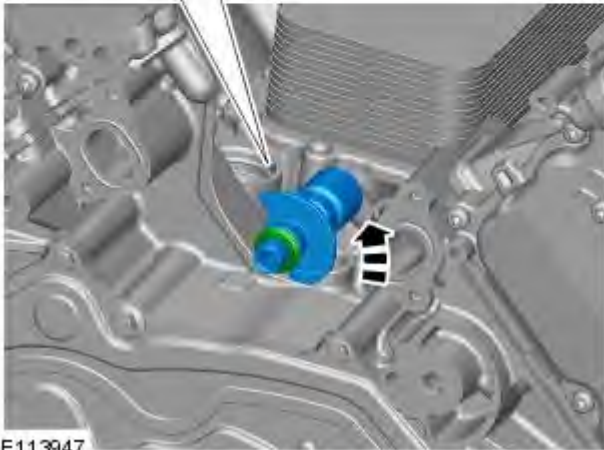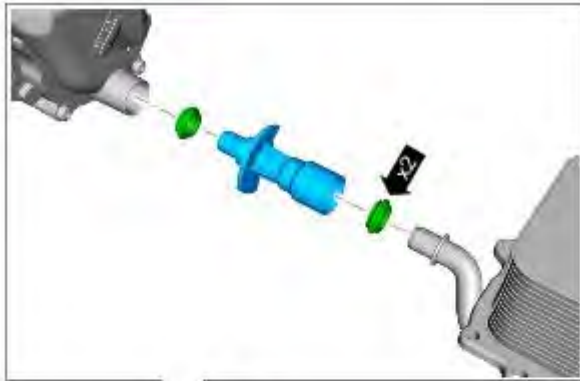

E113947

Installation

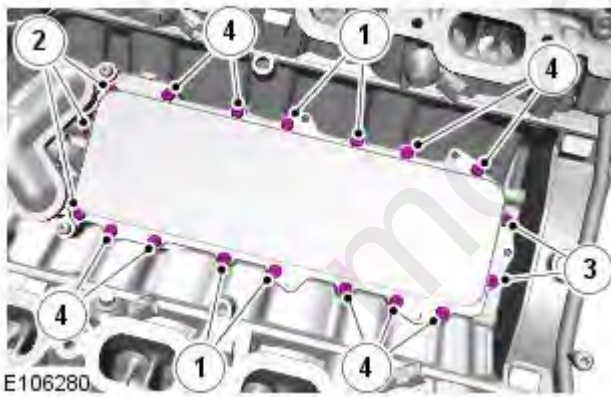

E106280

10. 10. CAUTIONS:



Make sure that these components are installed to the noted removal position.



Install new o-ring seals

1. 1. CAUTIONS:



Install all the bolts finger tight before final tightening.



Make sure that the area around the component is clean and free of foreign material.



Install the new seals.

• NOTE: Tighten the bolts in the indicated sequence.

To install, reverse the removal procedure.


Engine - V8 5.0L Petrol - Oil Filter Element

Removal and Installation

Removal

- NOTE: Removal steps in this procedure may contain installation details.
- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.

1. Refer to: [Engine Cover - V8 5.0L Petrol](#) (501-05 Interior Trim and Ornammentation, Removal and Installation).

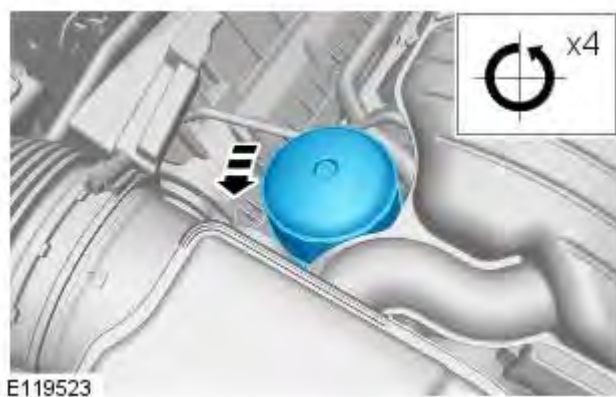

2.

- Allow the engine oil to drain from the oil filter element housing for two minutes.



3.



4.

Installation



E107727



1.



E119510

2. Torque: 25 Nm

3. Check and top-up the engine oil.

4. Start and run the engine.

5. Refer to: [Engine Cover - V8 5.0L Petrol](#) (501-05 Interior Trim and Ornamantation, Removal and Installation).

Engine - V8 5.0L Petrol - Oil Pan Extension

Removal and Installation

Special Tool(s)

 E107676	303-1433 Lower Timing Cover Alignment tool
 E107678	303-1442 Rear Crankshaft Seal Installer
 E107679	303-1443 Rear Crankshaft Cover Alignment Tool
 E115266	303-1448 Locking Tool
 E119168	303-1500 Installer, Stretchy Belt

Removal

- NOTE: Removal steps in this procedure may contain installation details.
- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.


Raise and support the vehicle.

3. Refer to: [Crankshaft Pulley](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).
4. Refer to: [Engine](#) (303-01D Engine - V8 5.0L Petrol, Removal).


5.

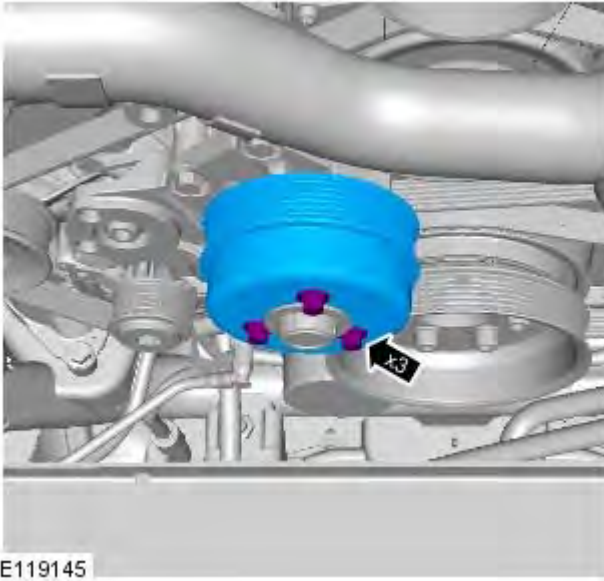


6.

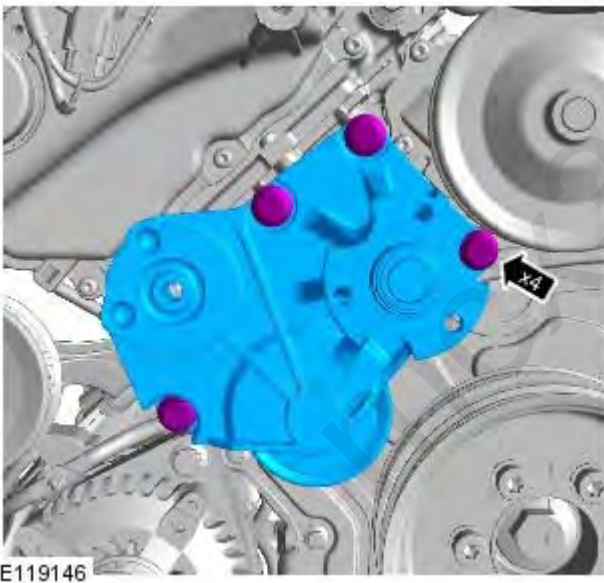

7.

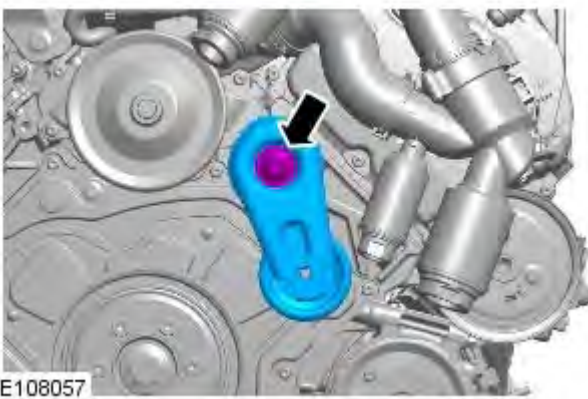


8.

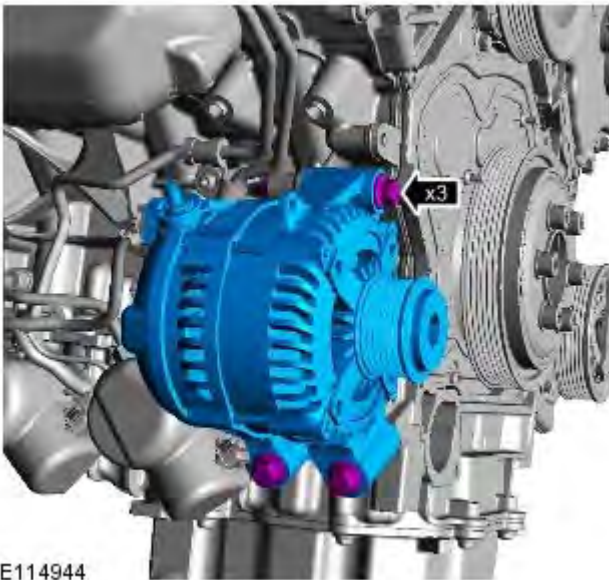


E114944

9.

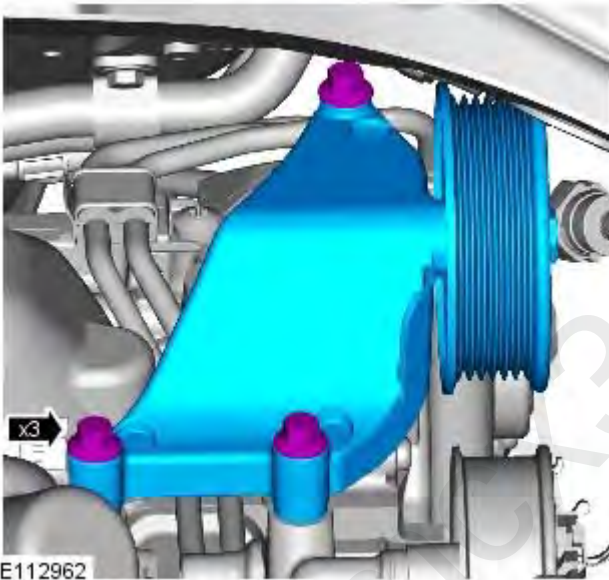


E112962


10.

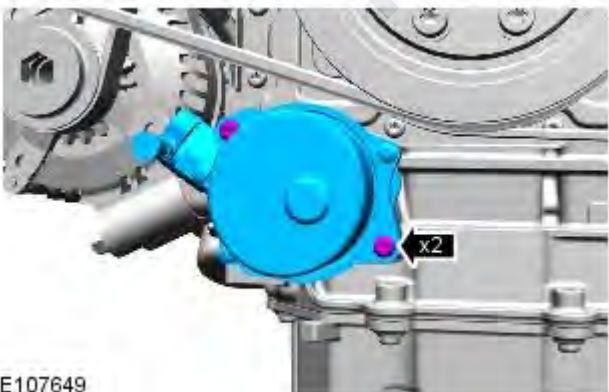


E107649

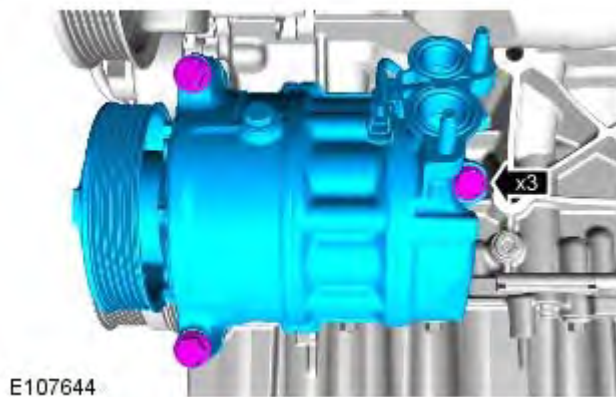

11.

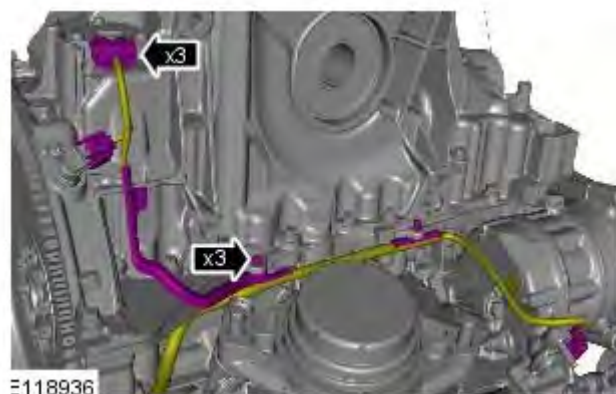


12.

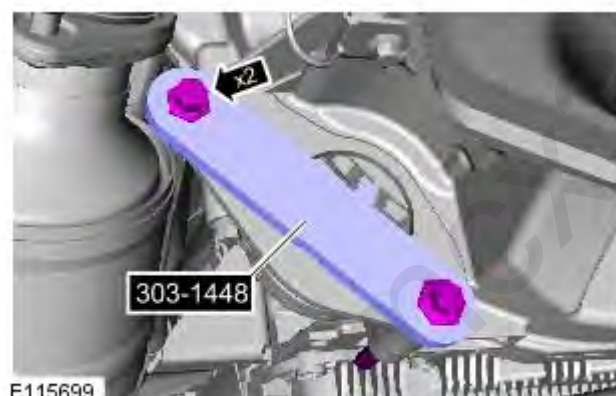

13.

- Install the special tool.
- *Special Tool(s):* [303-1448](#)

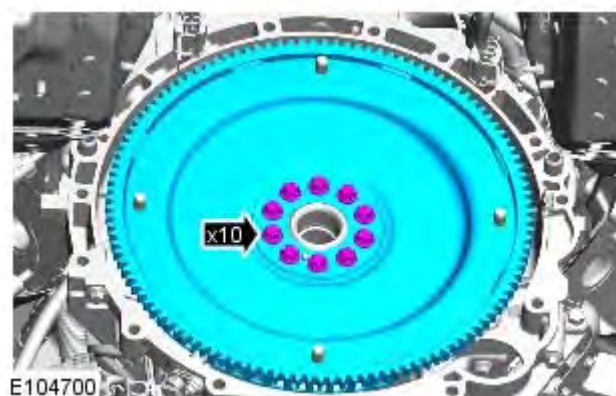


14. **14. CAUTIONS:**

 The bolts can only be used 3 times, mark the bolts with a center punch. If 2 punch marks are visible, discard the bolts.


 Make sure that no components fall off during removal.

- NOTE: Make sure that the crankshaft is not rotated.
- NOTE: Make sure the crankshaft and flexplate mating faces are clean before installation.

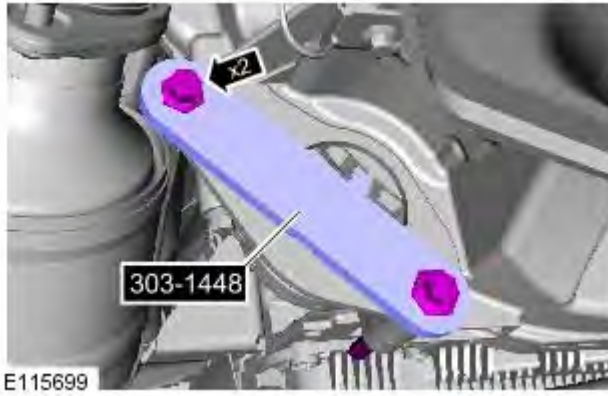


15.


- Remove the special tool.
- *Special Tool(s):* [303-1448](#)

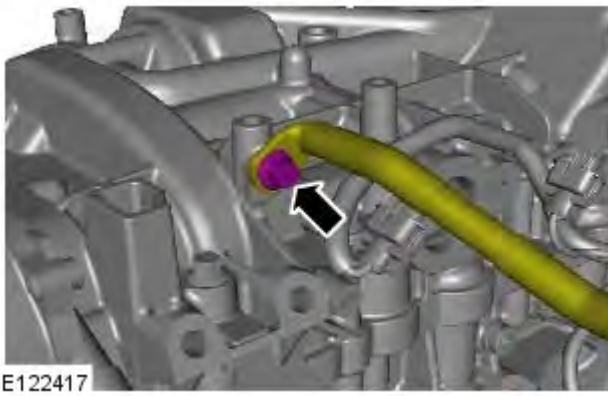


16.

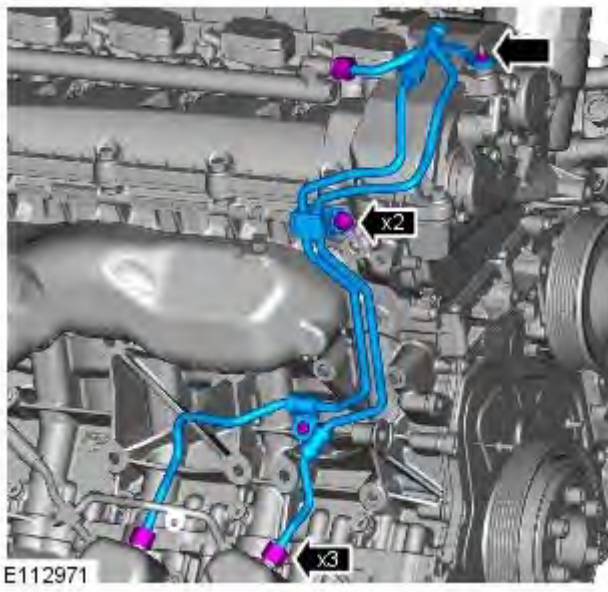


17.

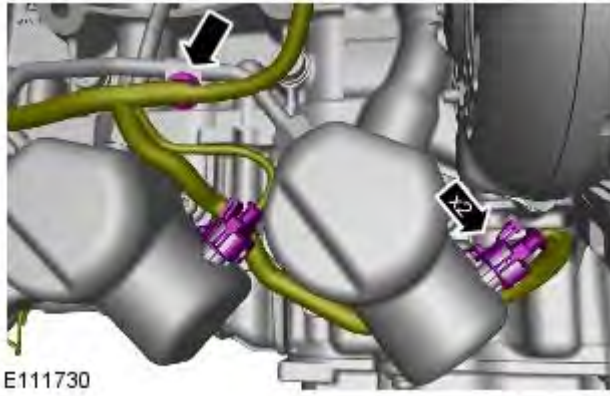

18.

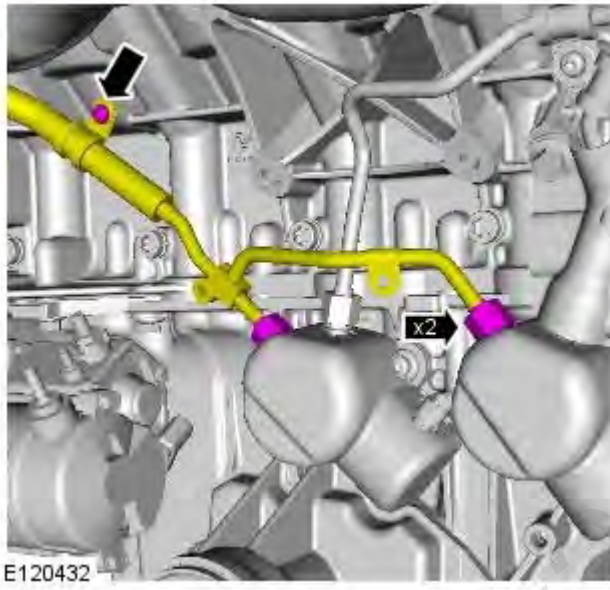


19.

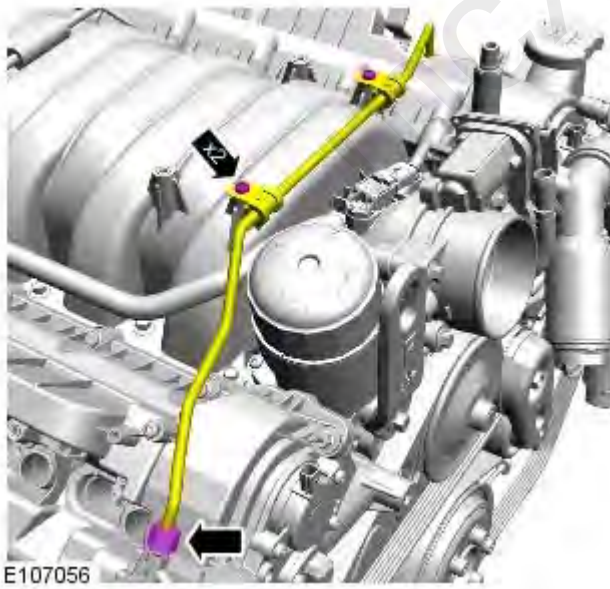


20.




21. **21.** NOTE: The high-pressure fuel pumps are removed from the illustration for clarity.

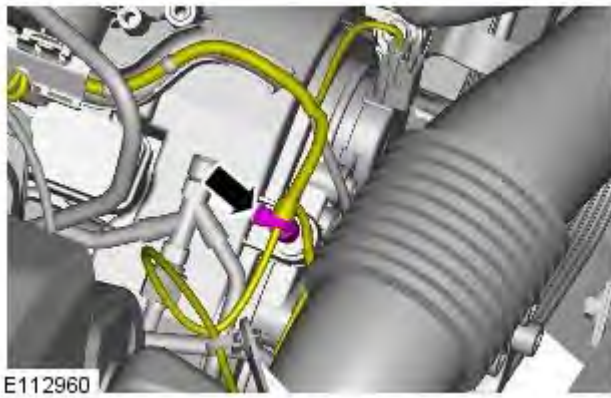


- 22.

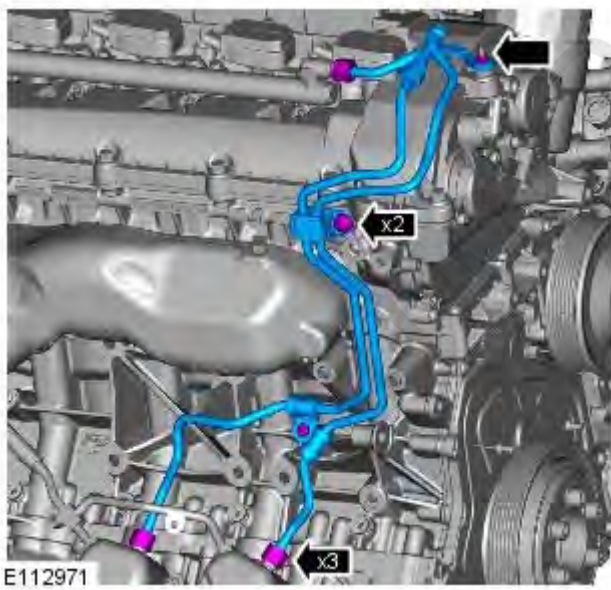


- 23.

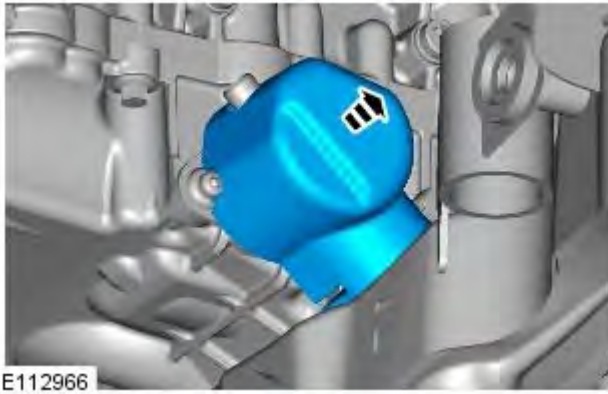


24.

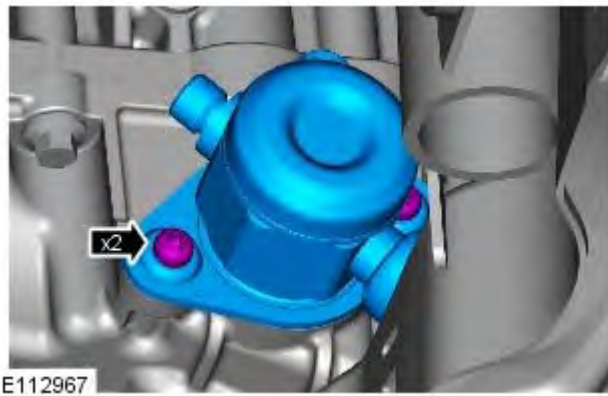


25. **25.**  CAUTION: Be prepared to collect escaping fluids.

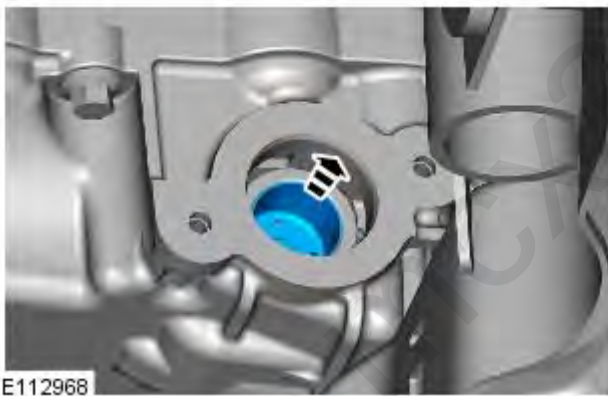

26. **26.**  CAUTION: Be prepared to collect escaping fluids.

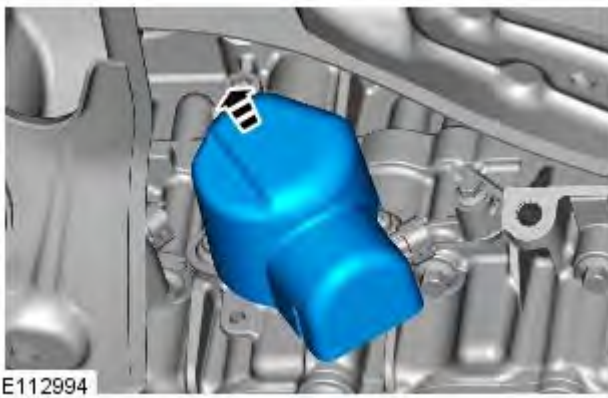

27.

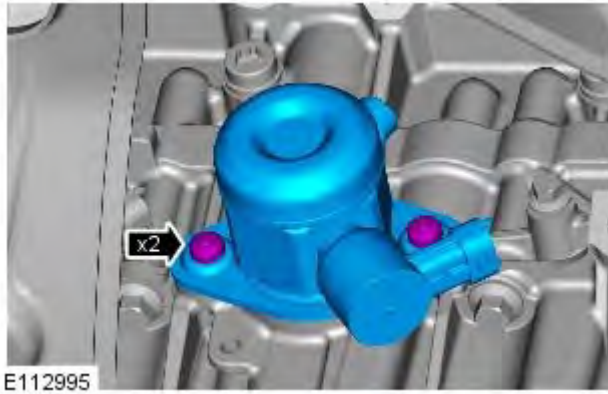

28. **28.**  CAUTION: Be prepared to collect escaping fluids.




29. **29.**  CAUTION: Be prepared to collect escaping fluids.



- 30.




31. **31.** NOTE: Discard the component.

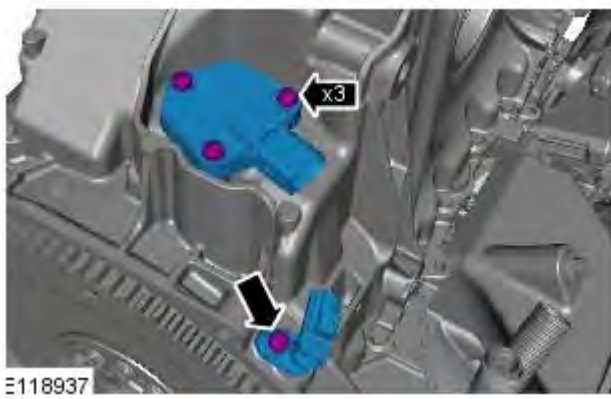

32.



33.

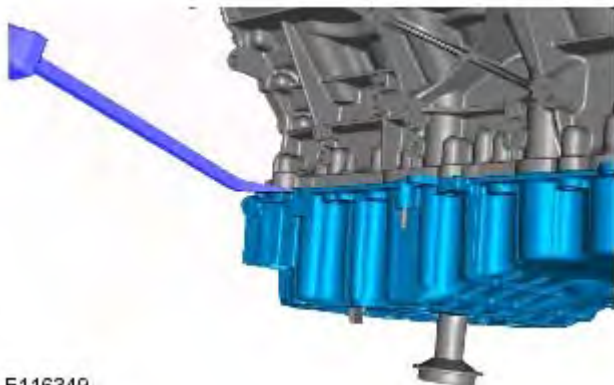

E116349

34. **34.** NOTE: Make sure to use the aluminium lug provided on the oil pan extension to lever against.



E118940


35. **35.** NOTE: Do not disassemble further if the component is removed for access only.

Installation



E118940

1. Torque: 10 Nm

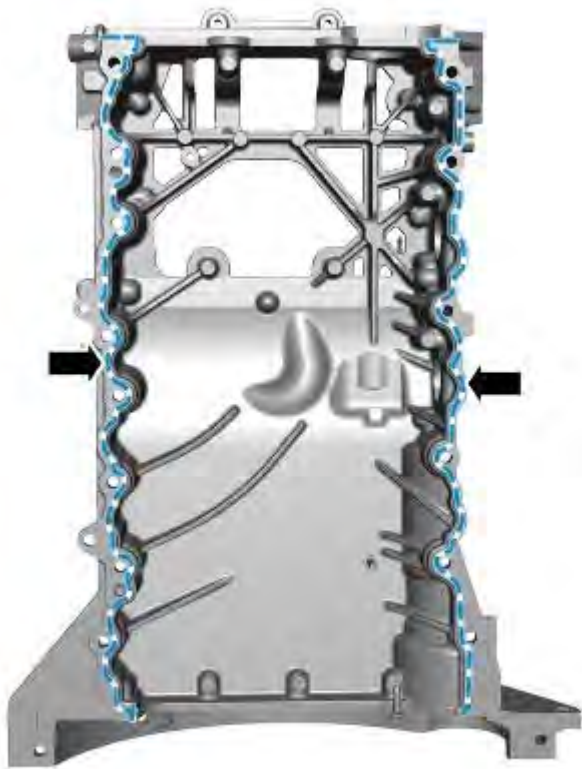

E107654

2. CAUTIONS:




Make sure that the mating faces are clean and free of foreign material.



Use only a plastic scraper when removing the sealing material.


- Apply RTV sealant WSE-M4G323-A6 (Loctite 5901G) to the areas shown, and tighten the bolts within 7 minutes.

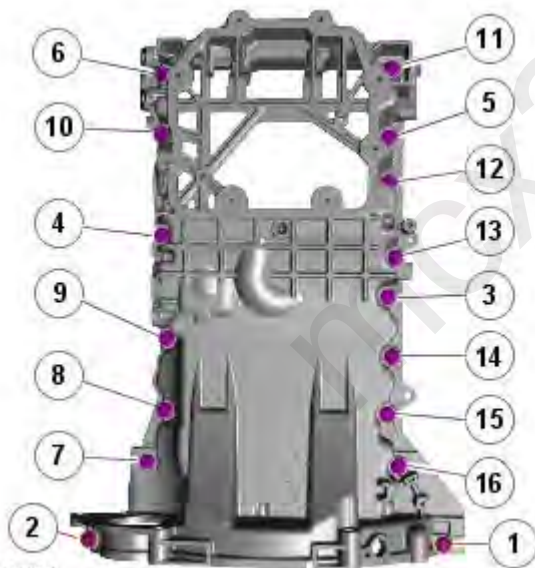

E107653


3. NOTE: Tighten the bolts in the indicated sequence.

Torque: 25 Nm

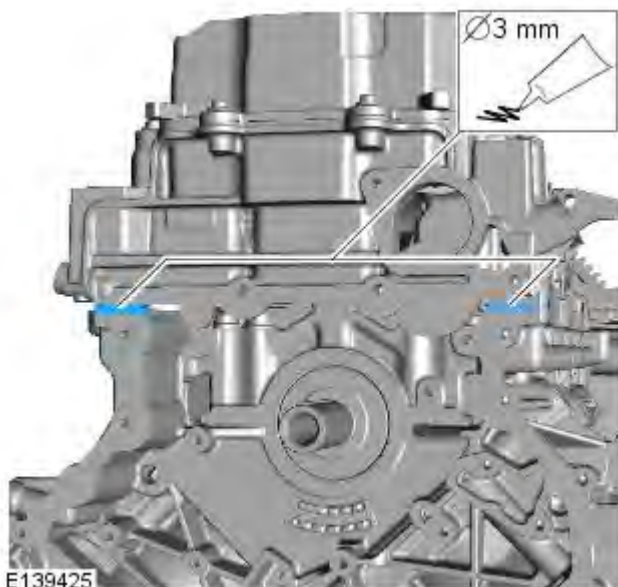

4. **CAUTION:** Make sure that the mating faces are clean and free of foreign material.

Apply RTV sealant WSE-M4G323-A6 (Loctite 5901G) to the areas shown, and tighten the bolts within 7 minutes.

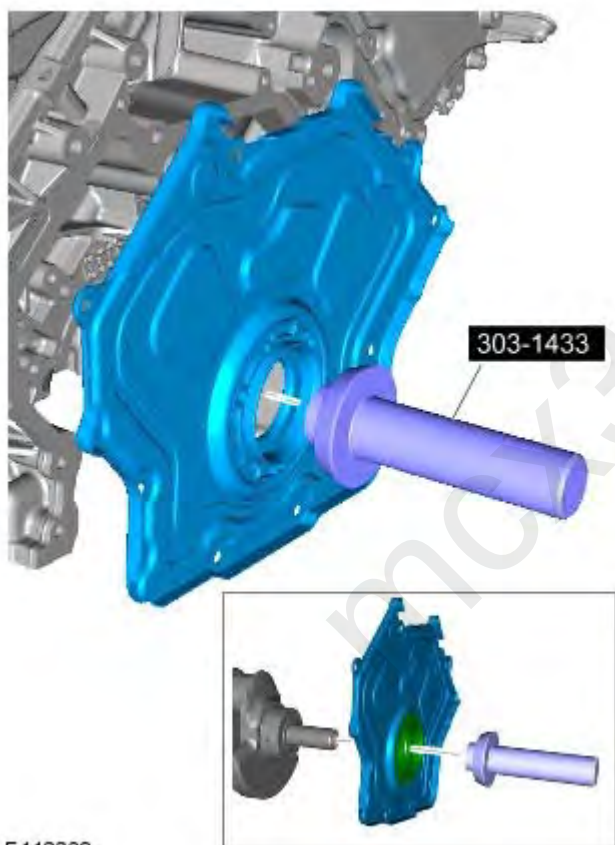


5. **CAUTION:** Make sure that the mating faces are clean and free of foreign material.

- NOTE: Install new lower timing cover.

Install the bolts, but do not tighten fully at this stage.

Special Tool(s): [303-1433](#)

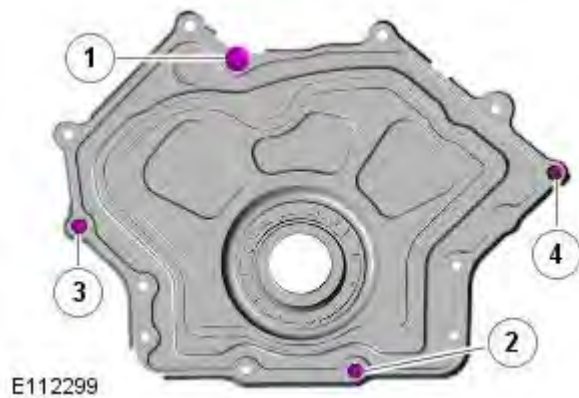


6. **6.** NOTE: Tighten the bolts in the indicated sequence.

- *Torque:*
M8 20 Nm
M6 12 Nm

7. Remove the special tools.




8. *Torque:* 12 Nm

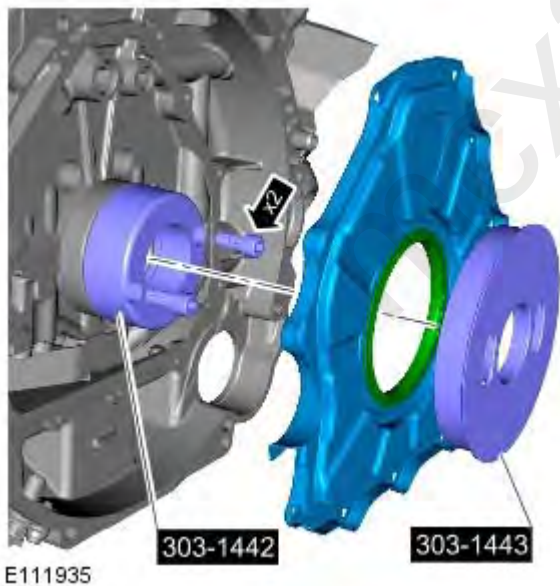

9.

- *Special Tool(s):* [303-1442](#)
- *Special Tool(s):* [303-1443](#)

10. Remove the special tool.

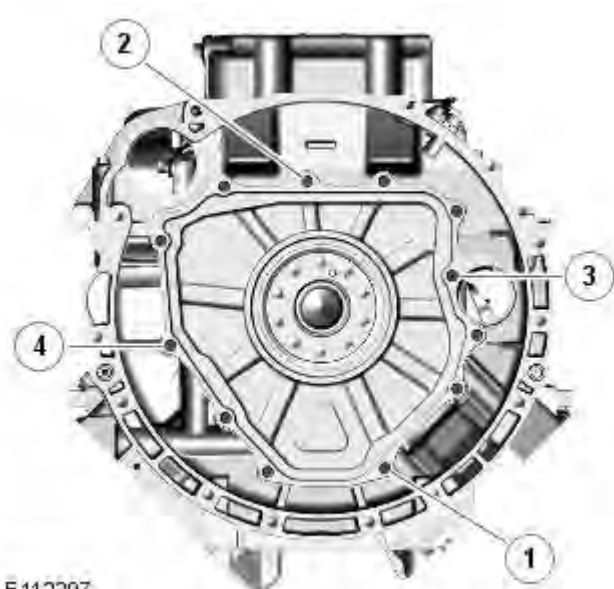

E112297


11. **11.** NOTE: Tighten the bolts in the indicated sequence.

Torque: 11 Nm



E112306


12. Torque: 11 Nm

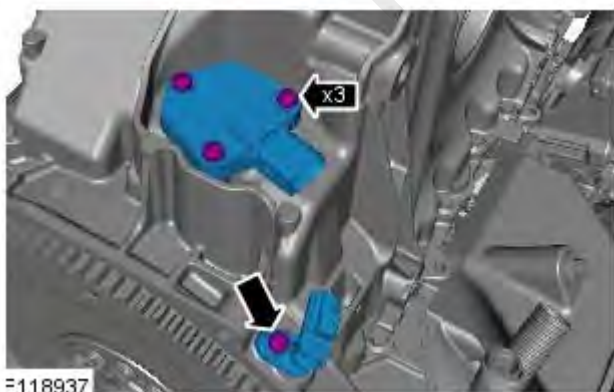


E118937

13.

• Torque: 11 Nm

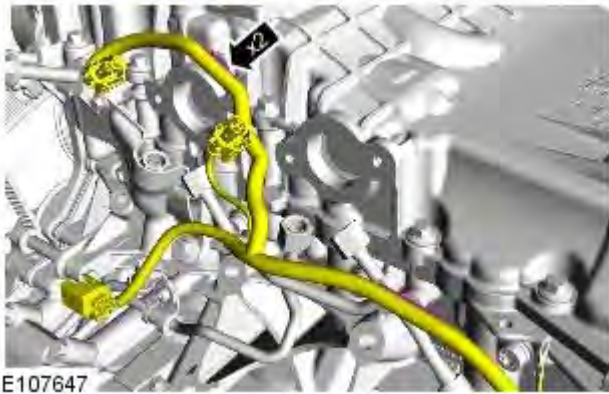

14. **14.** NOTE: The high-pressure fuel pumps are removed from the illustration for clarity.

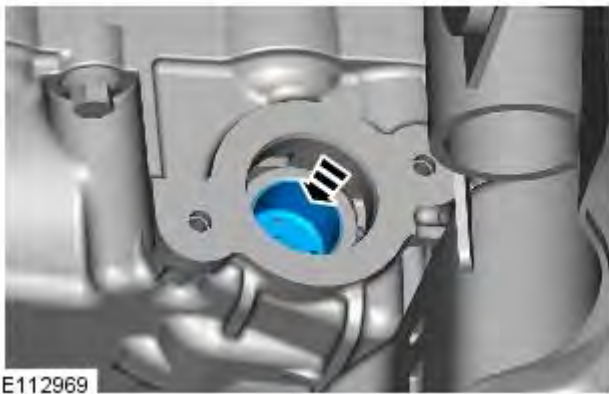


15. **15.** NOTE: Lubricate the fuel rail high-pressure fuel pump bucket with clean engine oil.



16. **16.**  CAUTION: Tighten the Torx screws a turn at a time until the correct torque is achieved.
- NOTE: Lubricate the fuel rail high-pressure fuel pump O-ring seal with clean engine oil.
 - Torque: 11 Nm




17. Loosen the Torx screws half a turn each.

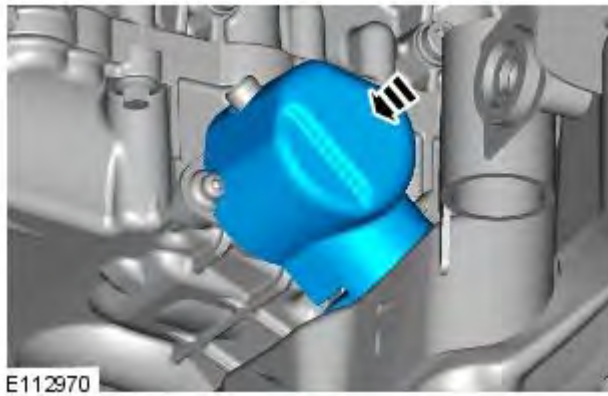

18.




19. **19.** NOTE: Lubricate the fuel rail high-pressure fuel pump bucket with clean engine oil.

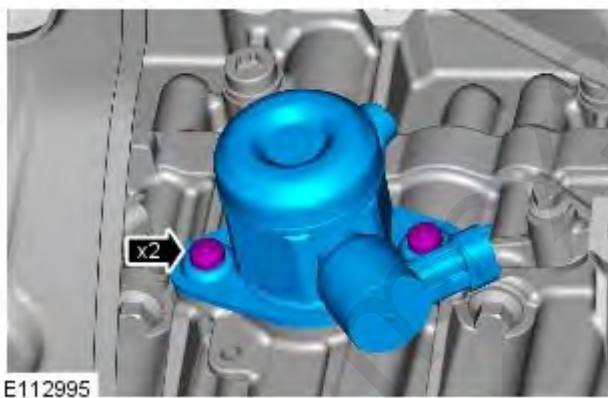


20. **20.**  CAUTION: Tighten the Torx screws a turn at a time until the correct torque is achieved.

• NOTE: Lubricate the fuel rail high-pressure fuel pump O-ring seal with clean engine oil.

• Torque: 11 Nm

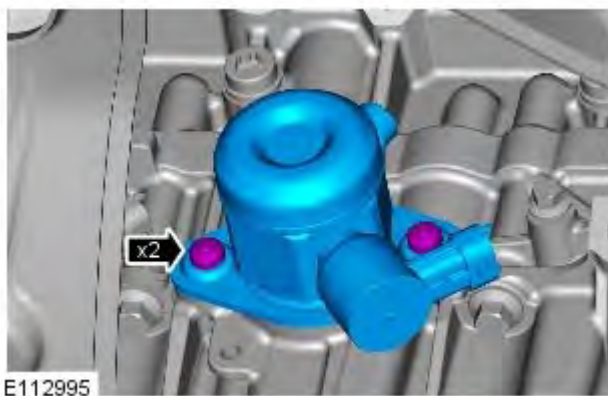

21. Loosen the Torx screws half a turn each.

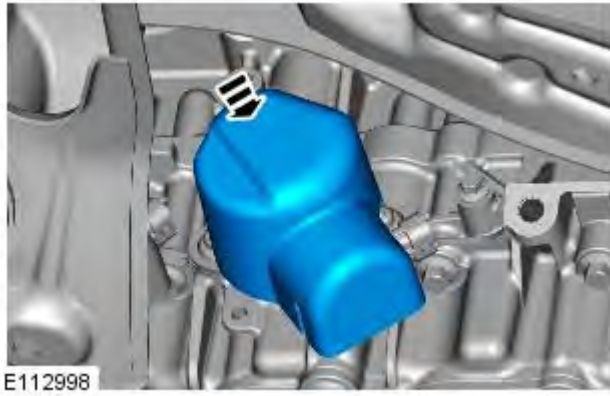


22.



23. **23.**  **CAUTION:** Care must be taken when positioning the fuel rail high-pressure fuel pump cover to one side.

- **NOTE:** Fuel rail high-pressure fuel pump cover shown removed for clarity.


- **Torque:** 11 Nm

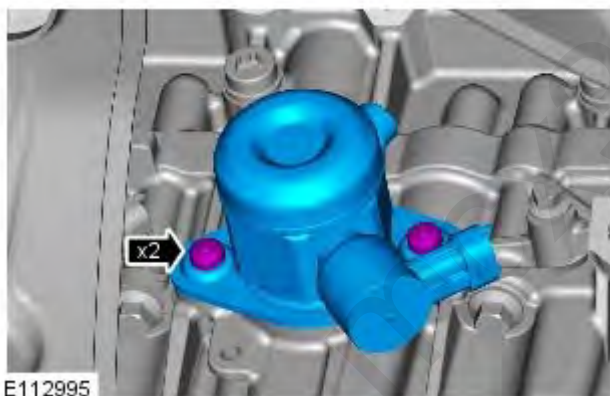

24. **24.**  **CAUTION:** Care must be taken when positioning the fuel rail high-pressure fuel pump cover to one side.

- **NOTE:** Fuel rail high-pressure fuel pump cover shown removed for clarity.

- **Torque:** 11 Nm

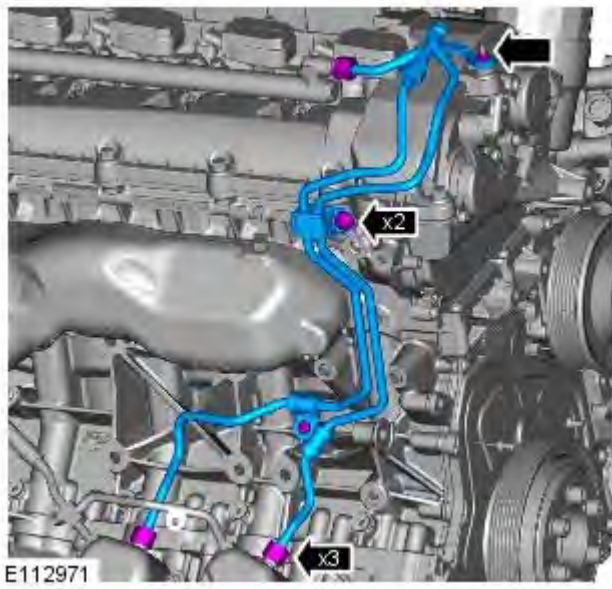

25. **25. CAUTIONS:**



Install new high-pressure fuel supply lines.




Lubricate only the union threads with clean engine oil.

• NOTE: Remove and discard the blanking caps.


• NOTE: Install the bolt and unions fully finger tight before final tightening.

Do not fully tighten at this stage.

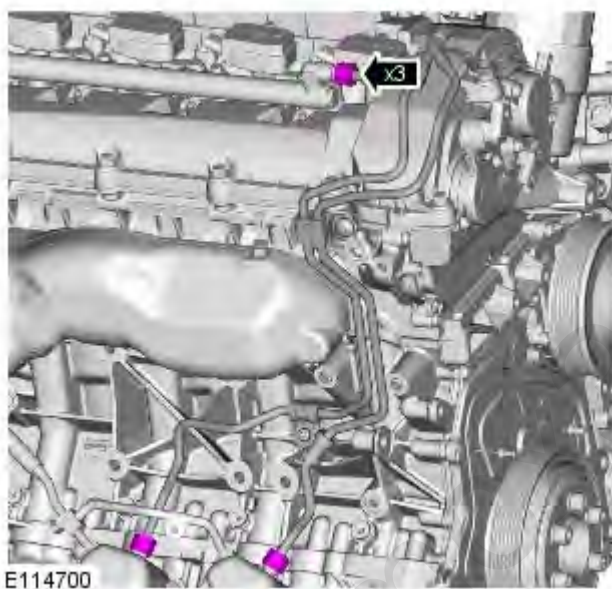


26.

- Torque: 21 Nm

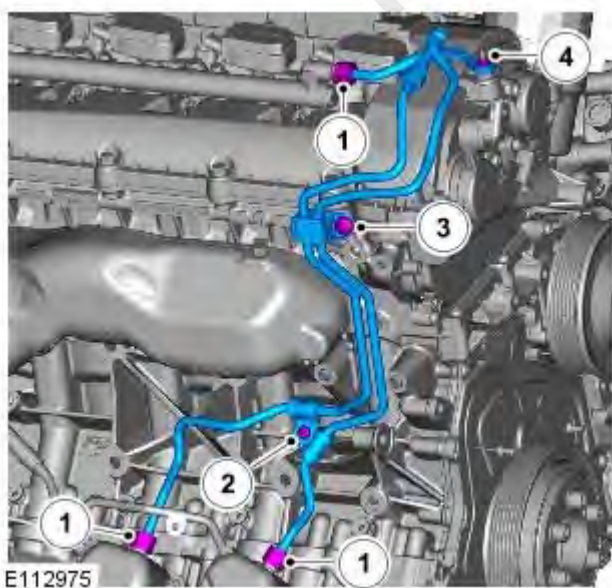

27.

- Torque:
 - Unions (1) 21 Nm
 - M6 (2) 11 Nm
 - M8 (3) 25 Nm
 - M5 nut (4) 6 Nm

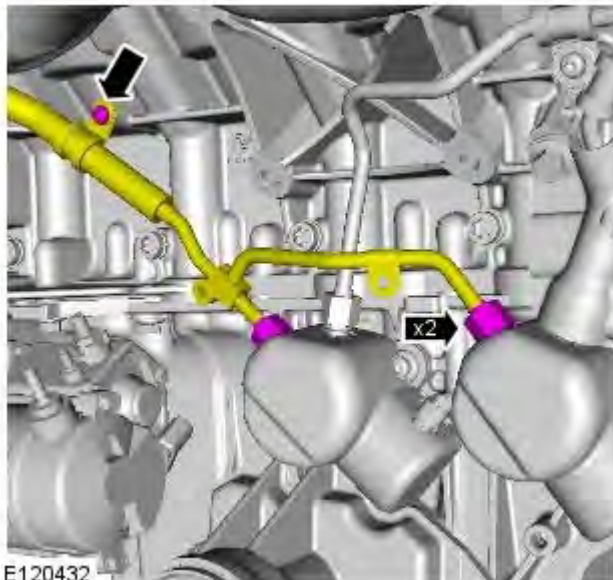


E120432

28. **28.** NOTE: Install the bolt and unions finger tight before final tightening.

- NOTE: Remove and discard the blanking caps.


- Torque:
Unions 21 Nm
M6 11 Nm

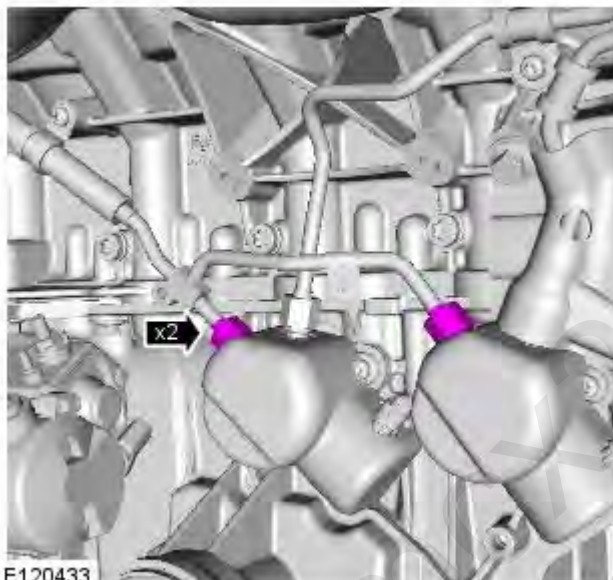

E120433


29. **29.**  CAUTION: Make sure that a new component is installed.

- Torque: 21 Nm

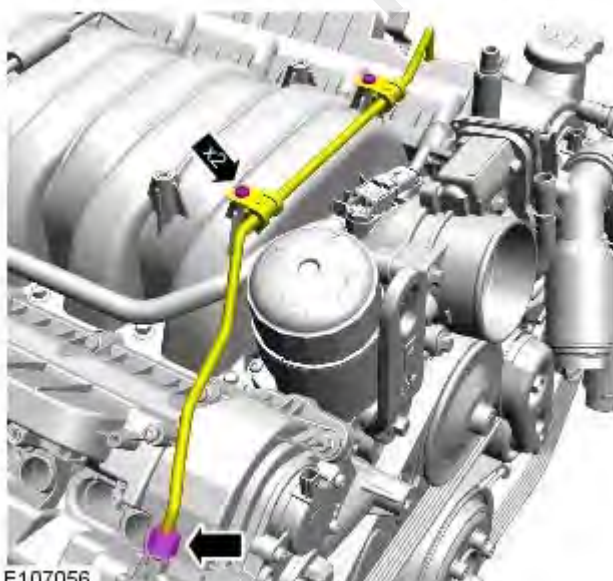


E107056


30. Torque:
Unions 21 Nm
M6 8 Nm

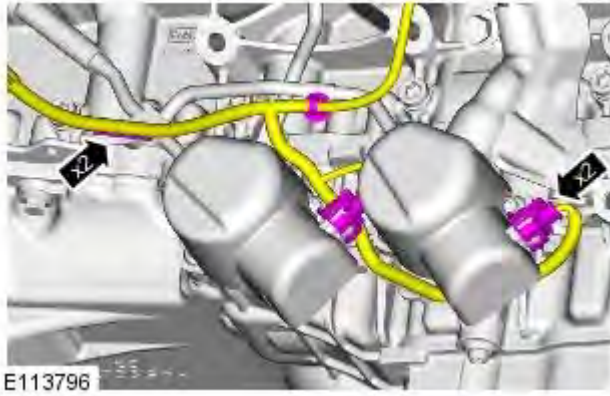


31.

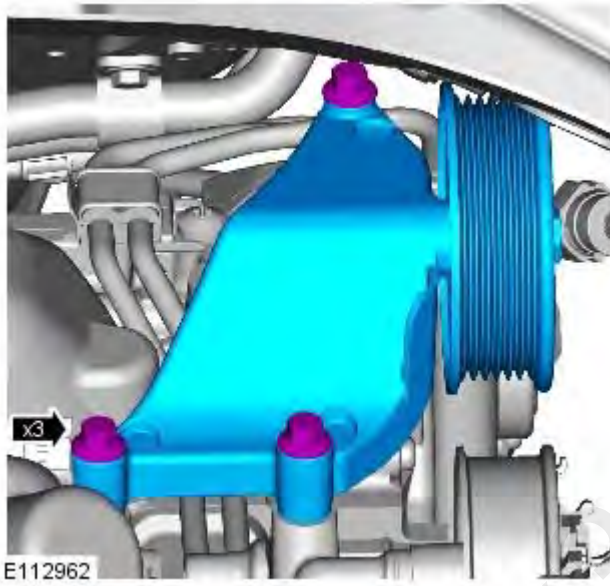

32. Torque: 25 Nm

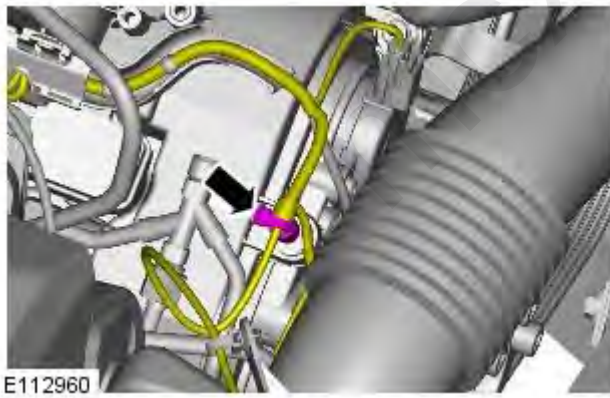


33.

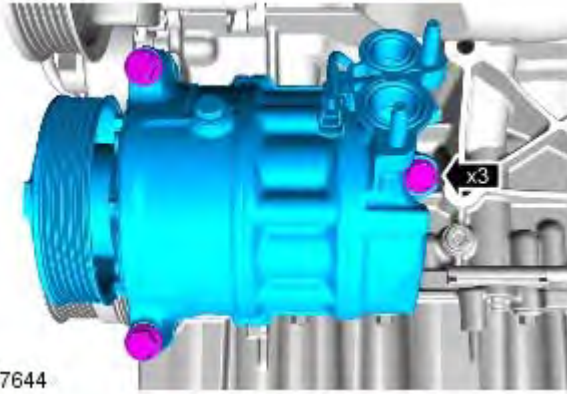

E107644


34. **34.**  **CAUTION:** Install all the bolts finger tight before final tightening.

Torque: 25 Nm

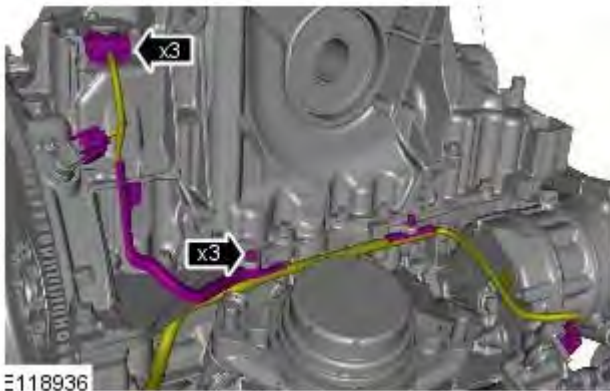

E118936

35.

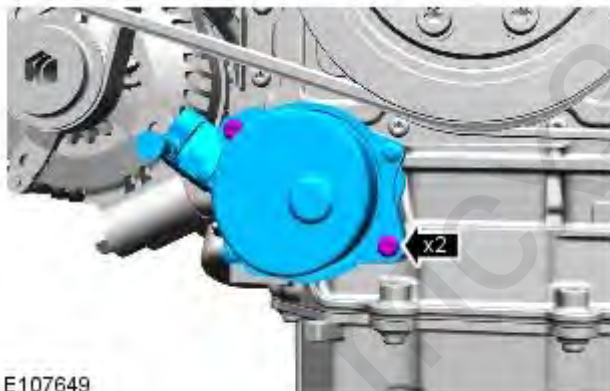


E107649

36. *Torque:* 12 Nm




E114944

37. **37.**  **CAUTION:** Install all the bolts finger tight before final tightening.
- **NOTE:** Tighten the bolts in the indicated sequence.
- Torque:* 48 Nm

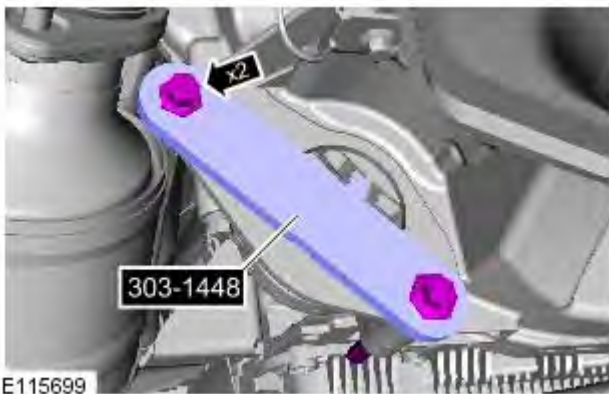


E115699

- 38.
- Install the special tool.
 - *Special Tool(s):* [303-1448](#)

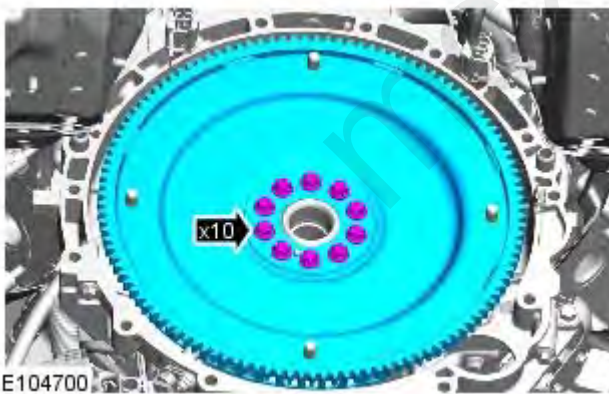


E104700

39. **39.** **CAUTIONS:**
-  Install all the bolts finger tight before final tightening.
 -  The bolts can only be used 3 times, mark the bolts with a center punch. If 2 punch marks are visible, discard the bolts.
 -  Install the bolts in the noted position.
 - **NOTE:** Make sure that the crankshaft is not rotated.
 - **NOTE:** Make sure the crankshaft and flexplate mating faces are clean before installation.
 - **NOTE:** Tighten the retaining bolts working diagonally.
- Torque:*
 Stage 1: 45 Nm
 Stage 2: 90°

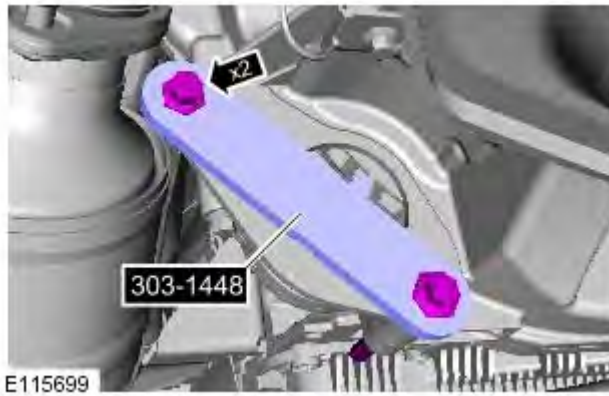


40.

- Remove the special tool.
- *Special Tool(s):* [303-1448](#)

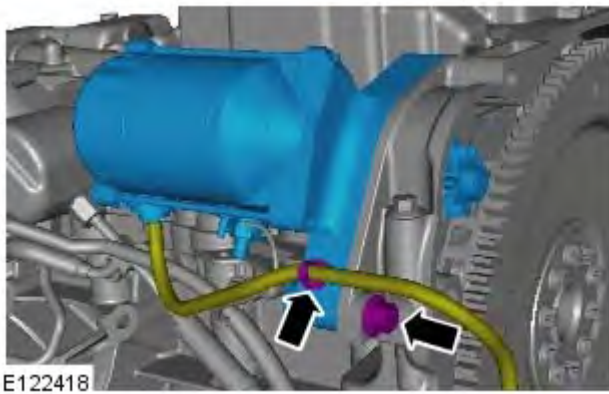


41. *Torque:* 48 Nm

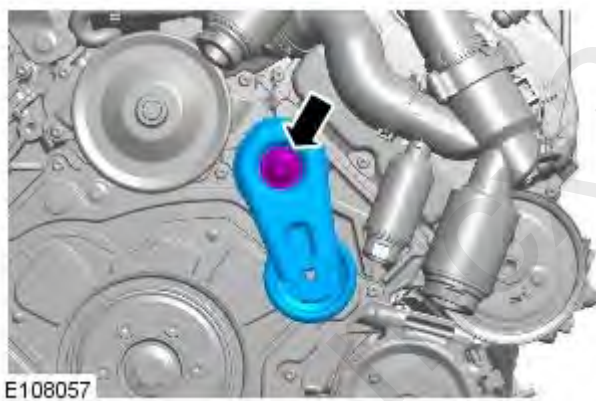


42. **42.** *NOTE:* Install the bolt finger tight before final tightening.

Torque: 40 Nm

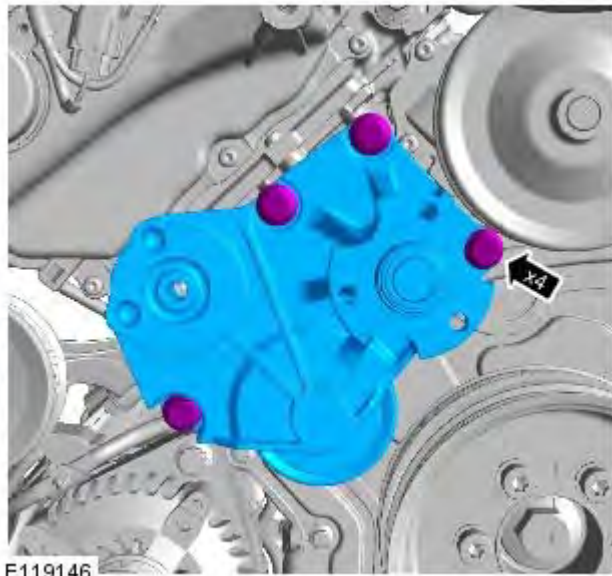

43. Torque: 25 Nm

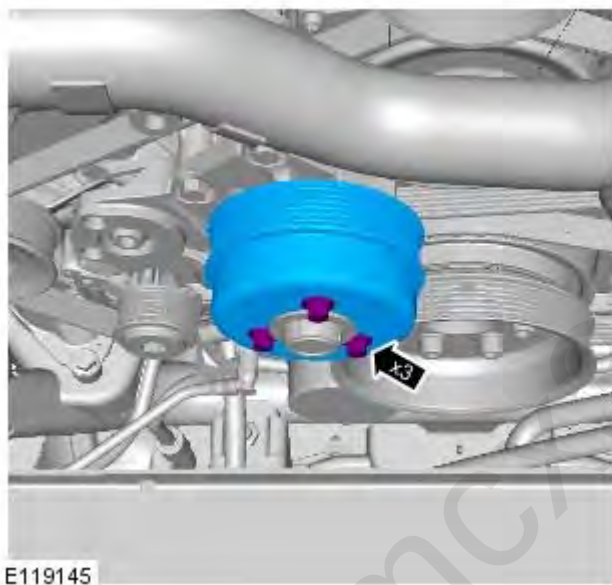


44. Torque: 25 Nm

45. Refer to: [Crankshaft Pulley](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).




46. Special Tool(s): [303-1500](#)

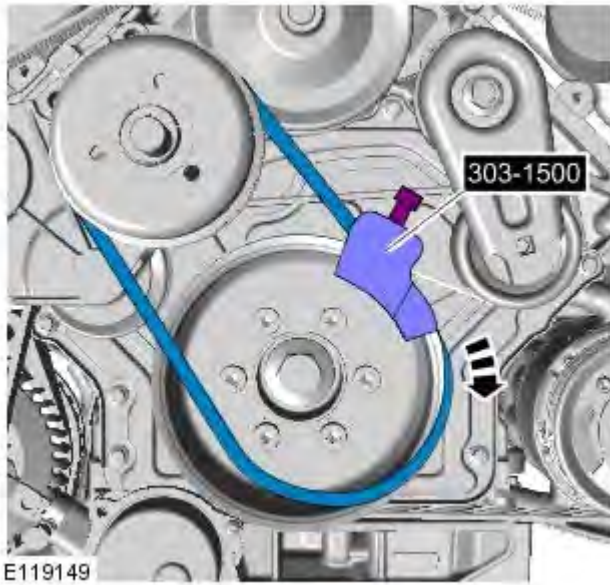

47.

- Install the cooling fan belt.
- Rotate the engine clockwise twice, making sure that the belt is seated on both pulleys correctly.
- Remove the special tool.

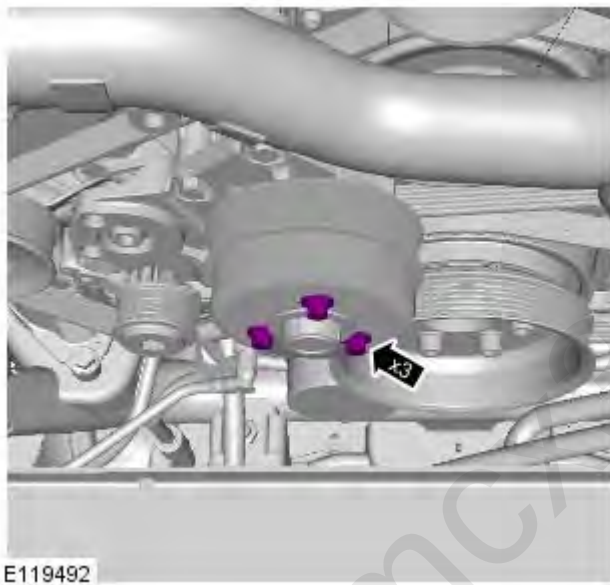

48. Torque: 25 Nm

49. Refer to: [Engine](#) (303-01D Engine - V8 5.0L Petrol, Removal).

50. Lower the vehicle.

51. Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

Engine - V8 5.0L Petrol - Oil Pump

Removal and Installation

Removal

1. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.  **WARNING:** Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

3. Refer to: [Oil Pan Extension](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).


4. **NOTE:** Tsubaki timing drive only.

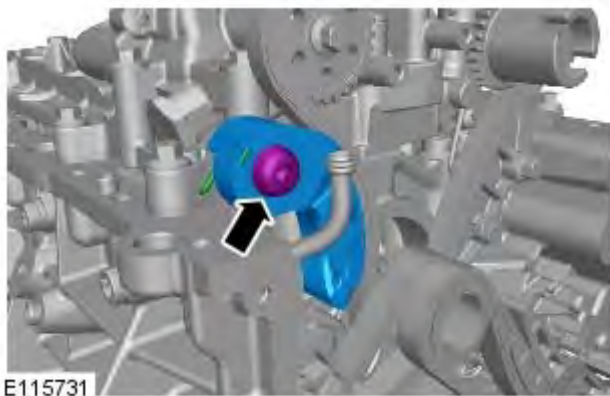


5. **NOTE:** INA timing drive only.

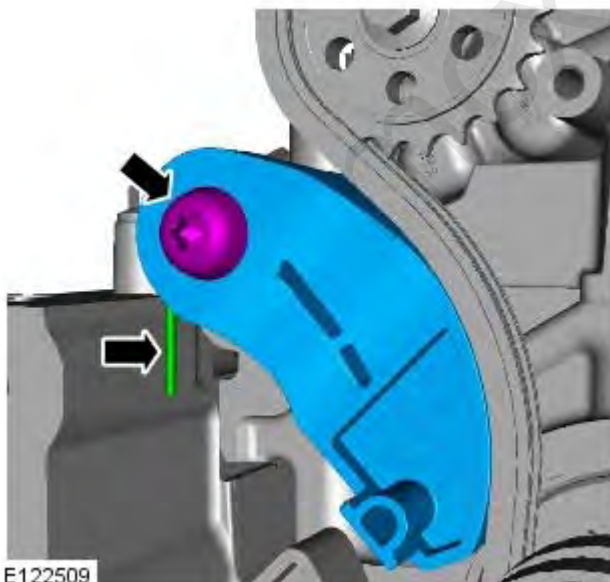


6.

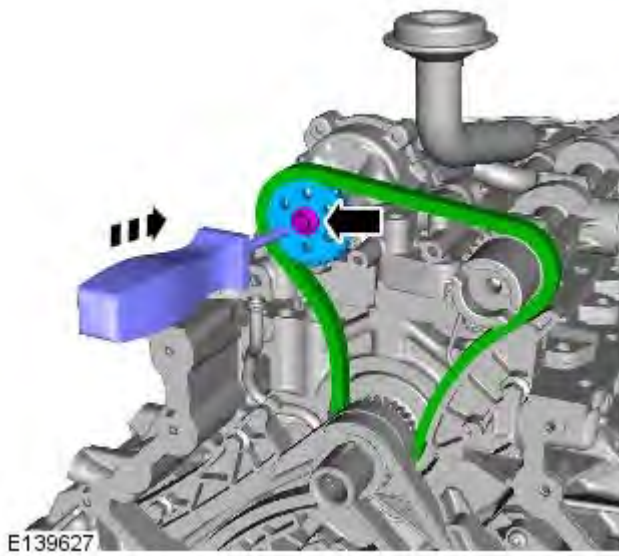

7. **7.** NOTE: Remove and discard the O-ring seal.

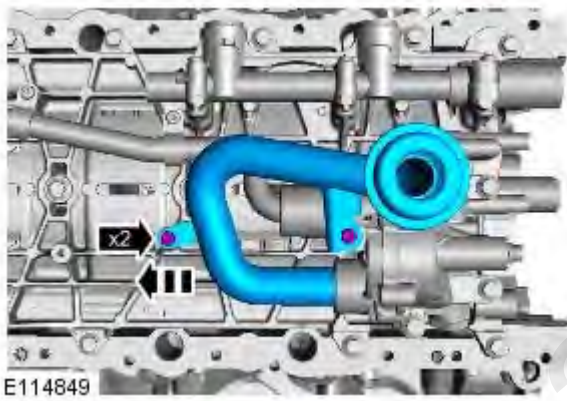

8. **8.** ⚠ CAUTION: Remove and discard the O-ring seals.

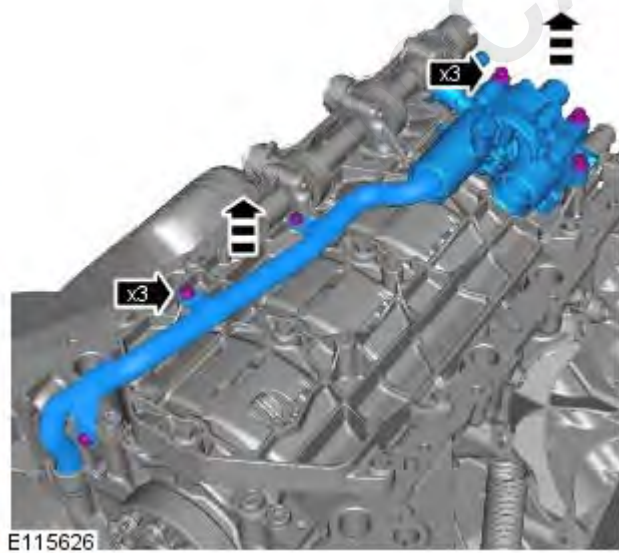

9. **9.** NOTE: Remove and discard the O-ring seal.





Installation

1. Lubricate and install the new O-ring seals.




2. Torque and install a new O-ring seal.
- M8 25 Nm
M6 12 Nm

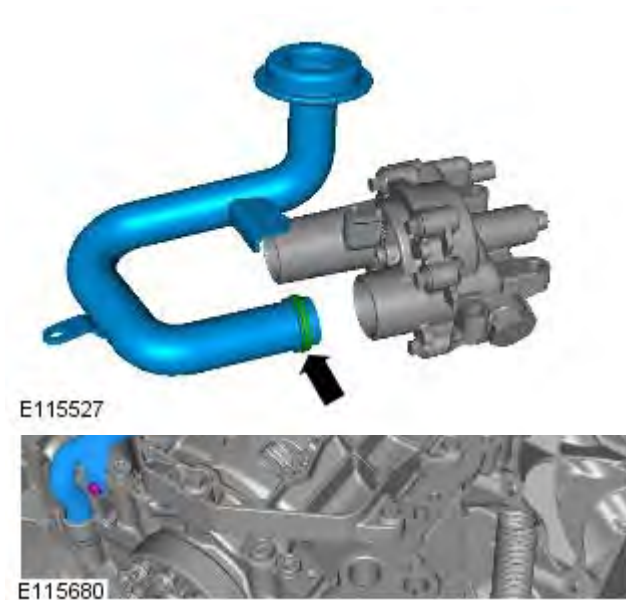


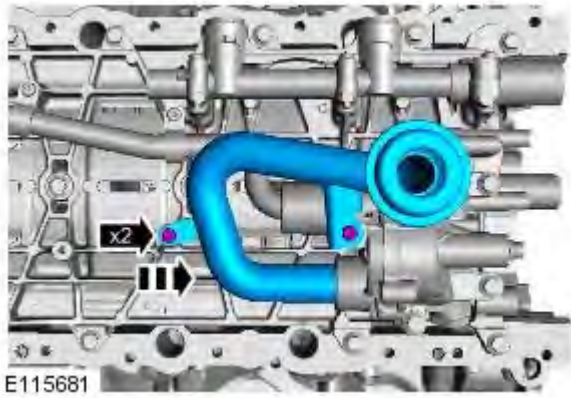

4. Torque: 12 Nm

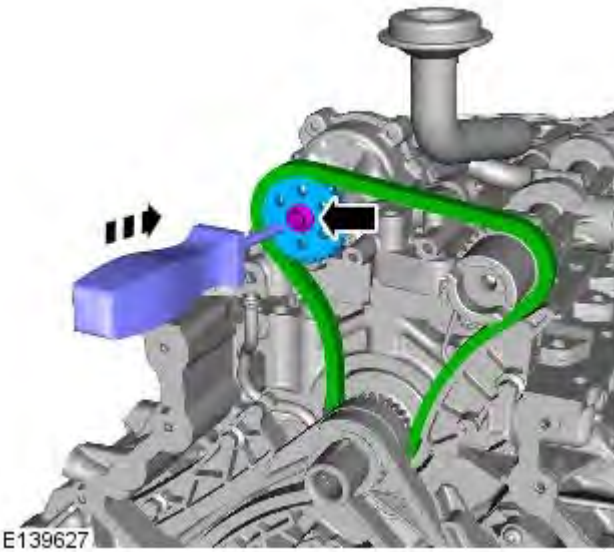


5. Torque: 21 Nm

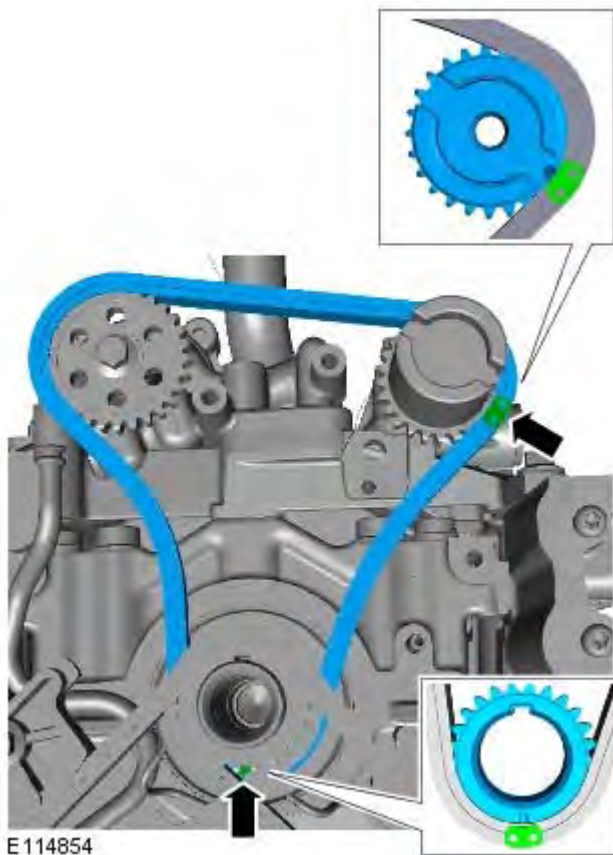

6. **6. NOTE:** Tsubaki timing drive only.


Install the lower timing chain making sure the coloured chain links align correctly with the fuel rail high-pressure fuel pumps camshaft and crankshaft sprocket markings.

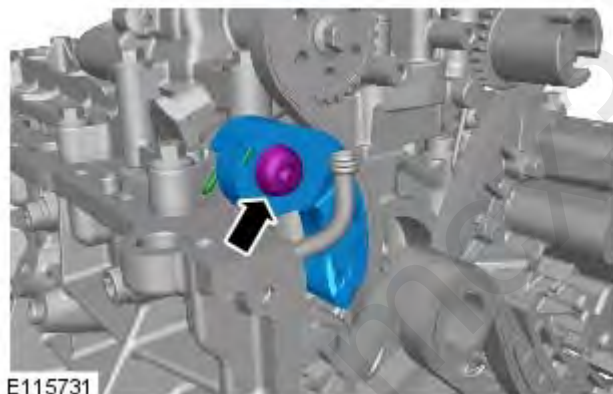

7. **7. ⚠ CAUTION:** Make sure that the tensioner spring is correctly located.


- **NOTE:** Tsubaki timing drive only.

Torque: 21 Nm

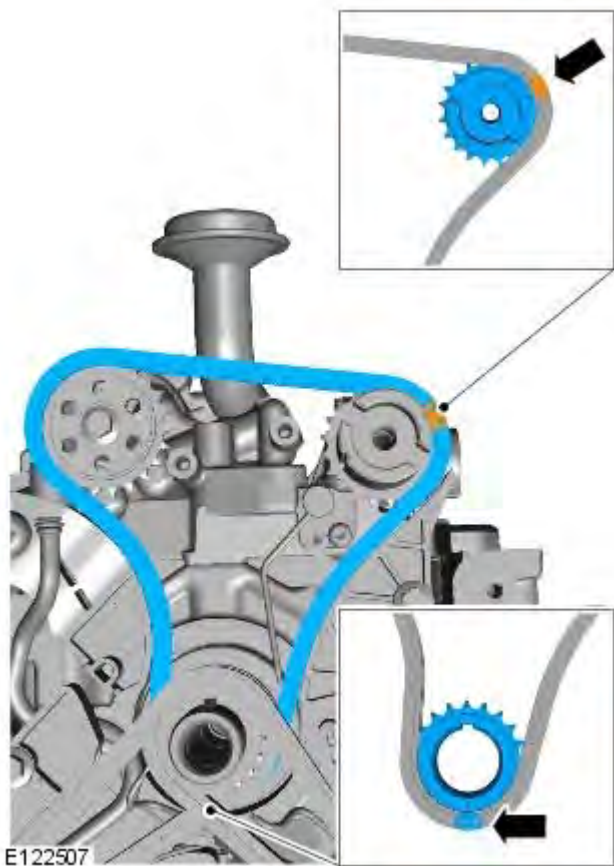

8. **NOTE:** INA timing drive only.

Install the lower timing chain making sure the coloured chain links align correctly with the fuel rail high-pressure fuel pumps camshaft and crankshaft sprocket markings.

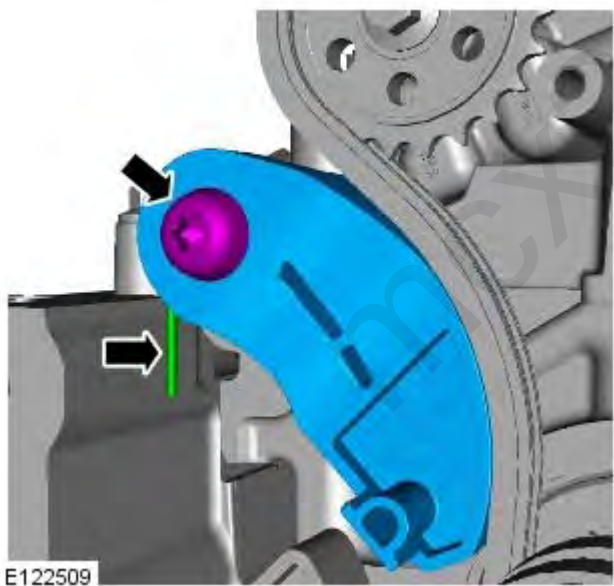

9. **CAUTION:** Make sure that the tensioner spring is correctly located.

- **NOTE:** INA timing drive only.

Torque: 21 Nm

10. Refer to: [Oil Pan Extension](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

11. Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

Engine - V8 5.0L Petrol - Oil Restrictor

Removal and Installation


Removal

- NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Timing Drive Components - Assembly Part Number: INA Timing Drive](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).
Refer to: [Timing Drive Components - Assembly Part Number: Tsubaki Timing Drive](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

2.

- Torque: 7 Nm

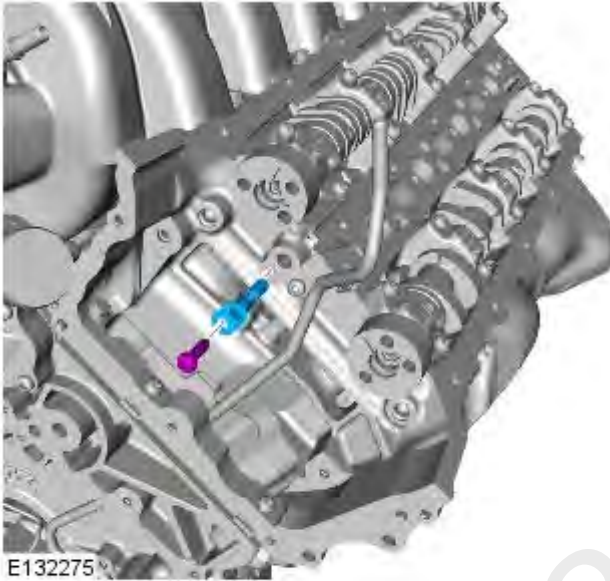

Installation

1. To install, reverse the removal procedure.

Engine - V8 5.0L Petrol - Timing Cover

Removal and Installation

Special Tool(s)

 E107676	303-1433 Lower Timing Cover Alignment tool
--	---

Removal

- NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


2.  **WARNING:** Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


3. Refer to: [Cooling System Draining, Filling and Bleeding](#) (303-03D Engine Cooling - V8 5.0L Petrol, General Procedures).
4. Refer to: [Crankshaft Pulley](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).
5. Refer to: [Valve Cover LH](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).
6. Refer to: [Valve Cover RH](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

7.

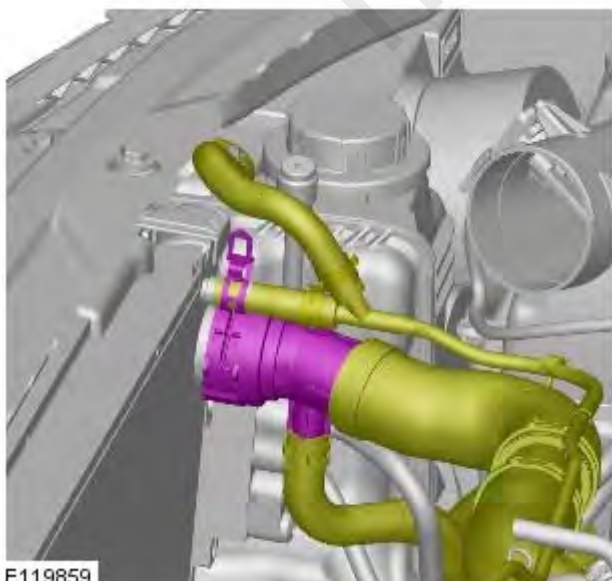


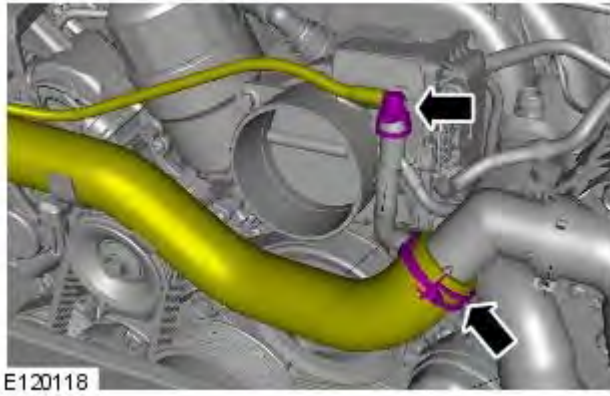

8.

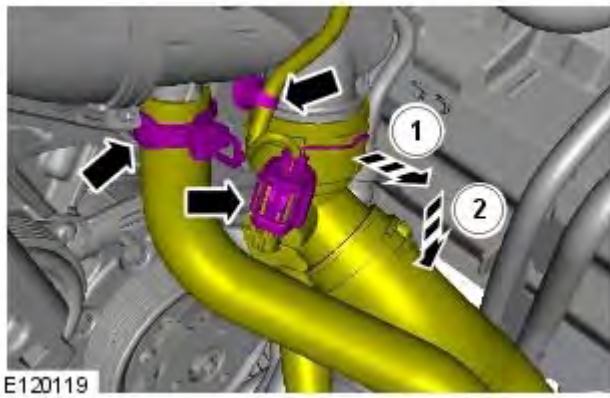


9.  CAUTION: Be prepared to collect escaping coolant.

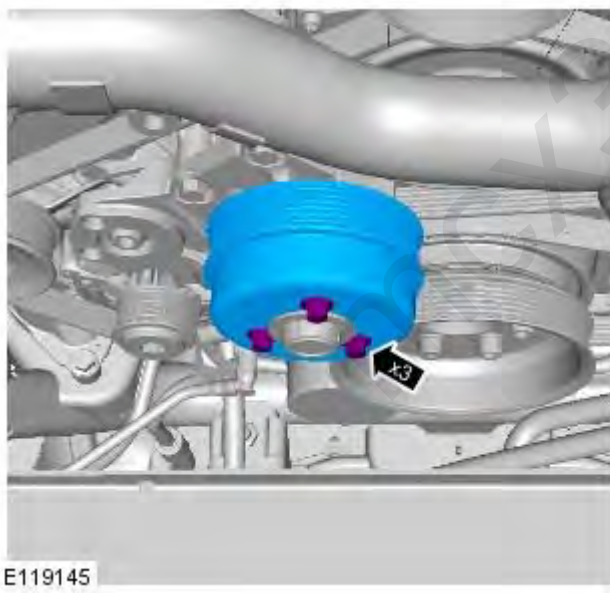

10.


11.

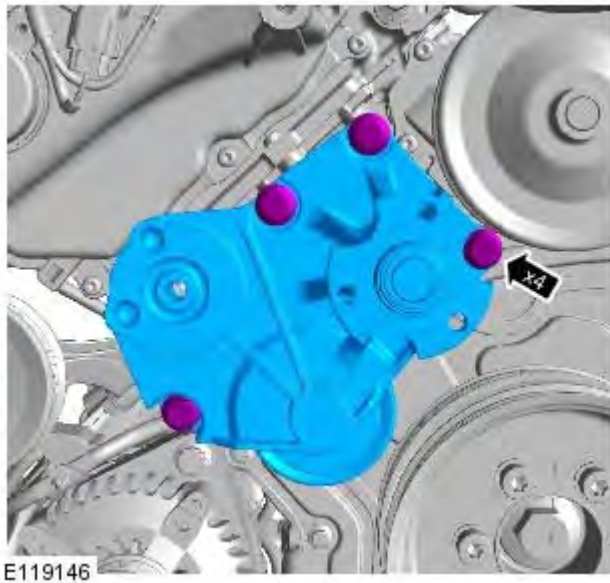

12.



13.

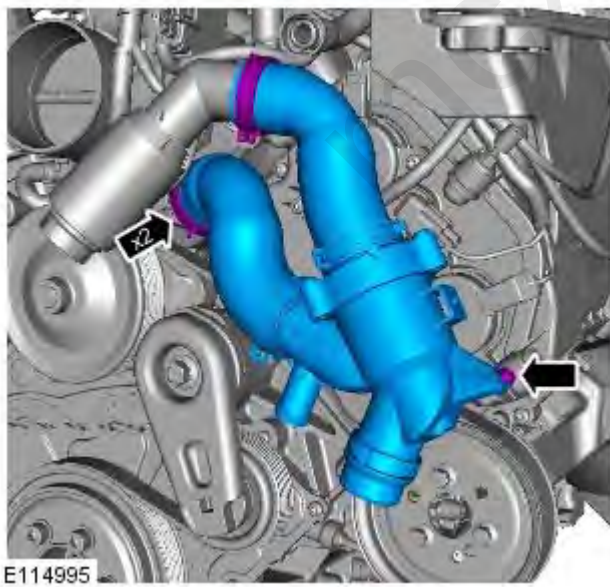



14.



15.



16.

17.



E112055

Installation



E112059

1.  **CAUTION:** Make sure that the mating faces are clean and free of foreign material.
 - Apply RTV sealant WSE-M4G323-A6 (Loctite 5901G) to the areas shown, and tighten the bolts within 7 minutes.



E112060

2. **2.**  **CAUTION:** Make sure that the mating faces are clean and free of foreign material.
 - Apply RTV sealant WSE-M4G323-A6 (Loctite 5901G) to the areas shown, and tighten the bolts within 7 minutes.



E112061

3. **3.** **NOTE:** Tighten the bolts in the indicated sequence.


Torque: 12 Nm



E112062


4. **4.** **NOTE:** Tighten the bolts in the indicated sequence.

Torque: 12 Nm

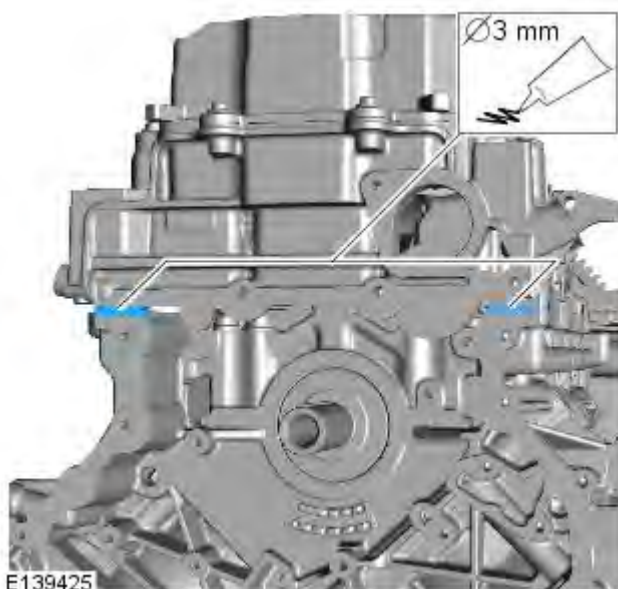

5. **⚠ CAUTION:** Make sure that the mating faces are clean and free of foreign material.


Apply RTV sealant WSE-M4G323-A6 (Loctite 5901G) to the areas shown, and tighten the bolts within 7 minutes.

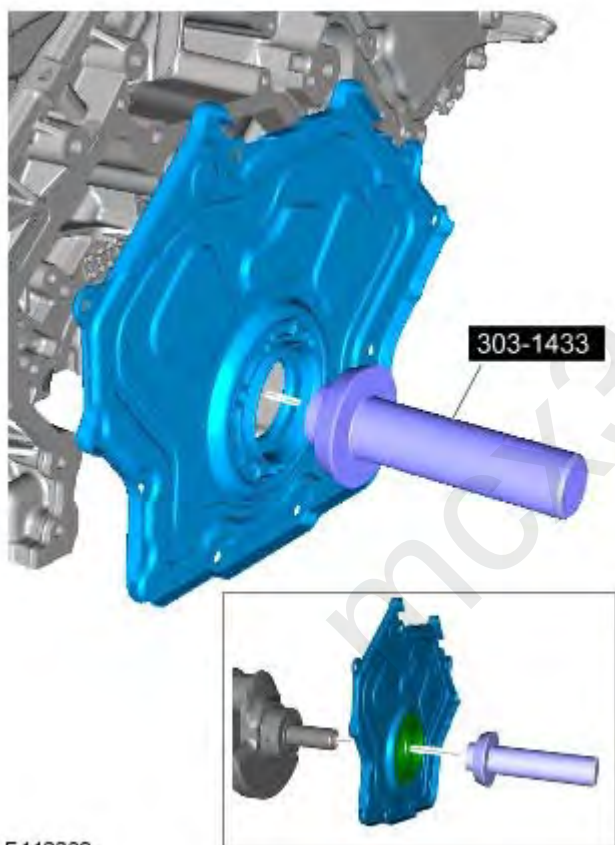

6. **⚠ CAUTION:** Make sure that the mating faces are clean and free of foreign material.

Install the bolts, but do not tighten fully at this stage.

Special Tool(s): [303-1433](#)

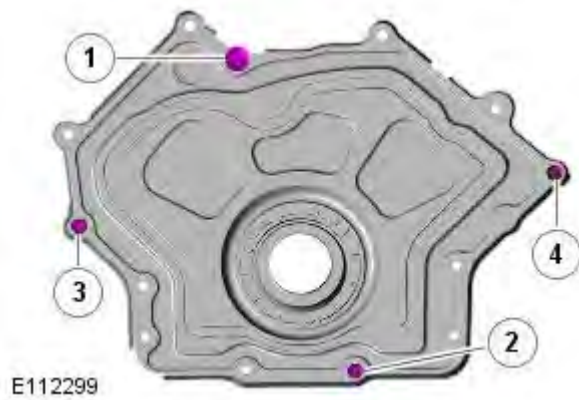

7. Torque:
M6 12 Nm
M8 20 Nm

8. Remove the special tools.



9. Torque: 12 Nm




10. Torque: 12 Nm



11. Torque: 25 Nm




12. Torque: 12 Nm

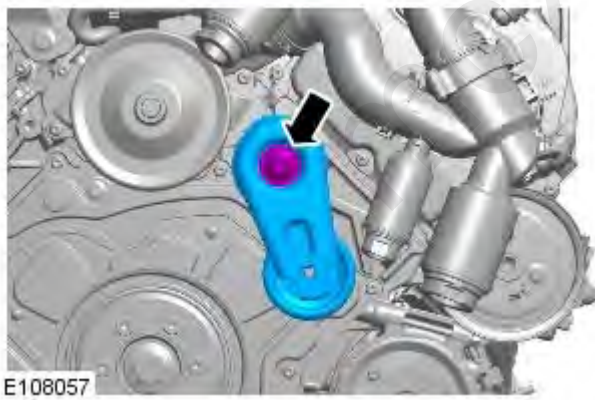


13. **13.** NOTE: Install the bolt finger tight before final tightening.

Torque: 40 Nm


14.

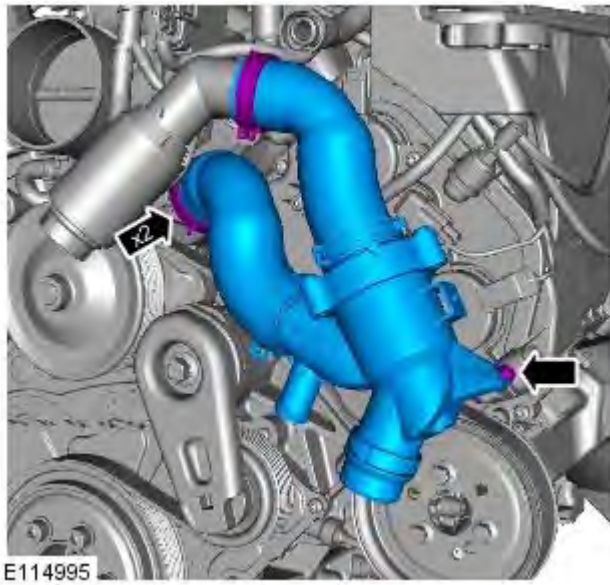


15. Torque: 25 Nm

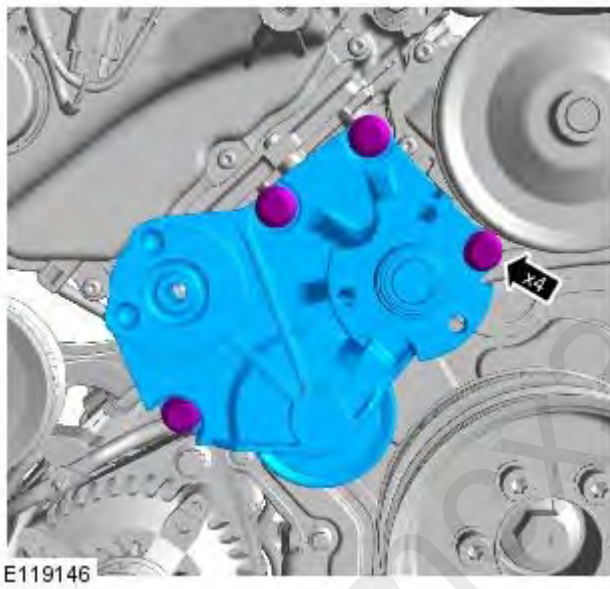


16. Torque: 25 Nm

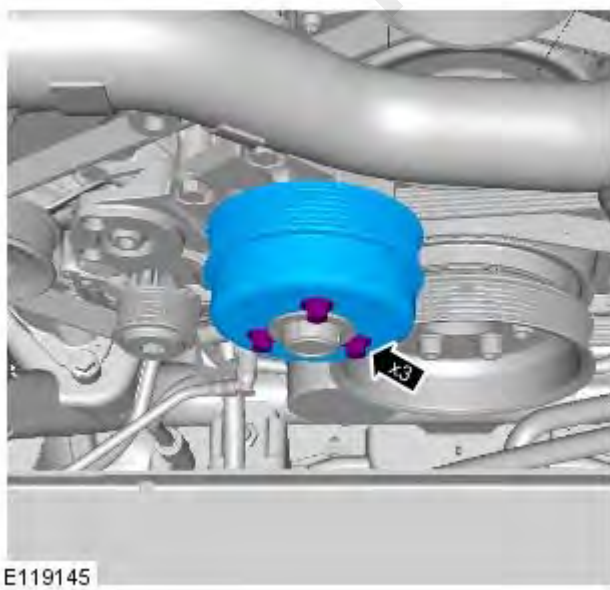


17.

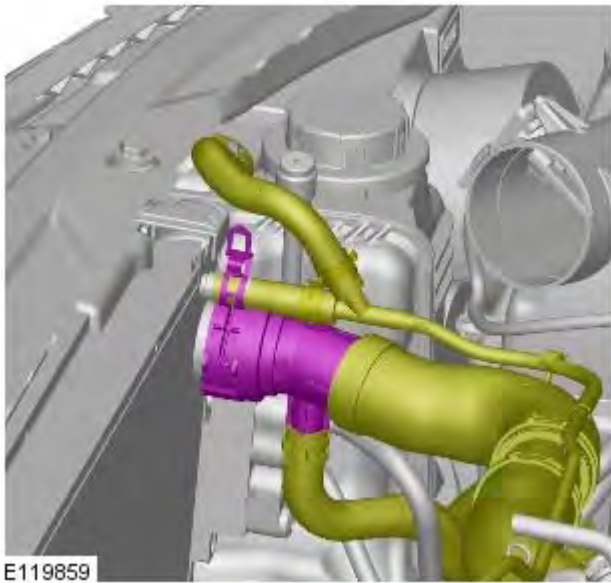

18.

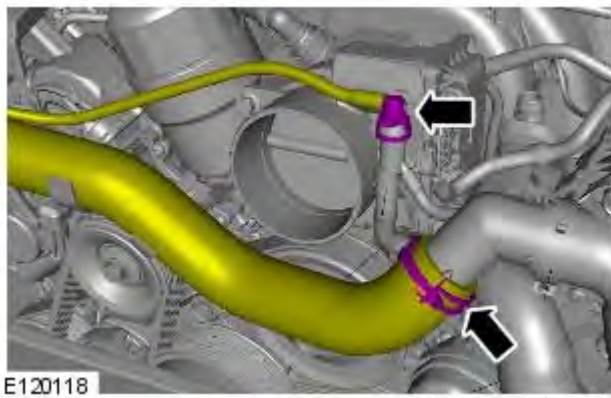

19.

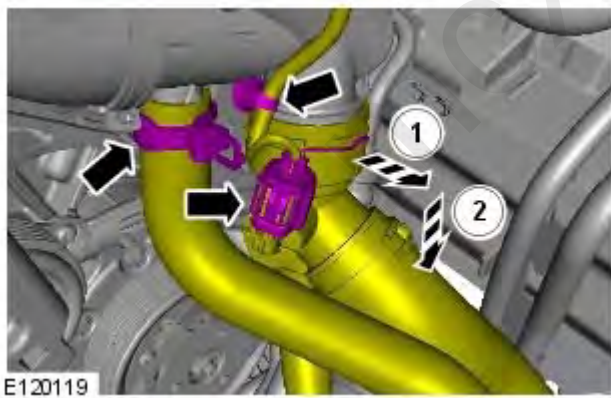

20. Refer to: [Valve Cover LH](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).
21. Refer to: [Valve Cover RH](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).
22. Refer to: [Crankshaft Pulley](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).
23. Refer to: [Cooling System Draining, Filling and Bleeding](#) (303-03D Engine Cooling - V8 5.0L Petrol, General Procedures).

24. Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

mcx30.com

Engine - V8 5.0L Petrol - Timing Drive Components Assembly Part Number: INA Timing Drive

Removal and Installation

Special Tool(s)

 E115263	303-1445 Timing Tool – Camshaft Alignment
 E115265	303-1447 Timing Tool
 E115266	303-1448 Locking Tool
 E115270	303-1452 Camshaft Rotating Tool
 E115271	303-1482 Tensioner Tool

Removal



CAUTION: Check all timing components for wear and install new components if required.

- NOTE: Removal steps in this procedure may contain installation details.
- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.  **WARNING:** Make sure to support the vehicle with axle stands.
Raise and support the vehicle.

3. Refer to: [Timing Cover](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).




4.

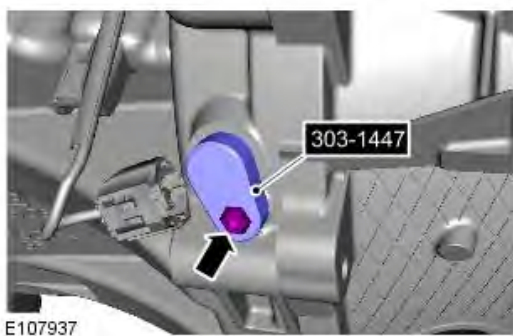


5.  **CAUTION:** Only rotate the crankshaft clockwise.
Install the special tool.

Special Tool(s): [303-1447](#)

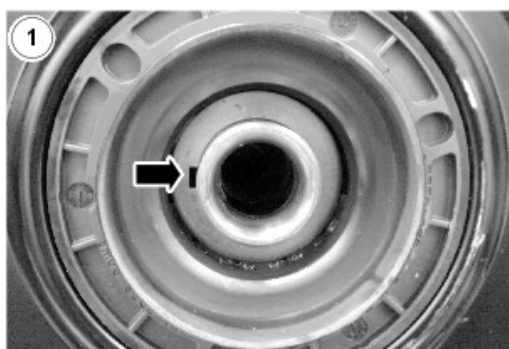


6.  **CAUTION:** If the noted position of the woodruff key is at the 9 o'clock position, then a new flexplate must be installed. If the woodruff key is in the 6 o'clock position then proceed with the next step.

Note the position of the crankshaft woodruff key.

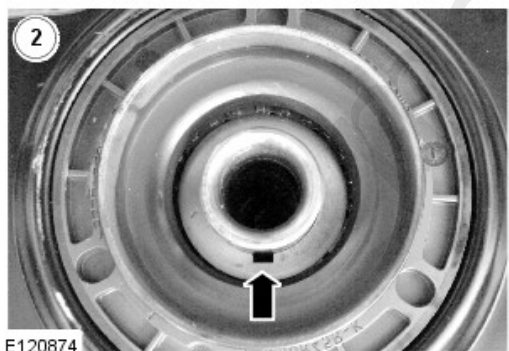


E120874


7.

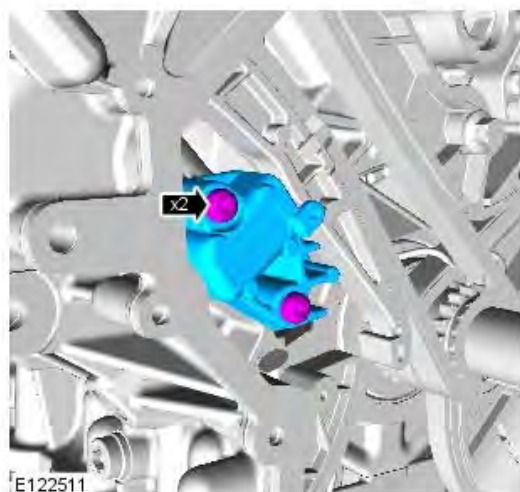

8.

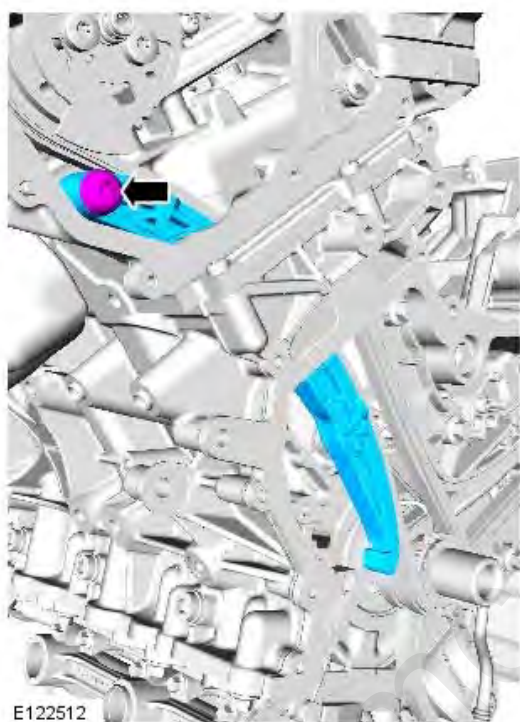


9.

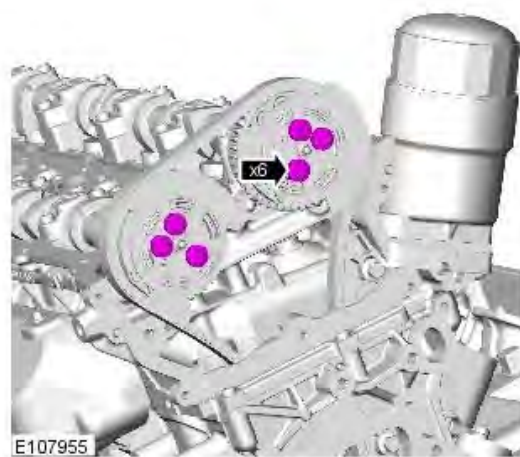



10. **10.**  **CAUTION:** If the variable valve timing (VVT) units are knocked or dropped then the VVT must be replaced.

Remove the timing chain with the VVT units.

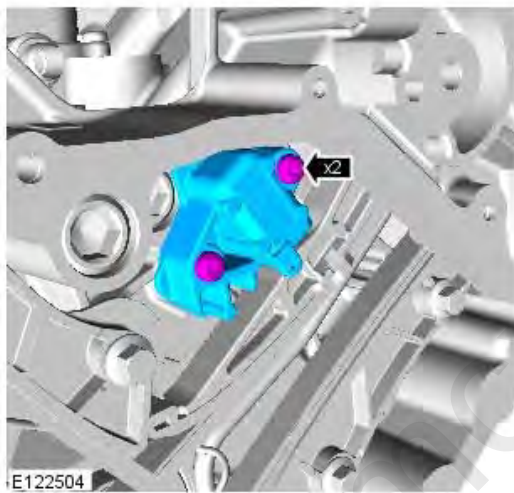


- 11.

12.




13.

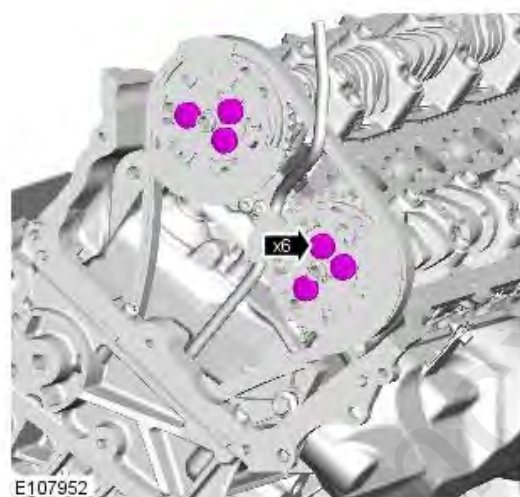




14. **14.**  **CAUTION:** If the VVT is knocked or dropped then the VVT must be replaced.

Remove the timing chain with the VVT units.

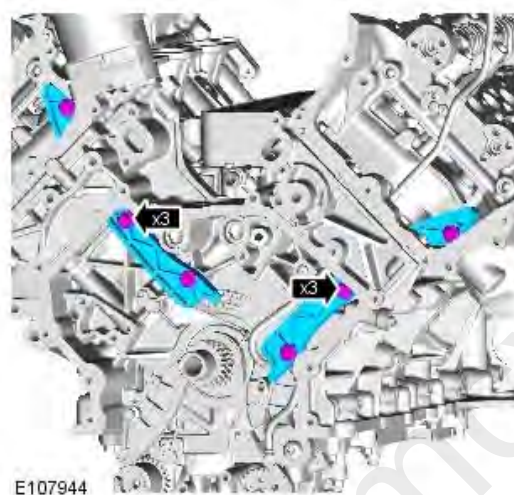


15.

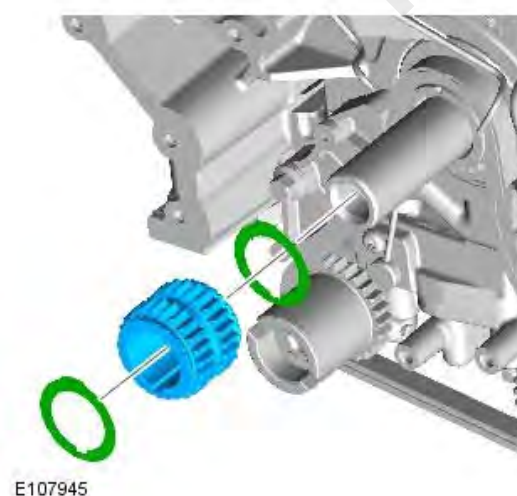


16. **16.**  **CAUTION:** Discard the friction washer.


Installation

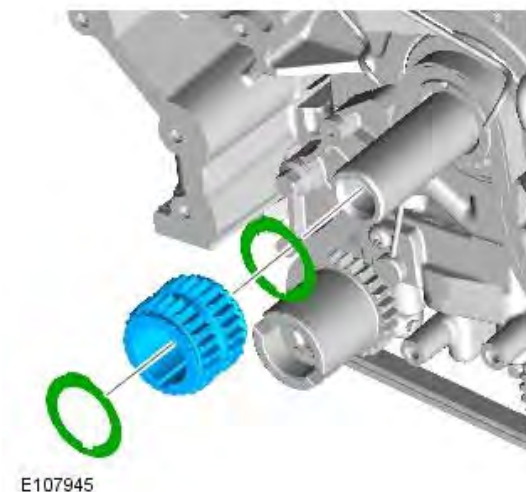

1. 1.  CAUTION: Install a new friction washer.

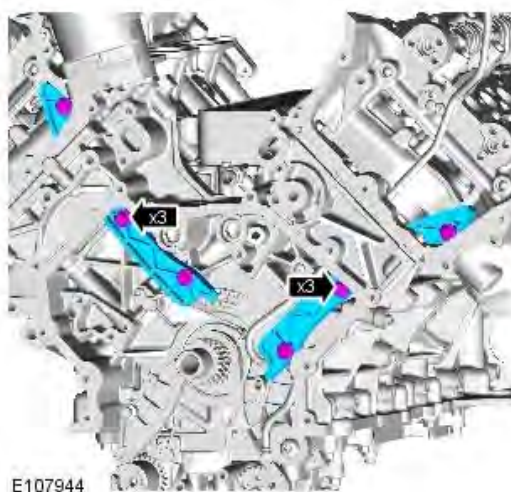

2. Torque: 12 Nm

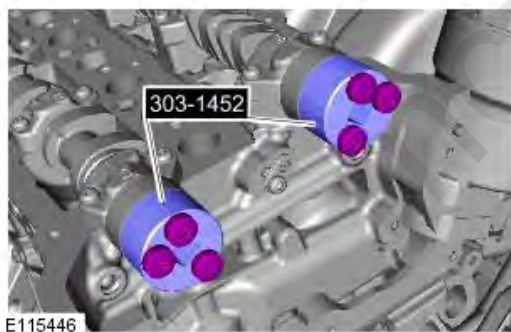

3.
 - Install the special tool to each Camshaft.
 - Special Tool(s): [303-1452](#)
 - Torque: 10 Nm




E118546

4.

- Carefully rotate the camshafts if the position is not as shown.

5.

- Install the special tool 303-1445 to the rear of the camshafts making sure the key way's are correctly located into each slot on each of the camshafts.

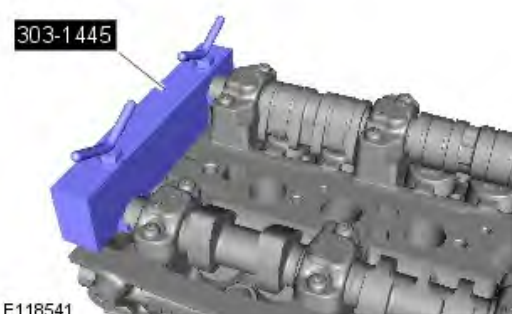

E118541

6. **6. CAUTIONS:**




Do not overturn the camshafts.



Tighten the wing nuts finger tight. Failure to follow this instruction may result in damage to the components.

- Using a suitable tool, carefully rock the camshaft clockwise then anti-clockwise. Turn the special tool locking nuts until there is no movement left in camshafts.
- Repeat steps 3- 6 for the camshafts on the other cylinder head.

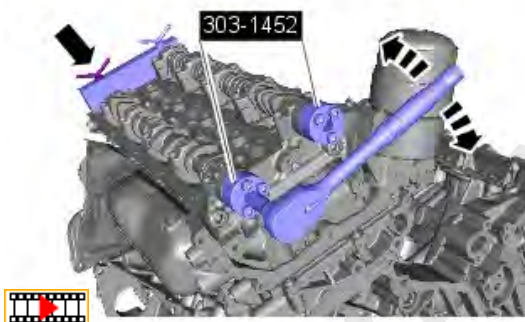

7. 7. CAUTIONS:



Do not allow the camshaft to rotate.



If the VVT is knocked or dropped then the VVT must be replaced.


• NOTE: Do not tighten at this stage.

- Install the timing chain with the variable valve timing (VVT) units.




8.


- Make sure that all the timing chain alignment marks are in the positions shown.

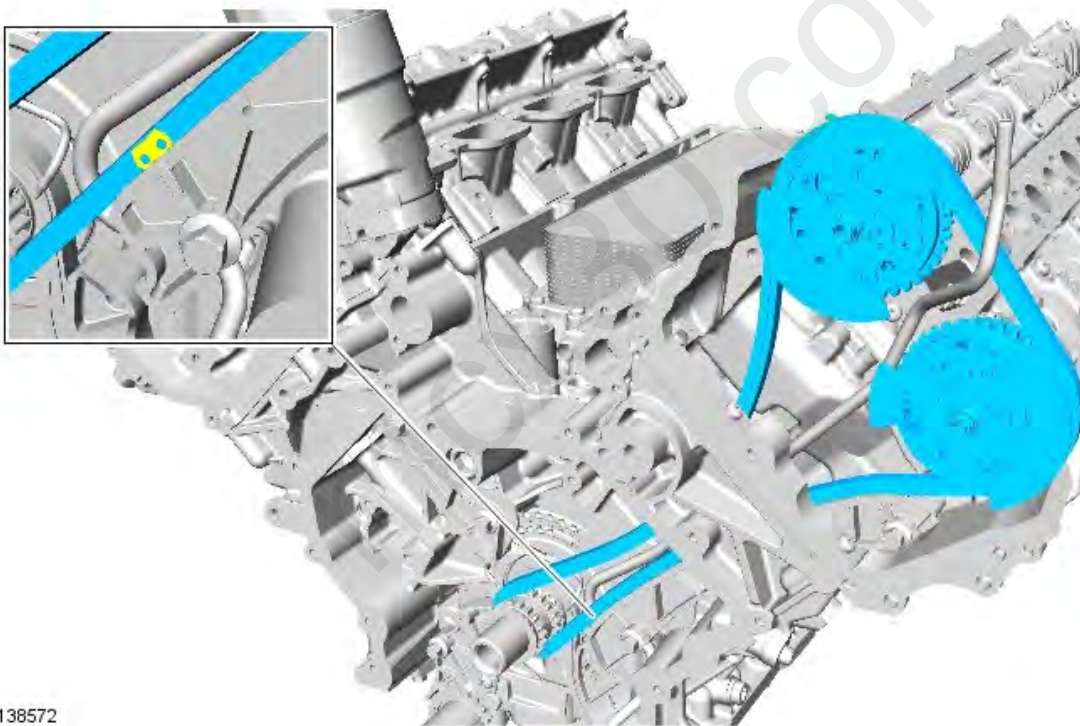


9. Torque: 25 Nm

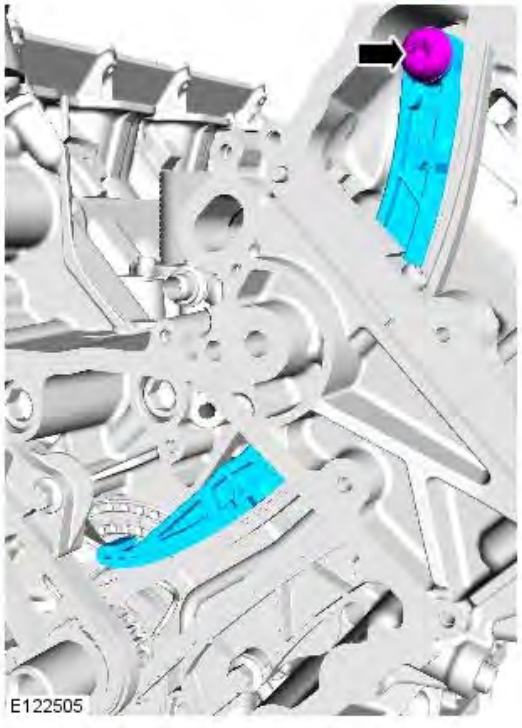

10. Make sure the tensioner piston is fully extended. Then fully depress and lock the tensioner piston with the grenade pin before installation, failure to do this may result in damage to the engine.

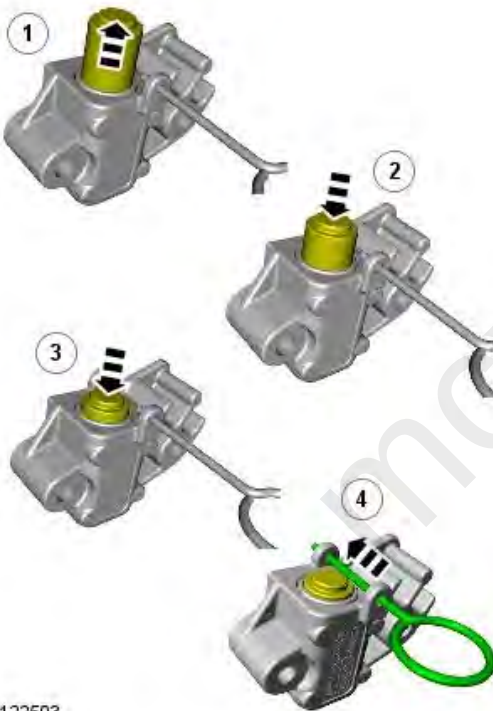

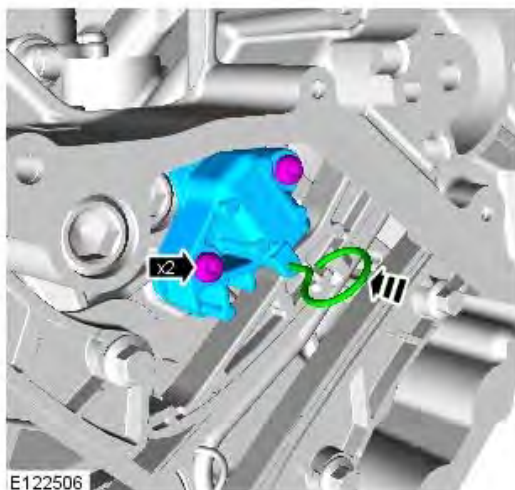

11. **11.**  **CAUTION:** Do not release the timing chain tensioner locking pin at this stage.

Torque: 10 Nm



12. **12.** **CAUTIONS:**

 Do not allow the camshafts to rotate.

 If the VVT is knocked or dropped then the VVT must be replaced.

• **NOTE:** Do not tighten at this stage.

- Install the timing chain with the VVT units.


13.

- Make sure that all the timing chain alignment marks are in the positions shown.




E138571

14. Torque: 25 Nm

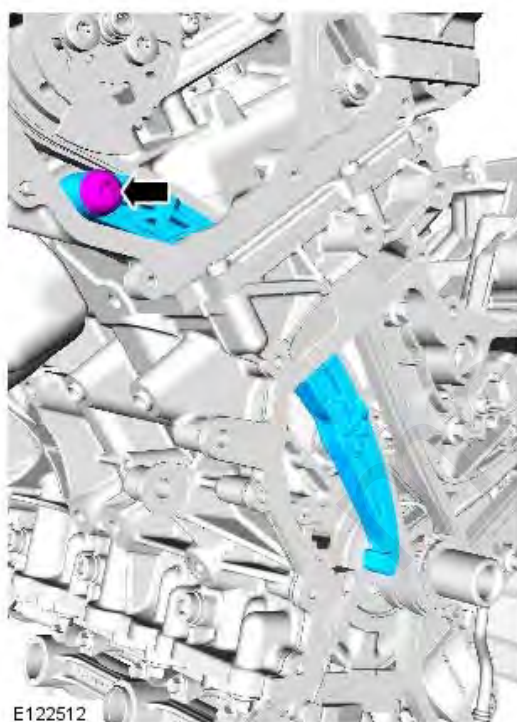

E122512


15. Make sure the tensioner piston is fully extended. Then fully depress and lock the tensioner piston with the grenade pin before installation, failure to do this may result in damage to the engine.

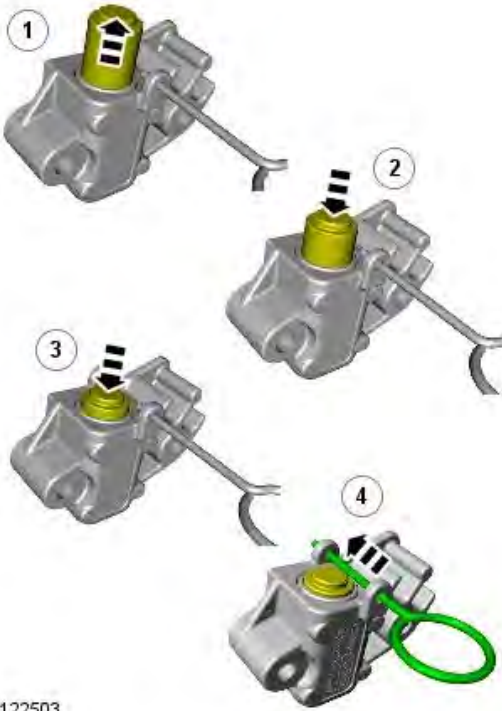

E122503


16. **⚠ CAUTION:** Do not release the timing chain tensioner locking pin at this stage.

Torque: 10 Nm

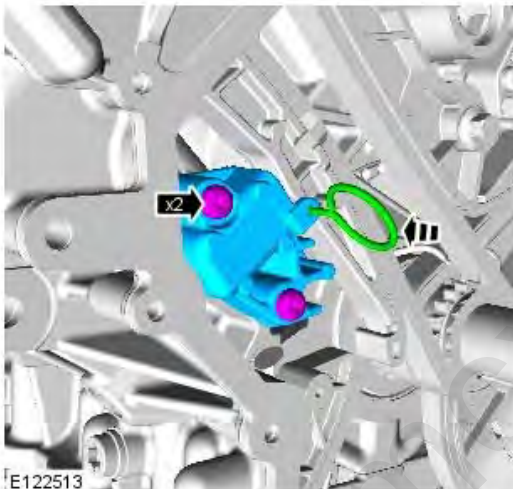


E122513

- 17.

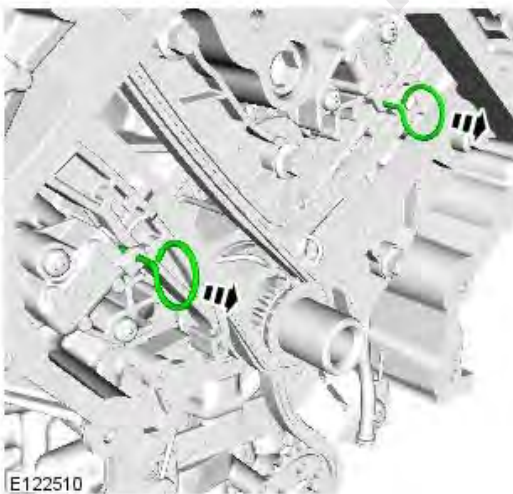


E122510

18. **⚠ CAUTION:** Do not use mechanical force.
Make sure that the tensioners are fully deployed.

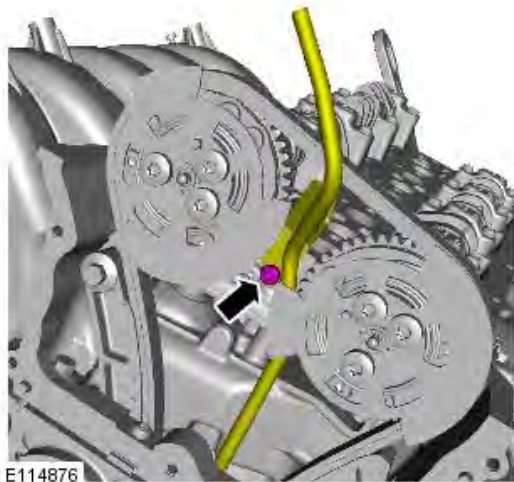


19.

- Release and reposition the oil suction tube to one side.

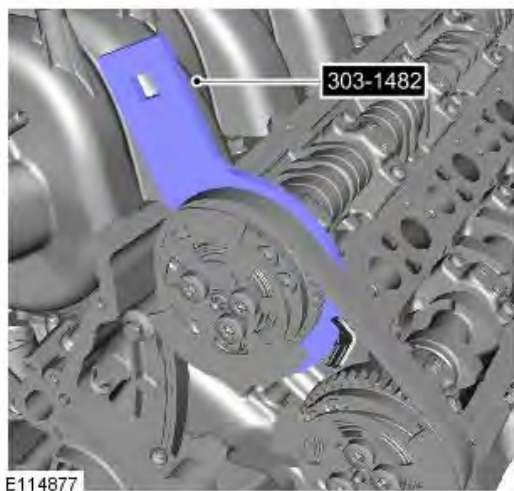

20.

- Install the special tool.
- *Special Tool(s)*: [303-1482](#)

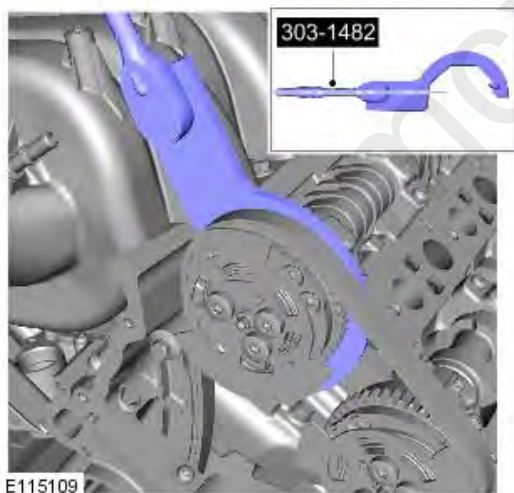

21. **21. CAUTIONS:**




Apply the torque to the end of the special tool.



Make sure that the torque wrench is aligned with the special tool as illustrated in the graphic.


- Install the torque wrench to the special tool.
- *Torque*: 35 Nm

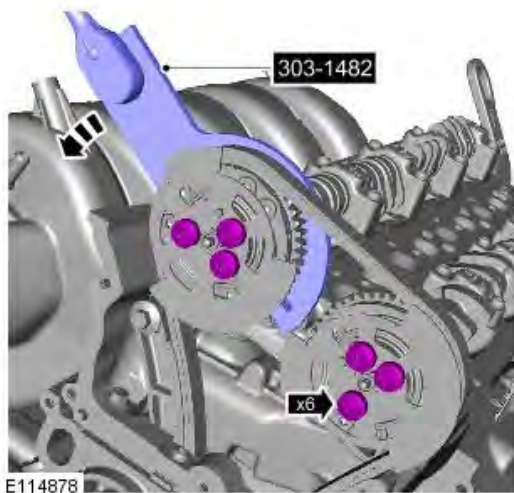

22. **22.**  **CAUTION:** Make sure that the torque wrench does not move whilst tightening the VVT bolts.


• **NOTE:** Make sure to tighten the exhaust VVT unit bolts first.

- **Torque:** 32 Nm
- **Special Tool(s):** [303-1482](#)

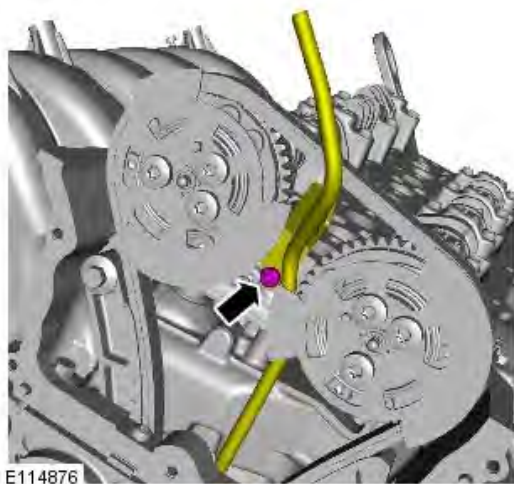


23.

- Install the oil suction tube.
- **Torque:** 10 Nm

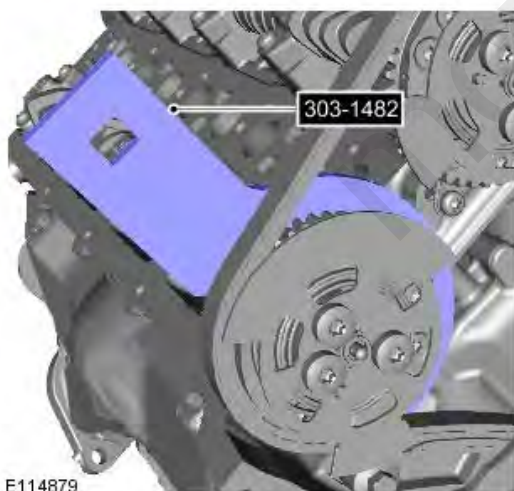

24.

- Install the special tool.
- **Special Tool(s):** [303-1482](#)

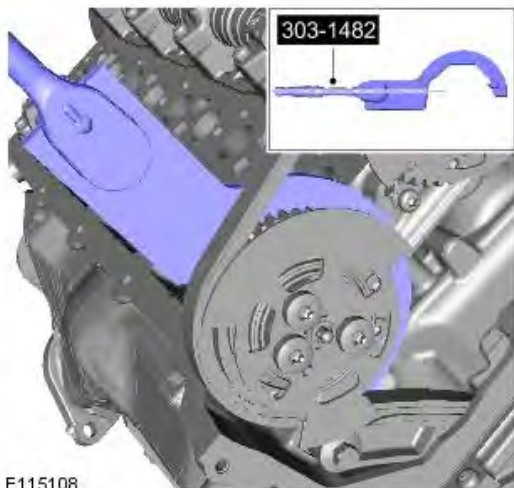

25. **25. CAUTIONS:**




Apply the torque to the end of the special tool.



Make sure that the torque wrench is aligned with the special tool as illustrated in the graphic.

- Install the torque wrench to the special tool.
- Torque: 35 Nm

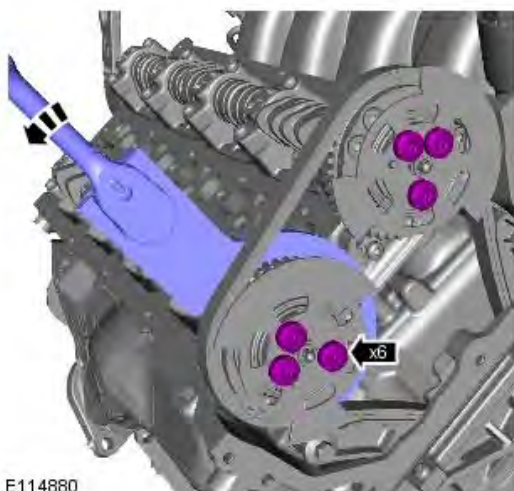

26. **26. CAUTION:** Make sure that the torque wrench does not move whilst tightening the VVT bolts.


- NOTE: Make sure to tighten the inlet VVT unit bolts first.

Torque: 32 Nm




27.

- Remove the special tool.

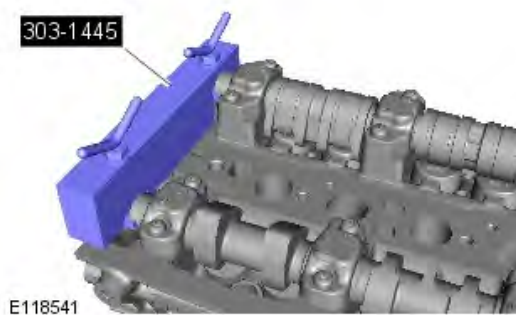


28.

- Remove the special tool.

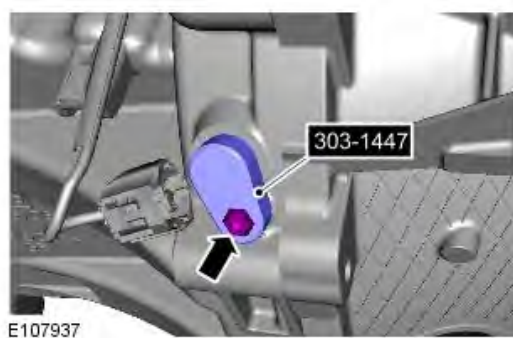


29.

- Remove the special tool.
- *Special Tool(s):* [303-1447](#)

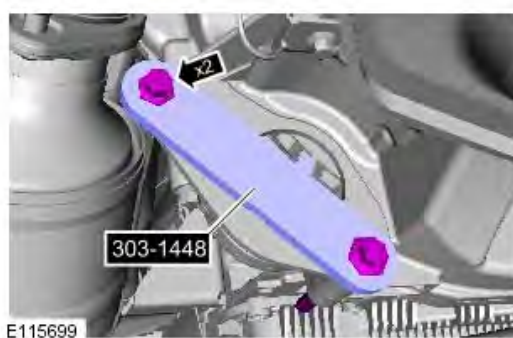


30.

- Install the special tool.
- *Special Tool(s):* [303-1448](#)

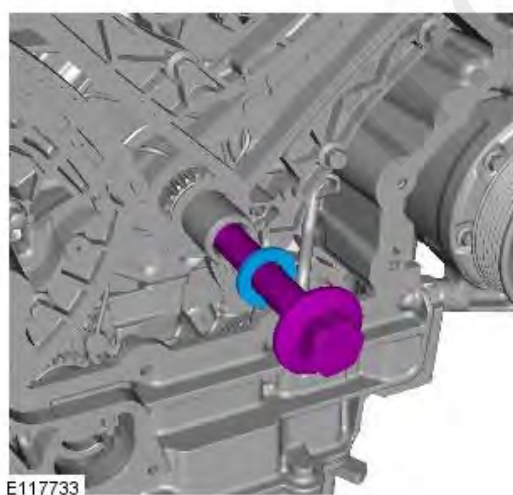

31. **31.**  **CAUTION:** Install the crankshaft pulley bolt with an M16 washer to prevent damage to the crankshaft on installation.


Torque: 50 Nm

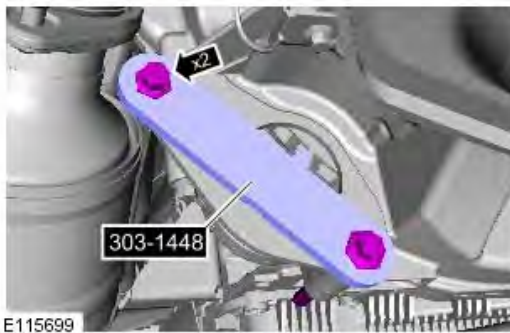

32.


- Remove the special tool.
- *Special Tool(s):* [303-1448](#)

33. Rotate the engine two complete turns clockwise.

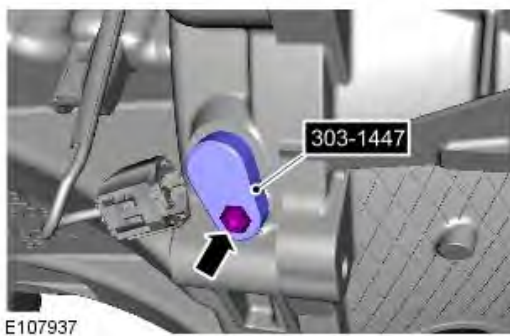


34. **34.**  **CAUTION:** Only rotate the crankshaft clockwise.

- Install the special tool.
- *Special Tool(s):* [303-1447](#)

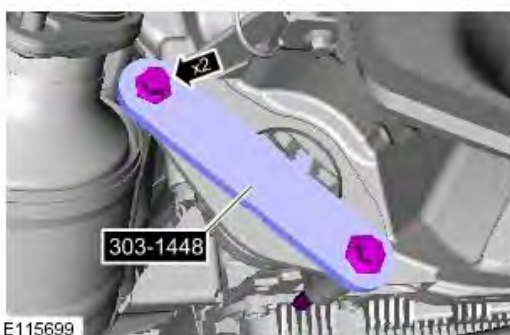


35.

- Install the special tool.
- *Special Tool(s):* [303-1448](#)

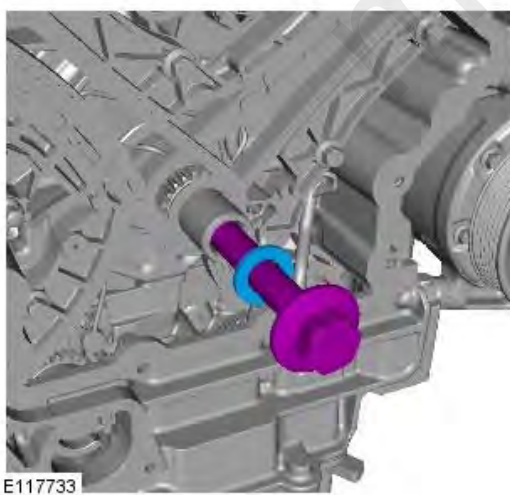


36.

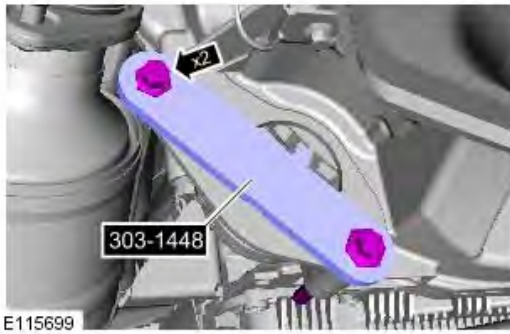

37.

- Remove the special tool.
- *Special Tool(s):* [303-1448](#)

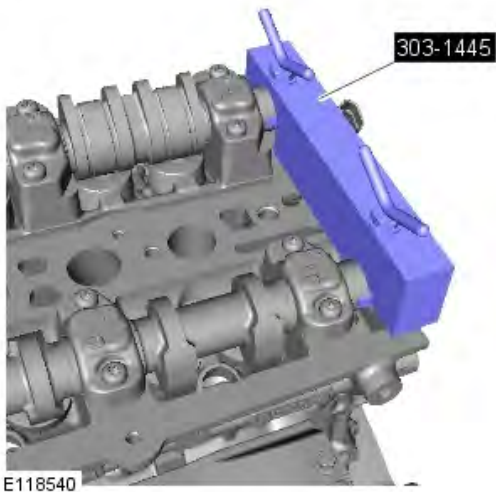


38. **38. CAUTIONS:**

 If the special tool cannot be installed, return to step 22 of the installation until the special tool 303-1445 is installed correctly.

 If directed to step 22, make sure that the VVT unit retaining bolts are loosened prior to installing the special tool(s).


Install the special tool.

Special Tool(s): [303-1445](#)

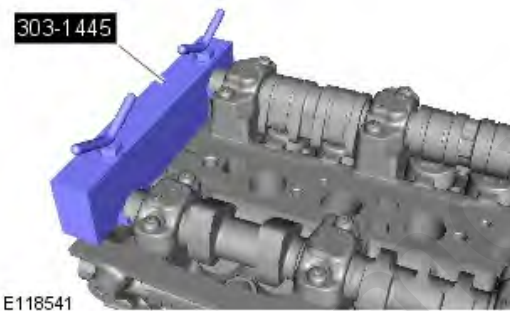


39. **39.  CAUTION:** If the special tool cannot be installed, the timing chain installation steps must be repeated.

Install the special tool.

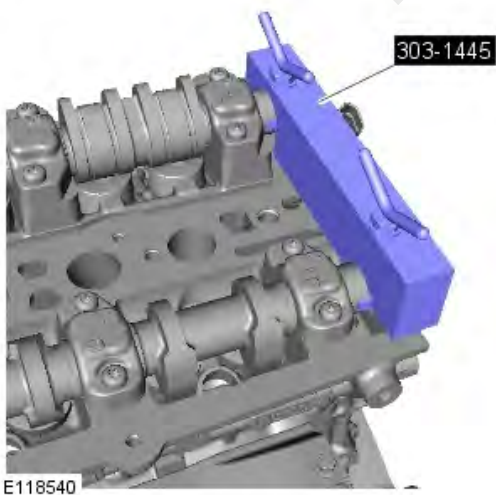


40.


- Remove the special tool.

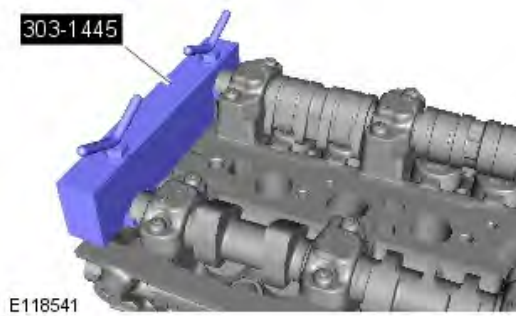

- 41.
- Remove the special tool.

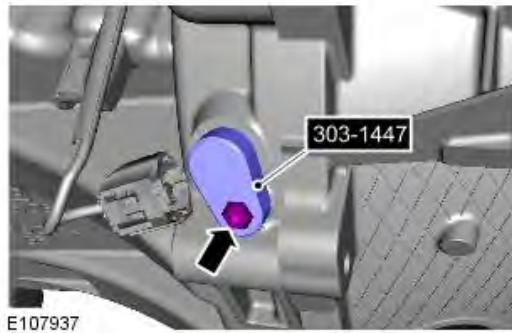

- 42.
- Remove the special tool.
 - *Special Tool(s):* [303-1447](#)

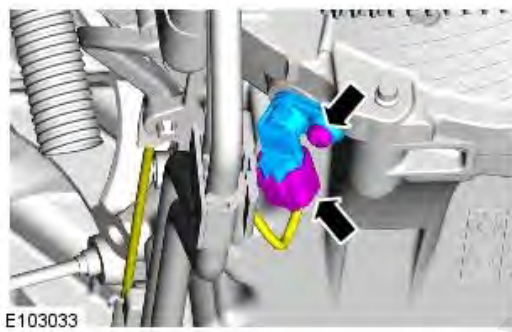

43. Torque: 10 Nm

44. Refer to: [Timing Cover](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

45. Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

Engine - V8 5.0L Petrol - Timing Drive Components Assembly Part Number: Tsubaki Timing Drive

Removal and Installation

Special Tool(s)

 E115263	303-1445 Timing Tool – Camshaft Alignment
 E115265	303-1447 Timing Tool
 E115266	303-1448 Locking Tool
 E115270	303-1452 Camshaft Rotating Tool
 E115271	303-1482 Tensioner Tool

Removal



CAUTION: Check all timing components for wear and install new components if required.

• **NOTE:** Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.  **WARNING:** Make sure to support the vehicle with axle stands.


Raise and support the vehicle.



3.

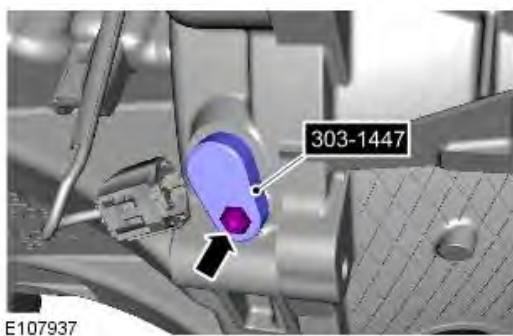


4.  **CAUTION:** Only rotate the crankshaft clockwise.
Install the special tool.

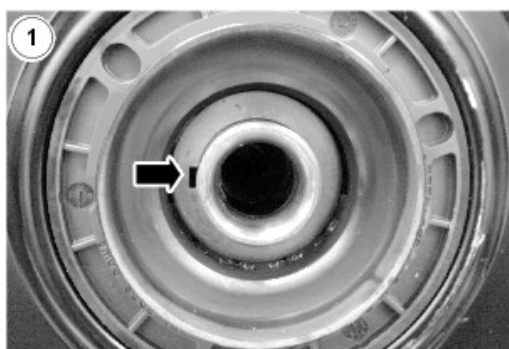

5.  **CAUTION:** If the noted position of the woodruff key is at the 9 o'clock position, then a new flexplate must be installed. If the woodruff key is in the 6 o'clock position then proceed with the next step.


Note the position of the crankshaft woodruff key.

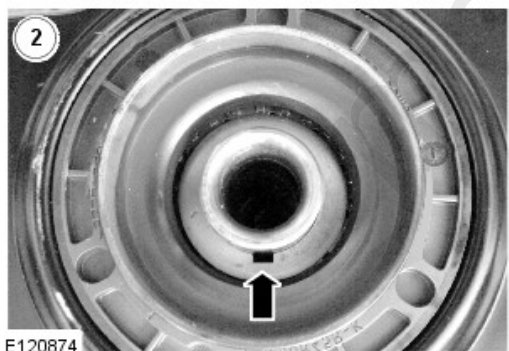


E120874

6. Refer to: [Timing Cover](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).


7.

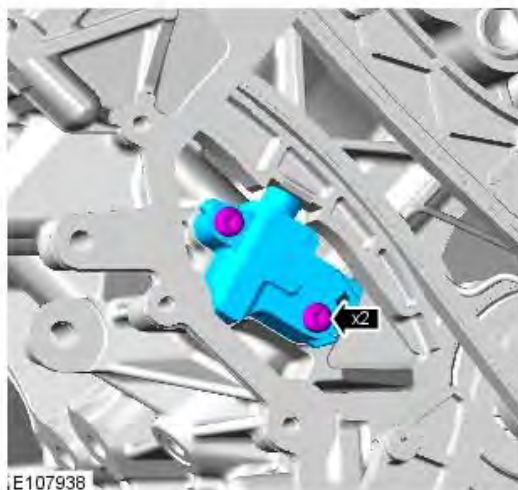

8.

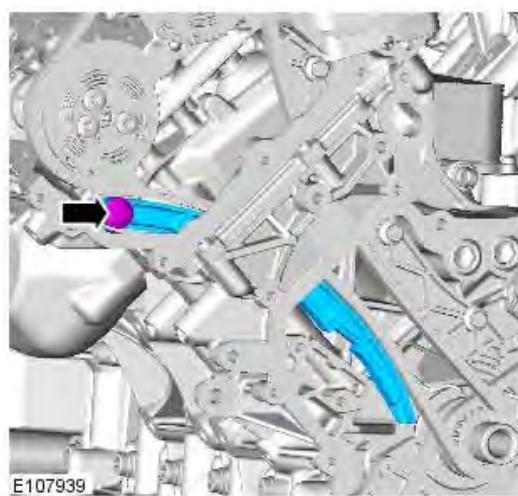


9.

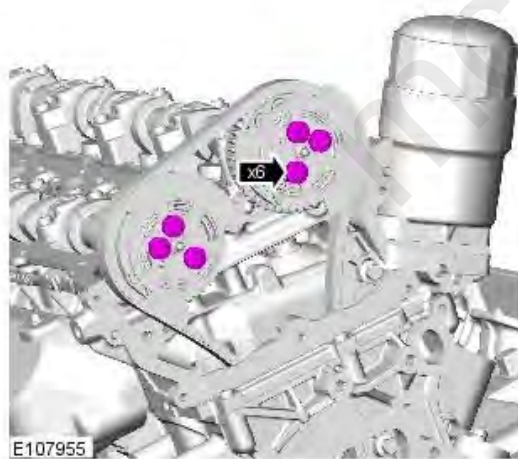




10. **10.**  **CAUTION:** If the variable valve timing (VVT) units are knocked or dropped then the VVT must be replaced.

Remove the timing chain with the VVT units.

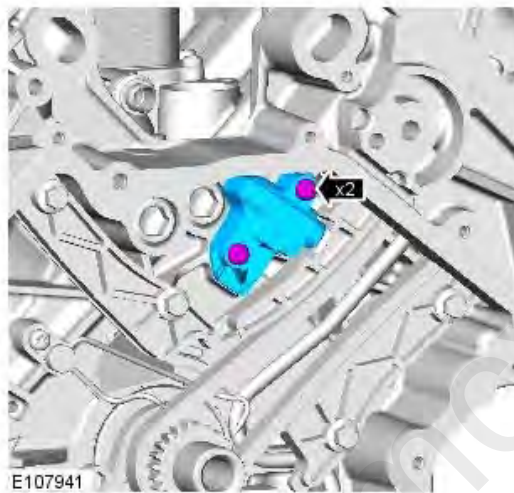


11.

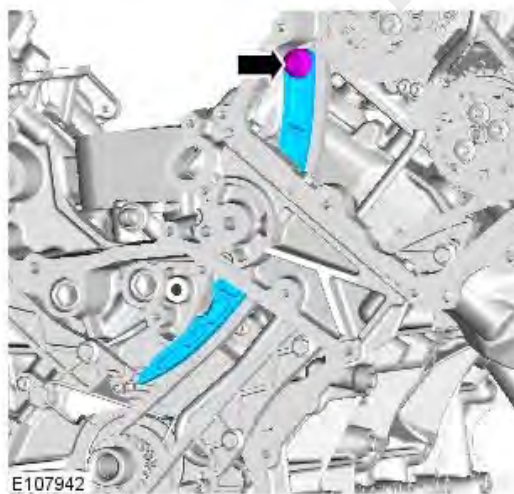

12.

13.

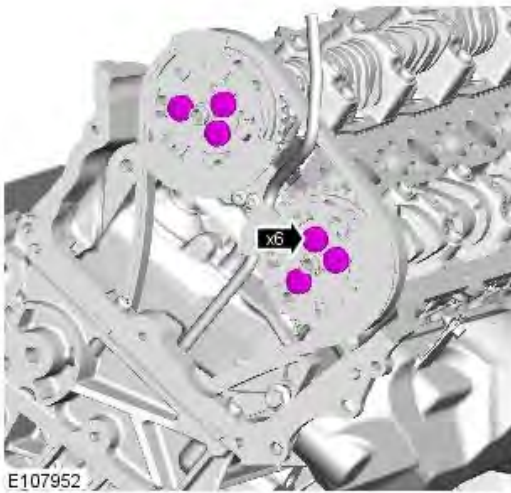



14. **14.**  **CAUTION:** If the VVT is knocked or dropped then the VVT must be replaced.

Remove the timing chain with the VVT units.




15.

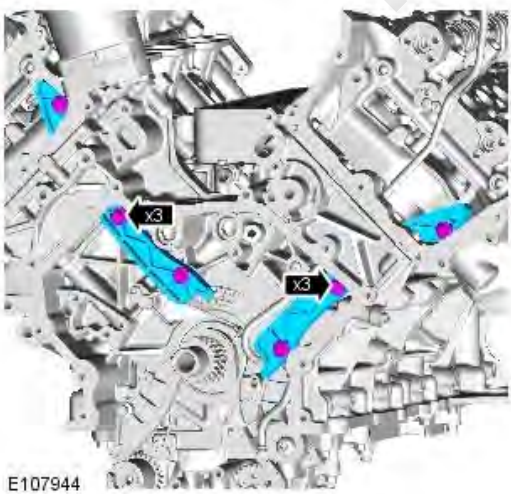

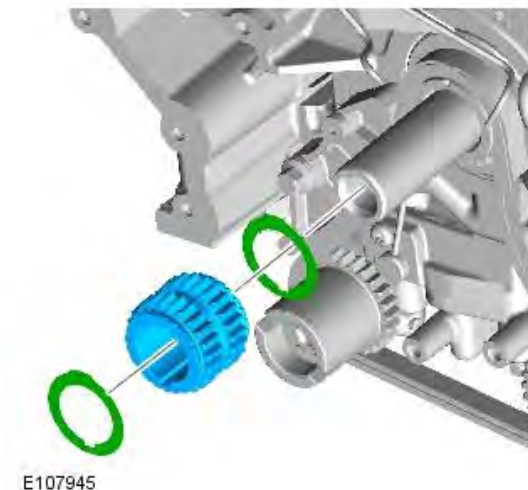


16. **16.**  **CAUTION:** Discard the friction washers.


Installation

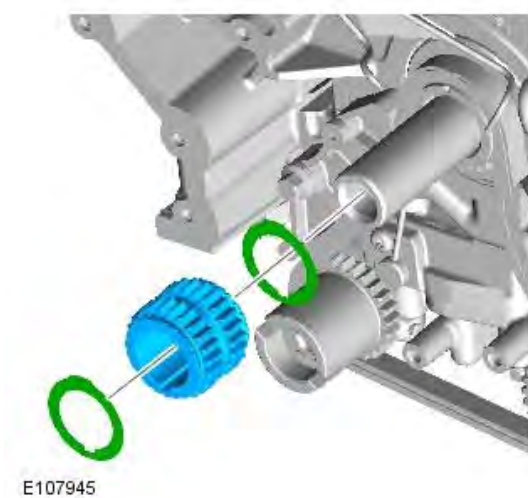

1. **1.**  **CAUTION:** Install new friction washers.

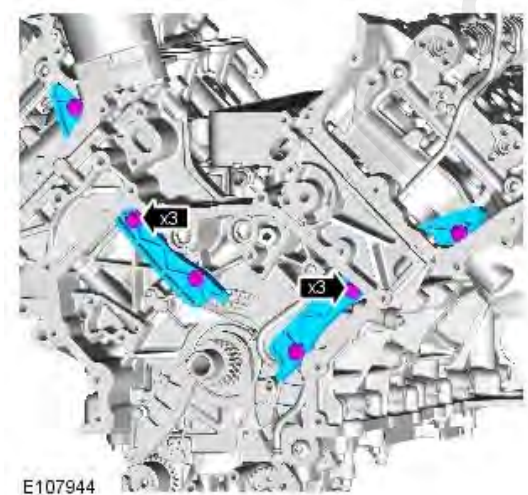

2. *Torque:* 12 Nm

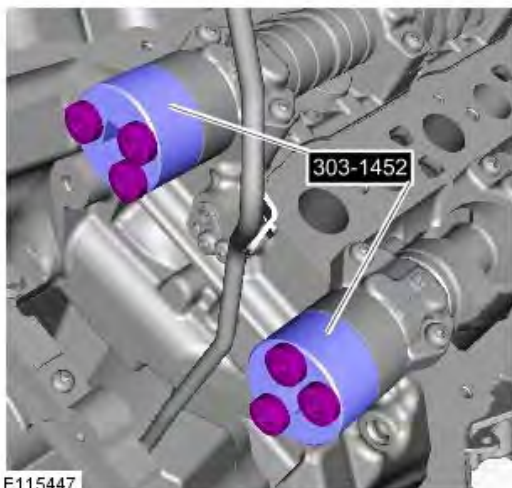

3.

- Install the special tool to the LH bank Camshafts.
- *Special Tool(s):* [303-1452](#)
- *Torque:* 10 Nm




4.

- Carefully rotate the camshafts if the position is not as shown.



5.

- Install the special tool 303-1445 to the rear of the camshafts making sure the key way's are correctly located into each slot on each of the camshafts.

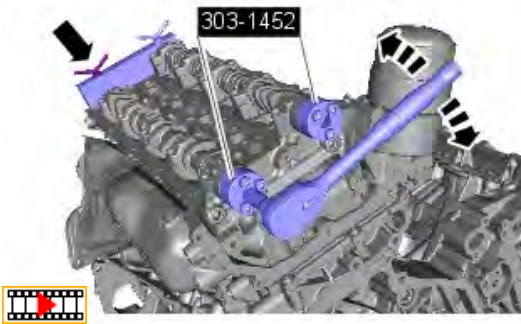

6. 6. CAUTIONS:



Do not overturn the camshafts.



Tighten the wing nuts finger tight. Failure to follow this instruction may result in damage to the components.

- Using a suitable tool, carefully rock the camshaft clockwise then anti-clockwise. Turn the special tool locking nuts until there is no movement left in camshafts.
- Repeat steps 3- 6 for the camshafts on the other cylinder head.

7. 7. CAUTIONS:



Do not allow the camshaft to rotate.




If the VVT is knocked or dropped then the VVT must be replaced.

- NOTE: Do not tighten at this stage.
- Install the timing chain with the variable valve timing (VVT) units.




8.

- Make sure that all the timing chain alignment marks are in the positions shown.

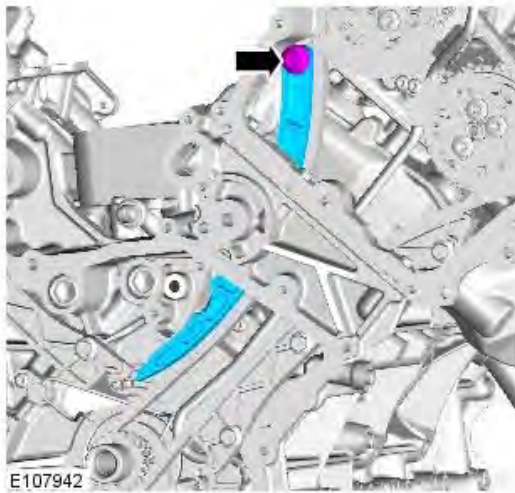

9. Torque: 25 Nm

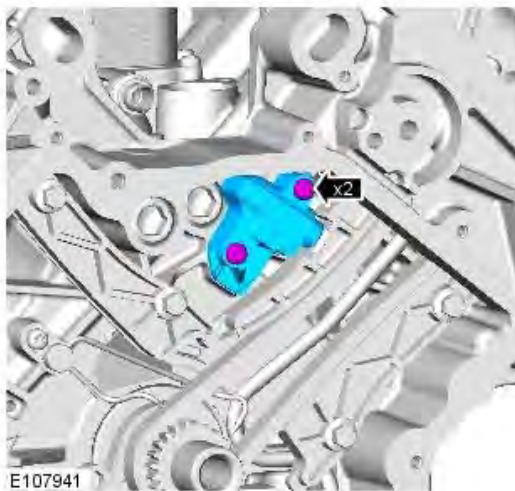

10. **10.**  CAUTION: Do not release the timing chain tensioner locking pin at this stage.

Torque: 10 Nm



11. **11.** CAUTIONS:



Do not allow the camshafts to rotate.




If the VVT is knocked or dropped then the VVT must be replaced.

• NOTE: Do not tighten at this stage.

- Install the timing chain with the VVT units.


12.

- Make sure that all the timing chain alignment marks are in the positions shown.

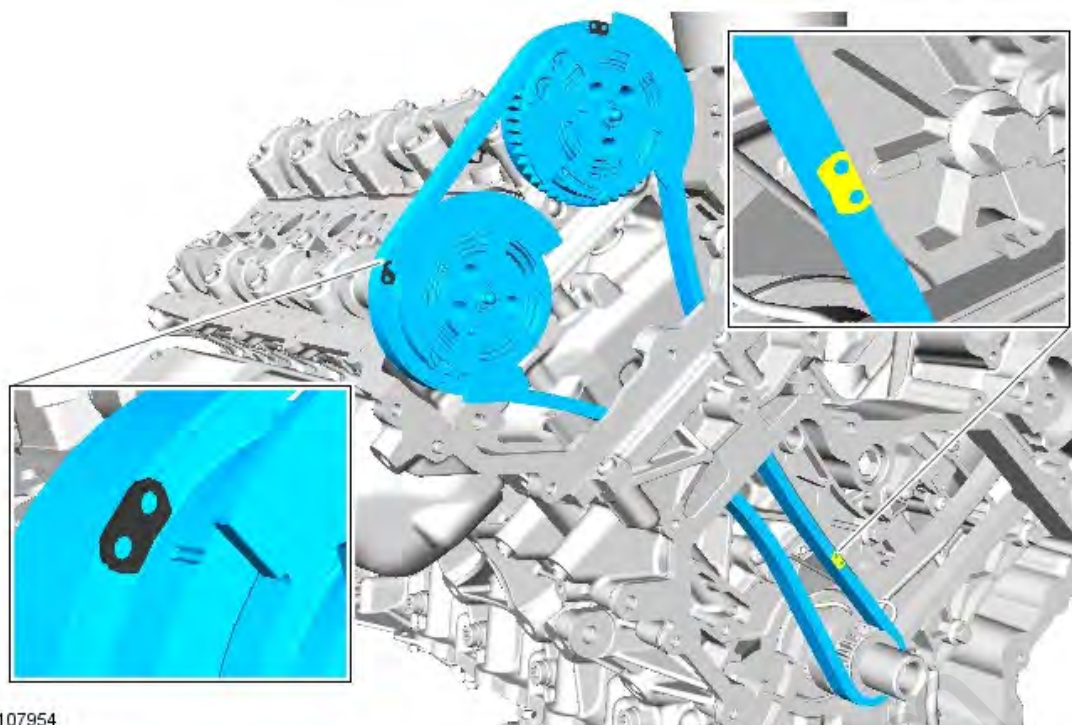

E107954


13. Torque: 25 Nm

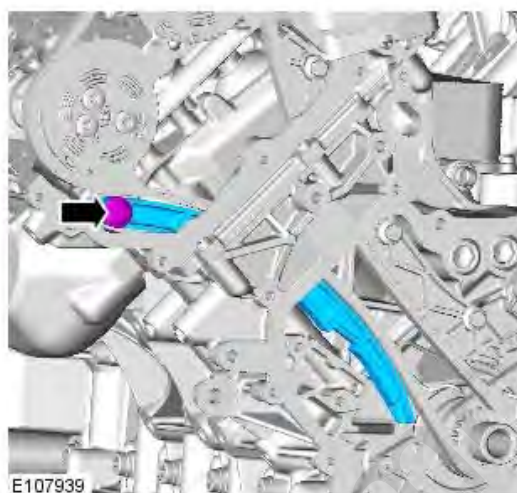


E107939

14. **14.**  **CAUTION:** Do not use mechanical force.
Make sure that the tensioners are fully deployed.


Torque: 10 Nm

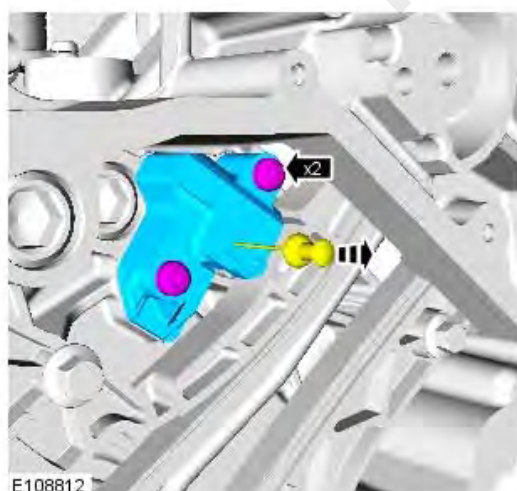


E108812

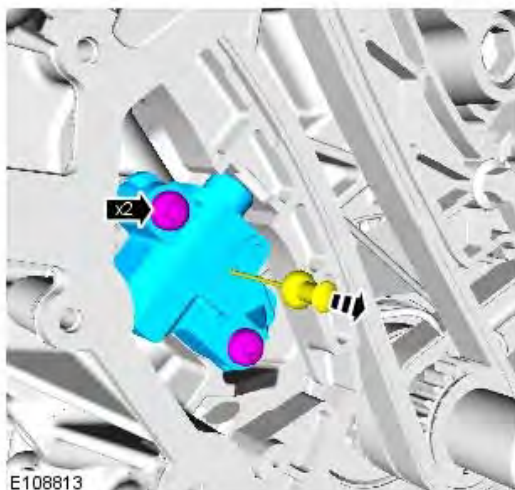


15. **15.**  **CAUTION:** Do not use mechanical force.
Make sure that the tensioners are fully deployed.
- Torque:* 10 Nm

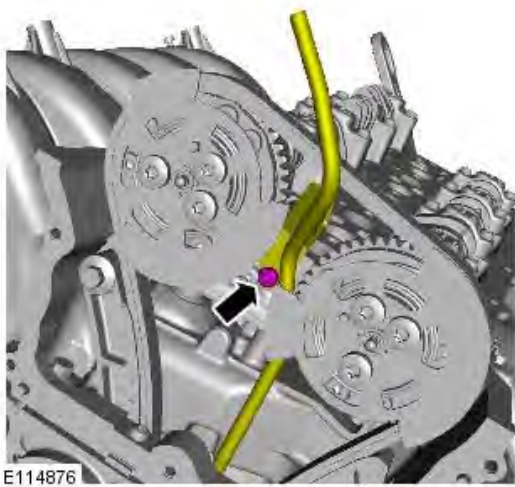

- 16.
- Release and reposition the oil suction tube to one side.

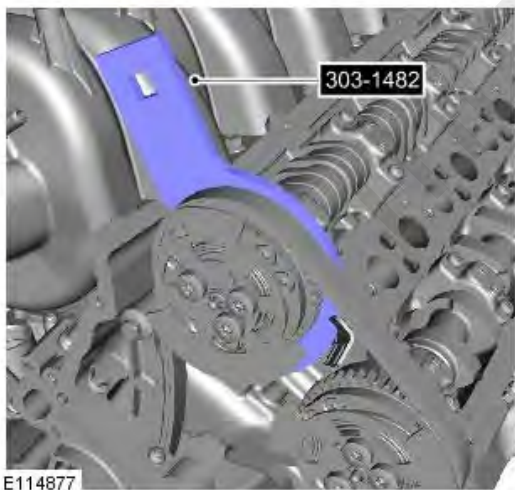

- 17.
- Install the special tool.
 - *Special Tool(s):* [303-1482](#)

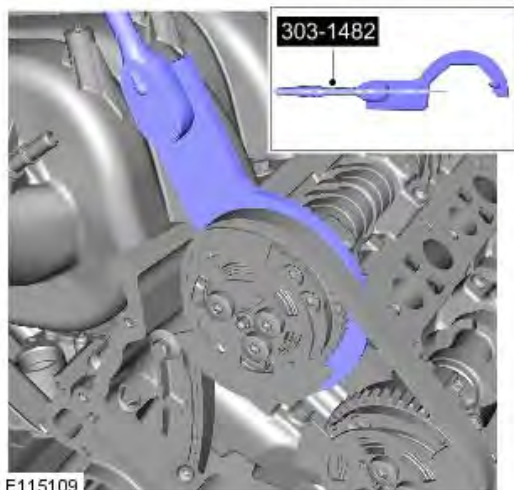

18. **18. CAUTIONS:**




Apply the torque to the end of the special tool.



Make sure that the torque wrench is aligned with the special tool as illustrated in the graphic.


- Install the torque wrench to the special tool.
- Torque: 35 Nm

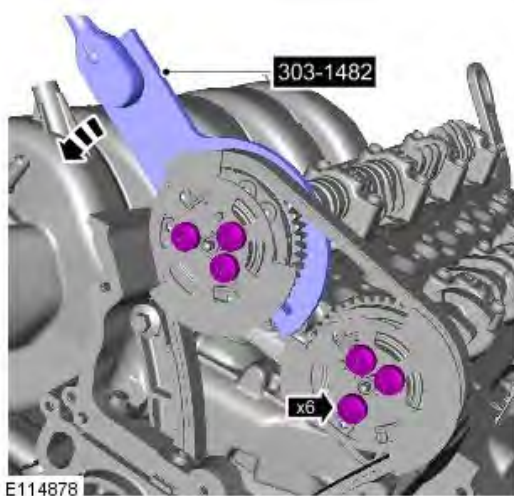

19. **19. CAUTION:** Make sure that the torque wrench does not move whilst tightening the VVT bolts.


- NOTE: Make sure to tighten the exhaust VVT unit bolts first.

- Torque: 32 Nm
- Special Tool(s): 303-1482

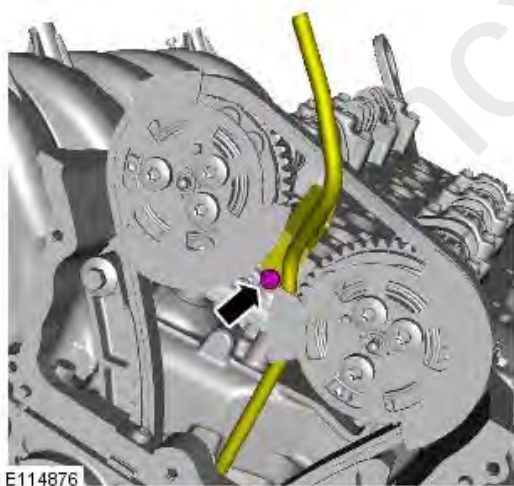


20.

- Install the oil suction tube.
- Torque: 10 Nm

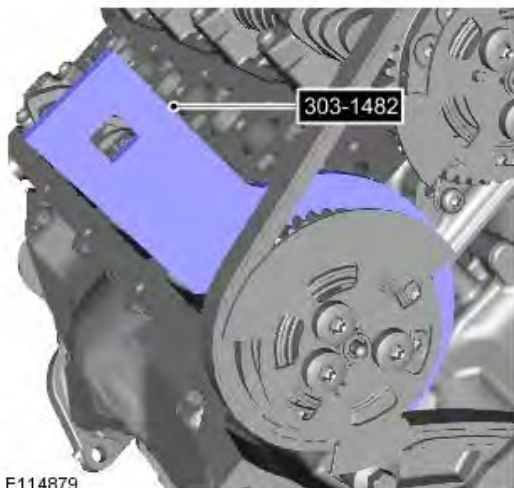

21.

- Install the special tool.
- *Special Tool(s):* [303-1482](#)

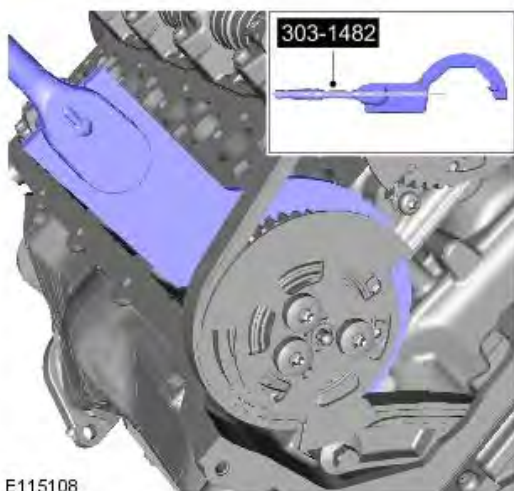

22. **22. CAUTIONS:**



Apply the torque to the end of the special tool.




Make sure that the torque wrench is aligned with the special tool as illustrated in the graphic.

- Install the torque wrench to the special tool.

Special Tool(s): [303-1482](#)


- *Torque:* 35 Nm

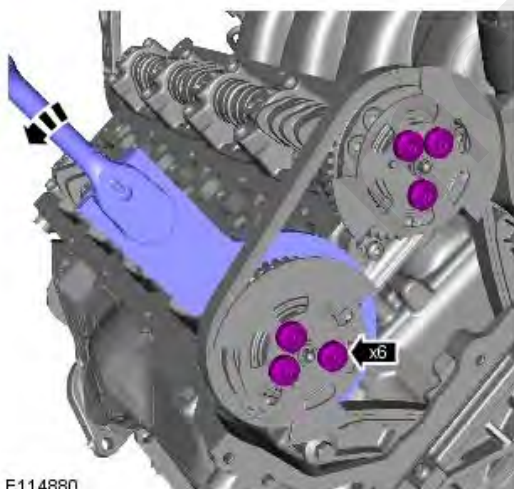

23. **23. ⚠ CAUTION:** Make sure that the torque wrench does not move whilst tightening the VVT bolts.


- **NOTE:** Make sure to tighten the inlet VVT unit bolts first.

Torque: 32 Nm

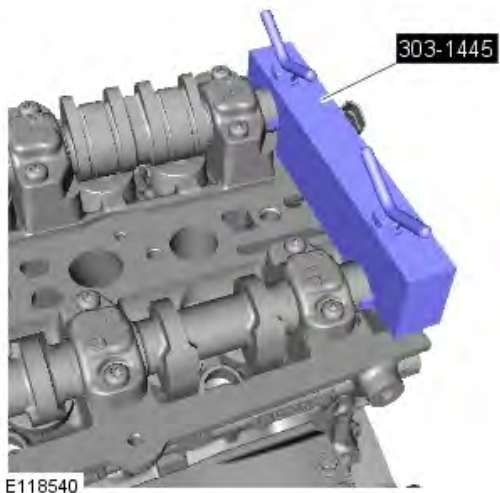


24.

- Remove the special tool.

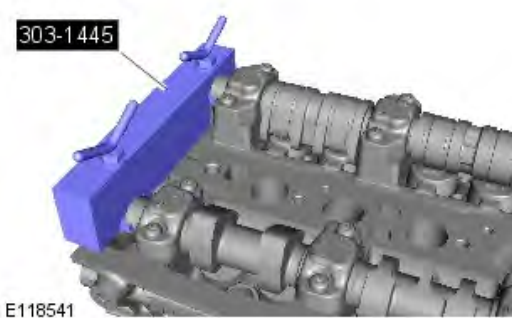


25.

- Remove the special tool.

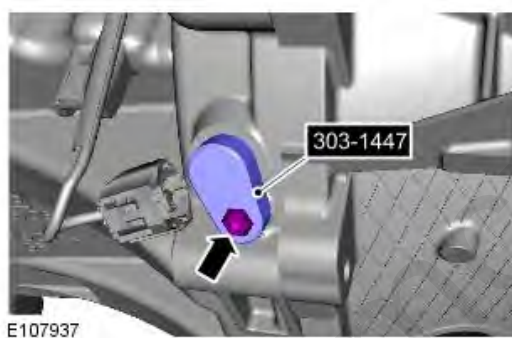


26.

- Remove the special tool.
- *Special Tool(s):* [303-1447](#)

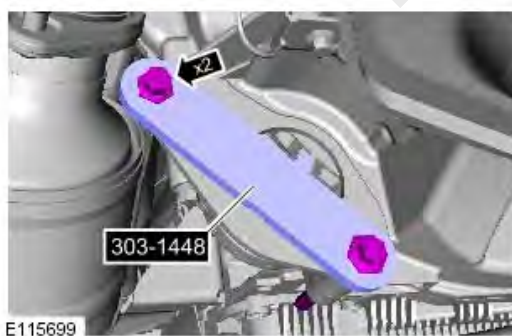


27.

- Install the special tool.
- *Special Tool(s):* [303-1448](#)

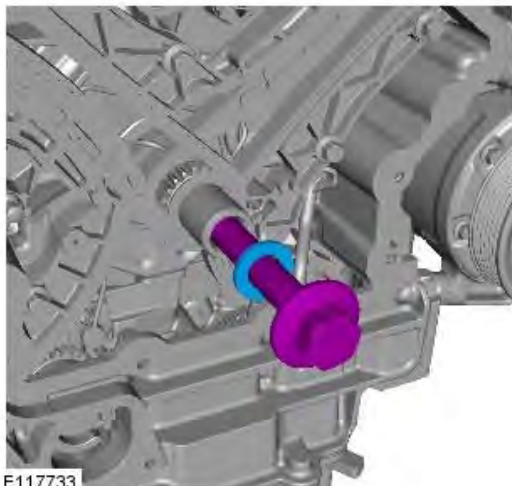

28. **28.**  **CAUTION:** Install the crankshaft pulley bolt with an M16 washer to prevent damage to the crankshaft on installation.


Torque: 50 Nm

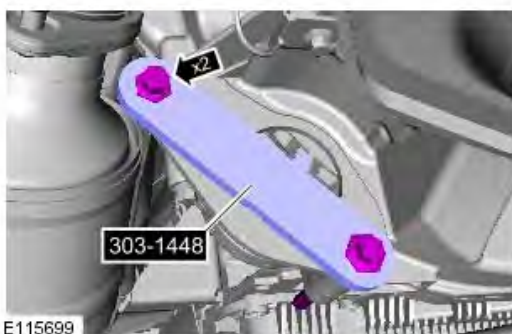

29.

- Remove the special tool.
- *Special Tool(s):* [303-1448](#)


30. Rotate the engine two complete turns clockwise.

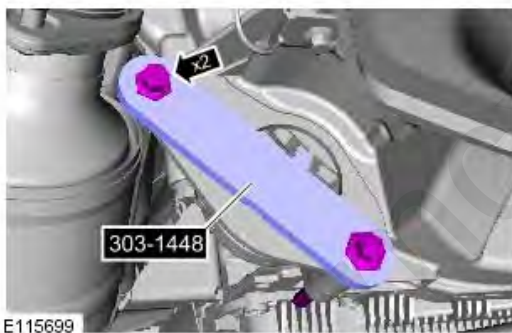


31.

- Install the special tool.
- *Special Tool(s):* [303-1448](#)


32.

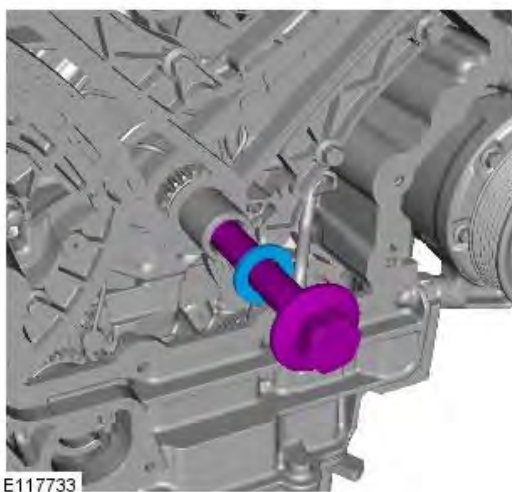

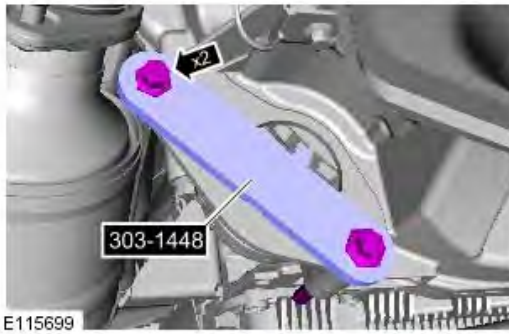


33.

- Remove the special tool.
- *Special Tool(s):* [303-1448](#)

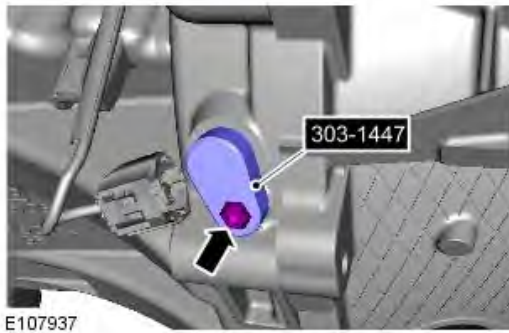

34. **34.**  **CAUTION:** Only rotate the crankshaft clockwise.

- Install the special tool.
- *Special Tool(s):* [303-1447](#)

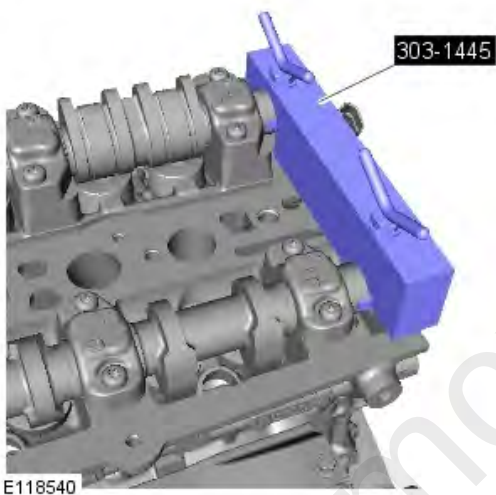


35. **35.** **CAUTIONS:**

 If the special tool cannot be installed, return to step 22 of the installation until the special tool 303-1445 is installed correctly.


 If directed to step 22, make sure that the VVT unit retaining bolts are loosened prior to installing the special tool(s).

Install the special tool.

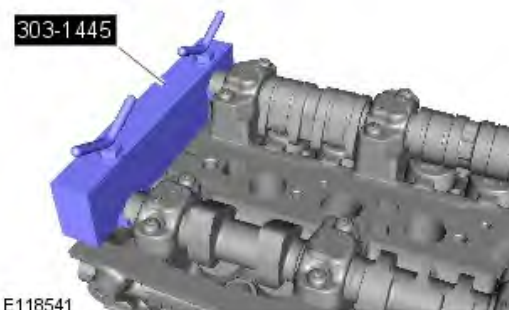


36. **36.**  **CAUTION:** If the special tool cannot be installed, the timing chain installation steps must be repeated.

Install the special tool.

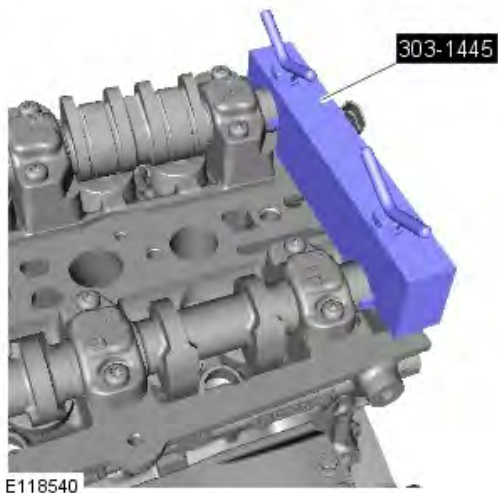


37.

- Remove the special tool.

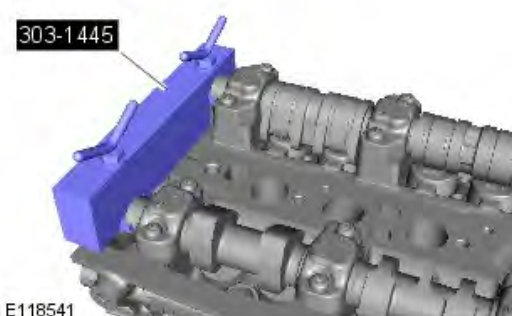


38.

- Remove the special tool.
- *Special Tool(s):* [303-1445](#)

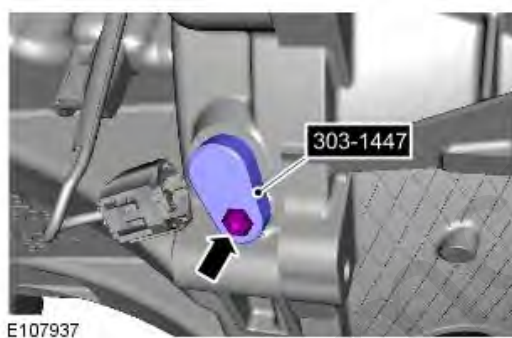

39.

- Remove the special tool.
- *Special Tool(s):* [303-1447](#)

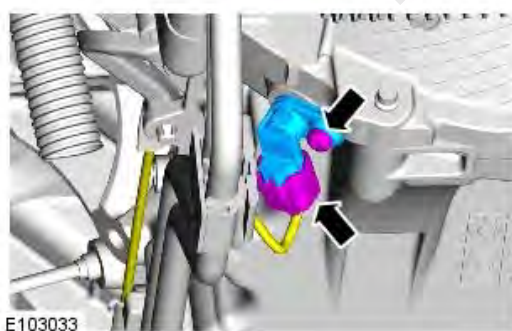

40. Torque: 10 Nm

41. Refer to: [Timing Cover](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

42. Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

Engine - V8 5.0L Petrol - Valve Cover LH

Removal and Installation

Special Tool(s)

 E116982	303-1446 Valve Cover Alignment Tool
--	--

Removal


- NOTE: Removal steps in this procedure may contain installation details.
- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2. Refer to: [Air Cleaner LH](#) (303-12D Intake Air Distribution and Filtering - V8 5.0L Petrol, Removal and Installation).
3. Refer to: [Fuel Rail LH](#) (303-04F Fuel Charging and Controls - V8 5.0L Petrol, Removal and Installation).


4.

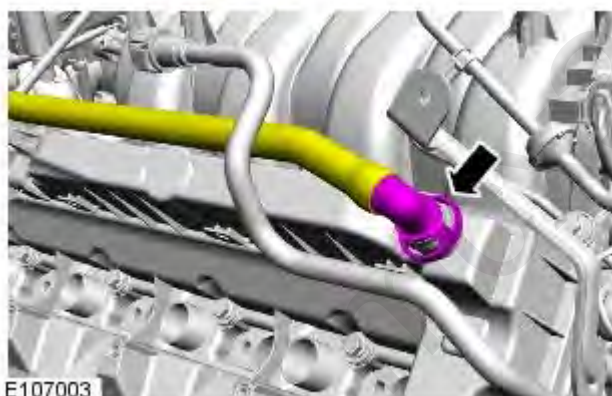

5.

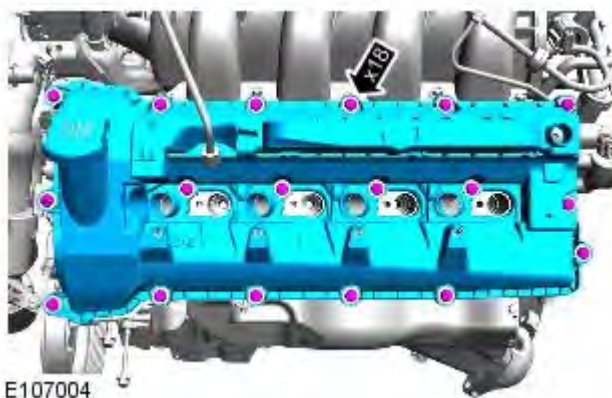

Installation

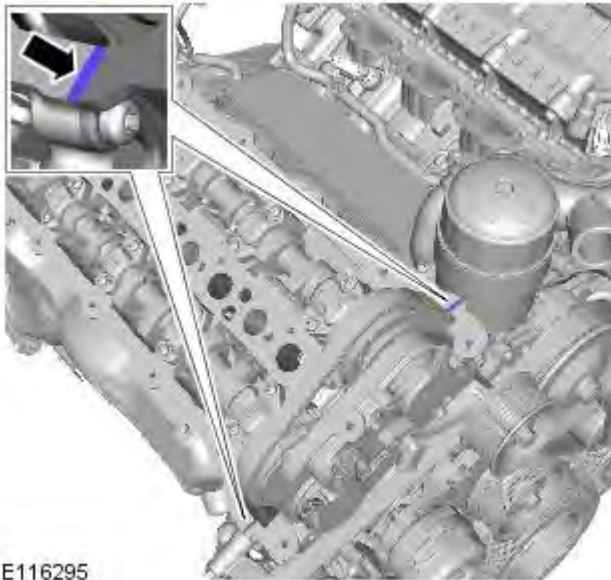

E116295

1. **1. CAUTIONS:**



Use only a plastic scraper when removing the sealing material.



Use lint free cloth.



Make sure that the mating faces are clean and free of corrosion and foreign material.





Installation of the valve cover and tightening must be carried out within 7 minutes of applying the sealant.

• **NOTE:** Apply two beads of silicone gasket sealant (Loctite 5901) as shown on the illustration. The application of the sealant must be 1.5mm diameter 12mm long. Install the valve cover immediately after applying the sealant. The cover should be fitted directly to the head without smearing the sealant or the seals.

• **NOTE:** RH illustration shown, LH is similar.

To install, reverse the removal procedure.


2. **Special Tool(s):** [303-1446](#)

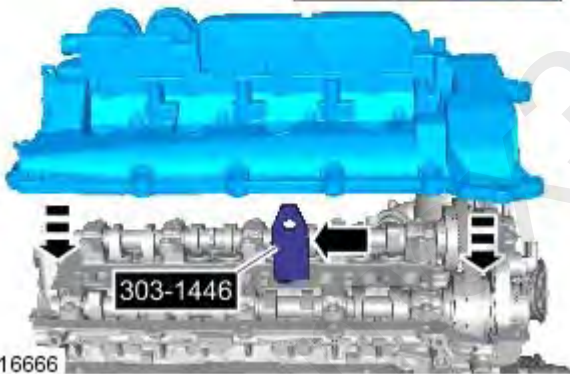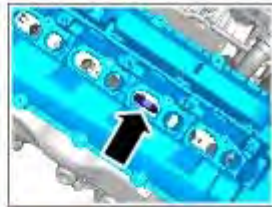

E116666

3. **3. NOTE:** Tighten the bolts in the indicated sequence.

Torque: 13 Nm

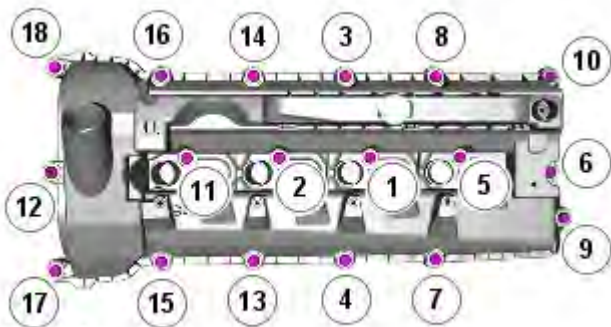

E107006

Engine - V8 5.0L Petrol - Valve Cover RH

Removal and Installation

Special Tool(s)

 E116982	303-1446 Valve Cover Alignment Tool
--	--

Removal


- NOTE: Removal steps in this procedure may contain installation details.
- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


2. Refer to: [Air Cleaner RH](#) (303-12D Intake Air Distribution and Filtering - V8 5.0L Petrol, Removal and Installation).
3. Refer to: [Fuel Rail RH](#) (303-04F Fuel Charging and Controls - V8 5.0L Petrol, Removal and Installation).

4.

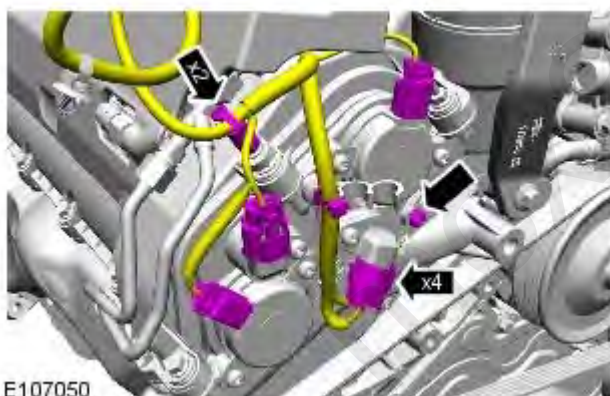


5.

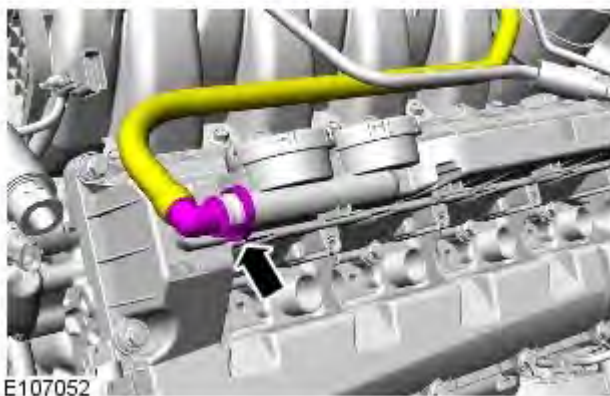

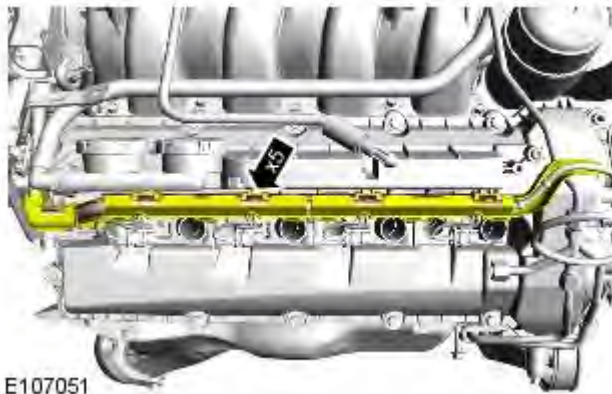


6.

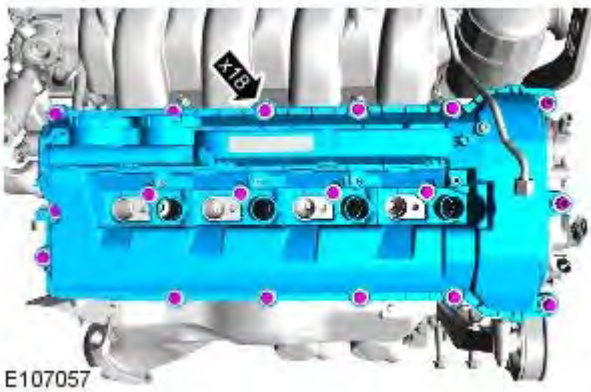

7.

Installation

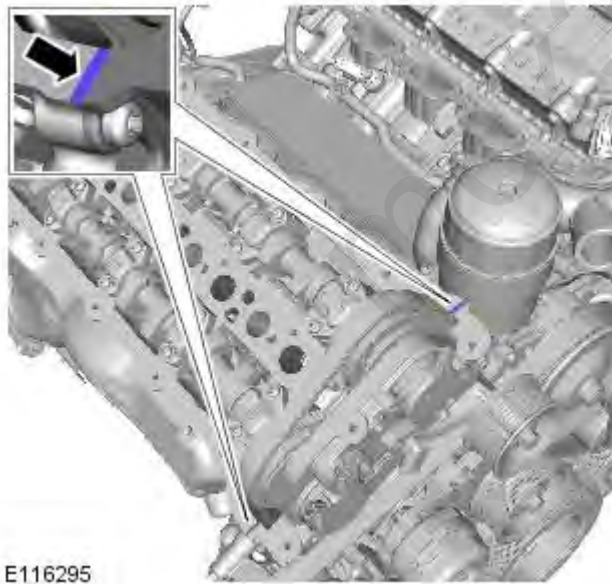

1. CAUTIONS:



Use only a plastic scraper when removing the sealing material.



Use lint free cloth.



Make sure that the mating faces are clean and free of corrosion and foreign material.




Installation of the valve cover and tightening must be carried out within 7 minutes of applying the sealant.

• **NOTE:** Apply two beads of silicone gasket sealant (Loctite 5901) as shown on the illustration. The application of the sealant must be 1.5mm diameter 12mm long. Install the valve cover immediately after applying the sealant. The cover should be fitted directly to the head without smearing the sealant or the seals.


To install, reverse the removal procedure.

2. *Special Tool(s):* [303-1446](#)

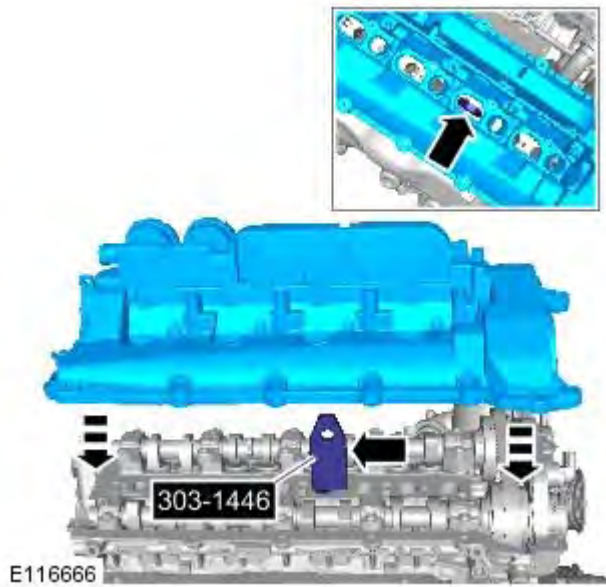

3. **3.** NOTE: Tighten the bolts in the indicated sequence.

Torque: 13 Nm

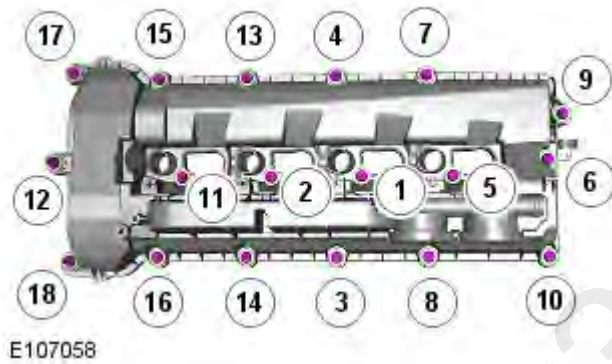

Engine - V8 5.0L Petrol - Cylinder Block Oil Gallery Plug

Removal and Installation

Removal

- NOTE: Removal steps in this procedure may contain installation details.
- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.  **WARNING:** Make sure to support the vehicle with axle stands.


Raise and support the vehicle.


3. Refer to: [Catalytic Converter RH](#) (309-00D Exhaust System - V8 5.0L Petrol, Removal and Installation).

4.

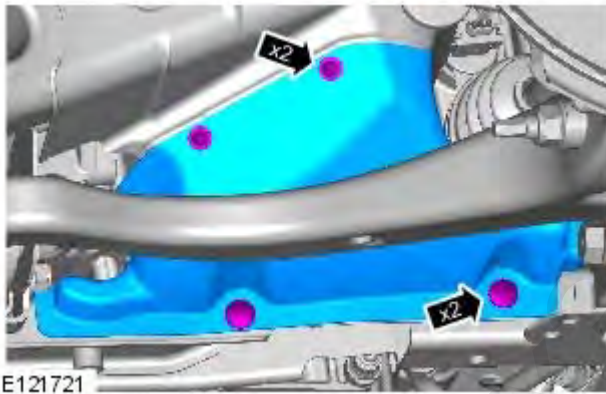


5.

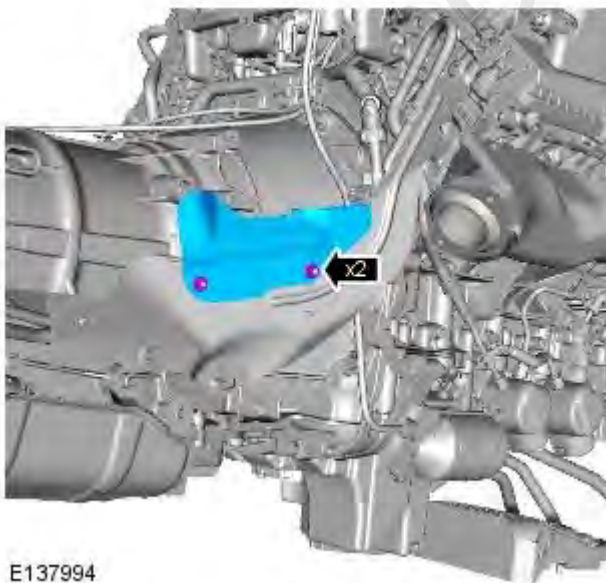

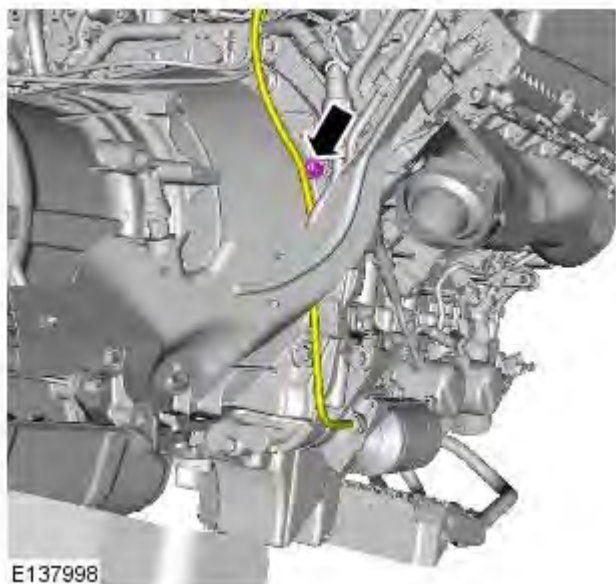


6.

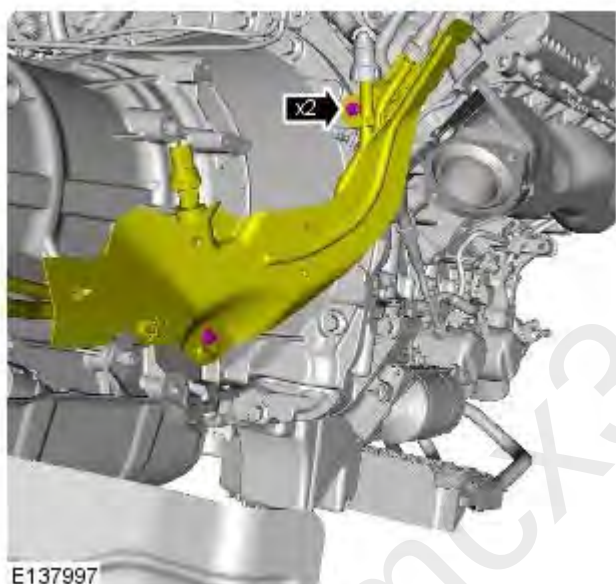



7. Torque: 10 Nm

8. Torque: 10 Nm

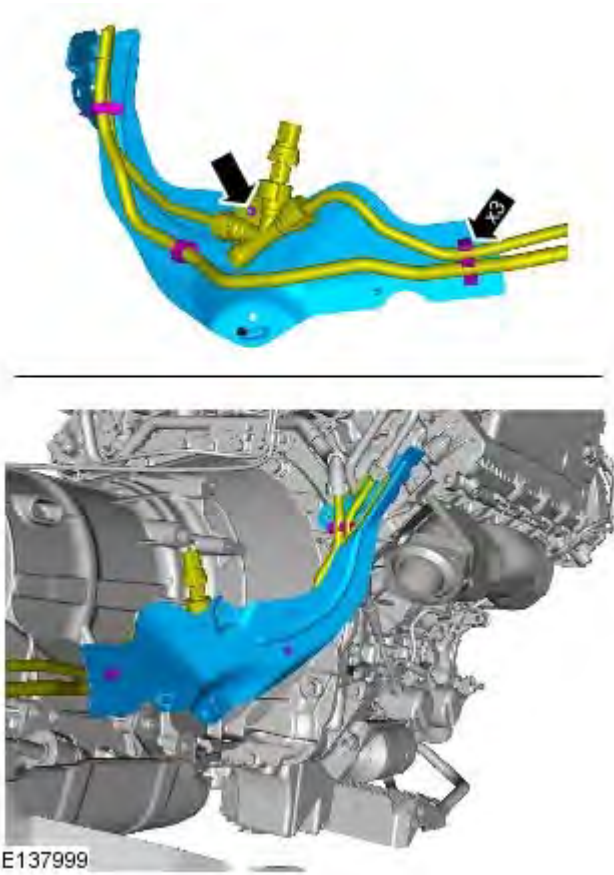

9. Torque: 12 Nm

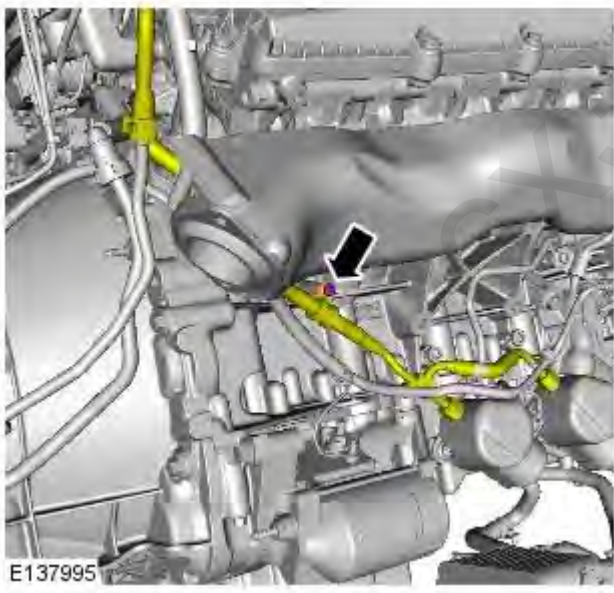

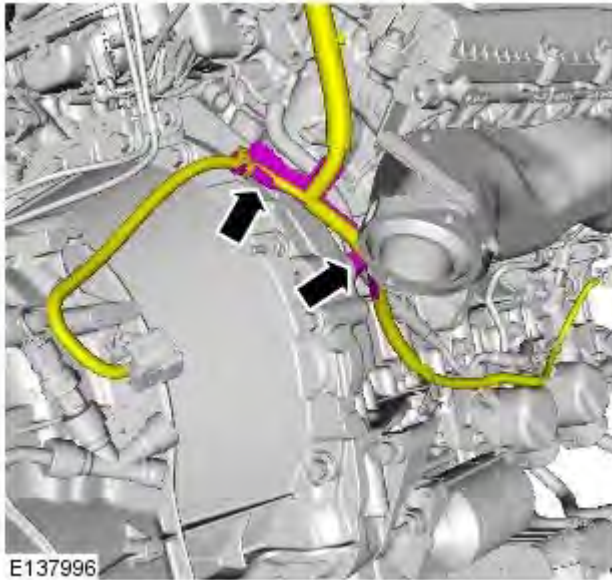

10.



11. **11.**  **CAUTION:** Make sure that the mating faces are clean and free of corrosion and foreign material.

Torque:

Stage 1: 40 Nm
Stage 2: 180°

Installation

1. To install, reverse the removal procedure.

Engine - V8 5.0L Petrol - Fuel Pump Camshaft Assembly Part Number: INA Timing Drive

Removal and Installation

Removal

- NOTE: Some illustrations may show the engine removed for clarity.


1. Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.  **WARNING:** Make sure to support the vehicle with axle stands.


Raise and support the vehicle.


3. Refer to: [Oil Pan Extension](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

4.

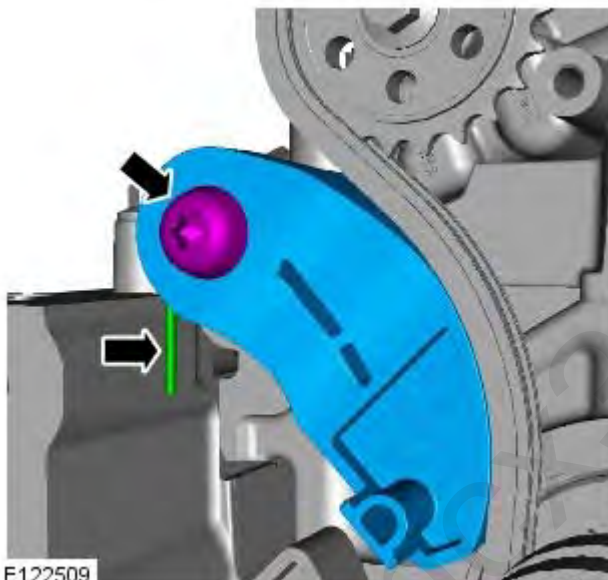


5.

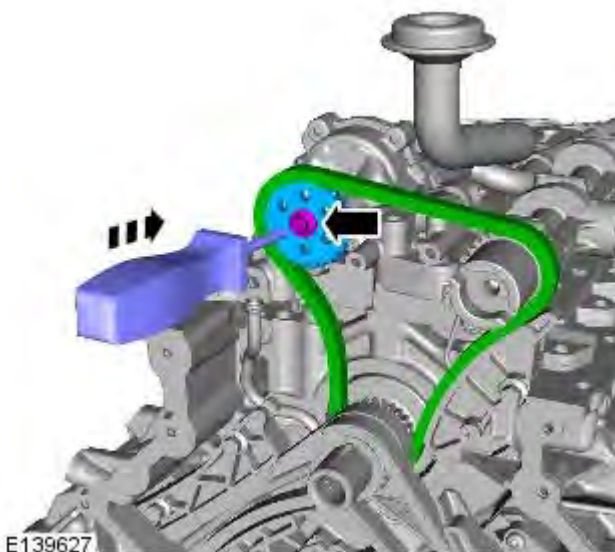

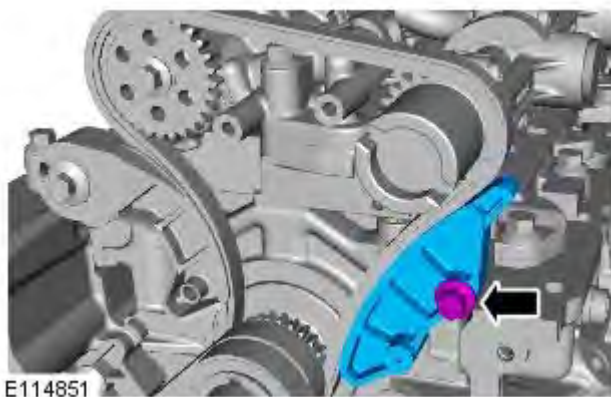


6.

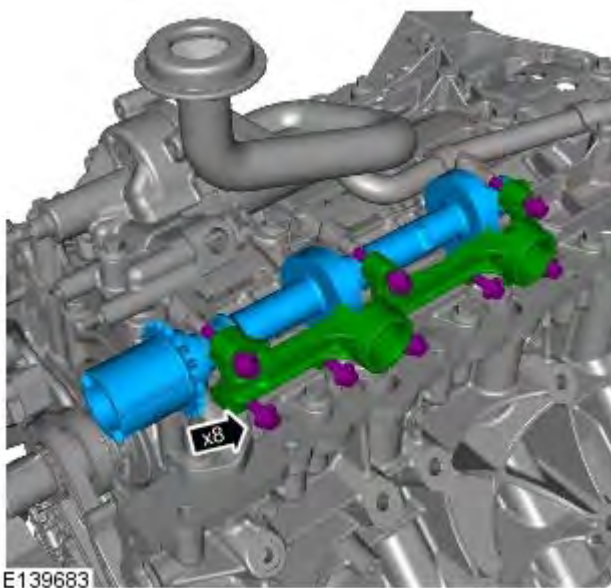


7.  CAUTION: Take extra care when removing the component, prevent damage to the mating faces.

Installation


1.  CAUTION: Make sure that the mating faces are clean and free of foreign material.

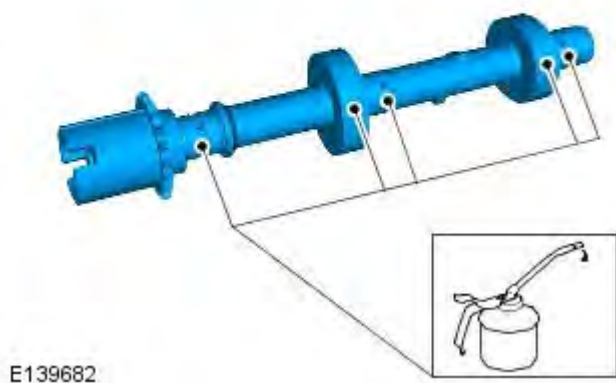

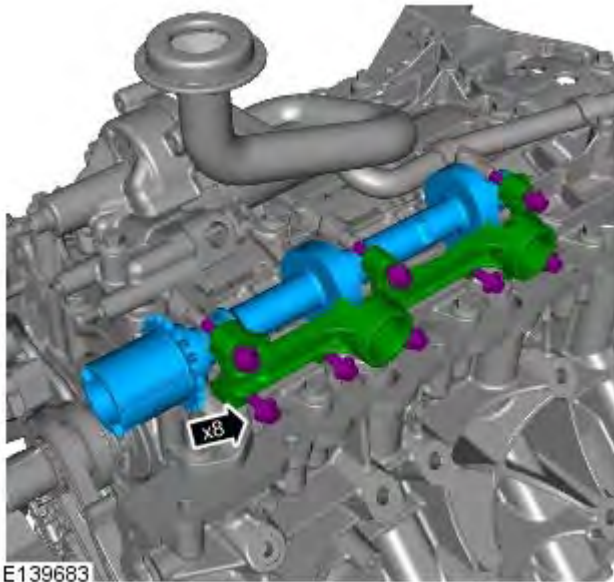


2.  CAUTION: Take extra care not to damage the mating faces.


Torque: 12 Nm

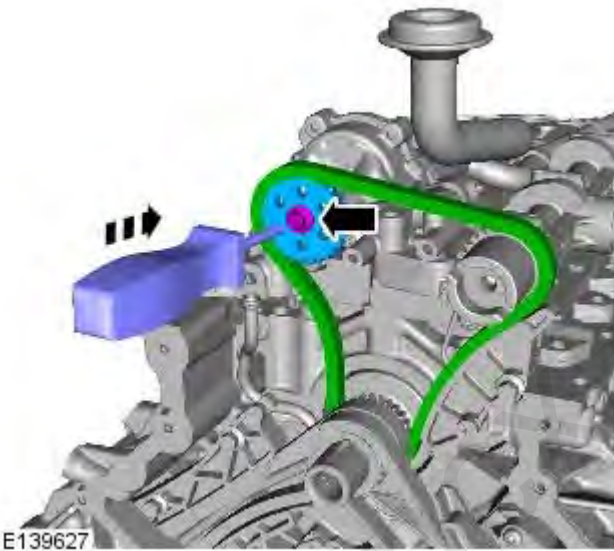


3. Torque: 21 Nm

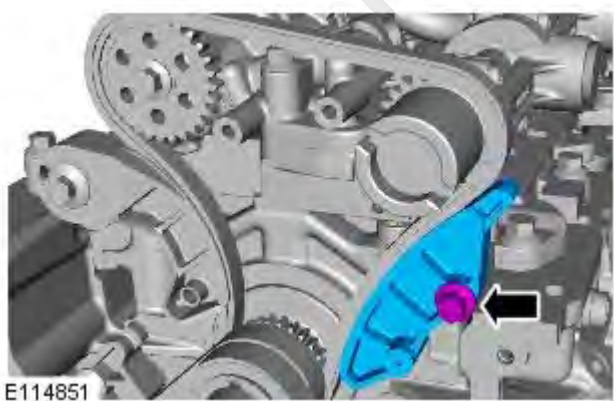

4. Torque: 12 Nm

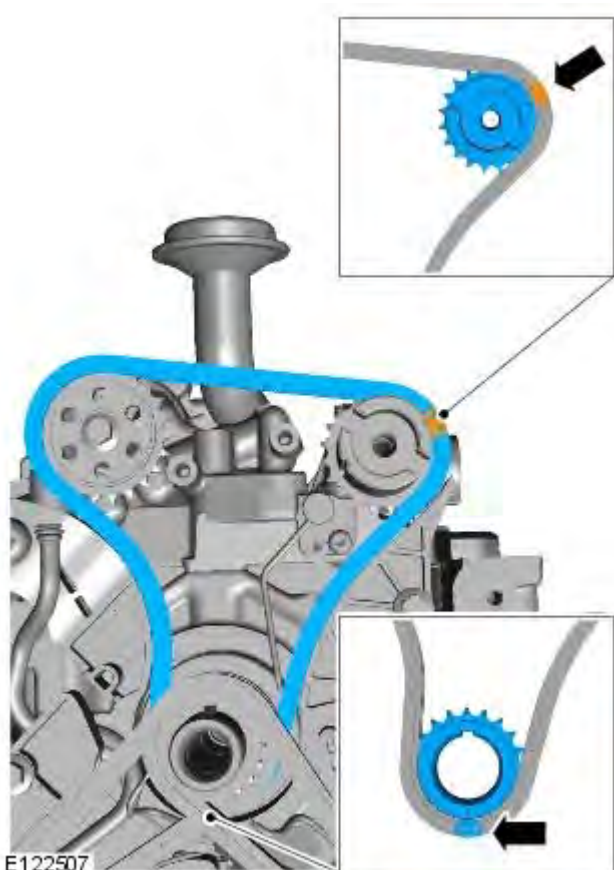

5. Install the lower timing chain making sure the coloured chain links align correctly with the fuel rail high-pressure fuel pumps camshaft and crankshaft sprocket markings.

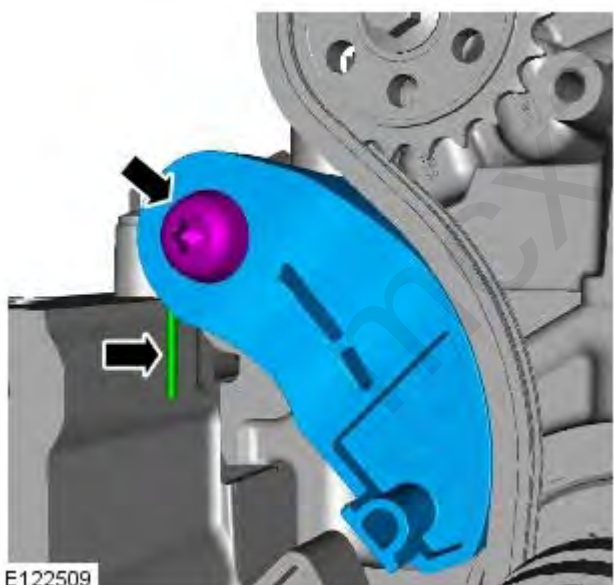

6.  **CAUTION:** Make sure that the tensioner spring is correctly located.

Torque: 21 Nm

7. Refer to: [Oil Pan Extension](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).
8. Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

Engine - V8 5.0L Petrol - Fuel Pump Camshaft Assembly Part Number: Tsubaki Timing Drive

Removal and Installation

Removal

- NOTE: Some illustrations may show the engine removed for clarity.

1. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.  **WARNING:** Make sure to support the vehicle with axle stands.


Raise and support the vehicle.


3. Refer to: [Oil Pan Extension](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).

4.

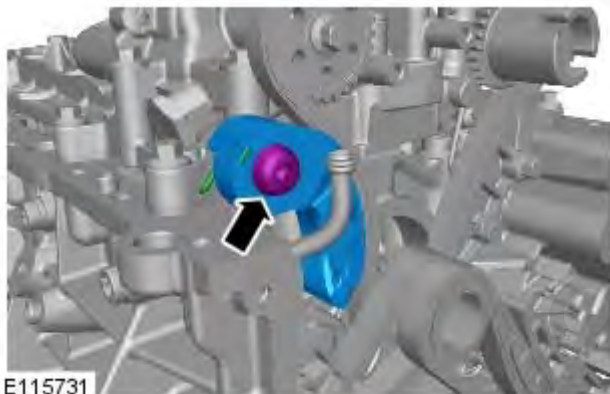


5.

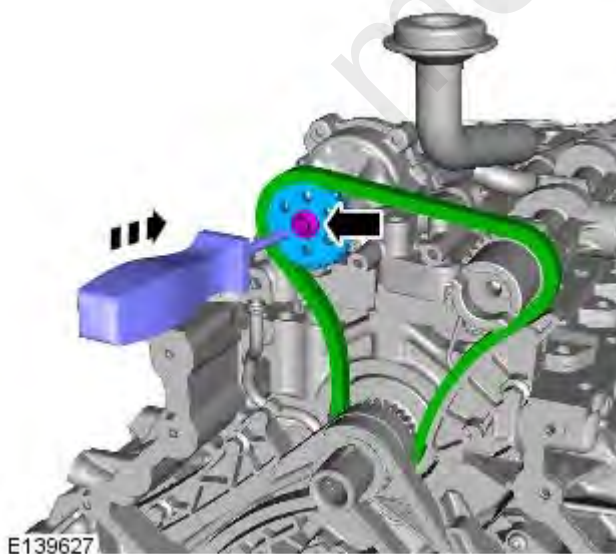

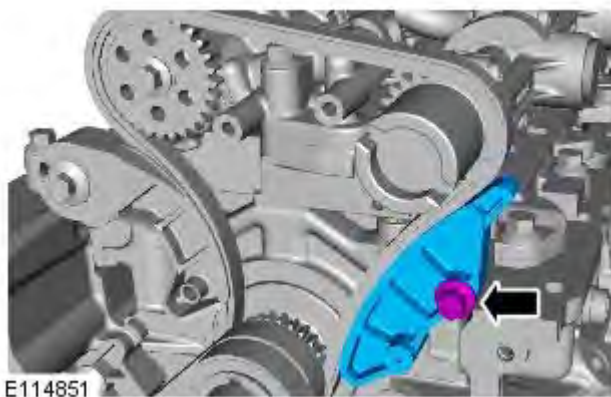


6.

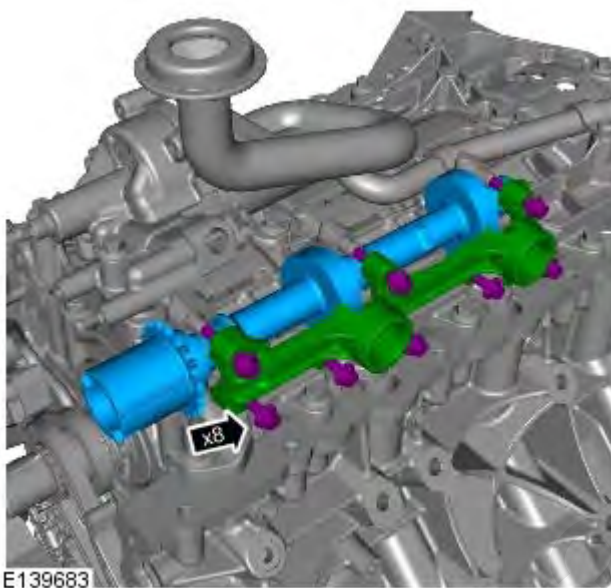


7.  CAUTION: Take extra care when removing the component, prevent damage to the mating faces.

Installation


1.  CAUTION: Make sure that the mating faces are clean and free of foreign material.

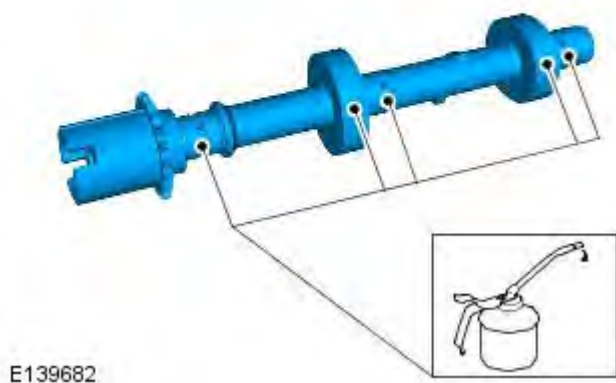

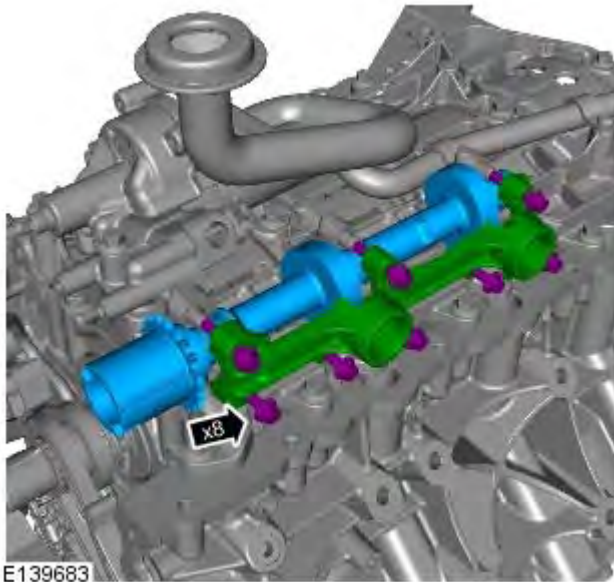


2.  CAUTION: Take extra care not to damage the mating faces.


Torque: 12 Nm

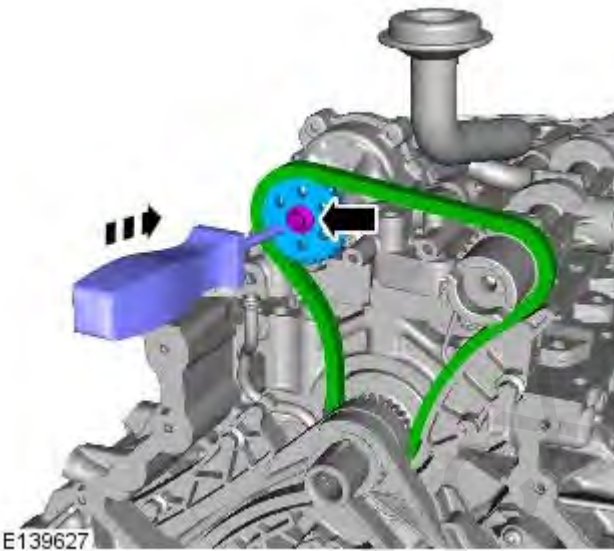

3. Torque: 21 Nm

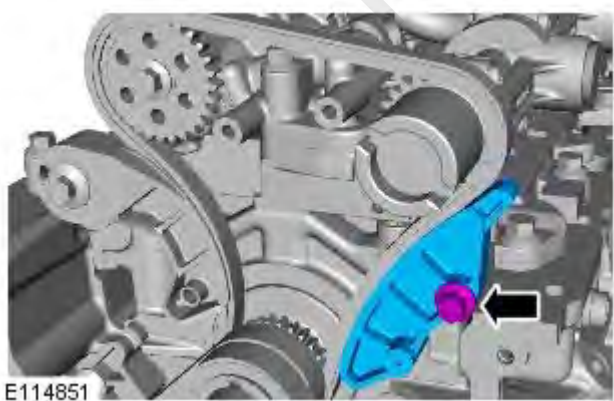


4. Torque: 12 Nm

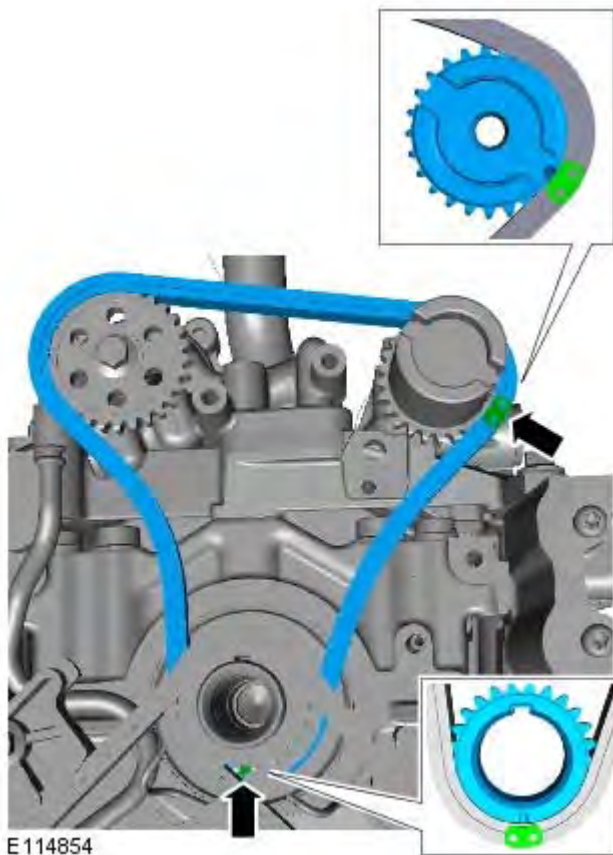

E114854

5. Install the lower timing chain making sure the coloured chain links align correctly with the fuel rail high-pressure fuel pumps camshaft and crankshaft sprocket markings.

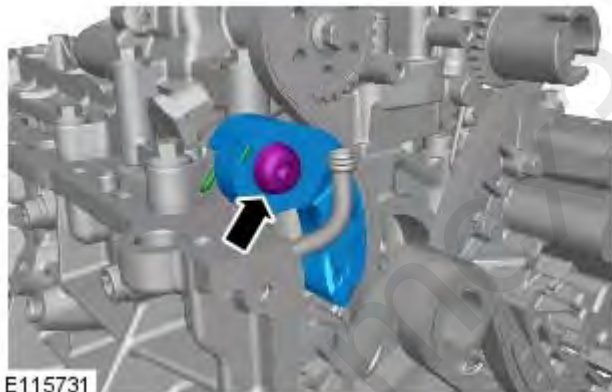

E115731

6.  **CAUTION:** Make sure that the tensioner spring is correctly located.

Torque: 21 Nm

7. Refer to: [Oil Pan Extension](#) (303-01D Engine - V8 5.0L Petrol, Removal and Installation).


8. Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

Engine - V8 5.0L Petrol - Engine

Removal


Special Tool(s)

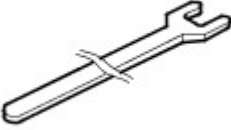 E46076	303-1142 Viscous Coupling Wrench
 E55382	303-1143 Viscous Coupling Holding Tool


- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.
- NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Body - V6 4.0L Petrol/V8 5.0L Petrol](#) (502-02 Full Frame and Body Mounting, Removal and Installation).

2.

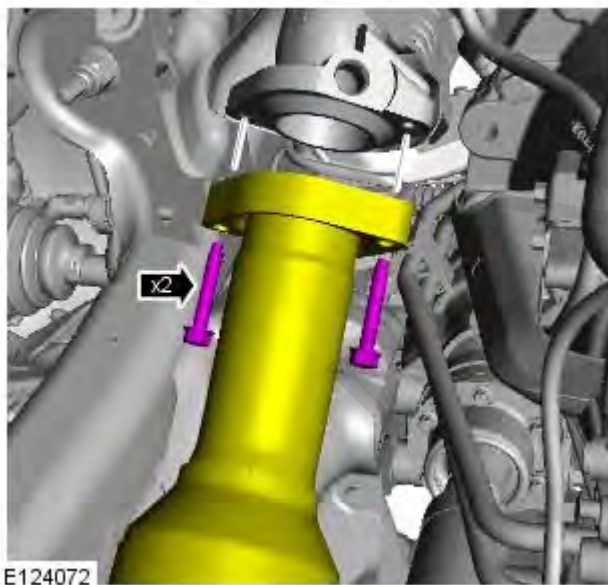

3.

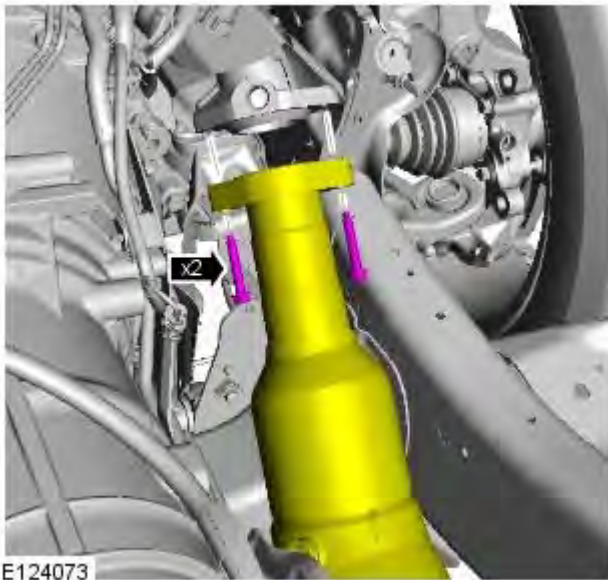


E124073

4.




E121680

5.

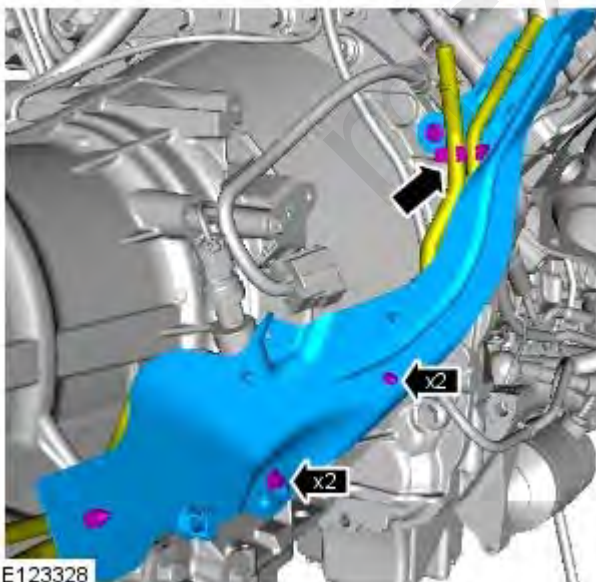


E123328

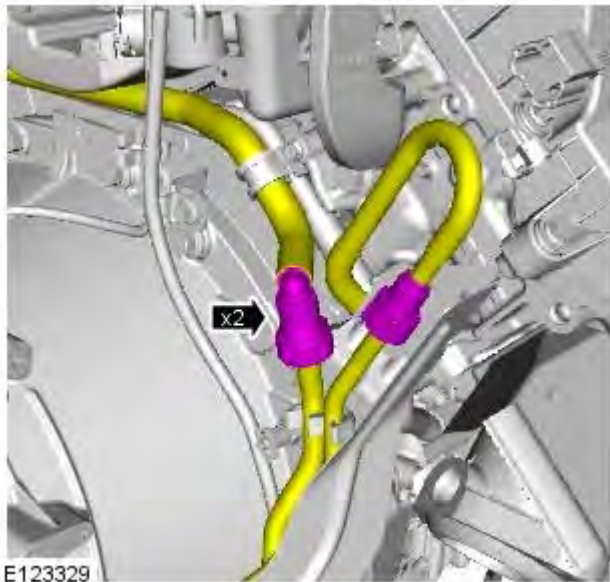


6.  **WARNING:** Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.

 **CAUTION:** Be prepared to collect escaping fluids.

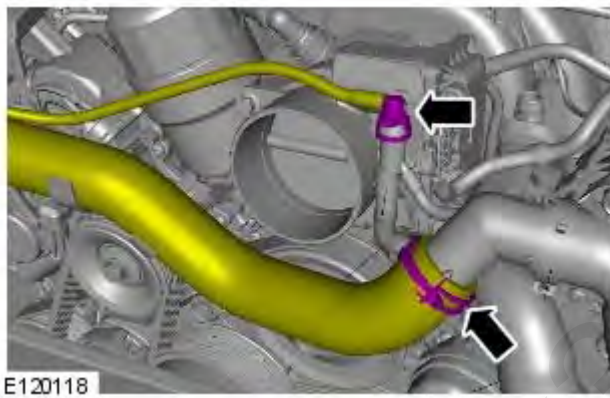


7.  **CAUTION:** Be prepared to collect escaping coolant.

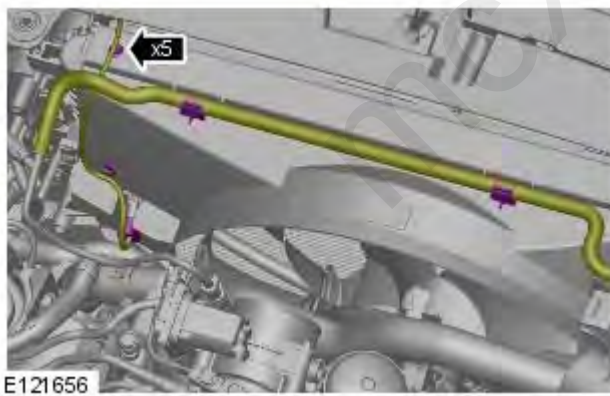


- 8.

9.

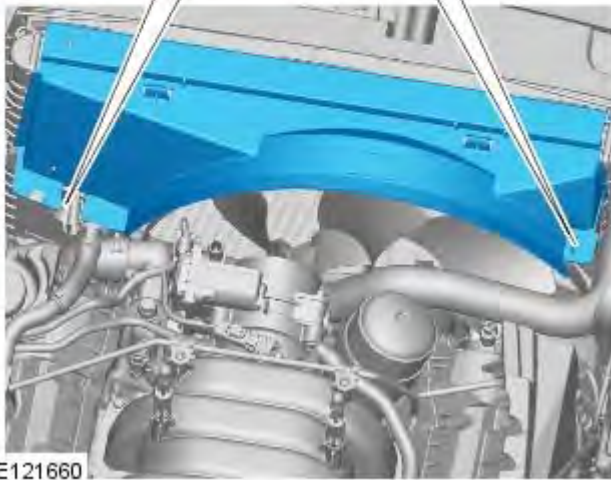


E121660


10.

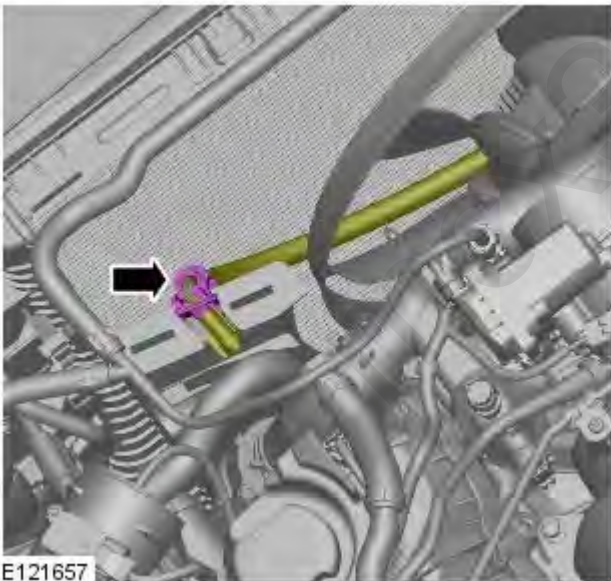


E121657

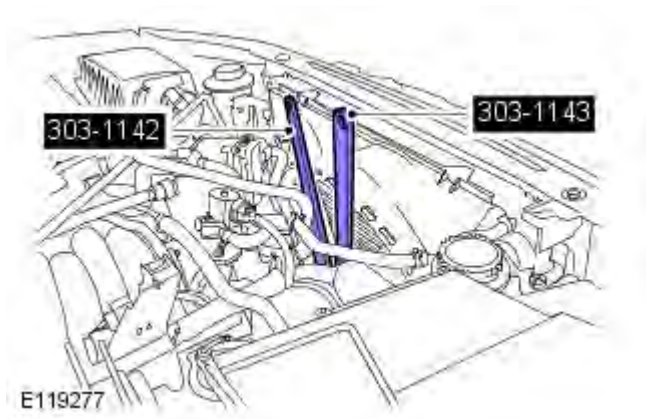


11. **11.**  **CAUTION:** Always protect the cooling pack elements to prevent accidental damage.
- **NOTE:** Some variation in the illustrations may occur, but the essential information is always correct.
- Special Tool(s):* [303-1142](#), [303-1143](#)

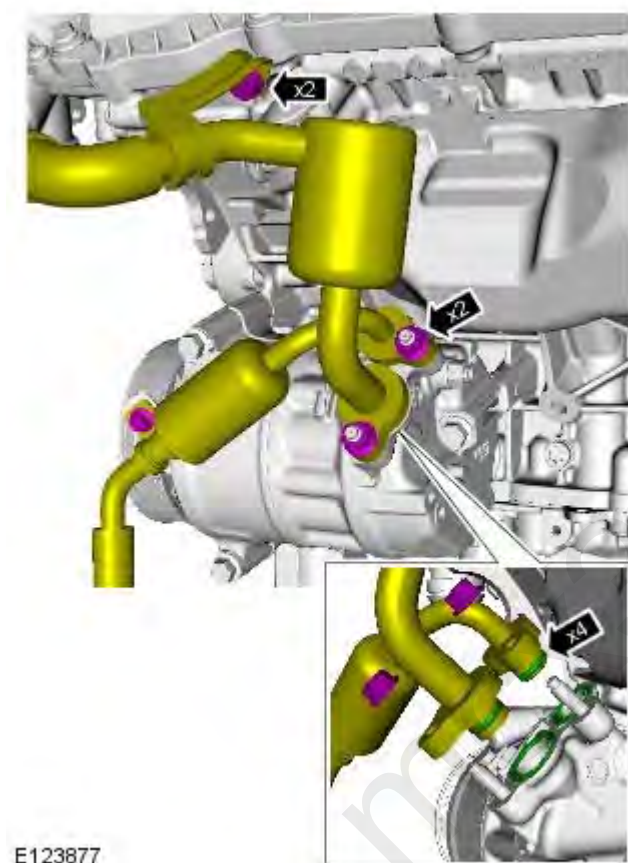

- 12.
- Remove and discard the 4 O-ring seals.

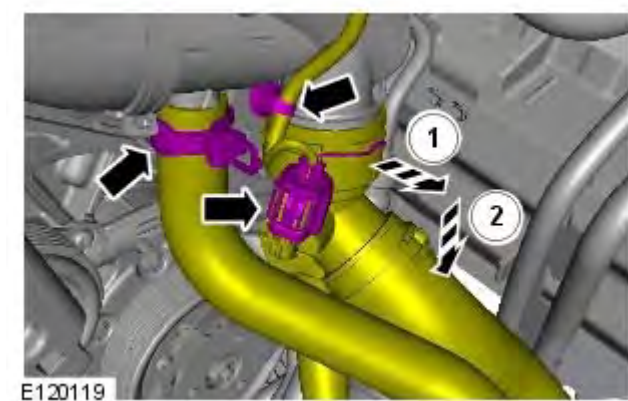


13. **13.**  **CAUTION:** Be prepared to collect escaping coolant.

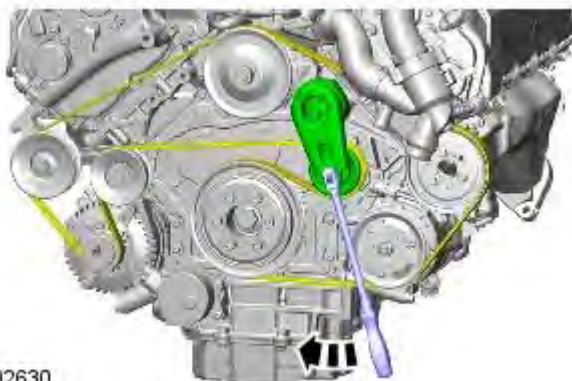

E102630


14.

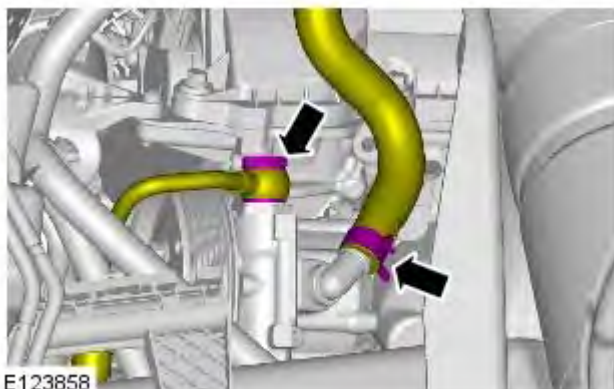

E123858


15.  **WARNING:** Fluid loss is unavoidable, use absorbent cloth or a container to collect the fluid.

 **CAUTION:** Make sure that all openings are sealed. Use new blanking caps.

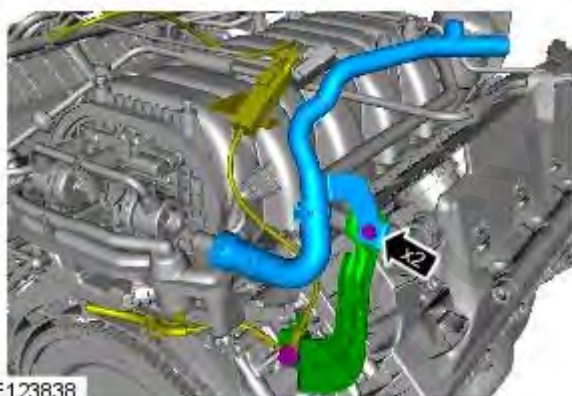

E123838


16.

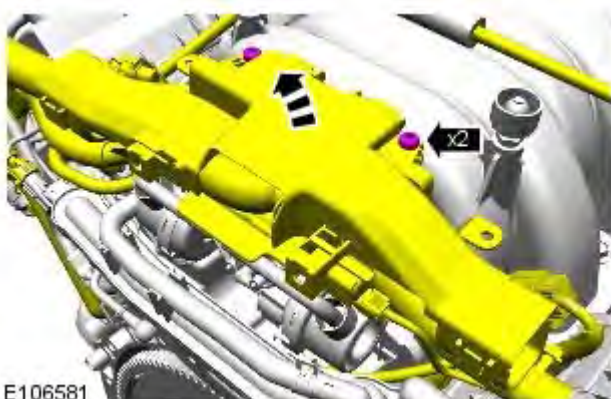

E106581


17.

18. Torque: 25 Nm

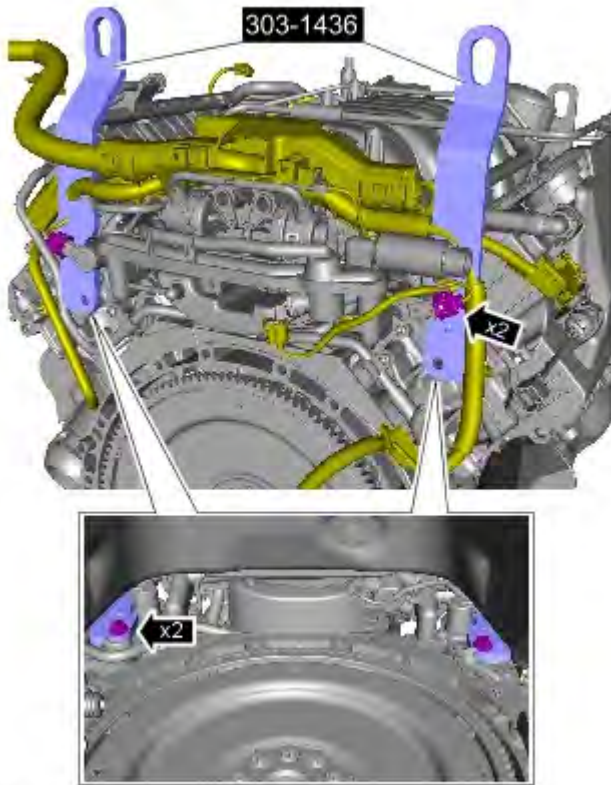


E117619

19.

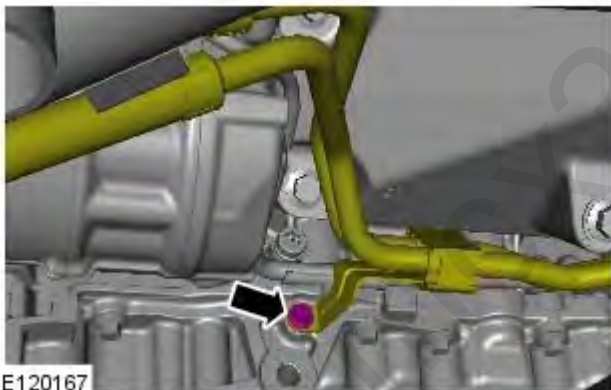


E120167

20.

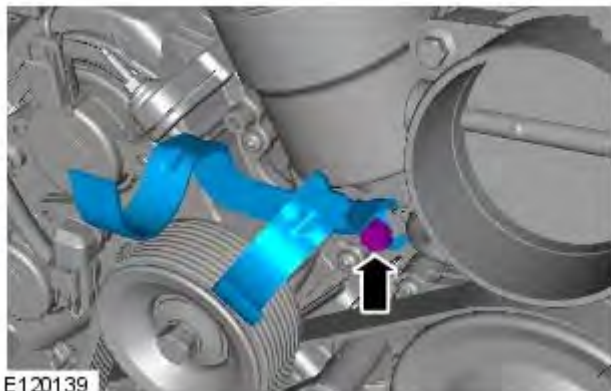


E120139

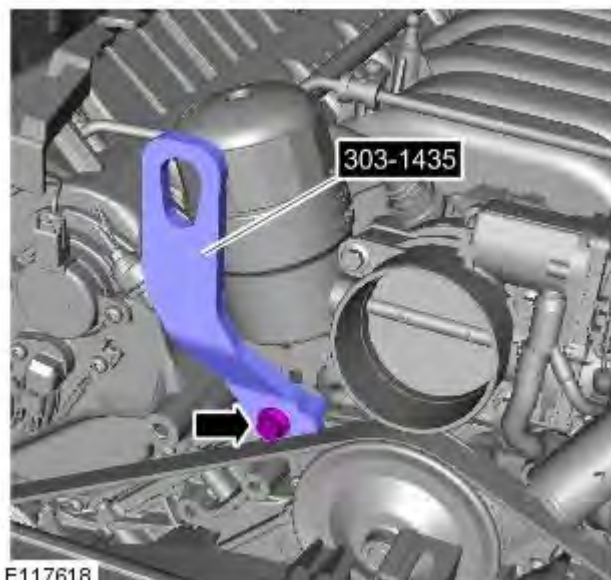


E117618

21. Torque: 25 Nm

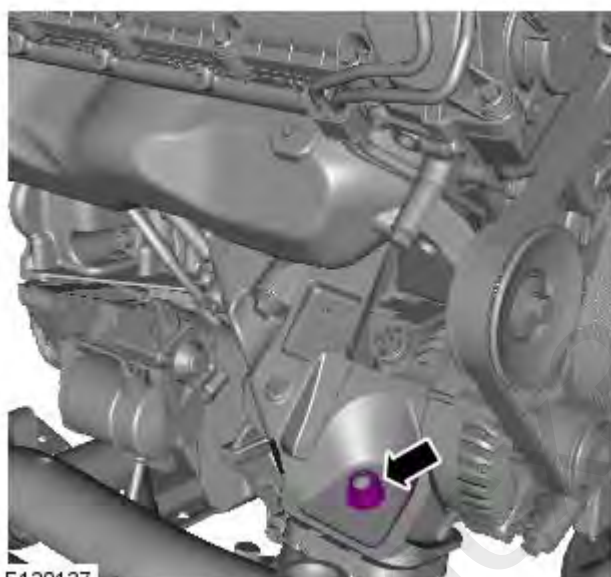


E120137

22.

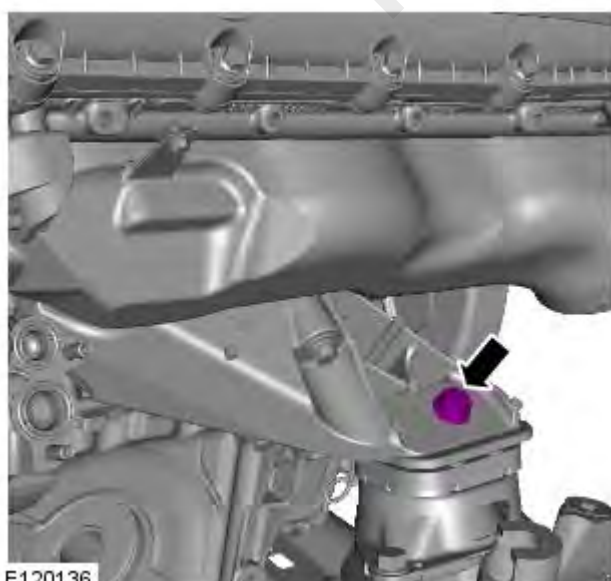

E120136


23.

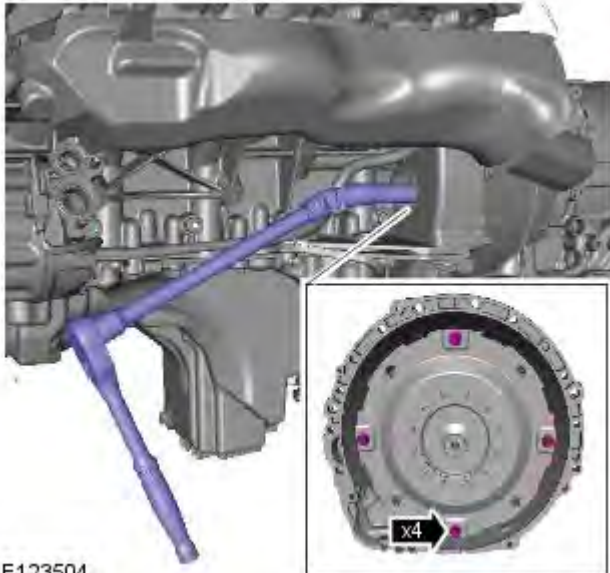

E123504

24. **24.**  **CAUTION:** Only rotate the crankshaft clockwise.


- Mark the torque converter and flexplate when removing the last torque converter bolt. Make sure that the alignment mark is visible through the inspection hole.

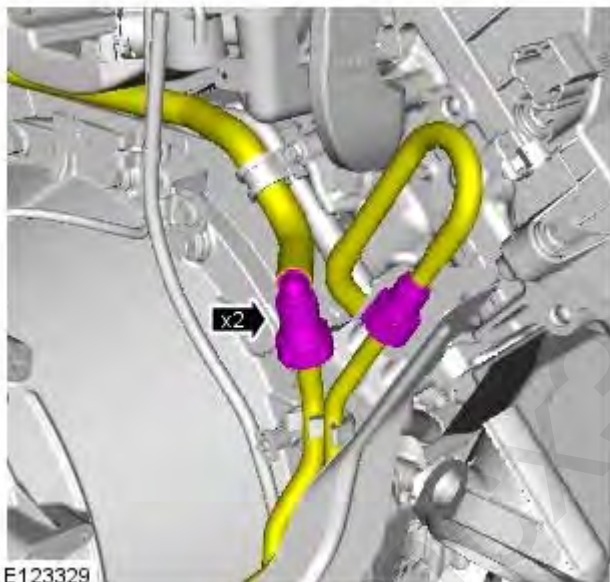

E123329

25. **25.**  **WARNING:** Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.

-  **CAUTION:** Be prepared to collect escaping fluids.

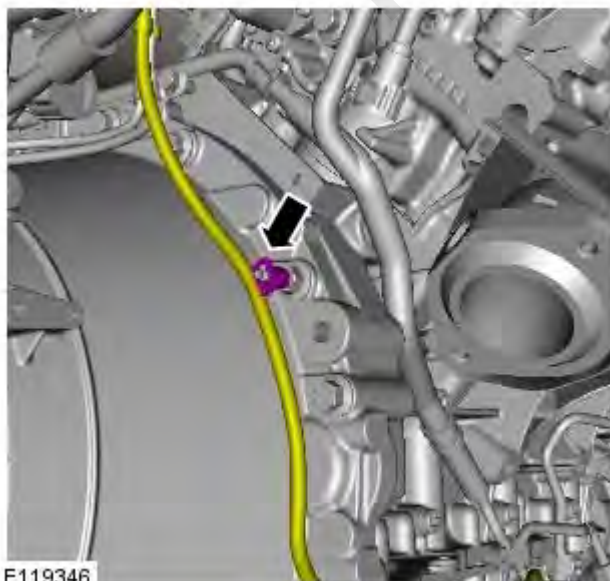

E119346


- 26.

27.




E123421

28.

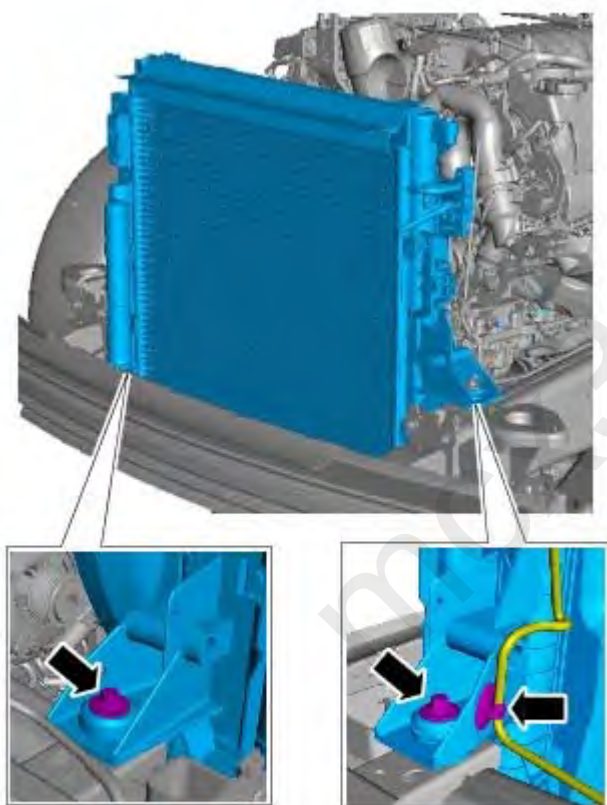

E124068

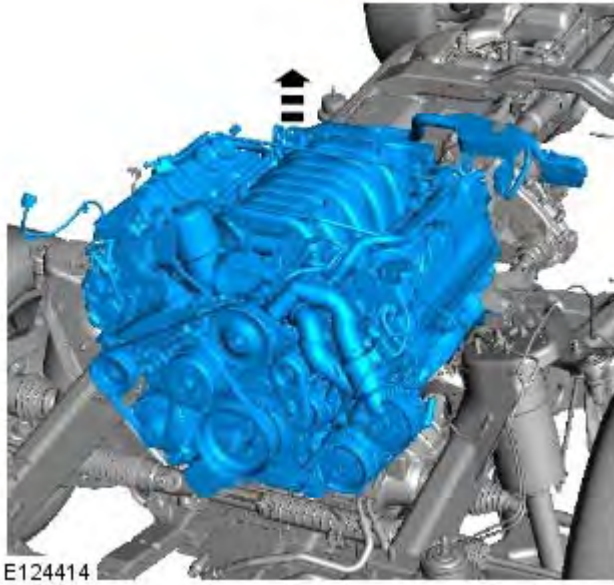


29. **29.** NOTE: This step requires the aid of another technician.

mcx30.com


Engine - V8 5.0L Petrol - Engine

Installation

Special Tool(s)

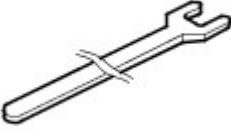 E46076	303-1142 Viscous Coupling Wrench
 E55382	303-1143 Viscous Coupling Holding Tool

- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.
- NOTE: If a new engine is to be installed, remove the intake manifold to access the top transmission retaining bolts.

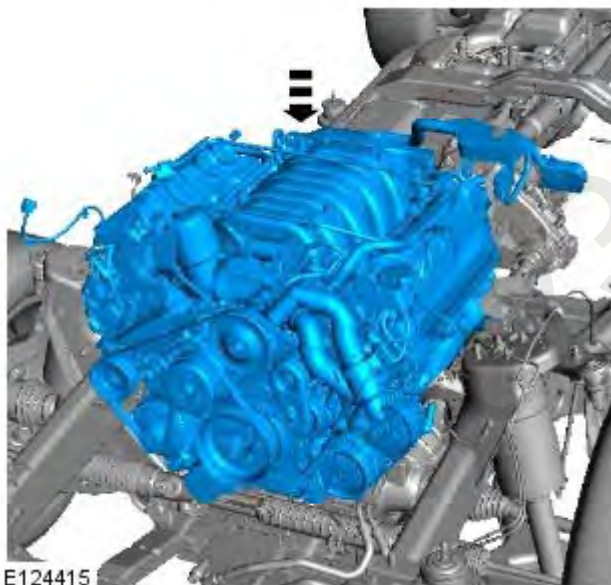


1. NOTE: This step requires the aid of another technician.

2. Torque: 40 Nm





3.

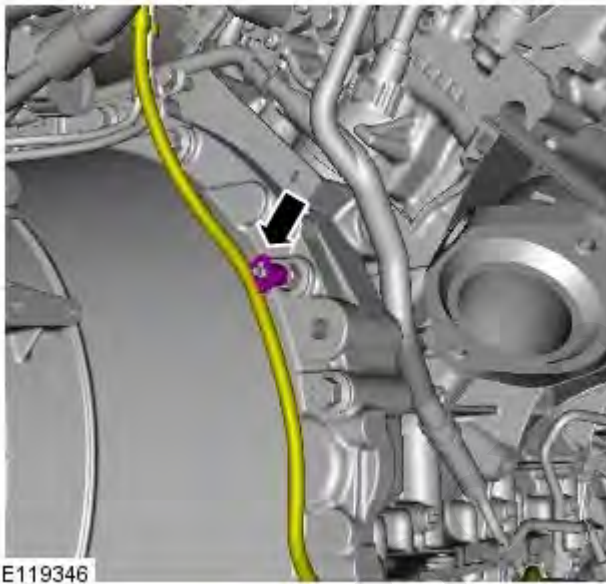

4.  **CAUTION:** Only rotate the crankshaft clockwise.
- Make sure that the alignment mark is visible through the inspection hole on installation of the first torque converter bolt.


Torque: 63 Nm

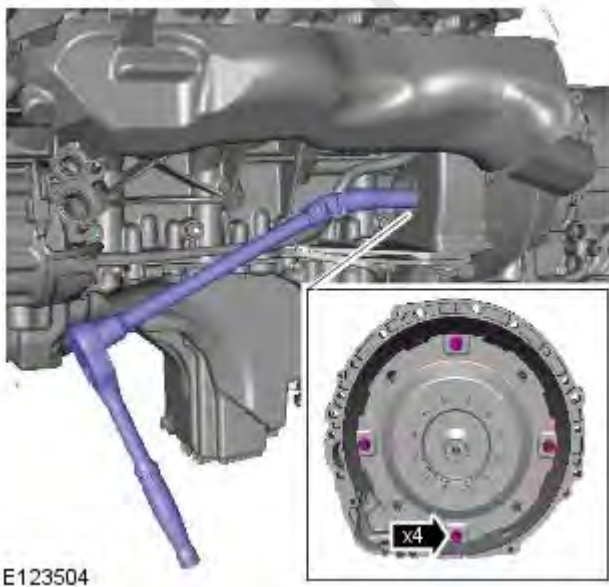

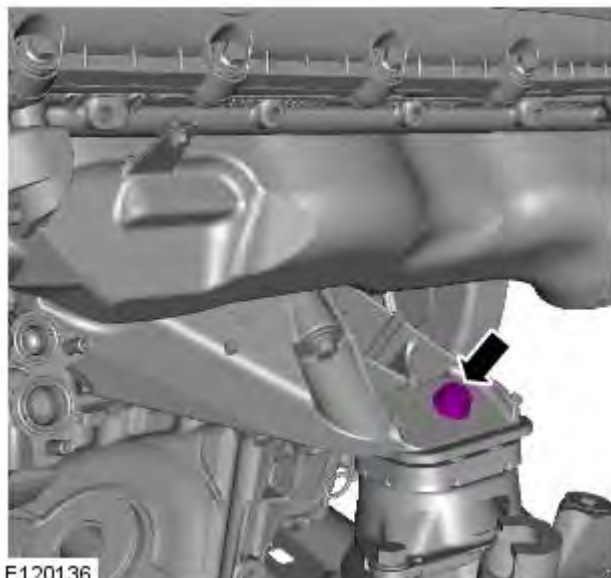


E120136

5. Torque: 100 Nm

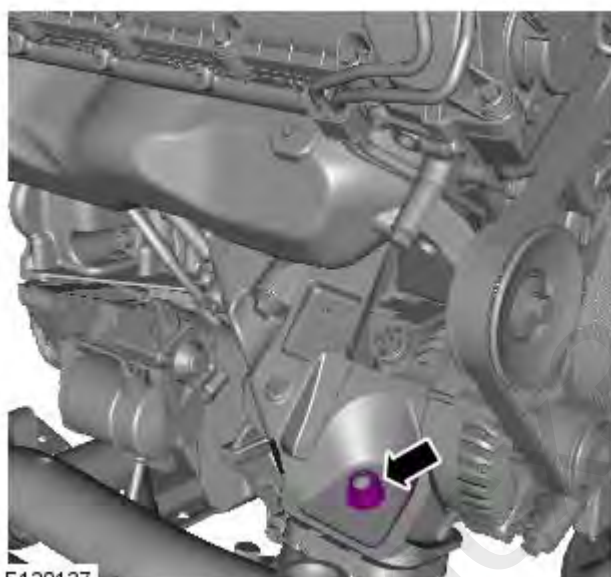

E120137


6. Torque: 100 Nm

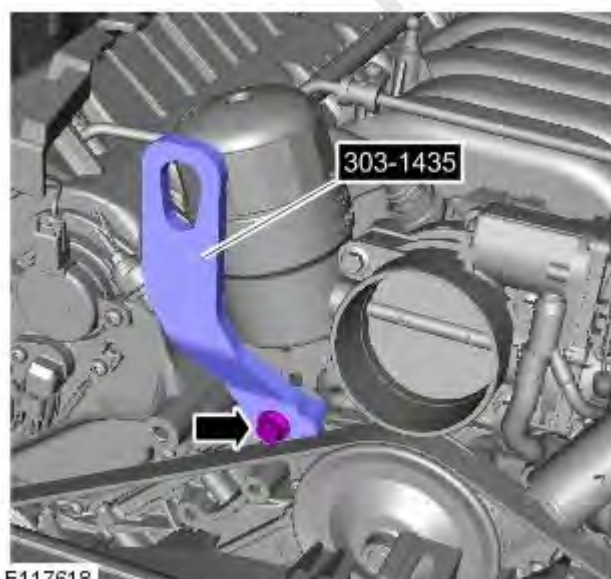


E117618

7. Torque: 25 Nm

8. Torque: 25 Nm

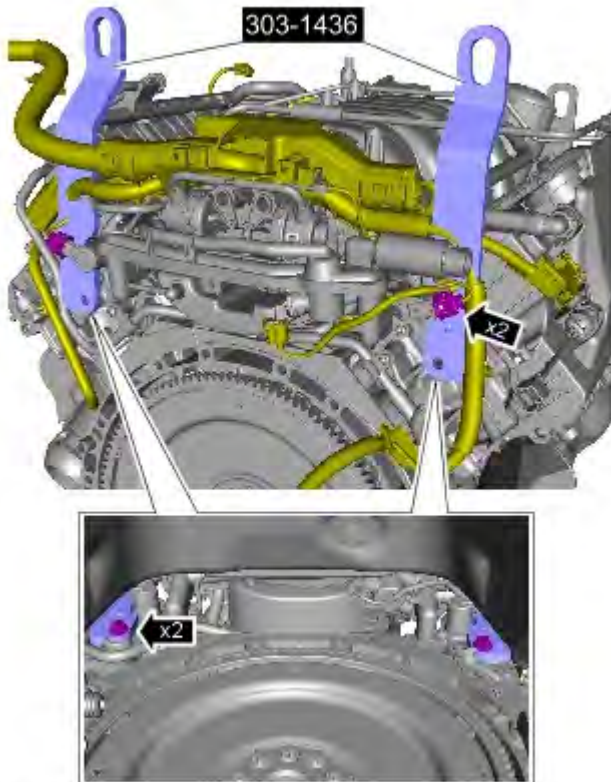


E117619

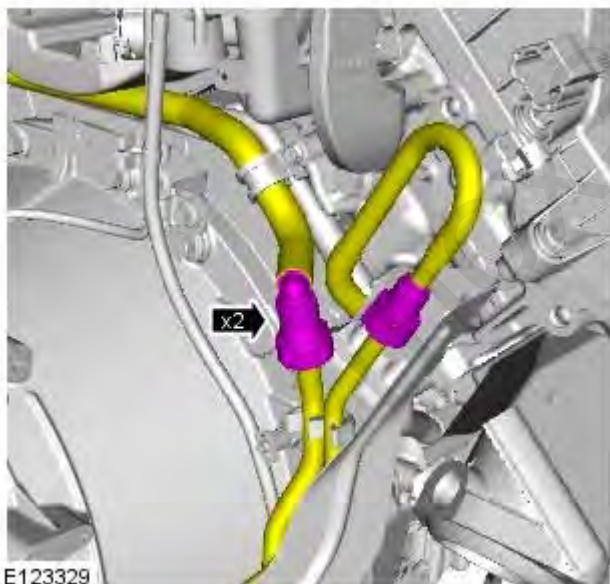

E123329


9.  **WARNING:** Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.

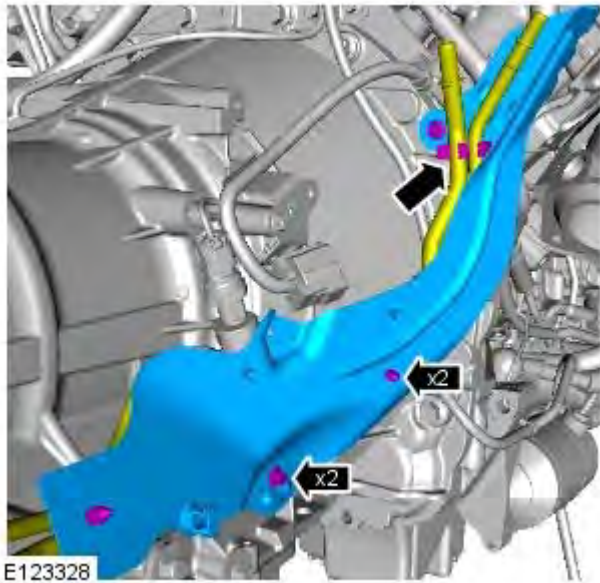

10. Torque: 10 Nm




11. Torque: 10 Nm

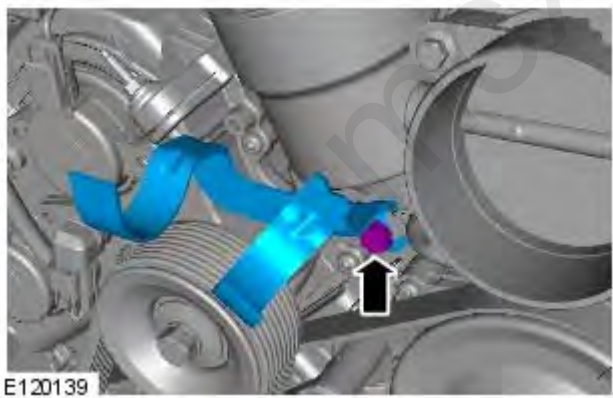


12. Torque: 25 Nm

13. Torque: 25 Nm

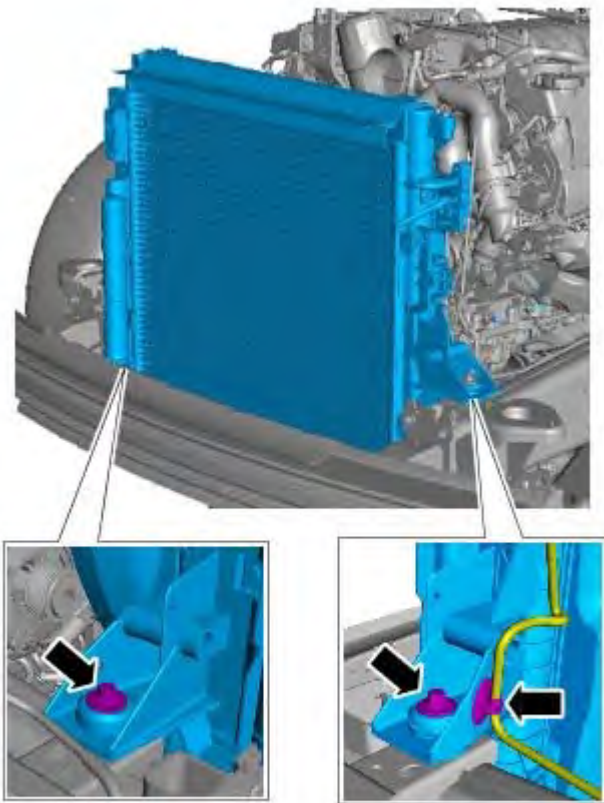


E124068

14. Torque: 12 Nm

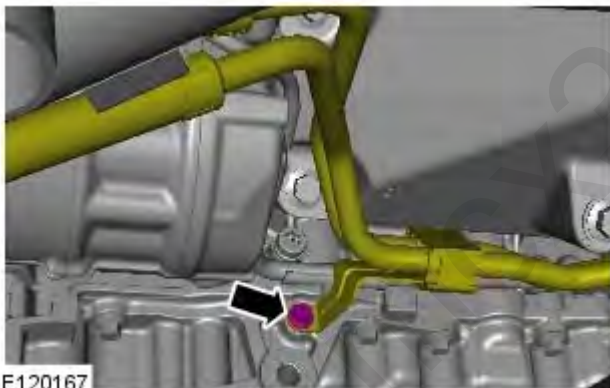


E120167

15. Torque: 10 Nm

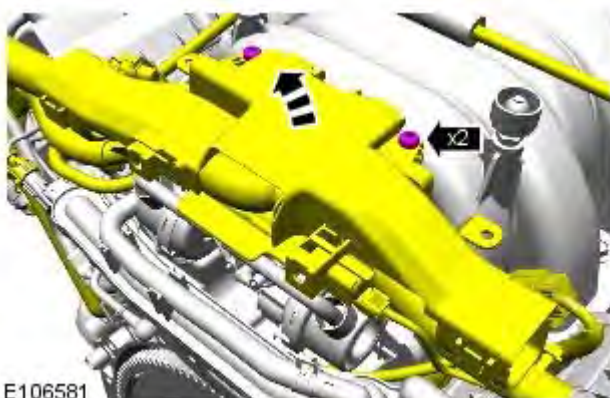


E106581

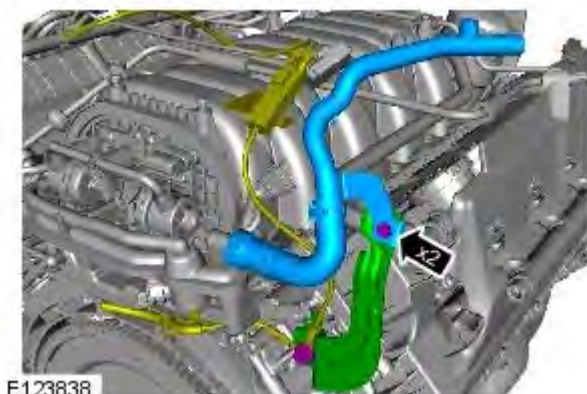

E123838


16. *Torque:*
 M8 Bolt 25 Nm
 M6 Bolt 10 Nm

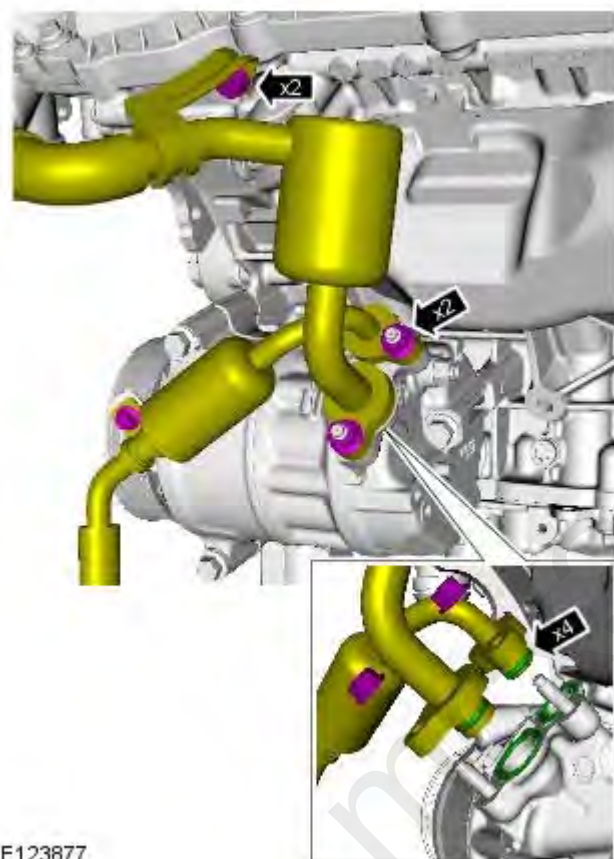

E123877

17.
 - Remove and discard the 4 O-ring seals.

Torque:
 M8 Nut 9 Nm
 M8 Bolt 25 Nm
 M6 bolt 10 Nm

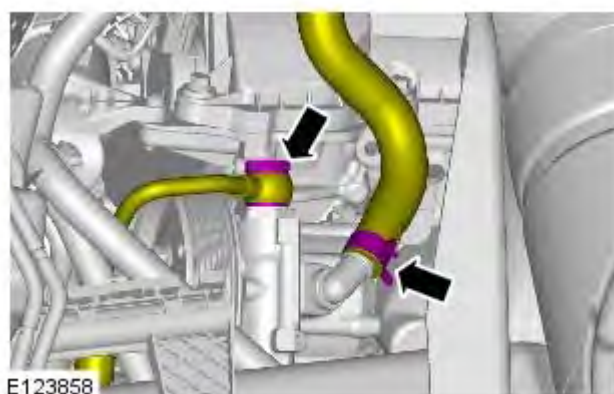


E123858

18. **18. ⚠ WARNING:** Fluid loss is unavoidable, use absorbent cloth or a container to collect the fluid.


⚠ CAUTION: Make sure that all openings are sealed. Use new blanking caps.

Torque: 25 Nm

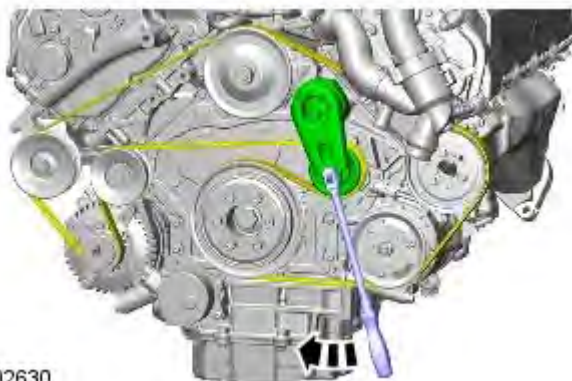


E102630

19.

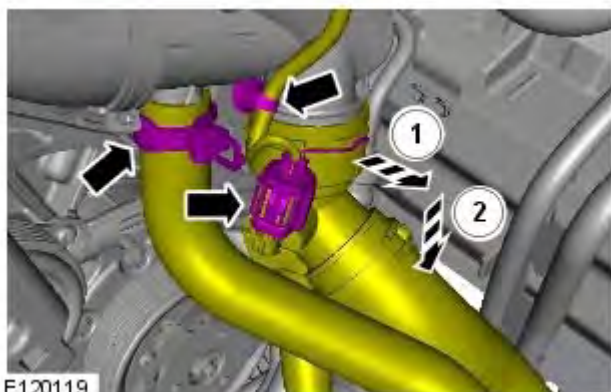


E120119

20. **20.**  **CAUTION:** Be prepared to collect escaping coolant.

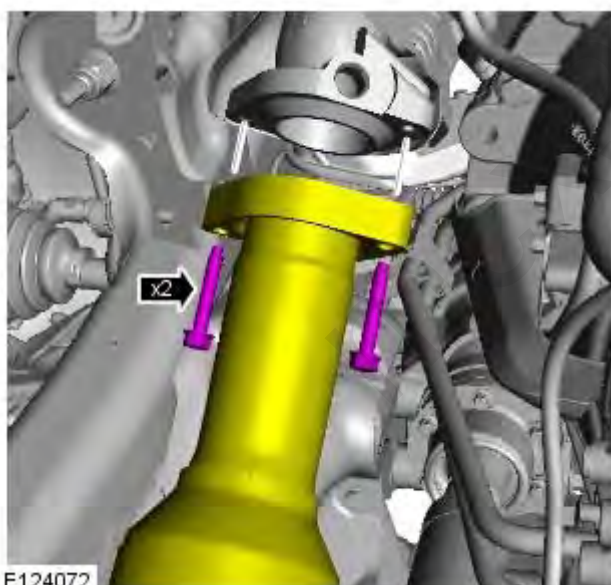


E124072

21. Torque: 22 Nm

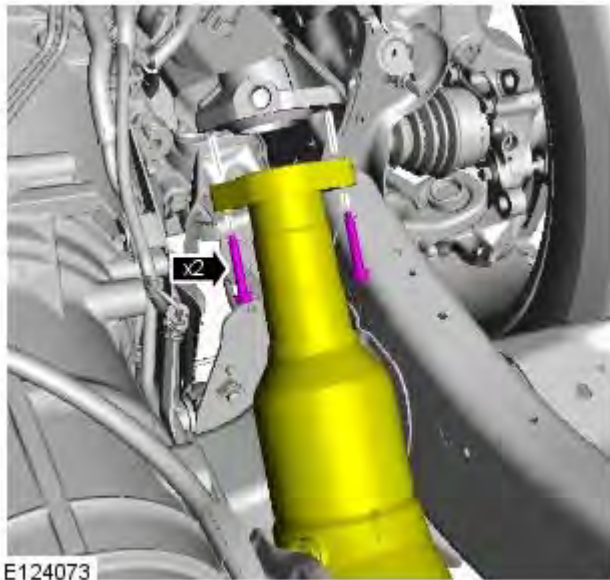


22. Torque: 22 Nm

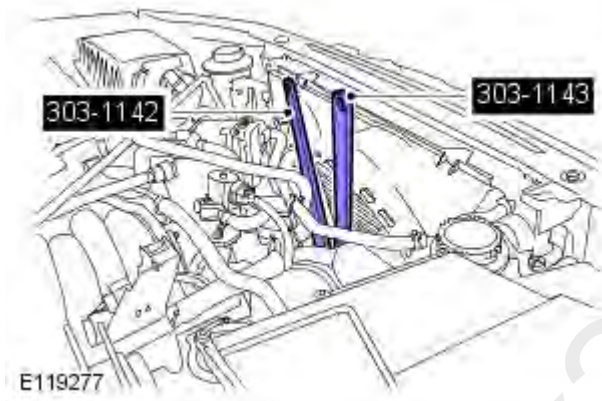


23. **23.**  **CAUTION:** Always protect the cooling pack elements to prevent accidental damage.

Special Tool(s): [303-1142](#), [303-1143](#)
Torque: 65 Nm

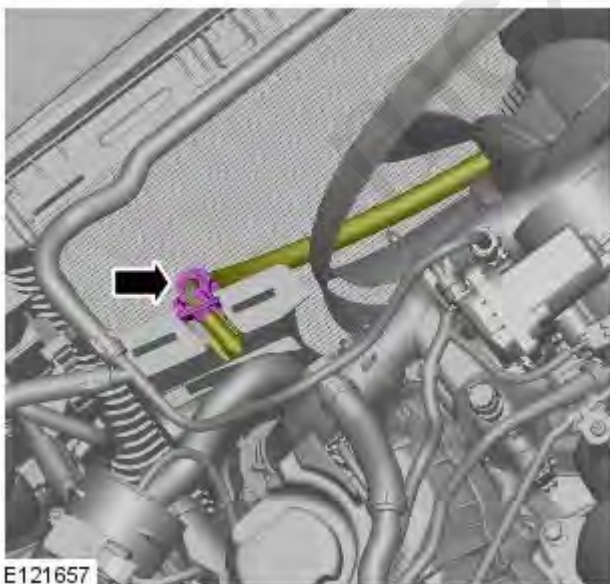


24.


25.

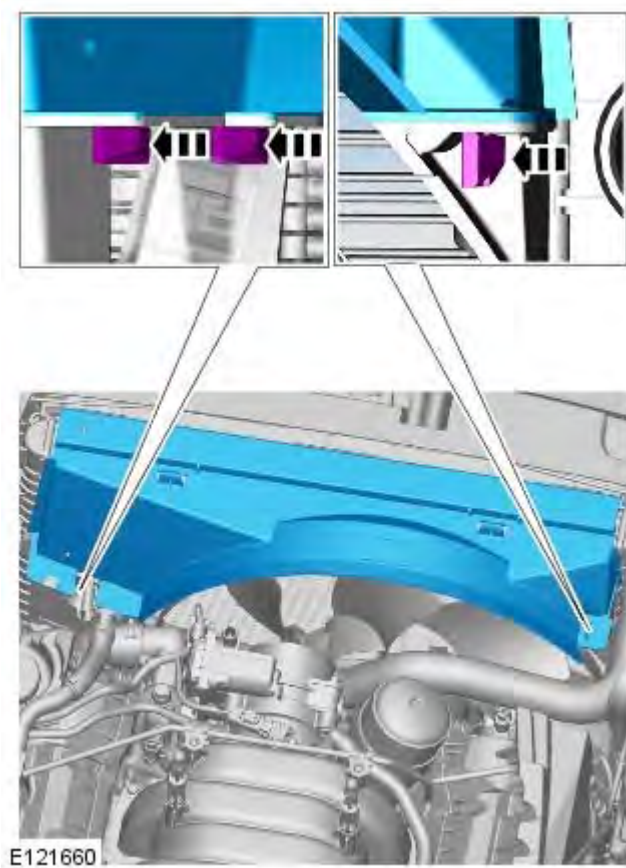

26.

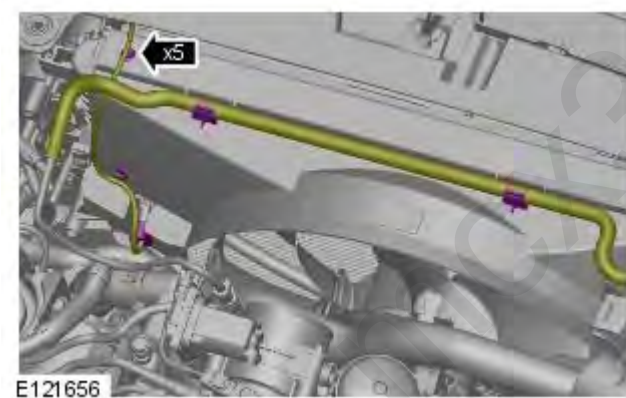

27.

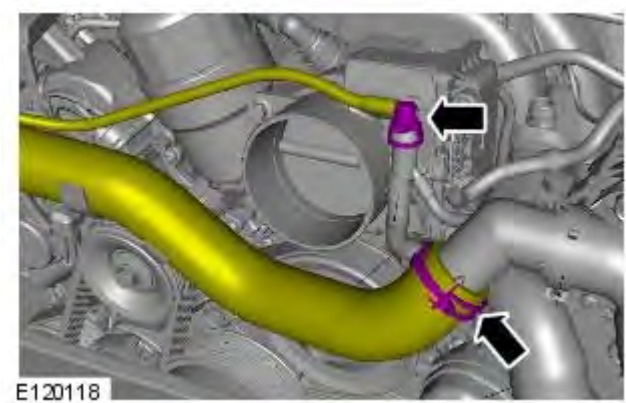

28. Refer to: [Body - V6 4.0L Petrol/V8 5.0L Petrol](#) (502-02 Full Frame and Body Mounting, Removal and Installation).

29. Using the approved diagnostic equipment, clear the powertrain

control module (PCM) adaptations.

mcx30.com