

Speakers -**Torque Specifications**

Description	Nm	lb-ft
Tailgate speaker to casing bolts	10	7
Tailgate speaker to tailgate Torx screws	10	7

mcx30.com

Speakers - Speakers

Diagnosis and Testing

For additional information.

REFER to: [Information and Entertainment System](#) (415-00 Information and Entertainment System - General Information, Diagnosis and Testing).


mcx30.com

Speakers - Front Door Speaker

Removal and Installation

Removal

1. Remove the front door trim panel.
For additional information, refer to: Front Door Trim Panel (501-05, Removal and Installation).
2. Remove the front door speaker wiring harness.
3. Remove the front door speaker.
 - Remove the 4 screws.
 - Disconnect the electrical connector.

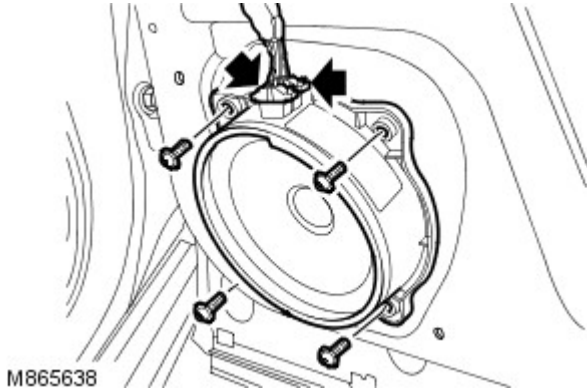

Installation

1. Install the front door speaker.
 - Connect the electrical connector.
 - Install the screws.
2. Install the front door speaker wiring harness.
3. Install the front door trim panel.
For additional information, refer to: Front Door Trim Panel (501-05, Removal and Installation).

Speakers - Rear Door Speaker


Removal and Installation

Removal

1. Remove the rear door trim panel.
For additional information, refer to: Rear Door Trim Panel (501-05, Removal and Installation).

2. Remove the speaker.

- Disconnect the electrical connector.
- Remove the 4 screws.

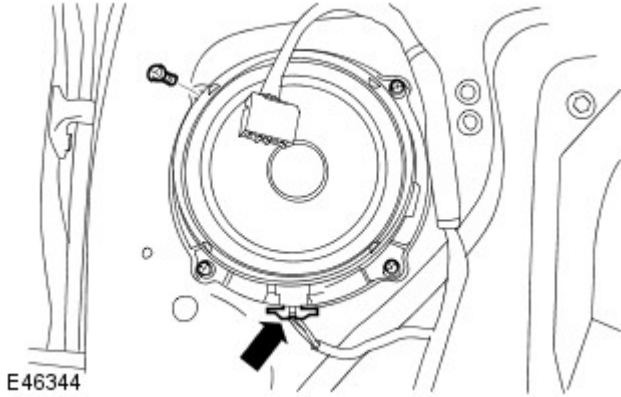

Installation

1. Install the speaker

- Tighten the screws.
- Connect the electrical connector.

2. Install the rear door trim panel.

For additional information, refer to: Rear Door Trim Panel (501-05, Removal and Installation).


Speakers - Instrument Panel Speaker

Removal and Installation

Removal

1. Remove the instrument panel speaker.

- Remove the speaker grille.
- Remove the 3 screws.
- Disconnect the electrical connector.

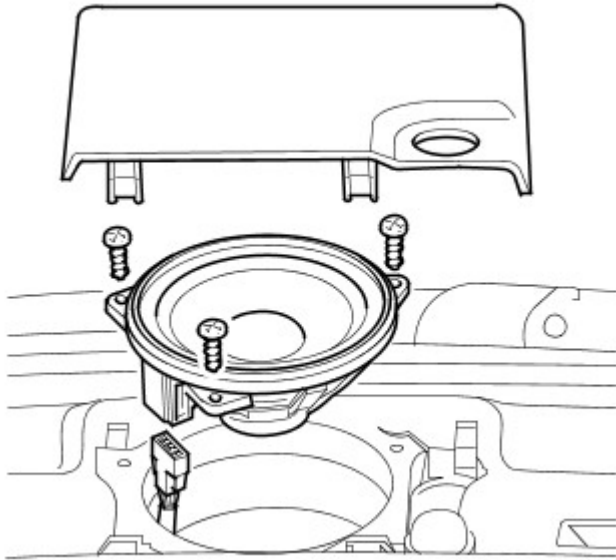

E47228

Installation

1. To install, reverse the removal procedure.

Speakers - Quarter Panel Speaker

Removal and Installation

Removal

- NOTE: The procedure to remove the quarter panel speaker is shown in the D-pillar trim panel procedure.

1. Remove the D-pillar trim panel.
For additional information, refer to: [D-Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Installation

1. Install the D-pillar trim panel.
For additional information, refer to: [D-Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

mcx30.com

Speakers - Tailgate Speaker


Removal and Installation

Removal

1. Remove the tailgate trim panel.
For additional information, refer to: [Tailgate Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2. Remove the tailgate speaker assembly.

- Remove the 10 Torx bolts.
- Disconnect the 2 electrical connectors.

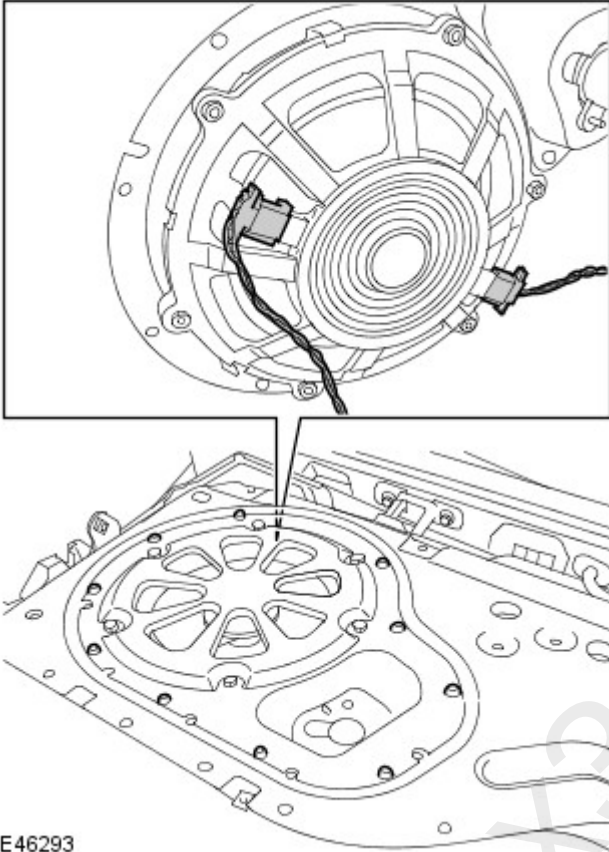

E46293

3. **NOTE: Do not disassemble further if the component is removed for access only.**

Remove the tailgate speaker.

- Remove the 6 bolts.



E46294

Installation

1. Install the tailgate speaker.
 - Tighten the bolts to 10 Nm (7 lb.ft).
2. Install the tailgate speaker assembly.
 - Connect the electrical connectors.
 - Tighten the Torx bolts to 10 Nm (7 lb.ft).
3. Install the tailgate trim panel.

For additional information, refer to: [Tailgate Trim Panel](#)
(501-05 Interior Trim and Ornamentation, Removal and
Installation).

mcx30.com