

PUBLISHED: 12-SEP-2019
2020.0 DEFENDER (LE), 204-00

SUSPENSION SYSTEM - GENERAL INFORMATION

FRONT WHEEL BEARING AND WHEEL HUB RUNOUT CHECK (G2424031)

mcx30.com


ACTIVATION

 NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

1. Raise and support the vehicle on a suitable 2 post lift.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Remove the front brake disc.
Refer to: [Brake Disc 2 Piston Floating Caliper](#) (206-03 Front Disc Brake, Removal and Installation).
Refer to: [Brake Disc 4 Piston Fixed Caliper](#) (206-03 Front Disc Brake, Removal and Installation).
Refer to: [Brake Disc 6 Piston Fixed Caliper](#) (206-03 Front Disc Brake, Removal and Installation).

3.

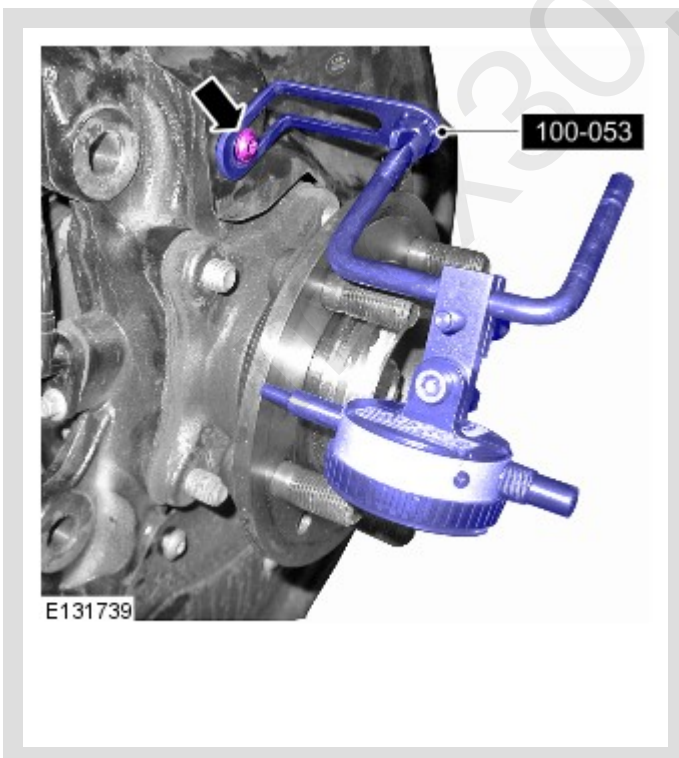

Using special tool (100-053) mount a Dial Test Indicator (DTI) to and secure to the backplate using the upper backplate fixing.

4.

 CAUTION:

Make sure the DTI is positioned clear of the wheel studs.

Position the DTI probe on the outer edge of the hub face.

5.

If the hub runout exceeds the limit replace the hub.

Refer to: [Specifications](#) (204-01 Front Suspension, Specifications).

6.

Remove the DTI.

7.

Install the front brake disc.