

PUBLISHED: 15-JUL-2019  
2020.0 DEFENDER (LE), 204-02

REAR SUSPENSION

## REAR STABILIZER BAR (G2410818)

mcx30.com

## REMOVAL AND INSTALLATION

### GENERAL EQUIPMENT

| EQUIPMENT NAME    |
|-------------------|
| Transmission jack |

### PART(S)

| STEP                | PART NAME                | QUANTITY |
|---------------------|--------------------------|----------|
| Installation Step 2 | Stabilizer bar link nuts | 2        |

## REMOVAL

### NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.


1. Raise and support the vehicle on a suitable 2 post lift.  
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Remove the rear wheels and tires.  
Refer to: [Wheel and Tire](#) (204-04 Wheels and Tires, Removal and Installation).

3.



- Use a suitable transmission jack to support the exhaust system.  
*General Equipment:* [Transmission jack](#)
- Release the exhaust system at the 3 mounting rubbers.

4.

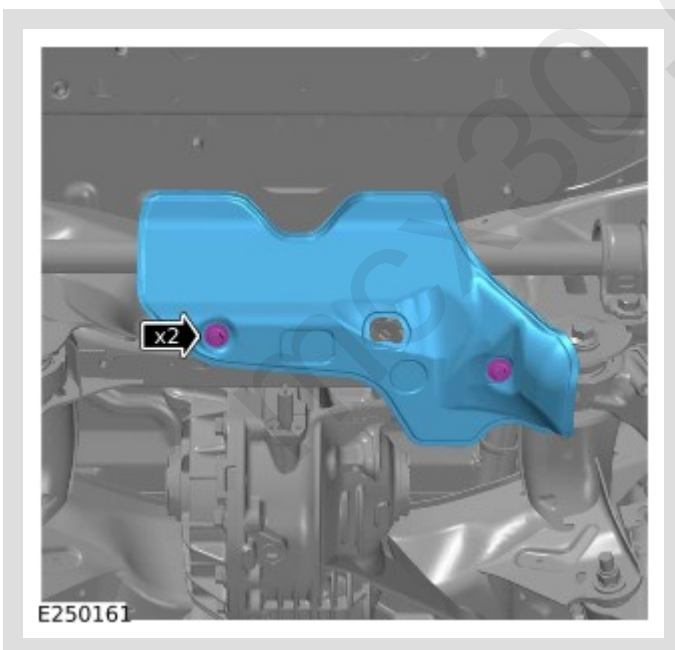


- Remove the 2 bolts.
- Remove the heatshield.

5.


**⚠ CAUTION:**

Use a wrench on the hexagon provided to prevent the ball joint rotating.

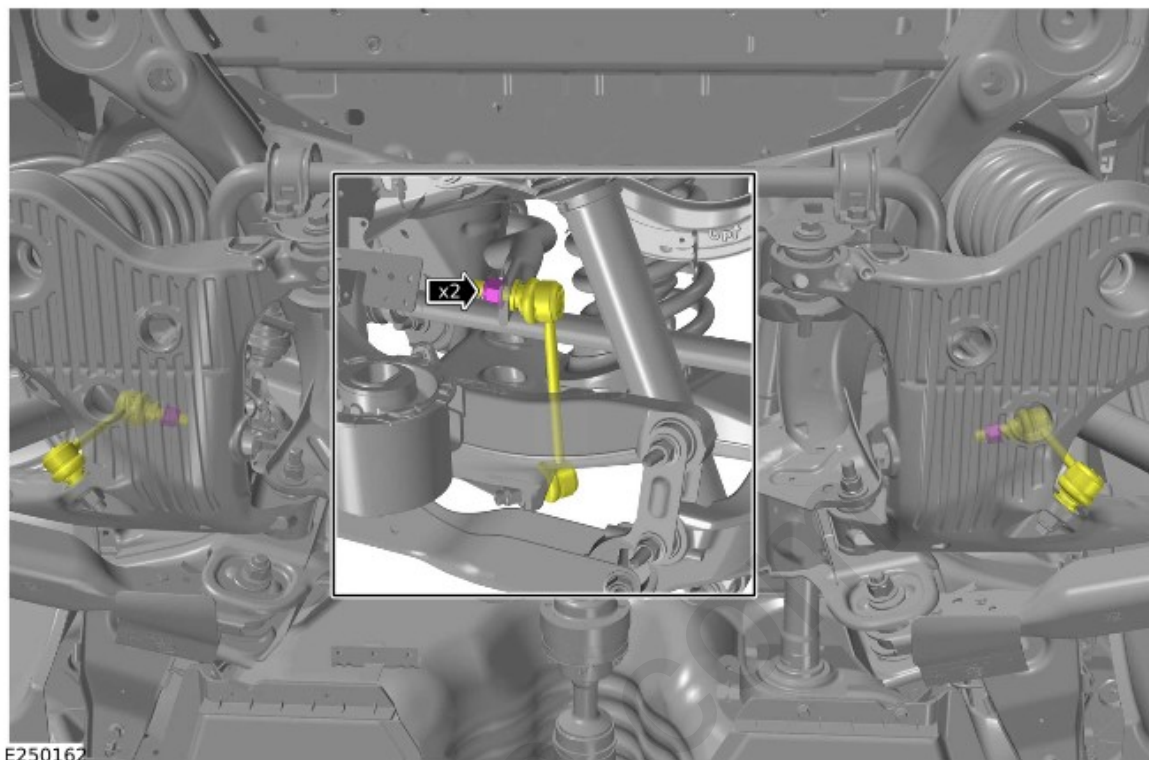

- Remove the 2 nuts.
- Release the 2 rear stabilizer bar links on both sides.

6.

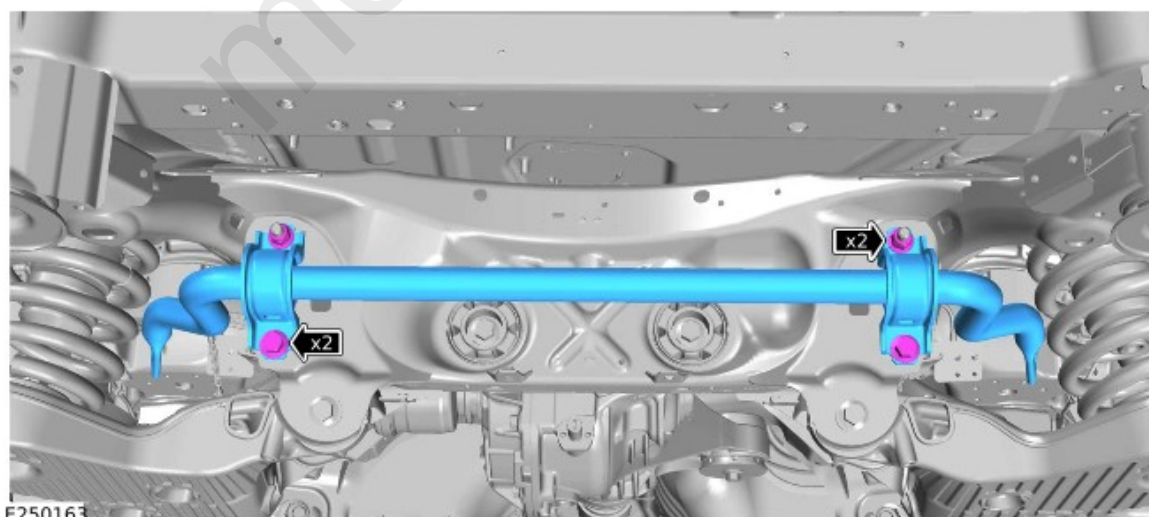

- Remove the 2 nuts.
- Remove the 2 bolts.
- Remove the stabilizer bar assembly.

## INSTALLATION

1.

- Install the stabilizer bar assembly.
- Install and tighten the 2 nuts.  
*Torque: 110Nm*
- Install and tighten the 2 bolts.  
*Torque: 110Nm*

2.

### CAUTION:

Use a wrench on the hexagon provided to prevent the ball joint rotating.

- Connect the 2 rear stabilizer bar links to the stabilizer bar.
- Install and tighten the 2 nuts.  
*Renew Part: [Stabilizer bar link nuts](#) Quantity: 2.*  
*Torque: 185Nm*

3.

- Install the heatshield.
- Install and tighten the 2 bolts.  
*Torque: 9Nm*

4.

- Secure the exhaust system at the 3 mounting rubbers.
- Remove the transmission jack.

5.

Install the rear wheels and tires.

Refer to: [Wheel and Tire](#) (204-04 Wheels and Tires, Removal and Installation).