

PUBLISHED: 19-SEP-2019
2020.0 DEFENDER (LE), 204-05

VEHICLE DYNAMIC SUSPENSION

AIR SUSPENSION CONTROL MODULE (G2423921)

mcx30.com

GENERAL EQUIPMENT

EQUIPMENT NAME

Jaguar Land Rover approved diagnostic equipment

REMOVAL



NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

The following step(s) applies to:

All vehicles

1. Disconnect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

The following step(s) applies to:

Vehicles without third row seats

2. Remove the right loadspace trim panel.

Refer to: [Right Loadspace Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

The following step(s) applies to:

Vehicles with third row seats


3. Remove the right loadspace trim panel.

Refer to: [Right Loadspace Trim Panel - \[+\] 7 Seat Configuration, 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

The following step(s) applies to:

All vehicles

4.

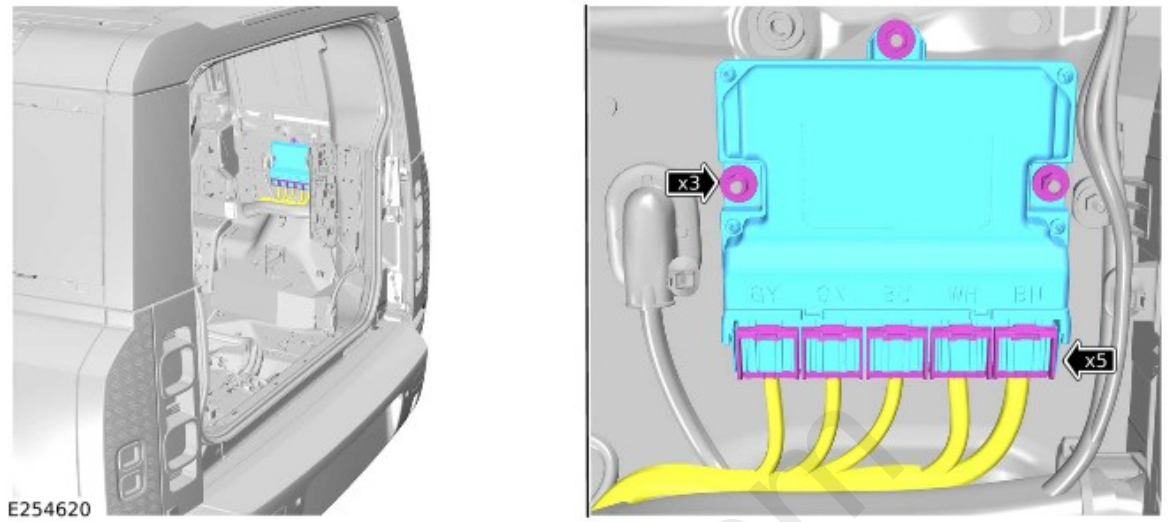

- Disconnect the 5 electrical connectors from the air suspension control module.
- Remove the 3 nuts.
- Remove the air suspension control module.

INSTALLATION

The following step(s) applies to:

All vehicles

1.

- Install the air suspension control module.
- Install and tighten the 3 nuts.
Torque: 10Nm
- Connect the 5 electrical connector to the air suspension control module.

The following step(s) applies to:

Vehicles with third row seats

-
2. Install the right loadspace trim panel.

Refer to: [Right Loadspace Trim Panel - \[+\] 7 Seat Configuration, 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

The following step(s) applies to:

Vehicles without third row seats

-
3. Install the right loadspace trim panel.

Refer to: [Right Loadspace Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

The following step(s) applies to:

All vehicles

-
4. Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

-
5. Use the Jaguar Land Rover (JLR) approved diagnostic equipment to configure the new component.

General Equipment: [Jaguar Land Rover approved diagnostic equipment](#)