

PUBLISHED: 23-MAY-2019
2020.0 DEFENDER (LE), 205-02

REAR DRIVE AXLE/DIFFERENTIAL

DIFFERENTIAL FLUID TEMPERATURE SENSOR (G2344692)

mcx30.com

REMOVAL


 NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.


1. Raise and support the vehicle on a suitable 2 post lift.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

2. Drain the rear differential.
Refer to: [Differential Draining and Filling](#) (205-02 Rear Drive Axle/Differential, General Procedures).

- 3.

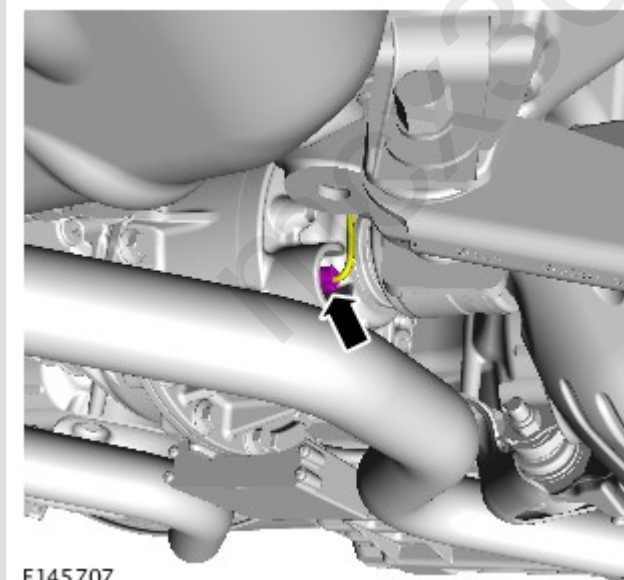

Disconnect the differential fluid temperature sensor electrical connector.

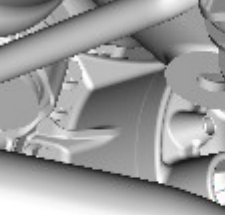

E145708

INSTALLATION

⚠ CAUTION:

Torque: **22Nm**

Refer to: [Differential Draining and Filling](#) (205-02 Rear Drive Axle/Differential, General Procedures).