

PUBLISHED: 02-OCT-2019
2020.0 DEFENDER (LE), 205-02

REAR DRIVE AXLE/DIFFERENTIAL

DIFFERENTIAL LOCKING MOTOR (G2344693)

mcx30.com

REMOVAL


 NOTES:

- ■ This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.
- The differential locking motor is supplied with new bolts.

1. Raise and support the vehicle on a suitable 2 post lift.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

2. Remove the differential.
Refer to: [Differential](#) (205-02 Rear Drive Axle/Differential, Removal and Installation).

3.

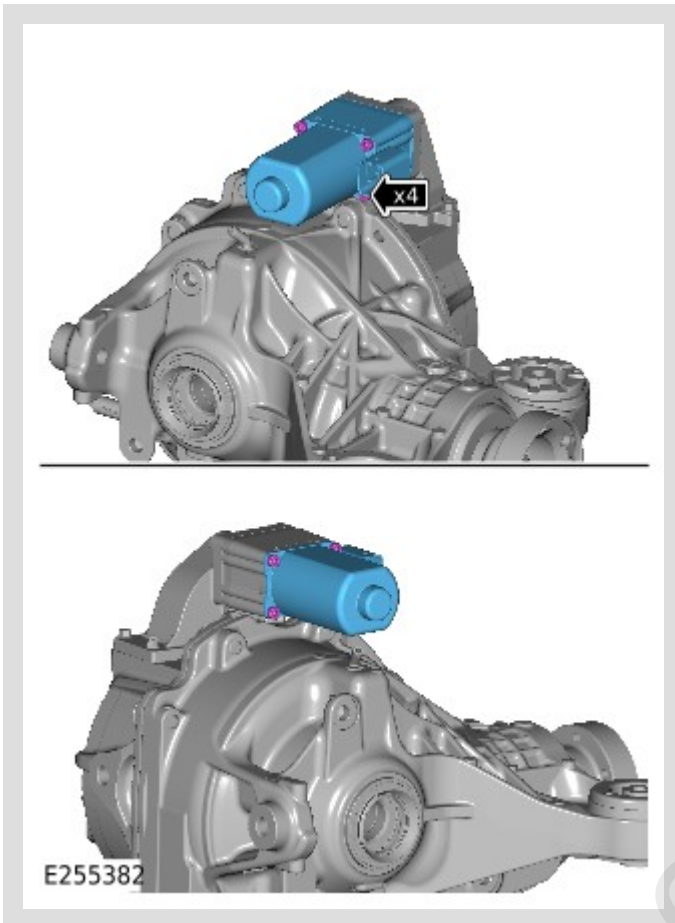

- Remove and discard the 4 bolts.
- Remove the differential locking motor assembly.

INSTALLATION

1.

- Install the differential locking motor assembly.
- Install the 4 new bolts.

Torque: 10Nm

2.

Install the differential.

Refer to: [Differential](#) (205-02 Rear Drive Axle/Differential, Removal and Installation).