

PUBLISHED: 01-OCT-2019
2020.0 DEFENDER (LE), 205-05

REAR DRIVE HALFSHAFTS

REAR HALFSHAFT (G2416561)

mcx30.com

REMOVAL AND INSTALLATION

PART(S)

STEP	PART NAME	QUANTITY
Installation Step 1	Circlip	1

REMOVAL

WARNING:

Be prepared to collect escaping oil.

NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.


1. Raise and support the vehicle on a suitable 2 post lift.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

2. Remove the wheel knuckle.
Refer to: [Wheel Knuckle](#) (204-01 Front Suspension, Removal and Installation).

3.

⚠ CAUTION:

Take care not to damage the halfshaft seal.

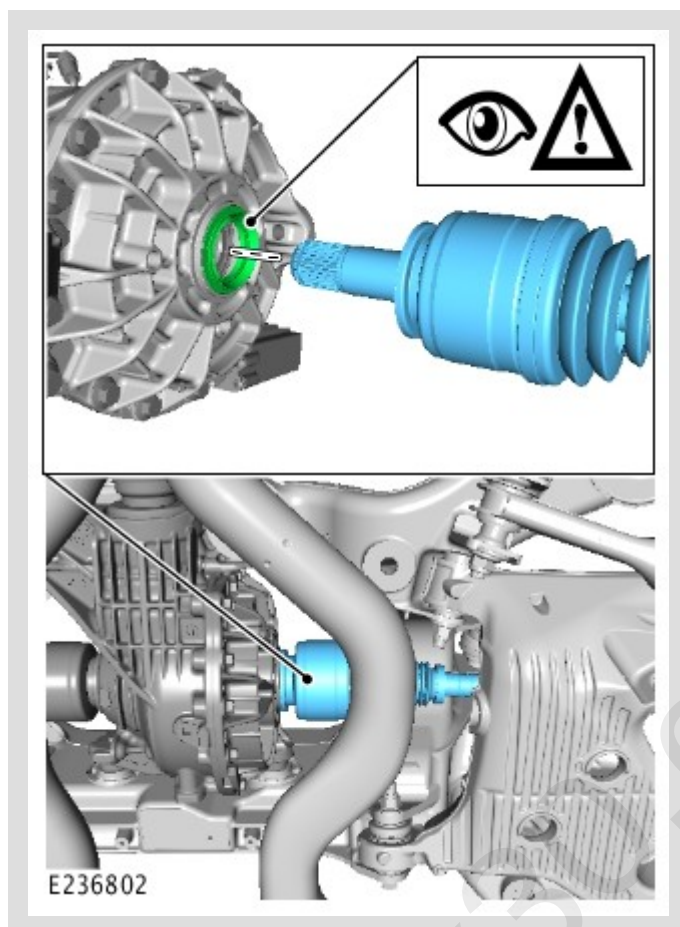

Remove the rear halfshaft.

4.



Remove and discard the circlip.

INSTALLATION

1. Renew the circlip.

Renew Part: [Circlip](#) Quantity: **1**.

- 2.



Clean and inspect the seal. Replace if damaged or worn.

3. Use a suitable seal protector during the installation of the halfshaft.

- 4.

⚠ CAUTION:

Make sure that the rear halfshaft circlip is installed correctly by pulling the halfshaft gently to make sure it is engaged.

Install the rear halfshaft.

5. Install the wheel knuckle.

Refer to: [Wheel Knuckle](#) (204-01 Front Suspension, Removal and Installation).

6. Check the differential oil level and top up if necessary