

PUBLISHED: 22-OCT-2019
2020.0 DEFENDER (LE), 206-08

BRAKE CONTROLS AND ACTUATION

REAR WHEEL SPEED SENSOR (G2415761)

mcx30.com


REMOVAL

 NOTES:

- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations for left side components, right side components are similar.

1. Raise and support the vehicle on a suitable 2-post lift.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Remove the rear wheel and tire.
Refer to: [Wheels and Tires](#) (204-04 Wheels and Tires, Diagnosis and Testing).

3.

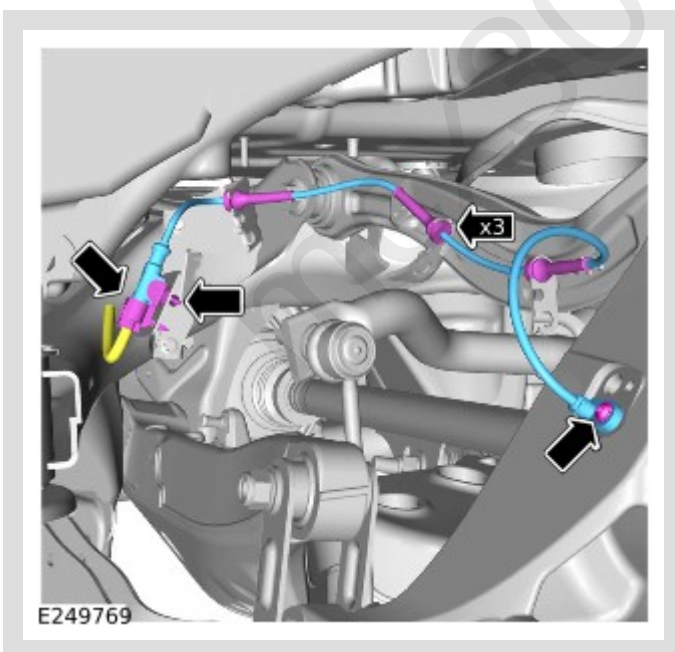


- Release the electrical connector.
- Disconnect the electrical connector from the rear wheel speed sensor.
- Release the 3 grommets.
- Remove the bolt.
- Remove the rear wheel speed sensor.

1.

⚠ CAUTION:

Make sure that the sensor tip is clean and free of foreign material.

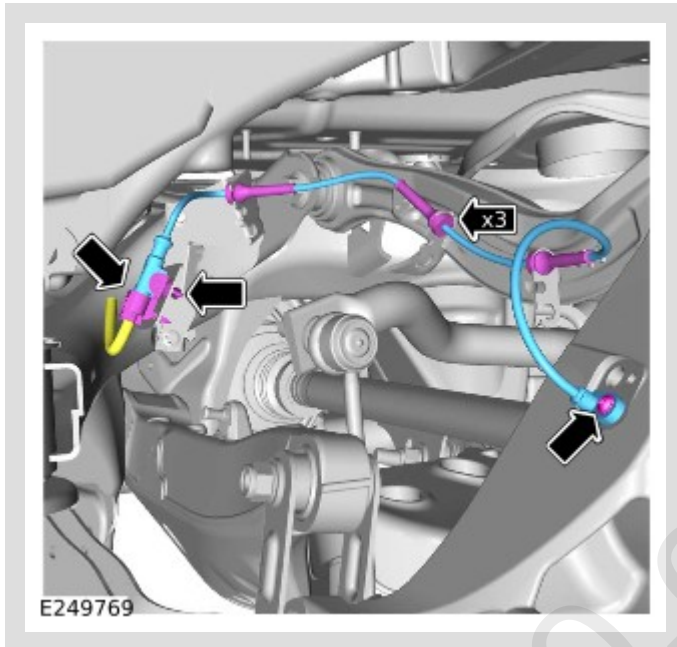

- Install the rear wheel speed sensor.
- Install and tighten the bolt.
Torque: 9Nm
- Install the 3 grommets.
- Connect the electrical connector to the rear wheel speed sensor.
- Install the electrical connector.

2. Install the rear wheel and tire.

Refer to: [Wheels and Tires](#) (204-04 Wheels and Tires, Diagnosis and Testing).