

PUBLISHED: 23-SEP-2019  
2020.0 DEFENDER (LE), 211-03

STEERING LINKAGE

## STEERING GEAR BOOT (G2417284)

mcx30.com

## REMOVAL AND INSTALLATION

### PART(S)

| STEP                | PART NAME              | QUANTITY |
|---------------------|------------------------|----------|
| Installation Step 1 | Steering gear boot kit | 1        |

### REMOVAL

#### ⓘ CAUTION:

Inspect the steering gear boot, replace if damaged.

#### ⚠ NOTES:

- This procedure contains illustrations for left side components, right side components are similar.
- This procedure contains some variation in the illustration depending on the vehicle specification, but essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.


1. Raise and support the vehicle on a suitable 2-post lift.  
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

2. Remove the front left wheel and tire assembly.  
Refer to: [Wheel and Tire](#) (204-04 Wheels and Tires, Removal and Installation).

3. Remove the tie-rod end.  
Refer to: [Tie Rod End](#) (211-03 Steering Linkage, Removal and Installation).

**⚠ CAUTIONS:**

- Make sure that the area around the component is clean and free of foreign material.
- Note the positions of the components on removal.
- Care must be taken when remove the components not to damage the inner tie-rod. Failure to follow this instruction may result in corrosion of the inner tie-rod.

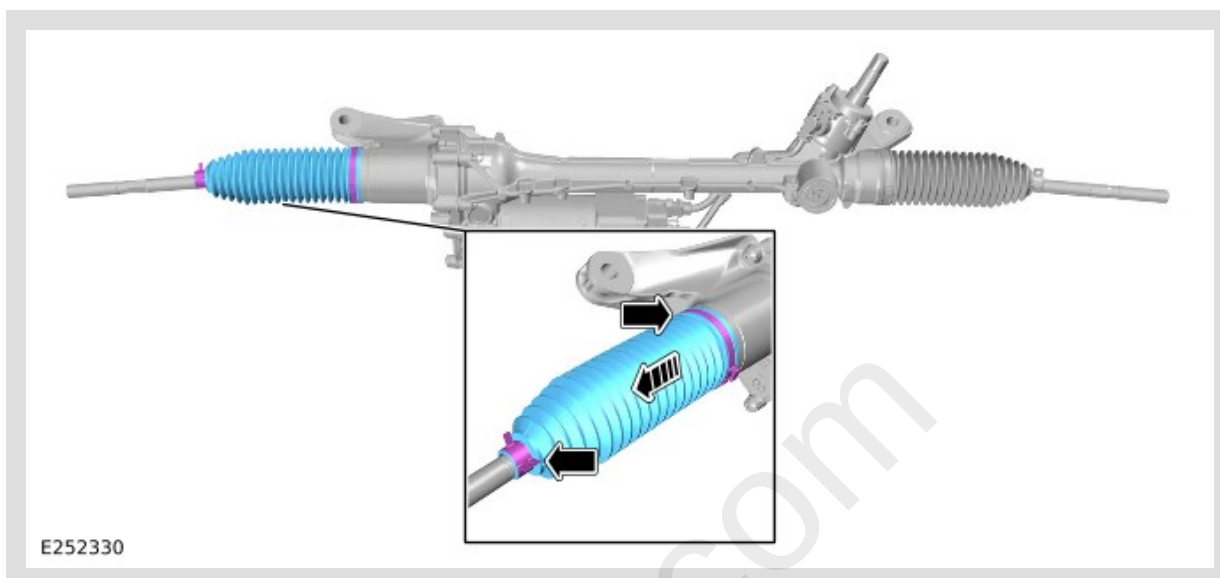

- Remove the 2 clamps.
- Remove the steering gear boot.

## INSTALLATION

1.

### ⚠ CAUTIONS:

- Make sure that the area around the component is clean and free of foreign material.
- Make sure that the components are installed to the noted removal position.
- Care must be taken when install the components not to damage the inner tie-rod. Failure to follow this instruction may result in corrosion of the inner tie-rod.

- Install the steering gear boot.

*Renew Part: [Steering gear boot kit](#) Quantity: 1.*

- Install the 2 clamps.

2.

Install the tie-rod end.

Refer to: [Tie Rod End](#) (211-03 Steering Linkage, Removal and Installation).

3.

Install the front left wheel and tire.

Refer to: [Wheel and Tire](#) (204-04 Wheels and Tires, Removal and Installation).