

STEERING COLUMN

STEERING COLUMN SERVICE POSITION (G2214471)

GENERAL PROCEDURES

ACTIVATION



NOTES:

- The electric steering column lock actuator is not installed in all vehicle markets however if in doubt these instructions must be followed.
- The electric steering column lock actuator will automatically engage 3 minutes after the ignition switch is set to the off position or when the doors are locked.

1. Set the ignition switch to the ON position and make sure the electric steering column lock actuator is not engaged.
2. Make sure that the Electric Park Brake (EPB) system is engaged.
3. Set the ignition switch to the OFF position.
4. Disconnect the start up battery ground cable.
Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).
5. Verify that the electric steering column lock actuator is not engaged.