

PUBLISHED: 30-APR-2020
2020.0 DEFENDER (LE), 211-05

STEERING COLUMN SWITCHES

STEERING COLUMN MULTIFUNCTION SWITCH (G2431815)

mcx30.com

REMOVAL

**WARNING:**

- To avoid accidental deployment and possible personal injury, the backup power supply must be depleted before repairing or replacing any airbag Supplementary Restraint System (SRS) components. To deplete the backup power supply energy, disconnect the battery ground cable and wait for 1 minute. Failure to follow this instruction may result in personal injury.
- Do not connect any electrical test device or equipment to the SRS connectors.
- Always wear safety glasses when working on an airbag equipped vehicle and when handling an airbag. Failure to follow this instruction may result in personal injury.

**NOTE:**

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.


1. Disconnect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

2. Remove the steering wheel.


Refer to: [Steering Wheel](#) (211-04 Steering Column, Removal and Installation).

3.

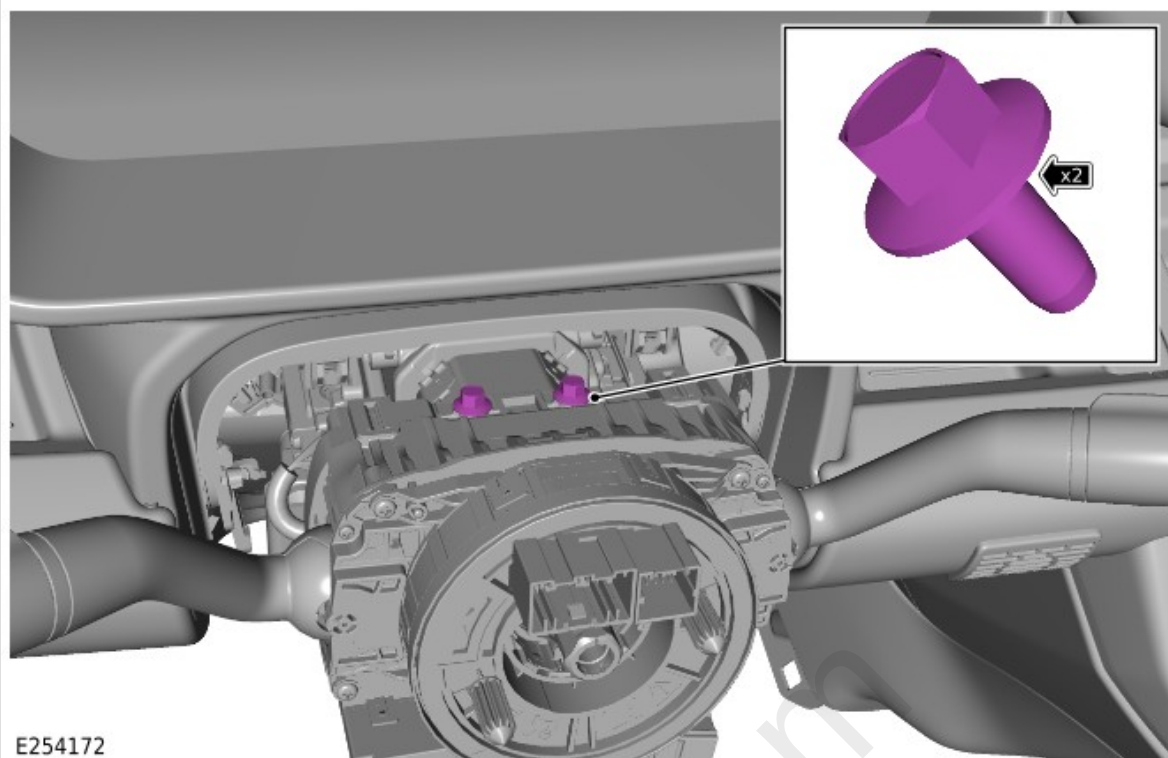


Remove the 2 bolts.

4.

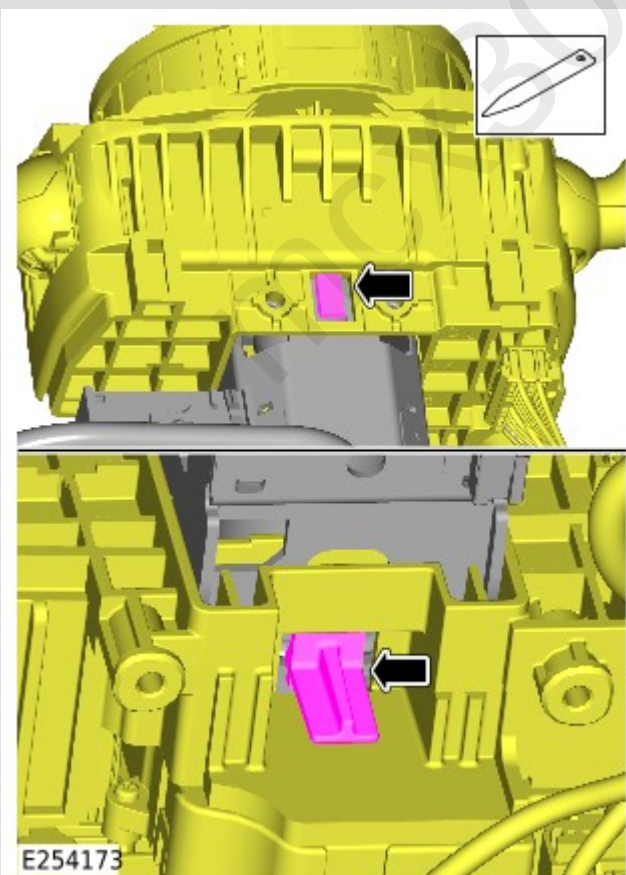

Release the 2 clips.

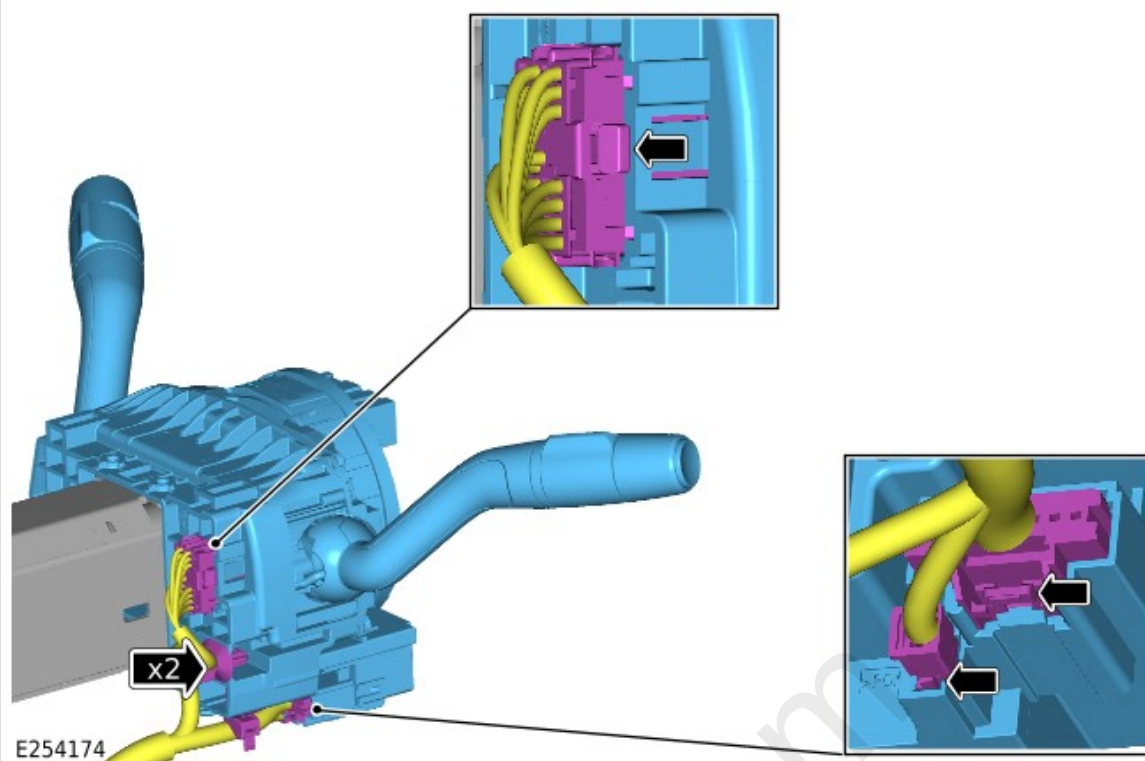


- Disconnect the 3 electrical connectors.
- Release the 2 wiring harness clips.
- Remove the steering column multifunction switch.

1.

⚠ CAUTION:

Take extra care when handling the component. Failure to follow this instruction might result in damage to the component.

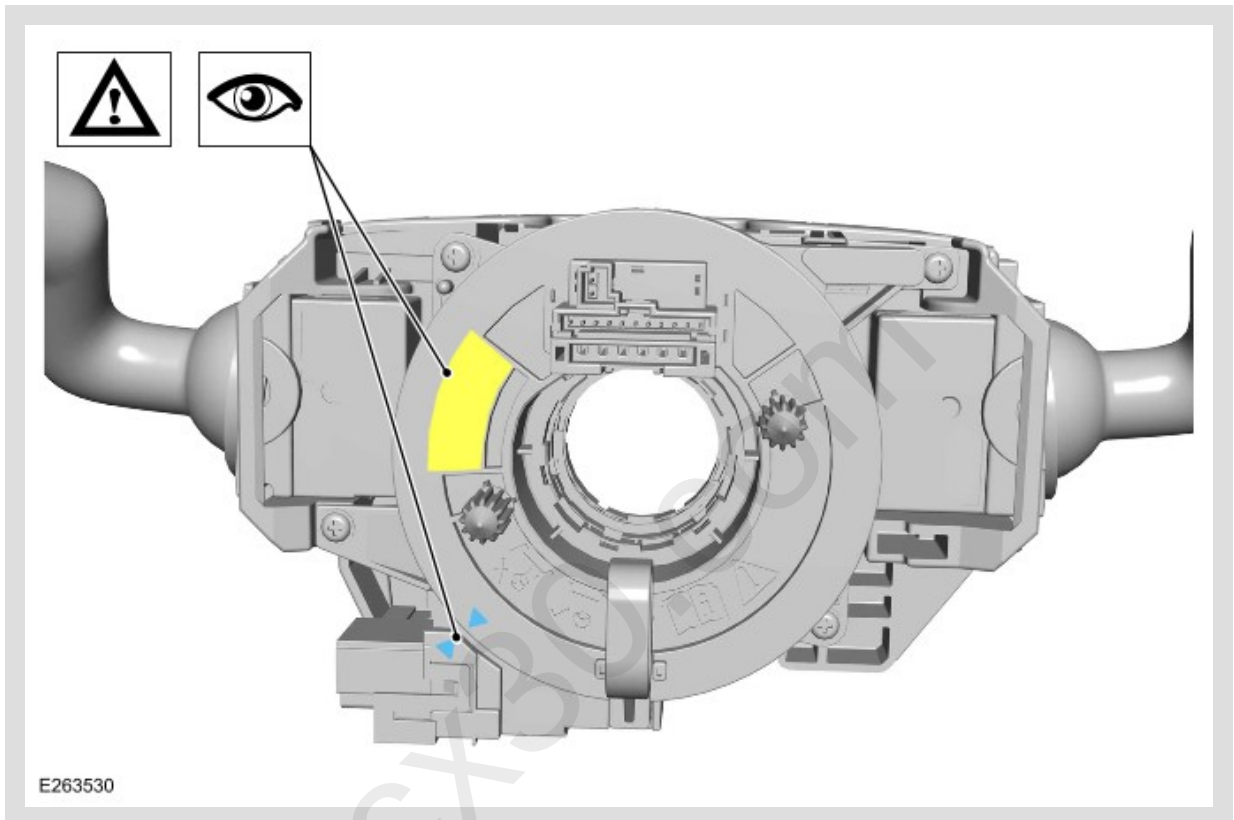

- Inspect the component for the correct zero position alignment:
- Align the two triangle alignment marks together, highlighted with blue.
- If the component is aligned correctly, a yellow/white roller is visible in the inspection window, highlighted with yellow.
- If a black/blue roller is visible in the inspection window, the component is rotated 360° away from the correct zero position.
- Make sure that the correct alignment is maintained through the installation of the component.

2.

 NOTE:

Make sure the 2 clips are correctly installed.

- Install the steering column multifunction switch.
- Connect the 3 electrical connectors.
- Install the 2 wiring harness clips.
- Install and tighten the 2 bolts.

Torque: 2.5Nm

3.

Install the steering wheel.

Refer to: [Steering Wheel](#) (211-04 Steering Column, Removal and Installation).

4.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).