


ENGINE SYSTEM - GENERAL INFORMATION

CONNECTING ROD LARGE END BORE (G61252)


GENERAL PROCEDURES

1.

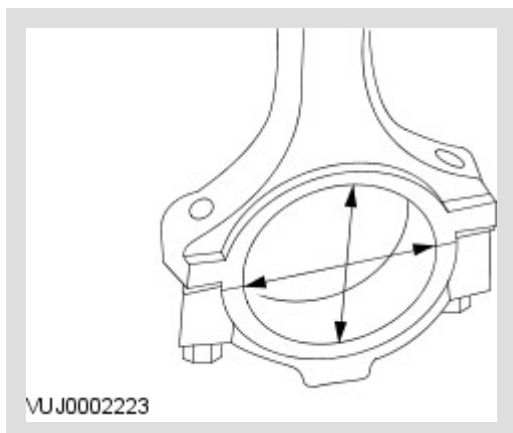

Measure the bearing bore in two directions. The difference is the connecting rod bore out-of-round. Verify the out-of-round is within specification.

2.

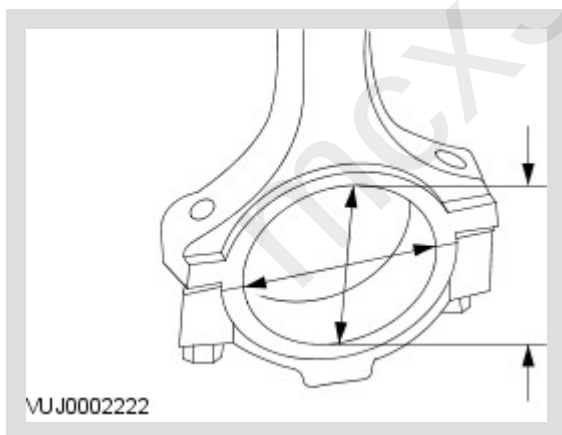

Measure the bearing bore diameter in two directions. Verify the bearing bore is within specification.